

CIRCUIT BREAKERS CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION	No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
CB 1	1.1	200A	560838	BATT. COMPT.	A/C FULL AIR	CB 59					
CB 2	1.1	25A	561795	BATT. COMPT.	12V HOT WIRE	CB 60					
CB 3	1.1	70A	562687	BATT. COMPT.	12V FEDD RR JCT BOX	CB 61					
CB 4	1.1	90A	562683	BATT. COMPT.	12V FEDD FR JCT BOX	CB 62					
CB 5	1.1	25A	561795	BATT. COMPT.	24V HOT WIRE	CB 63					
CB 6	1.1	90A	562683	BATT. COMPT.	24V FEED RR JCT BOX	CB 64					
CB 7	1.1	90A	562683	BATT. COMPT.	24V FEED FR JCT BOX	CB 65					
CB 8	15.3	40A	562686	A/C JCT BOX	CONDENSER FAN MOTOR L.H.	CB 66					
CB 9	15.3	120A	562688	A/C JCT BOX	EVAPORATOR FAN MOTOR	CB 67					
CB 10	4.1	8A	561791	FR JCT BOX	MASTER SWITCH	CB 68					
CB 11	15.3	40A	562686	A/C JCT BOX	CONDENSER FAN MOTOR R.H.	CB 69					
CB 12	29.1	90A	562683	BATT. COMPT.	WCL MOTOR PUMP	CB 70					
CB 13	6.1	3A	561797	RR JCT BOX	12 HOT WIRE DDR CONNECTOR	CB 71					
CB 14	15.4	25A	561795	FR JCT BOX	UPPER FAN DEFROST	CB 72	15.2	10A	561792	RR JCT BOX	A/C COMPRESSOR CLUTCH
CB 15						CB 73	15.3	15A	561793	FR JCT BOX	WATER PUMP
CB 16	4.1	8A	561791	RR JCT BOX	ENGINE-RR CTR & START SW	CB 74					
CB 17						CB 75	15.1	8A	561791	RR JCT BOX	PARCEL RACK A/C COMPRESSOR
CB 18	4.1	6A	561791	RR JCT BOX	ENGINE-FR CTR SW	CB 76					
CB 19	5.1	15A	561793	BATT. COMPT.	DDEC E.C.M. POWER	CB 77					
CB 20	5.1	15A	561793	BATT. COMPT.	DDEC E.C.M. POWER	CB 78					
CB 21	5.1	10A	561790	RR JCT BOX	DDEC 12V IGNITION	CB 79	15.2	15A	561792	FR JCT BOX	DRIVER'S DEFROSTER FAN
CB 22						CB 80	24.1	6A	561790	FR JCT BOX	ENTRANCE DOOR
CB 23						CB 81					
CB 24	6.3	30A	870860	BATT. COMPT.	EATON TR. 12V BATT	CB 82					
CB 25						CB 83	6.1	20A	561794	RR JCT BOX	WORLD TRANSMISSION VIM POWER
CB 26	9.3	10A	561792	RR JCT BOX	BACK-UP LTS & ALARM	CB 84					
CB 27	7.2	8A	561791	FR JCT BOX	24V IGN DASH ACCESSORIES	CB 85					
CB 28	7.1	6A	561790	FR JCT BOX	12V IGN. DASH ACCESSORIES	CB 86	26.1	8A	561791	RR JCT BOX	LAVATORY PUMP
CB 29						CB 87					
CB 30						CB 88					
CB 31						CB 89	26.1	8A	561791	RR JCT BOX	LAVATORY LIGHTS
CB 32						CB 90	1.2	30A	870860	BATT. COMPT.	12V SOUND SYSTEM
CB 33						CB 91	1.2	30A	870860	BATT. COMPT.	24V SOUND SYSTEM
CB 34						CB 92	17.1	6A	561790	FR JCT BOX	DECEL SW & KNEELING
CB 35	9.3	6A	561790	FR JCT BOX	FOG & A/C MODULE	CB 93	15.2	6A	561790	FR JCT BOX	DR'S REC. DAMPER CYL. L.H.
CB 36						CB 95	28.1	10A	561792	S.S. JCT BOX	AUDIO AMPLIFIER
CB 37	9.1	8A	561791	FR JCT BOX	HEAD & MULTI-FUNC. SW	CB 96	28.1	10A	561792	S.S. JCT BOX	VIDEO MONITOR
CB 38						CB 98	28.1	15A	561793	S.S. JCT BOX	RADIO
CB 39						CB 105	22.1	6A	561790	FR JCT BOX	ABS E . C . U .
CB 40	9.1	10A	561791	FR JCT BOX	MARKER CLEARANCE & ID. LTS	CB 106	22.1	15A	561793	FR JCT BOX	ABS E . C . U .
CB 41						CB 107					
CB 42	9.1	10A	561792	RR JCT BOX	RR TAIL & LICENCE LTS	CB 109	26.1	8A	561791	RR JCT BOX	LAVATORY FAN
CB 43	9.1	20A	561794	FR JCT BOX	HEADLAMP (HI)	CB 115					
CB 44	9.1	15A	561793	FR JCT BOX	HEADLAMP (LO)	CB 118	12.1	20A	561794	RR JCT BOX	LUGGAGE DOOR LOCK MOTOR
CB 45	9.2	10A	561792	FR JCT BOX	MULTI-FUNC. SW (WIPER CTR)	CB 120	12.1	20A	561794	RR JCT BOX	LUGGAGE DOOR LOCK MOTOR
CB 46	29.1	10A	561792	BATT. COMPT.	WCL SYSTEM POWER	CB 124	8.1	6A	561790	RR JCT BOX	FAN CLUTCH RADIATOR
CB 47	29.1	8A	561791	BATT. COMPT.	WCL DOOR TOP LT.	CB 125	9.2	20A	561794	FR JCT BOX	DIRECTIONAL LTS LH
CB 48	9.3	6A	561790	FR JCT BOX	STOP SW	CB 126	9.2	20A	561794	FR JCT BOX	DIRECTIONAL LTS RH
CB 49	9.3	15A	561793	RR JCT BOX	LH STOP LTS	CB 127	15.1	15A	561793	RR JCT BOX	PARCEL RACK VENTILATION
CB 50						CB 128	15.1	15A	561793	RR JCT BOX	PARCEL RACK VENTILATION
CB 51	9.3	15A	561793	RR JCT BOX	RH STOP LTS & TRAILER SIGN.	CB 129	7.1	6A	561790	FR JCT BOX	CLUSTER
CB 52	11.1	15A	561793	FR JCT BOX	LUGGAGE LTS	CB 130	23.1	6A	561790	FR JCT BOX	TT LT MODULE
CB 53						CB 132	14.1	15A	561793	RR JCT BOX	WATER HEATER
CB 54						CB 138	14.1	20A	561793	RR JCT BOX	WATER HEATER
CB 55						CB 142	2.1	15A	561790	RR JCT BOX	12V IGNITION FR. & RR. JCT. BOX
CB 56											
CB 57	11.2	8A	561791	FR JCT BOX	DASH LTS RHEOSTAT						
CB 58	15.2	6A	561790	FR JCT BOX	HVAC DASH MODULE						

CIRCUIT BREAKERS CODE

No. PAGE AMP. #PREV. LOCATION FUNCTION

No. PAGE AMP. #PREV. LOCATION FUNCTION