

DIODES NUMBER CODE

No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION	No.	PAGE	AMP	#PREV.	LOCATION	FUNCTION
D 1	9.2	3A	561740	FR JCT BOX	KNEELING WARNING FLASHER	D 56					
D 2	15.3	3A	063849	FR JCT BOX	WATER PUMP RRE-HEAT SIGN	D 57					
D 3	15.3	3A	063849	FR JCT BOX	WATER PUMP	D 58	18.1	3A	561740	FRONT SERV. COMPT.	KNEELING SYSTEM
D 4	9.2	3A	561740	FR JCT BOX	WARNING HAZARD -RH	D 59					
D 5	9.2	3A	561740	FR JCT BOX	WARNING HAZARD -LH	D 60	15.2	3A	561740	RR JCT BOX	A/C COMPR. CLUTCH
D 6						D 61	15.1	3A	561740	RR JCT BOX	A/C COMPR. AUX.
D 7						D 62					
D 8						D 63					
D 9						D 64					
D 10	18.1	3A	561740	FR SERV. COMPT.	KNEELING SYSTEM	D 65					
D 11						D 66					
D 12	18.1	3A	561740	FR SERV. COMPT.	KNEELING SYSTEM	D 67					
D 12	25.1	3A	561740	FRONT ROOF	ELECTRICAL DEST. SIGN	D 68					
D 13	18.1	3A	561740	FR SERV. COMPT.	KNEELING SYSTEM	D 69					
D 13	25.1	3A	561740	FRONT ROOF	ELECTRICAL DEST. SIGN	D 70	18.1	3A	561740	FRONT SERV. COMPT.	LOW BUOY SYSTEM
D 14	18.1	3A	561740	FR SERV. COMPT.	KNEELING SYSTEM	D 71	18.1	3A	561740	FRONT SERV. COMPT.	LOW BUOY SYSTEM
D 15						D 72	18.1	3A	561740	FRONT SERV. COMPT.	LOW BUOY SYSTEM
D 16	9.1	3A	561740	FR JCT BOX	DAYTIME RUNNING LTS	D 73	18.1	3A	561740	FRONT SERV. COMPT.	PARKING BRAKE WCL
D 17	9.2	3A	561740	FR JCT BOX	TURN SIGNAL LT-LH	D 74					
D 18	9.2	3A	561740	FR JCT BOX	TURN SIGNAL LT-RH	D 75	4.1	3A	561740	BATT. COMPT.	STARTER RELAY SUPPRESSOR
D 19	9.1	3A	561740	FR JCT BOX	DAYTIME RUNNING LTS	D 76					
D 20	9.1	3A	561740	FR JCT BOX	DAYTIME RUNNING LTS	D 77					
D 21	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY LH	D 78	14.1	3A	561740	LH CONSOLE	PRE-HEATER TIMER
D 22	9.2	3A	561740	UNDER DASH	AUDIBLE FLASHER RLY RH	D 79	14.1	3A	561740	LH CONSOLE	PRE-HEATER TIMER
D 23						D 80	9.3	3A	561740	RR JCT BOX	CYCLOP LTS RELAY R 80
D 24	8.1	3A	561740	RR JCT BOX	FAN CLUTCH RADIATOR	D 81	18.1	3A	561740	FRONT SERV. COMPT.	KNEELING SYSTEM
D 25	8.1	3A	561740	RR JCT BOX	FAN CLUTCH RADIATOR	D 82					
D 26						D 83	8.1	3A	561740	RR JCT BOX	RAD. FAN CLUTCH W. A/C OR RETARDER
D 27						D 84					
D 27	9.3	3A	561740	RR JCT BOX	AUX LTS-TAIL	D 85					
D 28	9.3	3A	561740	RR JCT BOX	AUX LTS-STOP	D 86	24.1	3A	561740	RH UNDER DASH	ENTRANCE DOOR
D 29						D 87	24.1	3A	561740	RH UNDER DASH	ENTRANCE DOOR
D 30	4.1	3A	561740	FR JCT BOX	MASTER KEY SW. CUT-OFF	D 88	24.1	3A	561740	RH UNDER DASH	ENTRANCE DOOR
D 31	4.1	3A	561740	FR JCT BOX	MASTER KEY SW. CUT-OFF	D 89	24.1	3A	561740	RH UNDER DASH	ENTRANCE DOOR
D 32	9.2	3A	561740	FR JCT BOX	HAZARD MASTER RLY CUT OUT	D 90	24.1	3A	561740	RH UNDER DASH	ENTRANCE DOOR
D 33						D 91	24.1	3A	561740	RH UNDER DASH	ENTRANCE DOOR
D 34	15.3	3A	561740	FR JCT BOX	A/C WATER VALVE						
D 35	15.3	3A	561740	FR JCT BOX	A/C WATER VALVE						
D 36	15.2	3A	561740	EVAP. CPT.	BY-PASS VALVE						
D 37	6.1	3A	561740	FR JCT BOX	NEUTRAL SIGNAL						
D 38	6.1	3A	561740	FR JCT BOX	NEUTRAL SIGNAL						
D 39	6.1	3A	561740	FR JCT BOX	NEUTRAL SIGNAL						
D 40											
D 41											
D 42											
D 43											
D 44											
D 45											
D 46											
D 47											
D 48											
D 49											
D 50	29.1	3A	561740	LAST LUGG. COMPT.	WCL DOOR AJAR SIGNAL TOP LT						
D 51	29.1	3A	561740	LAST LUGG. COMPT.	WCL DOOR AJAR SIGNAL TOP LT						
D 52											
D 53											
D 54											
D 55	29.1	3A	561740	RR JCT BOX	WCL SHIFTER INHIBIT SIGNAL						