

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	FR JCT BOX	WORLD TRANSM 12V BATT
F 2	6.1	10A	562407	FR JCT BOX	WORLD TRANSM 12V IGN.
F 3	7.2	20A	562605	FR JCT BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR JCT BOX	FIRE ALARME
F 5	8.1	7.5A	562602	FR JCT BOX	AIR DRYER
F 6	17.1	3A	562599	FR JCT BOX	STEERING CONTROL
F 7	4.2	3A	560893	RH ENG.CPT.	STARTER ON T.T.LT.
F 8					
F 9	11.1	3A	560893	BATT. COMPT.	BATT. COMPT. LTS
F 10	9.3	15A	562604	FR JCT BOX	FOG LTS
F 11					
F 12	11.3	10	562407	FR JCT BOX	AISLE LTS
F 13	11.3	7.5	562602	FR JCT BOX	EMERGENCY LTS
F 14	11.2	15A	562604	FR JCT BOX	DRIVER'S LTS SW.
F 15	11.4	15A	562604	RR JCT BOX	READING LAMP
F 16	11.4	15A	562604	RR JCT BOX	READING LAMP
F 17	11.3	7.5	562602	RR JCT BOX	HAT RACK LTS
F 18	11.5	10A	562407	RR JCT BOX	24V FLUORESCENT
F 19	11.5	10A	562407	RR JCT BOX	24V FLUORESCENT
F 20	11.4	5A	562259	FR JCT BOX	INTERIOR LTS SWITCH
F 21	19.1	10A	562407	RR JCT BOX	FUEL PRIME PUMP
F 22	13.1	10A	562407	FR JCT BOX	POWER OUTLET DASH R.H.
F 23	19.1	15A	562604	FR JCT BOX	DRIVER'S & ENTRANCE WINDOW LIFTER
F 24	13.1	15A	562604	FR JCT BOX	CIGAR LIGHTER & POWER OUTLET L.H.CONSOLE
F 25	19.1	3A	562599	FR JCT BOX	SUN VISOR
F 26	14.1	7.5A	562602	FR JCT BOX	WATER HTR TIMER
F 27	11.4	10A	562407	RR JCT BOX	INDIRECT LTS
F 28	11.4	10A	562407	RR JCT BOX	INDIRECT LTS
F 29	28.1	7A		UNDER DASH	RADIO
F 30	28.1	7.5A		UNDER DASH	RADIO
F 31	25.1	5A	562259	FR JCT BOX	DESTINATION SIGN
F 32					
F 33	18.1	5A	562259	FR JCT BOX	KNEELING SYSTEM
F 34					
F 35					
F 36					
F 37					
F 38					
F 39					
F 40	28.5	7.5A		FR JCT BOX	CB OPTION
F 41					
F 42	28.5	3A		FR JCT BOX	WIRELESS MICRO CHARGER
F 43					
F 44					
F 45					
F 46	9.3sp1	10A	562407	RR JCT BOX	DOCKING LTS
F 47	16.1	7.5A	562602	FR JCT BOX	RR VIEW MIRROR
F 48	9.2	3A	562599	FR JCT BOX	KNEELING WARN. IND.
F 49					
F 50					
F 70	27.1	7.5A		GALLEY	RH CONTAINER
F 71	27.1	7.5A		GALLEY	LH CONTAINER
F 72	27.1	10A		GALLEY	REFRIGERATOR
F 73	27.1	35A		GALLEY	COFFEEMAKER
F 74	27.1	7.5A		GALLEY	REFRIGERATOR
F 75	9.2sp1	10A	562407	FR JCT BOX	CORNERING LTS

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
-----	------	------	--------	----------	----------