

FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION	No.	PAGE	AMP	#PREV	LOCATION	FUNCTION
F 1	6.1	10A	562407	FR JCT BOX	WORLD TRANSM 12V BATT	F 76	28.7	1A	562597	SOUND SYS JC BOX	DVD KARAOKE
F 2	6.1	10A	562407	FR JCT BOX	WORLD TRANSM 12V IGN.	F 77	28.7	3A	562599	SOUND SYS JC BOX	DVD KARAOKE
F 3	7.2	20A	562605	FR JCT BOX	ELECTRICAL HORNS						
F 4	7.2	5A	562259	FR JCT BOX	FIRE ALARME						
F 5	8.1	7.5 A	562602	FR JCT BOX	AIR DRYER						
F 6	17.1	3A	562599	FR JCT BOX	STEERING CONTROL						
F 7	4.2	3A	560893	RH ENG.CPT.	STARTER ON T.T.LT.						
F 8											
F 9	11.1	3A	560893	BATT. COMPT.	BATT. COMPT. LTS						
F 10	9.3	15A	562604	FR JCT BOX	FOG LTS						
F 11											
F 12	11.3	10	562407	FR JCT BOX	AISLE LTS						
F 13	11.3	7.5	562602	FR JCT BOX	EMERGENCY LTS						
F 14	11.2	15A	562604	FR JCT BOX	DRIVER'S LTS SW.						
F 15	11.4	15A	562604	RR JCT BOX	READING LAMP						
F 16	11.4	15A	562604	RR JCT BOX	READING LAMP						
F 17	11.3	7.5	562602	RR JCT BOX	HAT RACK LTS						
F 18	11.5	10A	562407	RR JCT BOX	24V FLUORESCENT						
F 19	11.5	10A	562407	RR JCT BOX	24V FLUORESCENT						
F 20	11.4	5A	562259	FR JCT BOX	INTERIOR LTS SWITCH						
F 21	19.1	10A	562407	RR JCT BOX	FUEL PRIME PUMP						
F 22	13.1	10A	562407	FR JCT BOX	POWER OUTLET DASH R.H.						
F 23	19.1	15A	562604	FR JCT BOX	DRIVER'S & ENTRANCE WINDOW LIFTER						
F 24	13.1	15A	562604	FR JCT BOX	CIGAR LIGHTER & POWER OUTLET L.H.CONSOLE						
F 25	19.1	3A	562599	FR JCT BOX	SUN VISOR						
F 26	14.1	7.5A	562602	FR JCT BOX	WATER HTR TIMER						
F 27	11.4	10A	562407	RR JCT BOX	INDIRECT LTS						
F 28	11.4	10A	562407	RR JCT BOX	INDIRECT LTS						
F 29	28.1	7A		UNDER DASH	RADIO						
F 30	28.1	7.5A		UNDER DASH	RADIO						
F 31	25.1	5A	562259	FR JCT BOX	DESTINATION SIGN						
F 32											
F 33	18.1	5A	562259	FR JCT BOX	KNEELING SYSTEM						
F 34											
F 35											
F 36											
F 37											
F 38											
F 39											
F 40	28.5	7.5A		FR JCT BOX	CB OPTION						
F 41											
F 42	28.5	3A		FR JCT BOX	WIRELESS MICRO CHARGER						
F 43	1.2	3A	562599	BATT. COMP.	12V SIGNAL.TO BATT. MONITOR						
F 44	1.2	3A	562599	BATT. COMP.	12V SIGNAL.TO BATT. MONITOR						
F 45											
F 46	9.3sp1	10A	562407	RR JCT BOX	DOCKING LTS						
F 47	16.1	7.5A	562602	FR JCT BOX	RR VIEW MIRROR						
F 48	9.2	3A	562599	FR JCT BOX	KNEELING WARN. IND.						
F 49	6.3	10A	562407	FR JCT BOX	EATON TRANS						
F 61	30.1	1A	561134	FR JCT BOX	INTERCOM						
F 70	27.1	7.5A		GALLEY	RH CONTAINER						
F 71	27.1	7.5A		GALLEY	LH CONTAINER						
F 72	27.1	10A		GALLEY	REFRIGERATOR						
F 73	27.1	35A		GALLEY	COFFEEMAKER						
F 74	27.1	7.5A		GALLEY	REFRIGERATOR						
F 75	9.2sp1	10A	562407	FR JCT BOX	CORNERING LTS						

FUSES CODE

No. PAGE AMP. #PREV. LOCATION FUNCTION

No. PAGE AMP #PREV LOCATION FUNCTION