


| Part Name | Description | Location | Part Type |
|-----------|---|----------|-----------------|
| B16 | Sensor,Wheel speed, rhs. 1:st driven rear axle | {EO 1 D} | componentSymbol |
| B22 | Sensor, outdoor temperature | {NA 3 A} | componentSymbol |
| B25 | Sensor,accelerator pedal | {BA 2 C} | componentSymbol |
| B29 | sensor chassis level rear axle LHS | {FB 3 B} | componentSymbol |
| B30 | sensor chassis level rear axle RHS | {FB 2 B} | componentSymbol |
| B32 | Sensor,engine cooling fan speed | {CS 1 C} | componentSymbol |
| B32_10 | | {CS 1 C} | componentSymbol |
| B32_13 | Sensor Eng. cooling fan speed | {CS 1 C} | componentSymbol |
| B39 | Sensor,air filter press/Temp. | {CS 3 B} | componentSymbol |
| B40 | Sensor,brake lining wear indicator,lhs. 1:st front axle | {EO 3 D} | componentSymbol |
| B41 | Sensor,brake lining wear indicator,rhs. 1:st front axle | {EO 3 D} | componentSymbol |
| B42 | Sensor,brake lining wear indicator,lhs. 1:st driven rear axle | {EO 2 D} | componentSymbol |
| B43 | Sensor,brake lining wear indicator,rhs.1:st driven rear axle | {EO 2 D} | componentSymbol |
| B49 | Sensor,steering angle | {EP 3 B} | componentSymbol |
| B50 | Sensor,yaw-rate | {EP 2 B} | componentSymbol |
| B57 | Sensor,air pressure, suspension bellows,lhs.rear | {FB 4 C} | componentSymbol |
| B58 | Sensor,air perssure,suspension bellow,rhs. rear | {FB 4 C} | componentSymbol |
| B59 | Sensor, indoor temperature | {NA 3 A} | componentSymbol |
| B66 | | {CL 3 A} | componentSymbol |
| B69C | Sensor,coolant temperature, retarder | {DN 3 B} | componentSymbol |
| B84 | Air humidity | {CS 2 C} | componentSymbol |
| B904 | hydr_oil_level_sens | {NA 4 C} | componentSymbol |
| B906 | Sensor,Brake Press (6*2) | {BC 4 C} | componentSymbol |
| B910 | sensor air press. ECS port 21 | {FB 5 C} | componentSymbol |
| B914 | sensor chassis level front axle LHS | {FB 2 B} | componentSymbol |
| B915 | sensor chassis level front axle RHS | {FB 1 B} | componentSymbol |
| B918 | Hydraulic oil level sensor_2 | {NA 4 C} | componentSymbol |
| B920 | Sensor,fuel level 2 front axle | {NA 4 A} | componentSymbol |
| B922 | Sensor_temp_downstream_scr_t_DNOX2 | {CL 4 B} | componentSymbol |
| B923 | Sensor_temp/level_adblue_tank_SCRT_DNOX2 | {CU 2 B} | componentSymbol |
| B923_10 | temp/level DEF tank | {CX 3 D} | componentSymbol |
| B927 | Sensor Hydr.oil press | {BB 1 D} | componentSymbol |
| B930 | Sensor_temp_upstream_scr_t_DNOX2 | {CU 2 D} | componentSymbol |
| B940 | Sensor brake lining wear indicator,A/B R | {EP 4 B} | componentSymbol |
| B941 | Sensor brake lining wear indicator,A/B L | {EP 4 B} | componentSymbol |
| B942 | sensor_wheel_speed_A/B_R | {EP 3 B} | componentSymbol |
| B943 | sensor_wheel_speed_A/B_L | {EP 3 B} | componentSymbol |
| B949 | Last trailer air brake pressure sensor (biartic) | {CL 3 A} | componentSymbol |
| B973 | Fire Sensor, 150 C | {BB 4 C} | componentSymbol |
| B974 | Fire sensor | {BB 4 C} | componentSymbol |
| B975 | Fire sensor | {BB 4 C} | componentSymbol |
| B977 | Sensor, brake pressure | {NA 5 A} | componentSymbol |
| B978 | Sensor, brake pressure | {NA 5 A} | componentSymbol |

| | | | | |
|---|--------------------------|---------------|--------------|--|
|  Volvo Bus Corporation | Document Title | | | |
| | WIRING DIAGRAM | | | |
| | Document Type | | | |
| | PRODUCT SCHEMATIC | | | |
| Document No | Issue Index | Volume No | Page No | |
| 70396509 | 04 | 02(02) | 3(31) | |