| Part Name | Description | Location | Part Type |
|-----------|---|----------------------------------|-----------------|
| A90 | ВВМ | {BB 5 A} {XC 3 C} {AA 4 A} | componentSymbol |
| | | {XD 2 C} {BC 5 D} | |
| A124 | | {AF 3 B} | componentSymbol |
| A125 | | {XC 3 C} {NC 4 B} {XD 4 C} | componentSymbol |
| A914 | TECU | {XC 2 A} {DN 3 C} {XD 5 A} | componentSymbol |
| A917 | DNOX2_ECU | {CU 5 C} {XF 2 B} | componentSymbol |
| A918 | NOx-sensor | {XF 4 B} | componentSymbol |
| A918_13 | NOx-sensor | {XF 4 B} | componentSymbol |
| A926 | GearShift_ECU | {XC 5 B} {DN 5 C} {XD 3 C} | componentSymbol |
| A942 | BIO - Bus I/O | {CL 4 C} | componentSymbol |
| A946 | FMS GATEWAY | {NE 3 C} | componentSymbol |
| B03 | Sensor,footbrake valve | (EO 4 B) | componentSymbol |
| B04 | Sensor,engine speed,crankshaft | (CS 3 B) | componentSymbol |
| B05 | Sensor,engine speed,camshaft | (CS 3 B) | componentSymbol |
| B06 | Wet tank press | {BA 0 C} | componentSymbol |
| B07 | Sensor,fuel level front axle | {NA 4 A} | componentSymbol |
| B12 | Sensor,tachograph/speedometer | {NB 4 A} | componentSymbol |
| B13 | Sensor,wheel speed, lhs. 1:st front axle | (EO 2 D) | componentSymbol |
| B14 | Sensor,wheel speed, rhs. 1:st front axle | (EO 2 D) | componentSymbol |
| B15 | Sensor, Wheel speed, Ihs. 1:st driven rear axle | (EO 1 D) | componentSymbol |
| B16 | Sensor,Wheel speed, rhs. 1:st driven rear axle | {EO 1 D} | componentSymbol |
| B21 | Sensor, coolant temperature | {CR 2 B} | componentSymbol |
| B22 | Sensor, outdoor temperature | {NA 3 A} | componentSymbol |
| B25 | Sensor,accelerator pedal | {BA 2 C} | componentSymbol |
| B29 | sensor chassis level rear axle LHS | {FB 3 B} | componentSymbol |
| B30 | sensor chassis level rear axle RHS | {FB 2 B} | componentSymbol |
| B32 | Sensor,engine cooling fan speed | {CR 1 D} | componentSymbol |
| B32_13 | Sensor Eng. cooling fan speed | {CR 1 D} | componentSymbol |
| B37 | boost press/temp | {CR 4 C} | componentSymbol |
| B37A | boost temp. | {CR 4 C} | componentSymbol |
| B37B | boost press | {CR 3 C} | componentSymbol |
| B39 | Sensor,air filter press/Temp. | {CR 4 B} | componentSymbol |
| B40 | Sensor,brake lining wear indicator,lhs. 1:st front axle | {EO 3 D} | componentSymbol |
| B41 | Sensor,brake lining wear indicator,rhs. 1:st front axle | {EO 3 D} | componentSymbol |
| B42 | Sensor,brake lining wear indicator,lhs. 1:st driven rear axle | {EO 2 D} | componentSymbol |
| B43 | Sensor,brake lining wear indicator,rhs.1:st driven rear axle | {EO 2 D} | componentSymbol |



Volvo Bus Corporation