

NO.	SYSTEM	NO.	SYSTEM	NO.	SYSTEM	NO.	SYSTEM
Ø	GRD BATTERY A TO GRD STUD	7	INTERIOR LTS-STEPWELL LTS	15	WIPER & WASHER SYSTEM	29A	A/C & HEAT SYSTEM-DRIVER'S HTR
Ø	GRD BATTERY A1 TO GRD STUD	8A	INTERIOR LTS-AISLE & EMERG. LTS	15A	ALARM & SIGNAL-DIF. OIL TEMP	29B	A/C & HEAT SYSTEM-DRIVER'S HTR
Ø	GRD STARTER MOTOR TO GRD STUD	8B	INTERIOR LTS-AISLE & EMERG. LTS	16	SPEEDOMETER SIGNAL (+)	31A	A/C & HEAT SYSTEM-PRESSURE SW
Ø	FJP - GRD	9	INTERIOR LTS-ENGINE CPT	16T	SPEED SW SIGNAL IN (+)	31B	A/C & HEAT SYSTEM-PRESSURE SW
Ø	RJB - GRD	9	INTERIOR LTS-RR JCT BOX	17	EXTERIOR LTS-FLASHER UNIT	31B	WIPER & WASHER SYSTEM
Ø	BJP - GRD	9	INTERIOR LTS-FR SERVICE CPT	17A	EXTERIOR LTS-FLASHER UNIT	3Ø	GALLEY SYSTEM
ØA	RJB - GRD	9	INTERIOR LTS-FR SERVICE CPT	18	ETHER COLD START SYST.	3ØA	GALLEY SYSTEM
ØA	FR SERV JCT BOX - GRD	9A	INTERIOR LTS-FR JCT PANEL	20	SPEEDOMETER SIGNAL (-)	32B	EXTERIOR LTS-BACK-UP
ØB	FJP - GRD	9E	CHIME-PASSENGER & HOSTESS	20T	SPEED SW SIGNAL IN (-)	32	EXTERIOR LTS-BACK-UP
ØB	RJB - GRD	1Ø	A/C & HEAT SYSTEM-LO PRES.	21	EXTERIOR LTS-DIRECTIONNAL LH	32D	BACK-UP MONITOR
ØB	BOOSTER BLK TO GRD STUD	1Ø	INTERIOR LTS-LUGGAGE CPT	21A	EXTERIOR LTS-DIRECTIONNAL LH	32D	BACK-UP ALARM
ØBE	ØV BATTERY MONITOR	1ØA	INTERIOR LTS-LUGGAGE CPT	21B	EXTERIOR LTS-DIRECTIONNAL LH	32M	BACK-UP MONITOR
ØC	RJB - GRD	1ØA	A/C AUXILIARY-CLUTCH	21H	EXTERIOR LTS-HAZARD SIGNAL	34	A/C & HEAT SYSTEM-CONDENSER
ØS	AMPLI - GRD	1ØB	INTERIOR LTS-LUGGAGE CPT	23	EXTERIOR LTS-DIRECTIONNAL RH	34A	A/C & HEAT SYSTEM-CONDENSER
ØCR	24V DISC. SW RLY GRD SIGNAL	1ØC	INTERIOR LTS-LUGGAGE CPT	23A	EXTERIOR LTS-DIRECTIONNAL RH	34B	A/C & HEAT SYSTEM-CONDENSER
ØDS	24V DISC SW RLY GRD SIGNAL	1ØD	INTERIOR LTS-LUGGAGE CPT	23B	EXTERIOR LTS-DIRECTIONNAL RH	34C	A/C & HEAT SYSTEM-CONDENSER
ØD	RJB - GRD	11	FR. DESTINATION SIGN	23E	KNEELING-RH EXT. FLASHING LTS	34D	A/C & HEAT SYSTEM-CONDENSER
ØE	RJB - GRD	11A	FR. DESTINATION SIGN	23F	KNEELING-RH EXT. FLASHING LTS	34E	A/C & HEAT SYSTEM-CONDENSER
ØF	RJB - GRD	11B	FR. DESTINATION SIGN	23H	EXTERIOR LTS-HAZARD SIGNAL	34F	A/C & HEAT SYSTEM-CONDENSER
ØH	FJP - GRD	11C	FR. DESTINATION SIGN	24	BATTERY TO 24V CUT OUT RLY	34G	A/C & HEAT SYSTEM-CONDENSER
ØM	BACK-UP MONITOR	11D	FR. DESTINATION SIGN	24A	BOOSTER TO 24V DISC SW	34H	A/C & HEAT SYSTEM-CONDENSER
ØMR	24V DISC. SW RLY GRD SIGNAL	11E	FR. DESTINATION SIGN	24A	RR JCT BOX 24V DISC SW	34J	A/C & HEAT SYSTEM-CONDENSER
ØMS	24V DISC. SW RLY GRD SIGNAL	11K	FR. DESTINATION SIGN	24A	FR JCT PANEL 24V DISC SW	35	INTERIOR LTS-STEPWELL LTS
ØP	RJB - GRD	11P	FR. DESTINATION SIGN	24B	FR JCT PANEL 24V DISC SW	36	ENGINE BRAKE SYSTEM & RETARDER
ØR	SOUND SYSTEM GRD	12	12V BATTERY TO JCT BLOCK	24BE	BATTERY MONITOR	36A	ENGINE BRAKE SYSTEM
ØSA	FJB - BATTERY GRD-SOUND SYS.	12	12V VIDEO SYSTEM	24C	FR JCT PANEL 24V DISC SW	36C	ENGINE BRAKE SYSTEM-ABS CANCEL
ØSE	FJB - BATTERY GRD-SOUND SYS.	12A	FR JCT PANEL 12V DISC SW	24D	FR & RR JCT PANEL 24V HOT WIRE	37	LAVATORY-OCCUPIED LTS
ØSF	FJB - BATTERY GRD-SOUND SYS.	12A	RR JCT BOX 12V DISC SW	24DA	A/C & HEAT. SYS.-WATER PUMP	38	FUEL WATER FILTER
ØS2	RADIO - BATTERY GRD	12B	FR JCT PANEL 12V DISC SW	24E	24V CUT OUT RLY TO 24V DIST.	38	INTERIOR LTS-24V FLUORESCENT
ØS3	VIDEO - BATTERY GRD	12BE	12V BATTERY MONITOR	24F	FR JCT PANEL 24V DISC SW	38A	INTERIOR LTS-24V FLUORESCENT
ØSS	SOUND SYSTEM - BATTERY GRD	12C	RR JCT BOX 12V DISC SW	24I	FR JCT PANEL 24V IGNITION	38B	INTERIOR LTS-24V FLUORESCENT
ØSSS	SOUND SYSTEM - BATTERY GRD	12D	FR & RR JCT PANEL 12V HOT WIRE	24I	RR JCT BOX 24V IGNITION	38C	INTERIOR LTS-24V FLUORESCENT
ØT	FJP - GRD	12E	FR JCT PANEL 12V DISC SW	24IA	FR JCT PANEL 24V IGNITION	38E	INTERIOR LTS-24V FLUORESCENT
ØT	FR SERVICE CPT-GRD	12F	RR JCT BOX 12V DISC SW	24IB	FR JCT PANEL 24V IGNITION	38F	INTERIOR LTS-24V FLUORESCENT
ØV	FJP - GRD	12G	FR JCT PANEL 12V DISC SW	24K	FR JCT PANEL 24V DISC SW	39	INTERIOR LTS-DRIVER'S LTS
ØVA	GRD STUD TO BAT.EQUALIZER	12I	FR JCT PANEL 12V IGNITION	24P	FR JCT PANEL 24V DISC SW	39A	INTERIOR LTS-DRIVER'S LTS
ØW	FJP - GRD	12IF	FR JCT PANEL 12V IGNITION	24R	BATT. CPT TO START RLY	39B	INTERIOR LTS-DRIVER'S LTS
ØW	WORLD TRANSM. VIM CHASSIS GRD	12IM	BACK-UP MONITOR	24S	RR JCT BOX 24V DISC SW	44	EXTERIOR LTS-FOG
ØWA	PRE_HEAT WATER HEATER WEBASTO	12P	FR & RR JCT PANEL 12V DISC SW	24S1	24V BATTERY-SOUND SYSTEM	44A	EXTERIOR LTS-FOG
ØWB	PRE_HEAT WATER HEATER WEBASTO	12P	12V VIDEO SYSTEM	24S2	24V BATTERY-SOUND SYSTEM	44B	EXTERIOR LTS-FOG
ØX	RJB - GRD	12S	12V BATTERY-SOUND SYSTEM RADIO	24S3	24V BATTERY-SOUND SYSTEM VIDEO	44C	EXTERIOR LTS-FOG & HAZARD SW
ØY	ABS SYSTEM-GRD	12SA	12V BATTERY-SOUND SYSTEM	24S4	24V BATTERY-SOUND SYSTEM VIDEO	45	A/C & HEAT SYSTEM-DRIVER'S CTRL
ØY1	ABS SYSTEM-GRD	12SB	12V BATTERY-SOUND SYSTEM	24SB	24V BATTERY-SOUND SYSTEM	45	A/C & HEAT SYSTEM-WATER VALVE
2	A/C & HEAT SYSTEM-CONDENSER	12SC	12V BATTERY-SOUND SYSTEM	24SS	24V BATTERY-SOUND SYSTEM	45A	A/C & HEAT SYSTEM-WATER VALVE
2A	A/C & HEAT SYSTEM-CONDENSER	12SE	12V BATTERY-SOUND SYSTEM	24T	RR JCT BOX 24V DISC SW	45B	A/C & HEAT SYSTEM-WATER VALVE
2C	A/C & HEAT SYSTEM-CONDENSER	12SF	12V BATTERY-SOUND SYSTEM	24VA	24V BATTERY POST TO EQUALIZER	45E	A/C & HEAT SYSTEM-BYPASS VALVE
2D	A/C & HEAT SYSTEM-CONDENSER	12SS	12V BATTERY-SOUND SYSTEM	24VI	RR JCT BOX 24V IGNITION	46	EXTERIOR LTS-MARKER
2E	A/C & HEAT SYSTEM-CONDENSER	12S1	12V BATTERY-SOUND SYSTEM RADIO	24VIF	FR JCT PANEL 24V IGNITION	46A	EXTERIOR LTS-MARKER
3	A/C & HEAT SYSTEM-EVAPORATOR	12S2	12V BATTERY-SOUND SYSTEM RADIO	24VD	FR & RR JCT BOX 24V HOT WIRE	46B	EXTERIOR LTS-MARKER
3A	A/C & HEAT SYSTEM-EVAPORATOR	12T	RR JCT BOX 12V DISC SW	24VF	FR JCT PANEL 24V DISC SW	46C	EXTERIOR LTS-MARKER
3B	A/C & HEAT SYSTEM-EVAPORATOR	12VD	FR & RR JCT BOX 12V HOT WIRE	24VR	RR JCT PANEL 24V DISC SW	47	A/C & HEAT SYSTEM-DRIVER'S HTR
4	CHIME-PASSENGER & HOSTESS	12VO	12V BATTERY POST TO EQUALIZER	24X	24V SPEED SW & KNEELING	47	A/C & HEAT SYSTEM-FULL AIR
4A	CHIME-PASSENGER & HOSTESS	12VF	12V FR JCT PANEL	25	24VAC GEN RLY ON SIGNAL	48	INTERIOR LTS-STEPWELL LTS
4B	CHIME-PASSENGER & HOSTESS	12VI	RR JCT BOX 12V IGNITION	25A1	PRE-EXITATION ALT.BOSCH *1	51	INTERIOR LTS-READING LTS
4C	CHIME-PASSENGER & HOSTESS	12VR	RR JCT BOX 12V DISC SW	25B	EXTERIOR LTS-DAYTIME RUN LTS	52	ALARM & SIGNAL-ELEC. HORN
4D	CHIME-PASSENGER & HOSTESS	12W	12V HOT WIRE DDEC III FEED	25A2	PRE-EXITATION ALT.BOSCH *2	52A	ALARM & SIGNAL-ELEC. HORN
4E	CHIME-PASSENGER & HOSTESS	13A	ALARM & SIGNAL-LO AIR PRIM.	25A3	HVAC SIGNAL-ALTERNATOR BOSCH	53	ALARM & SIGNAL-ELEC. HORN
5	INTERIOR LTS-EMERGENCY EXIT LTS	13B	ALARM & SIGNAL-LO AIR SEC.	25A4	SIGNAL ALT.*1 OR *2	5ØB	WIREBR&ERASHER SYSTEM
5A	INTERIOR LTS-EMERGENCY EXIT LTS	14	LAVATORY-FLUSHING SW	27	LAVATORY-EMERGENCY BUZZER	53C	WIPER & WASHER SYSTEM
5C	INTERIOR LTS-EMERGENCY EXIT LTS	15	EXTERIOR LTS-MULTI FUNC LEVEL	28	A/C & HEAT SYSTEM-WARNING LT	53E	WIPER & WASHER SYSTEM
6	INTERIOR LTS-AISLE LTS	15	ALARM & SIGNAL-DIF. OIL TEMP	29	A/C & HEAT SYSTEM-DRIVER'S HTR	53F	WIPER & WASHER SYSTEM

NO.	SYSTEM	NO.	SYSTEM	NO.	SYSTEM	NO.	SYSTEM
53J	WIPER & WASHER SYSTEM	77C	A/C AUXILIARY-LIQ. SOL.	102	WORLD TRANSM-SOL. C3	126A	KNEELING SYSTEM
54	SPARE-F.J.B. TO FR ROOF	77H	A/C & HEAT SYSTEM-FAN CLUTCH	104	WORLD TRANSM-SOL. FORWARD	126B	KNEELING SYSTEM
55	EXTERIOR LTS-HI BEAM	80	WORLD TRANSM-NEUTRAL SIGNAL GRD	105	WORLD TRANSM-RETARDER & SUMP	126C	KNEELING SYSTEM
56	TRANSM. OIL TEMP GAUGE	81	EXTERIOR LTS-STOP SW	105W	WORLD TRANSM-RETARDER & SUMP	126G	KNEELING SYSTEM
57	EXTERIOR LTS-HI BEAM	82	EXTERIOR LTS-STOP SIGNAL	106	WORLD TRANSM-OIL LEVEL HI	126H	KNEELING SYSTEM
57	A/C & HEAT SYSTEM-WATER PUMP	82A	EXTERIOR LTS-STOP SIGNAL	107	WORLD TRANSM-LOCKUP SOL. HI	127	WORLD TRANSM-RETARDER FEED SOL.
57A	EXTERIOR LTS-HI BEAM	82B	EXTERIOR LTS-STOP LTS	108	WORLD TRANSM-REMOTE PWR WAKE UP	127	PRE-HEAT WATER HEATER
57A	A/C & HEAT SYSTEM-WATER PUMP	82K	EXTERIOR LTS-STOP RETARDER	108	24V DISC SW TO 24V SYSTEM	127A	PRE-HEAT WATER HEATER
57B	A/C & HEAT SYSTEM-WATER PUMP	82L	EXTERIOR LTS-STOP LTS	109	WORLD TRANSM-RET. SOL. LO	127B	PRE-HEAT WATER HEATER
57C	PRE-HEAT WATER HEATER	82R	EXTERIOR LTS-STOP LTS	110	ALARM & SIGNAL-WATER TEMP	127W	PRE-HEAT WATER HEATER
57D	PRE-HEAT WATER HEATER	83	ENGINE CTR-MAST KEY SW ACCES	110	WORLD TRANSM-LOCKUP SOL. LO	127X	PRE-HEAT WATER HEATER
57E	PRE-HEAT WTR HTR PUMP	84	ENGINE CTR-MAST KEY SW START	111	BATTERY GRD	128	WORLD TRANSM-SOL. C2
57F	PRE-HEAT WATER HEATER	84A	ENGINE CTR-MAST KEY SW START	111	WORLD TRANSM-SOL. C6	128A	PRE-HEAT WATER HEATER
57W	PRE-HEAT WATER HEATER	85	ENGINE CTR-MAST KEY SW IGN	112	WORLD TRANSM-SPARE OUTPUT (·)	128B	PRE-HEAT WATER HEATER
58	EXTERIOR LTS-LO BEAM	85A	24V IGN DASH INSTRUMENTATION	113	ALARM & SIGNAL-OIL PRESS	128C	PRE-HEAT WATER HEATER
58A	EXTERIOR LTS-LO BEAM	85B	24V IGN DASH INSTRUMENTATION	113	WORLD TRANSM-REVERSE WARNING	128D	PRE-HEAT WATER HEATER
58B	EXTERIOR LTS-LO BEAM	85C	ENGINE CTR-24V IGNITION	114	WORLD TRANSM-SPARE OUTPUT (-)	128E	PRE-HEAT WATER HEATER
58E	EXTERIOR LTS-LO BEAM	85C	PARKING BRAKE SWITCH	114	INTERIOR LTS-DASH LT REGUL.	128F	PRE-HEAT WATER HEATER
59A	ENGINE BRAKE SYSTEM	86A	ENGINE CTR-STARTER SOL SIGN	114A	INTERIOR LTS-DASH LT	128W	PRE-HEAT WATER HEATER
60	EXTERIOR LTS-RR & FR ROOF GRD	85Y	ABS-WARNING LT	114B	INTERIOR LTS-DASH LT REGUL.	128X	PRE-HEAT WATER HEATER
61	EXTERIOR LTS-24V FEED SW	87B	ENGINE CTR-24V IGNITION	114C	INTERIOR LTS-DASH LT	129	WORLD TRANSM-SOL. C5
61A	EXTERIOR LTS-HEAD SIGNAL	85X	ABS-24V IGN	115	ALARM & SIGNAL-TAG PRESS	129	PRE-HEAT WATER HEATER
62	LAVATORY-OCCUPIED LTS	86	ENGINE CTR-STARTER SOL SIGN	115	DDEC III-COOLANT LEVEL	129A	PRE-HEAT WATER HEATER
62B	LAVATORY-OCCUPIED LTS	85F	LO AIR SONALERT	115	WORLD TRANSM-DO NOT SHIFT SIGNAL	129B	PRE-HEAT WATER HEATER
63	EXTERIOR LTS-CLEARANCE	85W	ABS-24V IGN	115A	ALARM & SIGNAL-TAG PRESS	130	WORLD TRANSM-SOL. GRD 3
63A	EXTERIOR LTS-CLEARANCE	88	ENGINE CTR-RR START SIGNAL	115B	ALARM & SIGNAL-TAG PRESS	130A	A/C & HEAT SYSTEM-EVAPORATOR
63B	EXTERIOR LTS-CLEARANCE	89	ENGINE CTR-RR START SIGNAL	115C	DDEC III-COOLANT LEVEL	130	A/C & HEAT SYSTEM-EVAPORATOR
63C	EXTERIOR LTS-MARKER SIGNAL	90	A/C & HEAT SYSTEM-WATER PUMP	115W	WORLD TRANSM-DO NOT SHIFT SIGNAL	131	24V DISC SW TO FR JCT PANEL
63D	EXTERIOR LTS-MARKER & TAIL	90	GALLEY SYSTEM	116	WORLD TRANSM-LO SIGNAL SOL. HI	131	WORLD TRANSM-SOL. C4
63E	EXTERIOR LTS-CLEARANCE	90	DIGITAL CLOCK	116	A/C & HEAT SYSTEM-DRIVER'S HTR	132	WORLD TRANSM-ENG BRK OUTPUT (-)
63F	EXTERIOR LTS-MARKER BLINKER	90A	GALLEY SYSTEM	116A	A/C & HEAT SYSTEM-DRIVER'S HTR	132W	WORLD TRANSM-ENG BRK OUTPUT (-)
63H	EXTERIOR LTS-TAIL	90B	FR JCT PANEL 24V DISC SW	116B	A/C & HEAT SYSTEM-DRIVER'S HTR	133	WORLD TRANSM-RET. ACTUATOR HI
63K	EXTERIOR LTS-TAIL	90B	ENGINE CTR-MAST KEY SW FEED	117	WORLD TRANSM-SPARE INPUT (-)	133	GALLEY SYSTEM-CONTAINER RH
64	DIFFERENTIAL OIL TEMP GAUGE	90B	GALLEY SYSTEM	117	ALARM & SIGNAL-TRANSM OIL TEMP	133A	GALLEY SYSTEM-CONTAINER RH
65A	PRE-HEAT WATER HEATER	90C	ALARM & SIGNAL-FIRE DETECTOR	117A	ALARM & SIGNAL-TRANSM OIL TEMP	134	WORLD TRANSM-RET. APPLY SOL. HI
66B	RR JCT BOX 12V HOT WIRE	90E	GALLEY SYSTEM	118	WORLD TRANSM-SPARE INPUT (·)	134	GALLEY SYSTEM-CONTAINER RH
67	A/C & HEAT SYSTEM	90F	GALLEY SYSTEM	119	CHIME-HOSTESS & PASSENGER	134A	GALLEY SYSTEM-CONTAINER RH
67A	A/C & HEAT SYSTEM	91	PARKING BRAKE SW SIGNAL	119	WORLD TRANSM-ENG BRK INPUT (·)	135	WORLD TRANSM-ANALOG GRD
67B	A/C & HEAT SYSTEM	91A	PARKING BRAKE SW SIGNAL	119A	CHIME-HOSTESS & PASSENGER	135	A/C AUXILIARY-FAN
67C	A/C & HEAT SYSTEM	91B	EXTERIOR LTS-RUN LTS CANCEL	119B	CHIME-HOSTESS & PASSENGER	135A	A/C AUXILIARY-FAN
69	RR JCT BOX 24V HOT WIRE	91B	DDEC III-FAST IDLE SIGNAL	120	12V HOT WIRE	135B	A/C AUXILIARY-COIL SENSING
70	INTERIOR LTS-HAT RACK LTS	91C	PRE-HEAT WATER HEATER	120	WORLD TRANSM-SOL. C1	135C	WORLD TRANSM-RETARDER TEMP
70A	INTERIOR LTS-HAT RACK LTS	92	BATTERY MONITOR-CHECK BALANCE	120D	12V HOT WIRE	135D	WORLD TRANSM-RETARDER RES MOD
70C	INTERIOR LTS-HAT RACK LTS	92A	BATTERY MONITOR-CHECK BALANCE	120Y	VIDEO SYSTEM	136	GALLEY SYSTEM-LAMP
71	A/C AUXILIARY-DASH SW	93	BATTERY MONITOR-CHECK LO/HI	120Z	VIDEO SYSTEM	136	WORLD TRANSM-ECU POWER
71B	R J B GRD-BACK UP ALARM	93A	BATTERY MONITOR-CHECK LO/HI	121	WORLD TRANSM-SOL. GRD 2	136V	WORLD TRANSM-12V BATTERY
71H	A/C AUXILIARY-DASH SW	94	HIGH BUOY SYSTEM	121	CIGAR LIGHTER	136W	WORLD TRANSM-12V BATTERY
72A	A/C AUXILIARY-DASH SW	94A	HIGH BUOY SYSTEM	122	A/C & HEAT SYSTEM-DRIVER'S HTR	136X	WORLD TRANSM-12V BATTERY
72H	A/C AUXILIARY-DASH SW	95	ENGINE BRAKE & RETARDER SYSTEM	122	A/C & HEAT SYSTEM-FRESH AIR	137	WORLD TRANSM-RETARDER
73	LAVATORY-NIGHT LTS	95A	ENGINE BRAKE & RETARDER SYSTEM	122	WORLD TRANSM-SOL. GRD 4	137	RR VIEW MIRROR
74	INTERIOR LTS-READING LTS	95B	ENGINE BRAKE & RETARDER SYSTEM	123	WORLD TRANSM-NEUTRAL START	137A	RR VIEW MIRROR
74A	INTERIOR LTS-READING LTS	97	TACHOMETER (-)	123	ALARM & SIGNAL-FIRE DETECTOR	138	WORLD TRANSM-RETARDER TEMP
74B	INTERIOR LTS-READING LTS	99	A/C AUXILIARY-DASH SW	123	ALARM & SIGNAL-FIRE DETECTOR	138	ABS SYSTEM
75	INTERIOR LTS-READING LTS	100	INTERIOR LTS-GENERAL LTS	123A	WORLD TRANSM-THROTTLE (HI)	138	A/C AUXILIARY-FAN
76	FUEL TANK GAUGE	100A	INTERIOR LTS-GENERAL LTS	124	LAVATORY-FAN	138A	ABS SYSTEM
76C	LOW FUEL LT	100B	INTERIOR LTS-GENERAL LTS	125	WORLD TRANSM-RETARDER INDICATOR	138A	A/C AUXILIARY-FAN
76L	LOW FUEL LT	100C	INTERIOR LTS-GENERAL LTS	125	WORLD TRANSM-RETARDER INDICATOR	139	ABS SYSTEM
76M	FUEL PRIME PUMP	101	WORLD TRANSM-LO SIGNAL SOL. LO	125W	WORLD TRANSM-RETARDER INDICATOR	139	A/C AUXILIARY-FAN
76P	FUEL PRIME PUMP	102	A/C JCT BOX-24V DISC. SW	126	WORLD TRANSM-LUBE PRESS SW.	139	WORLD TRANSM-OUTPUT SPEED HI
77H	A/C & HEAT SYSTEM-CLUTCH	102	24V STARTER TO GENERATOR	126	KNEELING SYSTEM	139A	A/C AUXILIARY-FAN
77B	A/C AUXILIARY-LIQ. SOL.	102	WORLD TRANSM-SOL. GRD 1				

NO.	SYSTEM	NO.	SYSTEM	NO.	SYSTEM	NO.	SYSTEM
140	A/C AUXILIARY-SHUTTER	165	WORLD TRANSM-OIL LEVEL SIGNAL	563	DDEC III-FAN CLUTCH SPEED* 2	SP12	SPARE
140	WORLD TRANSM-OUTPUT SPEED LO	168	WORLD TRANSM-SER. INTERFACE (·)	583	DDEC III-ENGINE BRAKE 4 CYL.	SP13	SPARE
140	ABS SYSTEM	170C	LUGGAGE DOOR LOCK	750	PRODRIVER-ILLUMINATION LIGHT	SP14	SPARE
141	ABS SYSTEM	170D	LUGGAGE DOOR LOCK	900	DDEC III-DATA LINK (·)	SP15	SPARE
141	WORLD TRANSM-ENGINE SPEED HI	170E	LUGGAGE DOOR LOCK	901	DDEC III-DATA LINK (-)	SP16	SPARE
142	WORLD TRANSM-SERIAL COM. A	170F	LUGGAGE DOOR LOCK	908	DDEC III-HYDRAULIC TRANSM. MOD.	SP20	SPARE
142	ABS SYSTEM	170G	LUGGAGE DOOR LOCK	916	DDEC III-SENSOR SUPPLY (5VDC)	SP21	SPARE
143	ABS SYSTEM	170H	LUGGAGE DOOR LOCK	952	DDEC III-SENSOR RETURN	SP22	SPARE
143A	ABS SYSTEM	170J	LUGGAGE DOOR LOCK	953	DDEC III-BATTERY GRD	SP23	SPARE
143	WORLD TRANSM-ECU BATTERY GRD	170L	LUGGAGE DOOR LOCK	953C	DDEC III-BATTERY GRD	SP30	SPARE
143W	WORLD TRANSM-BATTERY GRD	170M	LUGGAGE DOOR LOCK	979	DDEC III-ENGINE BRAKE 2 CYL.	SP31	SPARE
143X	WORLD TRANSM-BATTERY GRD	170N	LUGGAGE DOOR LOCK	A	A/C & HEAT SYSTEM-HI PRES.	SP32	SPARE
144	WORLD TRANSM-ECU CHASSIS GRD	170P	LUGGAGE DOOR LOCK	A1	A/C & HEAT SYSTEM-LO PRES.	SP33	SPARE
144	ABS SYSTEM	170R	LUGGAGE DOOR LOCK	A4	A/C & HEAT SYSTEM-CONTROL SW	SP34	SPARE
144A	ABS SYSTEM	170S	LUGGAGE DOOR LOCK	A5	A/C & HEAT SYSTEM-CONTROL SW	SP35	SPARE
145	ABS SYSTEM	170V	LUGGAGE DOOR LOCK	A6	A/C & HEAT SYSTEM-CONTROL SW	SP57	SPARE
146	ABS SYSTEM	170W	LUGGAGE DOOR LOCK	D1	SOUND SYSTEM-RH SPEAKER	SP60	SPARE
146	WORLD TRANSM-IGNITION SENSE	170X	LUGGAGE DOOR LOCK	D2	SOUND SYSTEM-RH SPEAKER	SP61	SPARE
146W	WORLD TRANSM-12V IGNITION	170Y	LUGGAGE DOOR LOCK	D3	SOUND SYSTEM-RH SPEAKER	SP62	SPARE
146X	WORLD TRANSM-12V IGNITION	170Z	LUGGAGE DOOR LOCK	D4	SOUND SYSTEM-RH SPEAKER	SP63	SPARE
147	WORLD TRANSM-OIL TEMP	182	PYROMETER	D5	SOUND SYSTEM-RH SPEAKER	SP69	SPARE
147	ABS SYSTEM	182A	PYROMETER	D6	SOUND SYSTEM-RH SPEAKER	SP70	SPARE
147	ETHER COLD START	197A	FUEL WATER FILTER	D7	SOUND SYSTEM-RH SPEAKER	V5	A/C & HEAT SYSTEM-DRIVER'S HTR
147A	ETHER COLD START	197B	FUEL WATER FILTER	D8	SOUND SYSTEM-RH SPEAKER	V7	A/C & HEAT SYSTEM-DRIVER'S HTR
148	ABS SYSTEM	201	WORLD TRANSM-SPARE	G1	SOUND SYSTEM-LH SPEAKER		
148	WORLD TRANSM-OUTPUT SPEED LO	202	WORLD TRANSM-SPARE	G2	SOUND SYSTEM-LH SPEAKER		
149	WORLD TRANSM-TURBINE SPEED HI	203	WORLD TRANSM-SPARE	G3	SOUND SYSTEM-LH SPEAKER		
149	ABS SYSTEM	204	WORLD TRANSM-SPARE	G4	SOUND SYSTEM-LH SPEAKER		
149A	ABS SYSTEM	205	WORLD TRANSM-SPARE	G5	SOUND SYSTEM-LH SPEAKER		
150	ABS SYSTEM-SPARE	206	WORLD TRANSM-SPARE	G6	SOUND SYSTEM-LH SPEAKER		
150	WORLD TRANSM-ENGINE SPEED LO	214	WORLD TRANSM-BACK UP SIGNAL	G7	SOUND SYSTEM-LH SPEAKER		
150	DDEC III-ECM BATTERY GRD	214A	BACK UP SIGNAL	G8	SOUND SYSTEM-LH SPEAKER		
150A	DDEC III-ECM BATTERY GRD	231	NEUTRAL SIGNAL GRD	J4	A/C & HEAT SYSTEM-DRIVER'S HTR		
151	DDEC III-ECM BATTERY GRD	240	DDEC III-ECM 12V FEEDING	L1	VIDEO SYSTEM- 110V		
151	WORLD TRANSM-SERIAL COM. B	241	DDEC III-ECM 12V FEEDING	L1	INTERIOR LTS-110V FLUORESCENT		
151	ABS SYSTEM-SPARE	251	PRODRIVER-12V HOT WIRE	L1A	INTERIOR LTS-110V FLUORESCENT		
152	ABS SYSTEM-SPARE	290	FAN CLUTCH RADIATOR	L1C	INTERIOR LTS-110V FLUORESCENT		
153	ABS SYSTEM	291	FAN CLUTCH RADIATOR SPD 1	L2A	INTERIOR LTS-110V FLUORESCENT		
153	WORLD TRANSM-SPARE INPUT (-)	292	FAN CLUTCH RADIATOR SPD 2	L2C	INTERIOR LTS-110V FLUORESCENT		
154	WORLD TRANSM-ABS RETARDER INPUT	417	DDEC III-LIMIT SPEED GOVERNOR	L8	ENG.BLK & WATER TANK-HAETER		
155	WORLD TRANSM-SPARE INPUT (-)	419	DDEC III-CHECK ENGINE LIGHT	L9	ENG.BLK & WATER TANK-HAETER		
155	ABS SYSTEM	439	DDEC III-12V IGNITION	N1	VIDEO SYSTEM- 110V		
156	WORLD TRANSM-THROTTLE POS.	440	DDEC III-12V IGNITION	N2	INTERIOR LTS-110V FLUORESCENT		
156	ABS SYSTEM	440A	DDEC III-12V IGNITION	O3	A/C & HEAT SYSTEM-DRIVER'S HTR		
156A	ABS SYSTEM	451	DDEC III-A/C FAN CLUTCH	R1	A/C & HEAT SYSTEM-DRIVER'S HTR		
156C	ABS SYSTEM	505	DDEC III-TACHOMETER DRIVE	R6	A/C & HEAT SYSTEM-DRIVER'S HTR		
156W	ABS SYSTEM	509	DDEC III-STOP ENGINE LIGHT	SH1	SHIELD WIRE GRD		
157	WORLD TRANSM-SPEEDOMETER SIGNAL	510	DDEC III-FAST IDLE SIGNAL	SH2	SHIELD WIRE GRD		
157	ABS SYSTEM	524	DDEC III-ENGINE BRAKE DISABLE	SH3	SHIELD WIRE GRD		
157A	ABS SYSTEM	525	DDEC III-FAST IDLE SIGNAL	SP1	SPARE		
157B	ABS SYSTEM	528	DDEC III-STOP ENG. OVERRIDE	SP2	SPARE		
157C	ABS SYST.-CANCEL SEC. BRK	531	DDEC III-CRUISE CLUTCH RELEASE	SP3	SPARE		
158	WORLD TRANSM-DIMMER	541	DDEC III-CRUISE SET SW	SP4	SPARE		
160	WORLD TRANSM-SER. INTERFACE (-)	543	DDEC III-CRUISE STOP SW CUT IN	SP5	SPARE		
161	WORLD TRANSM-SIGNAL GRD	544	DDEC III-CRUISE ON/OFF SW	SP10	SPARE		
161B	WORLD TRANSM-SIGNAL GRD	545	DDEC III-CRUISE RESUME SW	SP11	SPARE		
162	WORLD TRANSM-PRESS. SW C3	555	DDEC III-FAN CLUTCH SPEED* 1				
163	WORLD TRANSM-RETARDER ENABLE	556	DDEC III-VEHICLE SPEED (·)				
164	WORLD TRANSM-RET. ACTUATOR SIGN	557	DDEC III-VEHICLE SPEED (-)				