

NO.	LOCATION	TYPE	(NB) CAVITY	•PIN HOUSING	•SOCKET HOUSING	NO.	LOCATION	TYPE	(NB) CAVITY	•PIN HOUSING	•SOCKET HOUSING
C3	UNDER DASH-LH	AMP CPC	37	561645	561646						
C7	FR SERVICE COMPT.-CLUTCH SW	ITT SS	3	561111	561080						
C8	FR JCT PANEL VCR FEED	AMP MNL	2	561248	561247						PRIOR REV 010
C11	LH CONSOLE SW-MIRROR	AMP MNL	3	561667	561550	C111	LH CONSOLE SW-DRIVER'LTS	SWF	8	-----	561107
C12	LH CONSOLE SW-MIRROR HTR	AMP MNL	2	561248	561247	C112	LH CONSOLE SW-GENERAL LTS	SWF	8	-----	561107
C13	LH CONSOLE SW-MIRROR	AMP MNL	6	561552	561515	C114	ENGINE DDEC-SPEED SIGNAL	PED WP	2	561566	561590
C14	UNDER DASH LH-MIRROR	AMP MNL	9	561670	561669	C115	RR JCT BOX-ENGINE ACCES.	DEUTSCH	40	562281	562284
C15	UNDER DASH RH-MIRROR	AMP MNL	9	561670	561669	C116	DRIVE AXLE COMPT.-AIR DRYER	PED MP	2	-----	562251
C18	UNDER DASH-FIRE ALARM	AMP MNL	2	560900	560898	C119	ENGINE COMPT.-LH LOWER LAMP	PED WP	6	561606	561607
C19	UNDER DASH-A/C & HEAT SYST.	TC	10	561072	561110	C120	ENGINE COMPT.-LH LOWER LAMP	PED WP	6	561606	561607
C20	RR JCT BOX DIODES	AMP MNL	9	561670	561669	C123	HAT RACK-BALLAST RH	AMP MNL	6	561552	561515
C21	LUGGAGE COMPT.-LOCK DOOR MOT.	PED	2	-----	562076	C124	HAT RACK-FLUORESCENT	AMP MNL	4	561551	561668
C22	ENGINE COMPT.-CYCLOP LT	PED WP	2	561566	561690	C125	HAT RACK-FLUORESCENT	AMP MNL	4	561551	561668
C26	UNDER INSTRUMENT.-PANEL RHEO.	TC	2	561030	560997	C126	HAT RACK-READING LTS	AMP MNL	2	560900	560898
C29	FR SERVICE COMPT.-VIM FEED	PED WP	3	561781	561782	C130	LH CONSOLE SW-READING LTS	SWF	8	-----	561107
C32	RH CONSOLE-DRV TEMP SENSOR	BURNDY	3	-----	561104	C131	LH CONSOLE SW-LUG.DOOR LOCK	SWF	8	-----	561107
C33	FRSERVICE COMPT. DDEC VSS	PED WP	2	561566	561690	C132	LH CONSOLE SW-PAS & HOS CHIME	SWF	8	-----	561107
C34	RH CONSOLE-DRV TEMP CTRL	BURNDY	6	-----	561103	C133	LH CONSOLE SW-JACOB OR RET.	SWF	8	-----	561107
C35	RECIRULATED AIR GRIL.-SENSER	BURNDY	3	-----	561104	C134	LH CONSOLE SW-GALLEY	SWF	8	-----	561107
C36	LH CONSOLE SW-CRUISE ON/OFF	SWF	8	-----	561107	C135	LH SW PANEL-ETHER	SWF	8	-----	561107
C37	LH CONSOLE SW-CRUISE SET	SWF	8	-----	561107	C136	LH CONSOLE SW-MIRROR HTR	SWF	8	-----	561107
C38	LH CONSOLE SW-CRUISE RESUME	SWF	8	-----	561107	C137	RH SW PANEL-HEAD LAMP	SWF	8	-----	561107
C41	UNDER DASH-FLASHER UNIT	TC	2	-----	561940	C138	RH SW PANEL-SPARE	SWF	8	-----	561107
C49	LAVATORY NIGHT LTS	AMP MNL	2	560900	560898	C139	RH SW PANEL-FOG LAMP	SWF	8	-----	561107
C50	RH CONSOLE-PAS. TEMP CTRL	BURNDY	6	-----	561103	C140	FR JCT PANEL-BAT. HI/LO	AMP MNL	2	560900	560898
C51	RH CONSOLE SW-A/C & HEAT	SWF	8	-----	561107	C141	ENGINE COMPT.-B/UP ALARM	PED WP	2	561566	561590
C52	ENGINE COMPT.-COMPRESSOR 05G	PED WP	2	561566	561690	C142	FR SERVICE CPT-LH MARKER LTS	ITT SS	3	561111	561080
C53	ENGINE COMPT.-COMPRESSOR 05G	PED WP	2	561566	561690	C143	RR LH HAT RACK-FEEDING	AMP MNL	9	561661	561662
C54	ENGINE COMPT.-COMPRESSOR 05G	TC	1	560098	560697	C144	RR RH HAT RACK-FEEDING	AMP MNL	9	561661	561662
C61	ENGINE COMPT.-FUEL FILTER	PED WP	2	561566	561690	C145	RH HAT RACK-BALLAST	AMP MNL	4	560851	560852
C65	UNDER LH HAT RACK	MOLEX	4	561477	561476	C146	FR SERVICE CPT-RH MARKER LTS	ITT SS	3	561111	561080
C67	LH UNDER DASH-AMPLIF. RH SPK	BLAUPUNKT	2	561988	-----	C147	RR ROOF LH-EMERGENCY EXIT LTS	AMP MNL	2	560900	560898
C68	LH UNDER DASH-AMPLIF. RH SPK	BLAUPUNKT	2	561988	-----	C148	RR ROOF RH-EMERGENCY EXIT LTS	AMP MNL	2	560900	560898
C73	LH SW PANEL-MULTI FUNC. LEV.	AMP FF	8	561188	-----	C149	LH HAT RACK-BALLAST	AMP MNL	4	560851	560852
C74	LH SW PANEL-MULTI FUNC. LEV.	AMP FF	6	-----	561108	C150	FR RH HAT RACK-110V FLUOR	AMP MNL	2	561248	561247
C78	LUGGAGE COMPT.-DOOR LOCK 4 LH	AMP MNL	4	560851	560852	C151	FR LH HAT RACK-110V FLUOR	AMP MNL	2	561248	561247
C79	LUGGAGE COMPT.-DOOR LOCK 4 RH	AMP MNL	4	560851	560852	C152	LH HAT RACK-GENERAL LTS	AMP MNL	3	561667	561550
C80	FR JCT PANEL-LUG. DOOR LOCK	AMP MNL	6	561552	561515	C153	RH HAT RACK-GENERAL LTS	AMP MNL	3	561667	561550
C81	LUGGAGE COMPT.-DOOR LOCK 1 LH	AMP MNL	4	560851	560852	C154	RH SW PANEL-HAZARD	SWF	8	-----	561107
C82	LUGGAGE COMPT.-DOOR LOCK 1 RH	AMP MNL	4	560851	560852	C155	LH SW PANEL-FAST IDLE	SWF	8	-----	561107
C83	UNDER DASH-FLASHER MODULE	TC	10	561072	561110	C156	LH SW PANEL-STP ENG. OVER.	SWF	8	-----	561107
C84	UNDER DASH-A/C SYSTEM	TC	3	561091	561071	C158	RR ROOF AUX. A/C FEEDING	AMP MNL	3	561667	561550
C85	LUGGAGE COMPT.-DOOR LOCK 3 RH	AMP MNL	4	560851	560852	C160	FR SERVICE CPT-INTERFACE	AMP CPC	37	561644	561646
C86	LUGGAGE COMPT.-DOOR LOCK 3 LH	AMP MNL	4	560851	560852	C161	ENGINE DDEC III-ECM	PED	30	-----	561600
C88	RR END ROOF-CLEARANCE LTS	AMP MNL	2	560900	560898	C162	ENGINE DDEC III-ACCESSORIES	PED WP	4	561610	561611
C90	RR ROOF AUX. A/C THERMOST.	BURNDY	6	-----	561103	C163	ENGINE CPT-COOLANT PROBE	PED MP	2	-----	562350
C91	RR ROOF AUX. A/C TMP SENSOR	BURNDY	6	-----	561104	C164	FR SERVICE JCT BOX	AMP CPC	22	561709	561710
C92	RR ROOF AUX. A/C FAN RH	TC	2	561030	560997	C165	FR SERVICE JCT BOX	AMP CPC	16	561693	561695
C93	RR ROOF AUX. A/C FAN LH	TC	2	561030	560997	C166	UNDER INSTRUMENT PANEL	AMP CPC	16	561639	561640
C94	RR ROOF AUX. A/C FAN RES LH	AMP MNL	2	560900	560898	C167	FR SERVICE CPT-EL. FOOT PEDAL	PED WP	3	561781	561782
C95	RR ROOF AUX. A/C FAN RES RH	AMP MNL	2	560900	560898	C168	FR SERVICE CPT-DDR	DEUTSCH	6	562360	-----
C96	RR ROOF AUX. A/C LIQ SOL VAL	TC	2	561030	560997	C169	FR SERVICE CPT-WORLD TR. VIW	AMP CPC	16	561638	561640
C97	RR ROOF AUX. A/C SHUT SOL VAL	AMPHENOL	2	-----	560412	C172	ENGINE COMPT-WATER TANK HEAT.	PED WP	2	561566	561690
C98	CONDENSER CPT.	ITT SS	4	561998	561999	C173	LAV.PORTABLE-WATER TANK HEAT.	AMP MNL	2	560900	560898
C101	CONDENSER CPT.-A/C PRESS. SW	PED WP	2	561566	561690	C175	FR SERV CPT-KNEELING FEEDING	PED WP	3	561781	561782
C105	UNDER DASH RH-DRV LIQ SOL VL	TC	2	561030	560997	C177	GALLEY-REFRIGERATOR	AMP MNL	2	561248	561247
C106	UNDER DASH RH-DRV WTR VALVE	TC	2	561030	560997						
C107	UNDER DASH RH-DRV HTR RH FAN	TC	2	561030	560997						
C108	UNDER DASH RH-DRV HTR LH FAN	TC	2	561030	560997						

NO.	LOCATION	TYPE	(NB) CAVITY	*PIN HOUSING	*SOCKET HOUSING	NO.	LOCATION	TYPE	(NB) CAVITY	*PIN HOUSING	*SOCKET HOUSING	
C179	RH HAT RACK-110V MONITOR	MOLEX	4	561477	561476	PRIOR REV. 010	C243	DRIVE AXLE CPT-ABS LH VALVE	WABCO	3	-----	641098
C180	FR SERV CPT-KNEEL. DIODE	AMP MNL	9	561670	561699		C244	DRIVE AXLE CPT-ABS RH VALVE	WABCO	3	-----	641098
C181	FR SERV CPT-KNEELING MODULE	AMP MNL	12	561735	561734		C245	DRIVE AXLE CPT-ABS RH SENSOR	WABCO	2	641132	----- PROIR S570
C182	FR SERVICE CPT-SPEED SW	AMP HDP	15	-----	562012		C245	DRIVE AXLE CPT-ABS RH SENSOR	DEUTSCH	2	562486	562485 EFF. W/S570
C184	FR SERV CPT-KNEEL. MOD. CTRL	AMP MNL	3	-----	561550		C246	DRIVE AXLE CPT-ABS SPARE	PED WP	4	561610	561611
C184	FR AXLE-KNEELING PROXIMITY SW	AMP MNL	3	561667	561550		C247	FR SERVICE CPT-ABS MODULE	WABCO	35	-----	561094
C185	FR SERV CPT-KNEEL. MOD. EXH.	AMP MNL	3	-----	561550		C248	DRIVE AXLE CPT-ABS	PED WP	6	561606	561607
C187	FR SERV CPT-KNEEL. MOD. BRK	AMP MNL	3	-----	561550		C249	FR SERVICE CPT-ABS/DDEC	PED WP	2	561566	561690
C187	FR SERVICE JCT BOX-RESISTORS	AMP MNL	6	561552	561515		C250	RH SW PANEL-B/UP CANCEL	SWF	8	-----	561107
C188	LH CONSOLE SW-KNEELING	SWF	8	-----	561107		C251	RH SW PANEL-SEAT HTR	SWF	8	-----	561107
C190	FR SERVICE CPT.-WORLD TR VIM	PED WP	30	-----	561600		C252	LH SW PANEL-SWITCH LT	SWF	2	-----	561837
C192	GALLEY-FEEDING	AMP CPC	3	561862	561847		C254	FR SERVICE JCT BOX-ABS	AMP CPC	16	561693	561695
C194	GALLEY SW-CONTAINER RH	SWF	8	-----	561107		C255	RH CONSOLE-RADIO	AMP MNL	9	561670	561669
C195	GALLEY SW-CONTAINER LH	SWF	8	-----	561107		C257	ENGINE COMPT-WATER HEATER	AMP FF	6	-----	561186
C199	FR SERV. JCT BOX-SERVICE BRK	AMP MNL	3	561667	561550		C258	DRIVER GUARD WATER HTR TIMER	AMP FF	8	561188	562363
C200	LH CONSOLE SW-24V FLUOR	SWF	8	-----	561107		C259	ENGINE COMPT-WATER HEATER	TC	2	561597	-----
C201	UNDER INSTRUMENT PANEL	AMP MNL	2	560900	560898	PRIOR REV. 010	C260	ENGINE COMPT-WATER HEATER	TC	1	561073	-----
C202	UNDER INSTRUMENT PANEL	AMP CPC	9	561636	561637		C261	ENGINE COMPT-WATER HEATER	TC	2	561597	-----
C205	LH UNDER DASH-AMPLIF. LH SPK	BLAUPUNKT	2	561988	-----		C266	BATTERY COMPT. LTS	AMP MNL	2	561248	561247
C206	RH CONSOLE-FR DEFROSTER	TC	2	561030	560997		C267	LUGGAGE COMPT. LTS - 1	AMP MNL	2	561248	561247
C207	RH CONSOLE-DRV RHEOSTAT	AMP MNL	6	561552	561515		C268	LUGGAGE COMPT. LTS - 2	AMP MNL	2	561248	561247
C208	UNDER DASH-DRV HTR MODULE	AMP MNL	9	561670	561669		C269	LUGGAGE COMPT. LTS - 3 RH	AMP MNL	2	561248	561247
C209	UNDER DASH-DRV HTR MODULE	AMP MNL	9	561670	561669		C270	LUGGAGE COMPT. LTS - 3 LH	AMP MNL	2	561248	561247
C210	LH UNDER DASH-AMPLIF. LH SPK	BLAUPUNKT	2	561988	-----		C271	LUGGAGE COMPT. LTS - 4	AMP MNL	2	561248	561247
C211	RH CONSOLE-VCR VOLUME	AMP MNL	4	561551	561668	PRIOR REV. 010	C272	FR SERVICE CPT LTS	AMP MNL	2	561248	561247
C212	LH CONSOLE SW-VCR VIDEO	SWF	8	-----	561107	PRIOR REV. 010	C274	FR JCT PANEL-DIODES	AMP MNL	15	561987	561986
C213	FR ROOF-CLEARANCE LT	AMP MNL	2	560900	560898		C276	FR JCT PANEL-ALARM BUZZER	BOSCH	5	-----	561183
C214	UNDER DASH PANEL-TACHOGRAPH	V.D.O.	8	-----	562041		C281	LH CONSOLE- FR. DEST. SIGN	SWF	2	-----	561837
C215	UNDER DASH PANEL-TACHOGRAPH	V.D.O.	8	-----	562043		C282	FR. ROOF- DEST. SIGN	AMP CPC	9	561636	561637
C216	UNDER DASH PANEL-TACHOGRAPH	AMP MNL	4	560851	560852		C290	LUGGAGE CPT-DOOR LOCK	AMP MNL	4	560851	560852
C217	FR LH HAT RACK-SPEAKER	AMP MNL	4	561659	561660		C291	LUGGAGE CPT-DOOR LOCK	AMP MNL	4	560851	560852
C218	FR RH HAT RACK-SPEAKER	AMP MNL	4	561659	561660		C292	LUGGAGE CPT-DOOR LOCK	AMP MNL	4	560851	560852
C219	DASH RHEOSTAT-P.A. VOLUME	MOLEX	4	561477	561476	PRIOR REV. 010	C293	WIPER MOTOR	AMP FF	6	-----	561186
C220	LH UNDER DASH-P.A. VOLUME	AMP MNL	3	561667	561550	PRIOR REV. 010	C294	UNDER DASH-WIPER SYST. FEED	AMP MNL	6	561552	561515
C221	LH UNDER DASH-AMPLIFIER FEED	AMP MNL	3	561550	561667	PRIOR REV. 010	C295	UNDER DASH-WIPER PULSE GEN.	AMP FF	6	-----	561186
C222	LH UNDER DASH-P.A. RADIO	AMP MNL	9	561670	561669	PRIOR REV. 010	C296	FR SERVICE CPT-HEAD LTS	ITT SS	3	561111	561080
C223	LH UNDER DASH-P.A. RADIO	AMP MNL	9	561670	561669	PRIOR REV. 010	C298	FR LH HAT RACK-AMPLI	MOLEX	6	-----	562464
C224	LH UNDER DASH-PA & RADIO FEED	AMP MNL	6	561552	561515	PRIOR REV. 010	C299	FR LH HAT RACK-AMPLI	MOLEX	10	-----	562465
C225	LH UNDER DASH-PA MICRO OUTLET	AMP MNL	3	561667	561550	PRIOR REV. 010	C300	FR LH HAT RACK-AMPLI	MOLEX	6	-----	562464
C226	LH UNDER DASH-PA MICRO OUTLET	AMP MNL	3	561667	561550	PRIOR REV. 010	C301	FR LH HAT RACK-AMPLI	MOLEX	10	-----	562465
C227	RH CONSOLE-SPEAKER CONTROL SW	SWF	8	-----	561107	PRIOR REV. 010	C302	UNDER DASH-FLASHER MODULE	AMP MNL	2	560900	560898
C229	LH UNDER DASH-PA DRV SPEAKERS	AMP MNL	4	561551	561668	PRIOR REV. 010	C309	ENGINE DDEC III-ECM POWER	PED WP	5	-----	562345
C230	ENG.CPT.-FUEL PRIME PUMP SW.	PED WP	2	561566	561690		C312	ENGINE DDEC III-ECM SIGNAL	PED WP	3	561781	561782
C231	ENG.CPT.-FUEL PRIME PUMP	PED WP	2	561566	561690		C313	ENGINE DDEC III-OUTPUT	PED WP	4	562398	-----
C232	UNDER L.H. CONSOLE	MOLEX	4	561477	561476	PRIOR REV. 010	C314	FR SERVICE CPT-PRESS SW KNEEL	PED WP	2	561566	561690
C233	MICRO OUTLET SOCKET	MOLEX	4	561477	561476	PRIOR REV. 010	C315	FR SERVICE CPT-KNEEL ALARM	PED WP	2	561566	561690
C234	UNDER INSTRUMENT PANEL-VDO	AMP MNL	4	560851	560852	PRIOR REV. 010	C316	FR SERVICE CPT-KNEEL ALARM	AMP MNL	2	560900	560898
C234	UNDER INSTRUMENT PANEL-VDO	AMP FF	8	-----	562363		C326	ENGINE DDEC III- MANUAL TR.	PED WP	4	561610	561611
C235	UNDER INSTRUMENT PANEL-VDO	AMP MNL	4	560851	560852	PRIOR REV. 010	C364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550
C235	UNDER INSTRUMENT PANEL-VDO	AMP FF	8	-----	562363		C365	FR ROOF-DESTINATION SIGN	AMP MNL	2	560900	560898
C236	FR SERVICE CPT CENTER-ABS	AMP CPC	14	561585	561583		C368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550
C237	FR AXLE CPT-ABS RH SENSOR	WABCO	2	641132	-----		C369	FR ROOF-DEST. SIGN OPER. SW.	TORRIX	5	-----	562110
C238	FR AXLE CPT-ABS RH VALVE	WABCO	3	-----	641098		C370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C239	FR AXLE CPT-ABS LH VALVE	WABCO	3	-----	641098		C371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898
C240	FR AXLE CPT-ABS LH SENSOR	WABCO	2	641132	-----		C372	FR ROOF-DEST. SIGN SPEED SW.	MOLEX	4	561477	561476
C241	DRIVE AXLE CPT-ABS	PED WP	6	561606	561607							
C242	DRIVE AXLE CPT-ABS LH SENSOR	DEUTSCH	2	562486	562485							

NO.	LOCATION	TYPE	(NB) CAVITY	•PIN HOUSING	•SOCKET HOUSING
C382	ENGINE GENERATOR 12 VAC RLY	PED WP	1	561605	561577
C383	LH UNDER DASH-MICRO W/O WIRE	AMP MNL	2	561248	561247
C384	LH UNDER DASH-MICRO W/O WIRE	AMP MNL	3	561550	561667
C385	BATTERY COMPT. ACC.	AMP MNL	12	561735	561734
C386	CONDENSER CPT-BYPASS VALVE	PED WP	2	561566	561590
C387	EVAPORATOR CPT-BYPASS VALVE	PED WP	2	561566	561590
C388	LH SW PANEL-MASTER SW	SWF	8	-----	561107
C389	EVAPORATOR CPT-WATER PUMP	PED WP	2	561566	561590
C390	CONDENSER CPT.-A/C JCT BOX	DEUTSCH	24	562280	562283
C391	CONDENSER CPT.-PRESS.SW	PED WP	2	561566	561590
C392	CONDENSER CPT.- MOTOR FAN	PED WP	2	561566	561590
C393	CONDENSER CPT.- MOTOR FAN	PED WP	2	561566	561590
C394	LH OVER CONSOLE- B/U MONITOR	AMP MNL	4	560851	560852
C395	LH OVER CONSOLE- B/U MONITOR	AMP MNL	5	-----	-----
C396	CONDENSER CPT.- MOTOR FAN	PED WP	2	561566	561590
C396	HAT RACK SPEAKER	MOLEX	4	562507	562503
C397	CONDENSER CPT.- MOTOR FAN	PED WP	2	561566	561590
C426	ENGINE S60 RAD. FAN CLUTCH	PED WP	3	561781	561782
C430	DRIVER GUARD WATER HTR TIMER	AMP FF	8	561188	562363
C450	SOUND SYS. JCT. PANEL	MOLEX	4	562507	562503
C451	WIRELESS MICRO-FIRST CPT BAG	MOLEX	2	562550	562549
C452	UNDER DASH INSTR. PANEL	MOLEX	2	562550	562549
C453	SOUND SYS. JCT.PANEL-VCP	PED WP	2	561566	561590
C454	SOUND SYS.JCT.PAN.-FILT. VCP	PED WP	2	561566	561590
C455	WIRELESS MICRO-LH HAT-RACK	CINCH	2	562554	562551
C456	WORLD TRANSM.-RETARDER ACCUM.	PED MP	2	-----	562427
C457	WORLD TRANSM.-MAIN CONNECTOR	DEUTSCH	31	562572	562536
C458	WORLD TRANSM.-TURBINE SP.SENS	PED MP	2	-----	562426
C459	WORLD TRANSM.-ENGINE SP.SENS.	PED MP	2	-----	562426
C460	WORLD TRANSM.-SPEED SENSOR	ITT	2	-----	562541
C461	WORLD TRANSM.-RETARDER TEMP.	PED MP	2	561566	561590
C462	WORLD TRANSM.-RETARD SOL."K"	PED MP	2	-----	562426
C463	WORLD TRANSM.-SENSOR CONN.	DEUTSCH	16	562570	562571
C464	FR SERVICE CPT.-DDL CONN W.T.	PED MP	12	-----	562574
C465	LH CONSOLE-SHIFTER SELECTOR	T & BET	10	-----	562429
C466	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	-----	562428
C467	FR SERVICE CPT.-RESIS. MOD.	PED WP	3	-----	562428
C468	FR SERVICE CPT.-VIM MOD. W.T.	PED MP	18	-----	562573
C470	FR SERVICE CPT.-SILENT 1000	AMP MNL	2	561248	561247
C471	FR SERVICE CPT.-SILENT 1000	AMP MNL	2	561248	561247
C472	FR SERVICE CPT.-SILENT 1000	PED WP	2	561566	561690
C473	FR SERVICE CPT.-SILENT 1000	AMP MNL	3	561667	561550
C475	FR SERVICE CPT-SPEED SIGN CON	DEUTSCH	6	-----	562581
C475M	FR SERVICE CPT-SPEED SIGN M.T	DEUTSCH	6	562583	-----
C475W	FR SERVICE CPT-SPEED SIGN W.T	DEUTSCH	6	562583	-----
C500	FR JCT PANEL-PRODRIVER	MOLEX	6	562070	562069
C501	RH CONSOLE-PRODRIVER	PED MP	7	562433	-----
C502	DRIVER GUARD PRE-HTR SW.	SWF	8	-----	561107
C503	DRIVER GUARD PRE-HTR SW.	SWF	2	-----	561837
C504	DRIVER GUARD WEBASTO TIMER	AMP FF	8	561188	562363
C505	DRIVER GUARD ESPAR TIMER	AMP FF	3	-----	562034
C508	RR JCT BOX-FAN CLUTCH MOD	AMP MNL	6	561552	561515
C510	FR SERVICE CPT-RESIST.RUN LTS	PED MP	2	561566	561690
C544	SOUND SYS.JCT.PANEL-SEET AUD.	PED WP	3	561781	561782
CA	FR SERVICE CPT-ECU WORLD TR.	T & BET	34	-----	562419
CB	FR SERVICE CPT-ECU WORLD TR.	T & BET	34	-----	562420

NO.	LOCATION	TYPE	(NB) CAVITY	•PIN HOUSING	•SOCKET HOUSING
-----	----------	------	----------------	-----------------	--------------------