

NO.	PAGE	COIL V	•PREVOST	LOCATION	FUNCTION	NO.	PAGE	COIL V	•PREVOST	LOCATION	FUNCTION
R1	2	24V	561991	FR JCT BOX	ENGINE RUN (24) FR	R76	8	24V	561707	RR JCT BOX	STOP LTS-ENGINE BRK & RET.SYST.
R2	2	24V	561991	FR JCT BOX	ENGINE RUN (12) FR	R77	7	12V	562092	UNDER DASH	AUDIBLE FLASHER RLY
R3	1	24V	561707	RR JCT BOX	FIELD RELAY	R78	5	24V	561707	RR JCT BOX	DDEC3 FAN CONTROL SPEED*1
R4	1	24V	561005	RR JCT BOX	STARTING MOTOR	R79	5	24V	561707	RR JCT BOX	DDEC3 FAN CONTROL SPEED*2
R5	16.2	12V	562092	UNDER DASH RH	KEYLESS-DRIVER'S DOOR UNLOCK	R80	15	24V	561707	FR SERV JCT BOX	ENGINE BRAKE SYS.- W/T CTR
R6	2	24V	561707	UNDER DASH RH	KEYLESS-START INTERRUPT	R82	15	24V	561707	FR SERV JCT BOX	RETARDER SYSTEM
R7	10	24V	562341	UNDER DASH RH	KEYLESS-DRIVER'S LTS TIME DELAY OFF	R83	18	24V	561707	RR JCT BOX	WATER HEATER-WEBASTO
R8	10	24V	561707	UNDER DASH RH	KEYLESS-DRIVER'S LTS ALARM	R84	12	24V	561707	RR JCT BOX	DDEC3 A/C STD FAN CONTROL
R9	8	24V	561707	RR JCT BOX	BACK-UP LTS	R99	9	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R10	16.2	12V	562092	UNDER DASH RH	KEYLESS-DRIVER'S & LUGG. DOOR LOCK	RF1	9	24V	561707	RR JCT BOX	FAN CLUTCH SP*1 OPT. RETARDER
R12	5	12V	562092	FR JCT BOX	ELECTRICAL HORNS	RF2	9	24V	561707	RR JCT BOX	FAN CLUTCH SP*2 OPT. RETARDER
R13	6	24V	561707	FR JCT BOX	FOG LTS - 12V	RF3	9	24V	560772	RR JCT BOX	TIME DELAY
R14	6	24V	561707	FR JCT BOX	NIGHT'S BLINKER	RF4	9	24V	561707	RR JCT BOX	FAN CLUTCH SP*2-STD A/C NO RET.
R15	6	24V	561707	FR JCT BOX	FR MARKER LTS						
R16	6	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS						
R17	6	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS						
R18	6	24V	561707	FR JCT BOX	DAYTIME RUN LTS-CANCEL						
R19	6	24V	561707	FR JCT BOX	HI-BEAM						
R20	6	24V	561707	FR JCT BOX	LO-BEAM						
R22	3	24V	561707	FR SERV JCT BOX	DDEC III FAST IDLE SIGNAL						
R23	3	24V	561707	RR JCT BOX	DDEC III 12V IGNITION						
R24	4	24V	561707	RR JCT BOX	WORLD TRANSMISSION 12V IGN.						
R25	3	24V	561707	FR SERV JCT BOX	BRAKE SW-DDEC CRUISE CTR						
R26	8	24V	561707	RR JCT BOX	STOP LTS						
R29	13	24V	561005	A/C JCT BOX	COND. FAN MOTOR (FULL AIR)						
R30	13	24V	561005	A/C JCT BOX	EVAP. FAN MOTOR (FULL AIR)						
R31	13	24V	561707	FR JCT BOX	A/C FULL AIR WATER HTR - WATER VALVE						
R32	12	24V	560772	RR JCT BOX	COMPR. CLUTCH TIME DELAY ON						
R33	12-13	12V	561538	FR JCT BOX	BLOWER CUT-IN						
R34	13	24V	561707	RR JCT BOX	A/C WARNING LT						
R35	12	24V	561707	FR JCT BOX	WATER PUMP A/C STD						
R36	12	24V	561707	RR JCT BOX	A/C STD-COMPR. CLUTCH						
R37	1	24V	561707	RR JCT BOX	GENERATOR-12VAC RLY SIGN						
R40	13	24V	561014	A/C JCT BOX	COND. FAN MOTOR (FULL AIR)						
R41	13	24V	561991	A/C JCT BOX	COND. FAN MOTOR (FULL AIR)						
R42	1	24V	561991	BATT.JCT.PANEL	12V FR. CUT-IN RLY (ME BAT.CENT.)						
R43	1	12V	560271	ENGINE COMPT	12V HOUSE						
R44	1	24V	561991	BATT.JCT.PANEL	12V FR. CUT-IN RLY (ME BAT.CENT.)						
R45	1	24V	561991	BATT.JCT.PANEL	12V RR. CUT-IN RLY (ME BAT.CENT.)						
R46	7	24V	561707	UNDER INST PANEL	LH DIRECTIONNAL LTS						
R47	7	24V	561707	UNDER INST PANEL	RH DIRECTIONNAL LTS						
R49	17	24V	561707	FR SERV JCT BOX	ABS - ENGINE BRAKE						
R52	17	24V	561707	FR SERV JCT BOX	ABS - RETARDER						
R53	2	24V	561991	RR JCT BOX	ENGINE RUN 24V RR						
R54	2	24V	561991	RR JCT BOX	ENGINE RUN 12V RR						
R56	15	24V	561707	FR SERV JCT BOX	ENGINE BRAKE SYSTEM						
R57	6	24V	561707	FR JCT BOX	DAY'S BLINKER						
R60	6	12V	561538	FR JCT BOX	DAYTIME RUN LTS						
R62	7	24V	561707	BEHIND RH CONS	RH CORNERING						
R63	7	24V	561707	BEHIND RH CONS	LH CORNERING						
R68	11	24V	561707	FR JCT BOX	PARK BRAKE ALARM						
R69	16	12V	562092	FR JCT BOX	LUGG DOOR LOCK						
R70	16	12V	562092	FR JCT BOX	LUGG DOOR UNLOCK						
R71	16	12V	562092	FR JCT BOX	LUGG DOOR LOCK TT LT						
R72	10	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT						
R74	16	12V	562092	RR JCT BOX	LUGG DOOR LOCK						
R75	16	12V	562092	RR JCT BOX	LUGG DOOR UNLOCK						