

NO.	PAGE	COIL V	•PREVOST	LOCATION	FUNCTION
R1	2	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R2	2	24V	561991	FR JCT BOX	ENGINE RUN (12) FR
R3	1	24V	561707	RR JCT BOX	FIELD RELAY
R4	1	24V	561005	RR JCT BOX	STARTING MOTOR
R5	16.2	12V	562092	UNDER DASH RH	KEYLESS-DRIVER'S DOOR UNLOCK
R6	2	24V	561707	UNDER DASH RH	KEYLESS-START INTERRUPT
R7	10	24V	562341	UNDER DASH RH	KEYLESS-DRIVER'S LTS TIME DELAY OFF
R8	10	24V	561707	UNDER DASH RH	KEYLESS-DRIVER'S LTS ALARM
R9	8	24V	561707	RR JCT BOX	BACK-UP LTS
R10	16.2	12V	562092	UNDER DASH RH	KEYLESS-DRIVER'S & LUGG. DOOR LOCK
R12	5	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R13	6	24V	561707	FR JCT BOX	FOG LTS - 12V
R14	6	24V	561707	FR JCT BOX	NIGHT'S BLINKER
R15	6	24V	561707	FR JCT BOX	FR MARKER LTS
R16	6	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R17	6	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R18	6	24V	561707	FR JCT BOX	DAYTIME RUN LTS-CANCEL
R19	6	24V	561707	FR JCT BOX	HI-BEAM
R20	6	24V	561707	FR JCT BOX	LO-BEAM
R22	3	24V	561707	FR SERV JCT BOX	DDEC III FAST IDLE SIGNAL
R23	3	24V	561707	RR JCT BOX	DDEC III 12V IGNITION
R24	4	24V	561707	RR JCT BOX	WORLD TRANSMISSION 12V IGN.
R25	3	24V	561707	FR SERV JCT BOX	BRAKE SW-DDEC CRUISE CTR
R26	8	24V	561707	RR JCT BOX	STOP LTS
R29	13	24V	561005	A/C JCT BOX	COND. FAN MOTOR (FULL AIR)
R30	13	24V	561005	A/C JCT BOX	EVAP. FAN MOTOR (FULL AIR)
R31	13	24V	561707	FR JCT BOX	A/C FULL AIR WATER HTR - WATER VALVE
R32	12	24V	560772	RR JCT BOX	COMPR. CLUTCH TIME DELAY ON
R33	12-13	12V	561538	FR JCT BOX	BLOWER CUT-IN
R34	13	24V	561707	RR JCT BOX	A/C WARNING LT
R35	12	24V	561707	FR JCT BOX	WATER PUMP A/C STD
R36	12	24V	561707	RR JCT BOX	A/C STD-COMPR. CLUTCH
R37	1	24V	561707	RR JCT BOX	GENERATOR-12VAC RLY SIGN
R40	13	24V	561014	A/C JCT BOX	COND. FAN MOTOR (FULL AIR)
R41	13	24V	561991	A/C JCT BOX	COND. FAN MOTOR (FULL AIR)
R42	1	24V	561991	BATT.JCT.PANEL	12V FR. CUT-IN RLY (ME BAT.CENT.)
R43	1	12V	560271	ENGINE COMPT	12V HOUSE
R44	1	24V	561991	BATT.JCT.PANEL	12V FR. CUT-IN RLY (ME BAT.CENT.)
R45	1	24V	561991	BATT.JCT.PANEL	12V RR. CUT-IN RLY (ME BAT.CENT.)
R46	7	24V	561707	UNDER INST PANEL	LH DIRECTIONNAL LTS
R47	7	24V	561707	UNDER INST PANEL	RH DIRECTIONNAL LTS
R49	17	24V	561707	FR SERV JCT BOX	ABS - ENGINE BRAKE
R52	17	24V	561707	FR SERV JCT BOX	ABS SYSTEM
R53	2	24V	561991	RR JCT BOX	ENGINE RUN 24V RR
R54	2	24V	561991	RR JCT BOX	ENGINE RUN 12V RR
R56	15	24V	561707	FR SERV JCT BOX	ENGINE BRAKE SYSTEM
R57	6	24V	561707	FR JCT BOX	DAY'S BLINKER
R60	6	12V	561538	FR JCT BOX	DAYTIME RUN LTS
R62	7	24V	561707	BEHIND RH CONS	RH CORNERING
R63	7	24V	561707	BEHIND RH CONS	LH CORNERING
R68	11	24V	561707	FR JCT BOX	PARK BRAKE ALARM
R69	16	12V	562092	FR JCT BOX	LUGG DOOR LOCK
R70	16	12V	562092	FR JCT BOX	LUGG DOOR UNLOCK
R71	16	12V	562092	FR JCT BOX	LUGG DOOR LOCK TT LT
R72	10	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R74	16	12V	562092	RR JCT BOX	LUGG DOOR LOCK
R75	16	12V	562092	RR JCT BOX	LUGG DOOR UNLOCK

NO.	PAGE	COIL V	•PREVOST	LOCATION	FUNCTION
R76	8	24V	561707	RR JCT BOX	STOP LTS-ENGINE BRK & RET.SYST.
R77	7	12V	562092	UNDER DASH	AUDIBLE FLASHER RLY
R78	5	24V	561707	RR JCT BOX	DDEC3 FAN CONTROL SPEED*1
R79	5	24V	561707	RR JCT BOX	DDEC3 FAN CONTROL SPEED*2
R80	15	24V	561707	FR SERV JCT BOX	ENGINE BRAKE SYS.- W/T CTR
R82	15	24V	561707	FR SERV JCT BOX	RETARDER SYSTEM
R83	18	24V	561707	RR JCT BOX	WATER HEATER-WEBASTO
R84	12	24V	561707	RR JCT BOX	DDEC3 A/C STD FAN CONTROL
R99	9	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
RF1	9	24V	561707	RR JCT BOX	FAN CLUTCH SP*1 OPT. RETARDER
RF2	9	24V	561707	RR JCT BOX	FAN CLUTCH SP*2 OPT. RETARDER
RF3	9	24V	560772	RR JCT BOX	TIME DELAY
RF4	9	24V	561707	RR JCT BOX	FAN CLUTCH SP*2-STD A/C NO RET.