

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
RF1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1	R 58					
RF2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2	R 59	9.3	12V	562092	RR JCT BOX	DOCKING LTS
RF3	8.1	24V	560772	RR JCT BOX	TIME DELAY	R 60					
RLA	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LATCH)	R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
RLO	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (PRESS. SW.)	R 62					
RLT	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (LIGHT)	R 63					
RLV	16.1	24V	561707	UNDER DASH RH.	ENTRANCE DOOR SEDAN (VALVE)	R 64					
R1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR	R 65					
R2	2.1	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR	R 66	20.3	24V	561707	SS JCT PANEL	SOUND SYSTEM VIDEO
R3						R 67	20.1	12V	562092	SS JCT PANEL	SOUND SYSTEM RADIO
R4	4.1	24V	561005	BATT. CPT.	STARTING MOTOR	R 68	20.1	24V	561991	SS JCT PANEL	SOUND SYSTEM AMPLIFIER
R5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.	R 69					
R6	9.3	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE	R 70					
R7	5.1	24V	561707	FR JCT BOX	FAST IDLE	R 71					
R8						R 72					
R9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS	R 73					
R10	4.1	12V	562092	BATT. CPT.	NEUTRAL SIGNAL EATON TRANSM.	R 74					
R11						R 75					
R12	7.2	12V	562092	FR JCT BOX	ELECTRICAL HORNS	R 76					
R13	9.3	24V	561707	FR JCT BOX	FOG LTS	R 77					
R14	9.1	24V	561707	FR JCT BOX	BLINKER	R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH
R15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS	R 79	23	24V	561707	GALLEY CPT.	GALLEY-REFRIGERATOR
R16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS	R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS	R 81					
R18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-OUT	R 82	19	24V	561707	FR JCT BOX	RETARDER WT
R19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)	R 83					
R20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)	R 84	8	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONAL LT	R 85	8	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R22	4.1	24V	561707	BATT. CPT.	NEUTRAL SIGNAL EATON TRANSM.	R 86					
R23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONAL LT	R 87	19	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT	R 88					
R25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT	R 89	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R26	9.3	24V	561707	RR JCT BOX	STOP LTS	R 90	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R27	11.2	24V	561707	RR JCT BOX	AISLE & EMERG.EXIT - LTS	R 91	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT	R 92	22	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R29	11.3	24V	561707	RR JCT BOX	READING LTS R.H.	R 93	26	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER (WEBASTO)
R30	11.3	24V	561707	RR JCT BOX	READING LTS L.H.	R 94	25	24V	561707	RR JCT BOX	WCL - SYSTEM
R31	11.3	24V	561707	RR JCT BOX	GENERAL LTS	R 95	25	24V	561707	RR JCT BOX	WCL - MAGNETIC SW. SIGN.
R32	11.4	24V	561707	RR JCT BOX	24V FLUORESCENT	R 96	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR ALARM
R33	4.1	12V	562092	FR JCT BOX	BLOWER CUT-IN RLY	R 97	25	24V	561707	RR JCT BOX	WCL - DOOR AJAR PARK. BRAKE
R34	13.1	24V	561707	RJB A/C JCT PANEL	A/C LOGIC PANEL	R 98	25	12V	561538	RR JCT BOX	WCL -
R35	13.2	24V	561707	RJB A/C JCT PANEL	WATER PUMP	R 99	8	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R36	13.2	24V	561707	RJB A/C JCT PANEL	A/C COMPRESSOR CLUTCH	R 100	4	12V	561538	RR JCT BOX	GENERATOR SIGNAL
R37	9.2	24V	561707	FR JCT BOX	KNEELING LT	R 101					
R38	13.1	24V	561707	RJB A/C JCT PANEL	A/C LIQ. SOL. VALVE	R 102	17	24V	561707	RR JCT BOX	FUEL FILTER HEATER
R39	13.1	24V	561005	BATT. CPT.	CONDENSER FAN MOTOR	R 103	13.3	24V	561707	RR JCT BOX	LAVATORY FLUORESCENT
R40	13.1	24V	561014	BATT. CPT.	CONDENSER SPEED CTR HI	R 104	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN
R41	13.1	24V	561005	BATT. CPT.	CONDENSER SPEED CTR HI	R 105	13.3	24V	561707	RR JCT BOX	HAT-RACK FAN - L.H.
R42	6.3	12V	562092	BATT. CPT.	EATON TRANSM.	R 106	17.1	24V	561707	RR JCT BOX	HAT-RACK FAN - R.H.
R43	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM	R 107					
R44	18.1	24V	561707	FR JCT BOX	KNEELING SYSTEM	R 107					
R45						R 2010	26.2	24V	561230	WEBASTO PRE-HEAT	WEBASTO
R46						R PS	4.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
R47	23.1	24V	561707	GALLEY COMPT	GALLEY-LIQUID CONTAINERS	R TS	5.1SP1	24V	561707	FR JCT BOX	IDLE POWER SHUT DOWN
R48	23.1	24V	561707	GALLEY COMPT	GALLEY-COFFEE MAKER	V IMN	6	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
R49	21.1	24V	561707	FR JCT BOX	ABS - SERVICE BRK RLY	V IMR	6	12V	562092	RR JCT BOX	VIM WORLD TR.-BU SIGNAL
R50						V IM1	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
R51	11.3	24V	562092	FR JCT BOX	DRIVER'S LTS RLY- ENT. DOOR SIGN.	V IM2	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
R52	21.1	24V	561707	FR JCT BOX	ABS - W/TR SIGN. RETARDER	V IM3	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
R53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR	V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT4 RETARD. ON SIGNAL
R54	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR						
R55	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR						
R56											
R57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER						

RELAYS NUMBER CODE

No. PAGE COIL V #PREV. LOCATION FUNCTION

No. PAGE COIL V #PREV. LOCATION FUNCTION