

# CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
IPJ1	CLUSTER - BULB TEST POS	SP62	SPARE WIRE	0T2	WINDOW AWNING	12DDR	RR JCT BOX 12V HOT WIRE DDR CON
IPJ2	CLUSTER - BULB TEST NEG.	SP63	SPARE WIRE	0T3	ALTERNATOR MODULE	12DT	T.T. LT MODULE
IPJ3	CLUSTER - SV SIGNAL	SP69	SPARE WIRE	0T4	12V OUTLET - CTR MODULE	12E	RR JCT BOX 12V DISC SW
IPJ4	CLUSTER - RETURN TO ZERO	SP70	SPARE WIRE	0T5	FS-HVAC DASH MODULE. GND	12F	FR JCT PANEL 12V DISC SW
IPJ5	CLUSTER - FUEL LEVEL GAUGE	SP71	SPARE WIRE	0W	FJB - TRANSM. RLY GRD	12G	FR JCT PANEL 12V DISC SW
IPJ6	CLUSTER - BULB TEST POS.	SP72	SPARE WIRE	0W	TRANSM ACC. - FR.SERV. CPT	12H	12V DASH ACCESS.
IPJ7	CLUSTER - BULB TEST NEG.	SP74	SPARE WIRE	0WA	PRE-HEAT WATER HEATER	12I	RR JCT BOX 12V IGNITION
IPJ8	CLUSTER - MASTER WARNING	SP83	SPARE WIRE	0Y1	ASB SYSTEM-GRD	12I	FR JCT PANEL 12V IGNITION
LX5	CLUSTER - COMPUTER MODE	SP84	SPARE WIRE	0Y2	ASB SYSTEM-GRD	12IA	FR JCT PANEL 12V IGNITION
LX6	CLUSTER - COMPUTER DOWN	SP114	SPARE WIRE	0Y3	ASB SYSTEM-GRD	12IA	RR JCT PANEL 12V IGNITION
LX7	CLUSTER - COMPUTER SET	SP115	SPARE WIRE	0Y4	ASB SYSTEM-GRD	12IF	FR JCT PANEL 12V IGNITION
LX16	CLUSTER - COMPUTER UP	SP116	SPARE WIRE	0Y5	ASB SYSTEM-GRD	12J	FR JCT PANEL 12V DISC.SW.
LX21	CLUSTER - COMPUTER COM.	SP117	SPARE WIRE	0Y6	ASB SYSTEM-GRD	12JA	FR JCT PANEL 12V DISC.SW.
RT	T.T.L.T. MODULE - TEST SW.	TW1	SPR. W. TWISTER 50T/M WITH TW2	00	ASB SYSTEM-GRD	12K	FR JCT PANEL 12V DISC.SW.
SP1	SPARE WIRE	TW2	SPR. W. TWISTER 50T/M WITH TW1	00A	BATTERY GRD-DASH ACC.	12LX	12V HOTWIRE CLUST. & MOD A/C
SP2	SPARE WIRE	0	A/C EVAP. CPT GRD	2A	A/C & HEAT SYSTEM	12LX	CLUSTER 12V HOT WIRE
SP3	SPARE WIRE	0	JUMPER - CLUTCH SIGN.	2B	A/C & HEAT SYSTEM	12P	12V POWER OUTLET
SP4	SPARE WIRE	0	RJB - INSIDE GRD	2D	A/C & HEAT SYSTEM	12T	RR JCT BOX 12V DISC SW
SP5	SPARE WIRE	0A	FR. ROOF ACC. GRD	2E	A/C & HEAT SYSTEM	12VD	12V HOT WIRE
SP6	SPARE WIRE	0B	A/C - CONDENSER GRD	2H	A/C & HEAT SYS-LO-PRESS SW.	12VI	RR JCT PANEL 12V IGNITION
SP7	SPARE WIRE	0B	ENG. CPT ACC. GRD	2L	A/C & HEAT SYS-HI-PRESS SW.	12W	12V HOT WIRE DDEC III FEED
SP8	SPARE WIRE	0BE	OV BATTERY MONITOR	3A	A/C & HEAT SYSTEM-EVAPORATOR	15	EXT. LTS-MULTI FUNC LEVEL
SP9	SPARE WIRE	0C	R.J.B. - GRB	5N0	SPEED SIGNAL HIGHER 5MPH	15	WIPER & WASHER SYSTEM
SP10	SPARE WIRE	0C	F.R. SERV. CPT-ACCESSOIRIES	5NC	SPEED SIGNAL LOWER 5MPH	16	SPEEDOMETER (+)
SP11	SPARE WIRE	0C1	ENTRANCE DOOR KEYLESS	6	EXTERIOR LTS-DOCKING	16T	SPEED SW SIGNAL IN (+)
SP12	SPARE WIRE	0C4	F.J.B. GRD	6A	EXTERIOR LTS-CORNERING	17	EXTERIOR LTS-FLASHER UNIT
SP13	SPARE WIRE	0CJ	CRUISE SW. JUMPER	6B1	EXTERIOR LTS-CORNERING RH	17A	EXTERIOR LTS-FLASHER UNIT
SP14	SPARE WIRE	0D	A/C JCT BOX - COND FAN GRD	6C1	EXTERIOR LTS-CORNERING RH	17C	JUMPER LTS SW. - HAZARD
SP15	SPARE WIRE	0F	SILENT 1000	6D	EXTERIOR LTS-DOCKING	20	SPEEDOMETER SIGNAL (-)
SP16	SPARE WIRE	0G	ABS GRD CX1	9	INTERIOR LTS-ENGINE CPT	20T	SPEED SW SIGNAL IN (-)
SP17	SPARE WIRE	0H	ENG. CPT. - ACC. GRD	9	INTERIOR LTS-RR JCT BOX	21	EXTERIOR LTS-DIRECT. LH
SP18	SPARE WIRE	0L	ENG.CPT -CLEAR.LTS RR ROOF	9F	INTERIOR LTS - FR-SERV. CPT	21A	EXTERIOR LTS-LH
SP19	SPARE WIRE	0L	R.J.B. - GRD	10	A/C & HEAT SYSTEM -LO PRES.	21A	EXTERIOR LTS-CORNERING-LH
SP21	SPARE WIRE	0L	FR - SIDE MARK. & FLASH GRD	10	INTERIOR LTS-LUGGAGE CPT	21B	EXTERIOR LTS-DIRECT. LH
SP23	SPARE WIRE	0L1	ENG.CPT-SIDE MARK. & FL. GRD	10	INTERIOR LTS-FR SERV. CPT	21BB	EXTERIOR LTS-DIRECT. LH
SP24	SPARE WIRE	0L2	HEAD LTS	10A	INTERIOR LTS-LUGGAGE CPT	21H	EXTERIOR LTS-HAZARD SIGNAL
SP25	SPARE WIRE	0L3	FR.SERV.DR. & ENT.DOOR GRD ACC.	10B	INTERIOR LTS-LUGGAGE CPT	21M	AUX. LTS - DIRECTIONAL LH
SP30	SPARE WIRE	0L4	FOG LTS RESISTOR GRD	10C	INTERIOR LTS-LUGGAGE CPT	21P	CORN. LTS - DIRECT. SIGN. LH
SP33	SPARE WIRE	0L5	LH CONSOL - ACC. GRD	10D	INTERIOR LTS-LUGGAGE CPT	23	EXTERIOR LTS-DIRECT. RH
SP38	SPARE WIRE	0LV	WINDSHIELD WASHER LEVEL	10E	INTERIOR LTS-LUGGAGE CPT	23A	EXTERIOR LTS-DIRECT. RH
SP40	SPARE WIRE	0M	WIPER 2 MIRROR MOTOR	10R	CENTER DOOR T.T.L.T.	23A	EXTERIOR LTS - CORNER. LTS
SP41	SPARE WIRE	0M3	DEFROST GRD	12A	FR JCT PANEL 12V DISC SW	23BB	EXTERIOR LTS - DIRECT. RH
SP42	SPARE WIRE	0M4	HORN & DR'S WINDOW LIFTER	12B	FR JCT PANEL 12V DISC SW	23C	EXTERIOR LTS-CORNERING RH
SP43	SPARE WIRE	0M5	SUN VISOR MOTOR	12BAT	12V HOT-WIRE ACC - JCT BLK	23H	EXTERIOR LTS-HAZARD SIGNAL
SP45	SPARE WIRE	0M7	DR'S WIND.LIFT. & RH MIR. SW	12BE	12V BATTERY MONITOR	23M	AUX LTS - DIRECTIONAL RH
SP48	SPARE WIRE	0M7A	LH MIRROR SW.	12C	FR JCT PANEL 12V DISC SW	23P	CORN. LTS - DIRECT SIGN RH
SP56	SPARE WIRE	0P	ENG.CDT - PRE-HEATER	12C	RR JCT BOX 12V DISC SW	24	FR JCT PANEL 24V DISC. SW.
SP57	SPARE WIRE	0T	SPEED SW. CONNECTOR	12D	FR JCT PANEL 12V HOT WIRE	24A	RR JCT PANEL 24V DISC. SW
SP60	SPARE WIRE	0T1	DASH ACC.	12DD	FR JCT PANEL 12V HOT WIRE	24A	FR JCT PANEL 24V DISC. SW
SP61	SPARE WIRE	0T2	CLUSTER ACC.			24B	FR JCT PANEL 24V DISC. SW

# CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
24BE	BATTERY MONITOR	44C	EXT. LTS-FOG,HVAC & HAZ. SW	66	A/C PASSENGER - ON/OFF	97	TACHOMETER SIGN.-NOT USED
24C	FR JCT PANEL 24V DISC SW	44D	EXTERIOR LTS - FOG	67A	A/C & HEAT SYSTEM	101	WORLD TR.- LO SIGN SOL.LO
24D	FR JCT BOX 24V HOT WIRE	44E	EXTERNAL LTS - FOG	68	DASH & DEFROST DAMPER MOT	102	WORLD TRANSM.-SOL. SUPPLY
24F	RR JCT PANEL 24V DISC SW	45A	A/C & HEAT SYSTEM FULL AIR	68A	DASH & DEFROST DAMPER MOT	103	WORLD TRANSM.- B.SOL.LO
24I	FR JCT PANEL 24V IGNITION	45B	A/C & HEAT SYS.-WATER PUMP	72	SUN VISOR - FEED	104	LEVEL-LOW SYS- DR'S SOL.
24I	RR JCT PANEL 24V IGNITION	45C	A/C & HEAT SYS.-WATER VALV	72A	SUN VISOR RH	104	WORLD TR. -SOL. FORWARD
24IA	FR JCT PANEL 24V IGNITION	45D	A/C & HEAT SYS.-WATER VALV	72B	SUN VISOR RH	105W	WORLD TR.-SOL.-RET.OIL TT.LT
24IB	FR JCT PANEL 24V IGNITION	45E	A/C & HEAT SYS.-WATER PUMP	72C	SUN VISOR LH	107	WORLD TR.-LOCKUP SOL. HI
24IF	FR JCT PANEL 24V IGNITION	45G	A/C & HEAT SYS.-DR'S HTR	72D	SUN VISOR LH	108	WORLD TR.-LOCKUP SOL.
24P	FR JCT PANEL 24V DISC SW	45J	A/C & HEAT SYS.-WATER PUMP	76	FUEL TANK GAUGE	110	WORLD TR.-LOCKUP SOL. LO
24R	24V RR JCT BLK TO STARTER	46	EXTERIOR LTS-MARKER	76C	LOW FUEL T.T.LT	112	WORLD TR.-SPARE OUTPUT (+)
24T	RR JCT PANEL 24V DISC SW	46A	EXTERIOR LTS-AUX LTS RESIS.	76L	LOW FUEL T.T.LT	112	WORLD TR.-SPARE OUTPUT (+)
24VD	24V HOT WIRE FEED	46C	EXTERIOR LTS-MARKER	77A	A/C & HEAT SYS. - THERMOST.	113W	WORLD TR.-REVERSE WARNING
25A	TT.LT. MODULE - LED	46D	EXTERIOR LTS-AUX LTS RESIS.	77B	A/C SYS. - LIQ. SOL. VALVE	114	WORLD TR.-SPARE OUTPUT (-)
25B	EXT. LTS-DAYTIME RUN LTS	48A	ENTRANCE DOOR AIR LOCK	77C	A/C & HEAT SYS.-COMPRESSOR	114	INTERIOR LT-DASH LT RHEOS.
25D	GENERATOR SKTN. ON - HVAC	48B	ENTRANCE DOOR AIR LOCK	77H	A/C SYS.-LIQ. SOL. VALVE	114A	INTERIOR LT-DASH LT RHEOS.
26	DR'S & ENT. WINDOW LIFTER	48C	ENTRANCE DOOR AIR LOCK	77H	A/C & HEAT SYS.-THERMOSTAT	114B	INT. LT-DASH LT RHEOST.FEED
26A	CIGAR LIGHT. & POW.OUTLET LH	50	AIR DRYER	81	EXTERIOR LTS-STOP SW	115	DDEC III-COOLANT LEVEL
26B	DRIVER'S WINDOW LIFTER	52	ALARM & SIGNAL-ELEC.HORN	82	EXTERIOR LTS-STOP SIGNAL	115W	WORLD TR.-DO NOT SHIFT SIGN
26C	DRIVER'S WINDOW LIFTER	52A	ALARM & SIGNAL-ELEC.HORN	82A	EXTERIOR LTS-STOP SIGNAL	116	WORLD TR.-LO SIGNAL SOL. HI
26D	ENT. DOOR WINDOW LIFTER	53	ALARM & SIGNAL-ELEC.HORN	82B	EXTERIOR LTS-STOP LTS	116B	A/C & HEAT SYSTEM-DR'S HTR
26E	ENT. DOOR WINDOW LIFTER	53B	WIPER & WASHER SYSTEM	82L	EXT. LTS-STOP LTS & CYCLOP	116C	A/C SYS.-TRIG. DEFROST
26F	ENT. DOOR WINDOW LIFTER	53C	WIPER & WASHER SYSTEM	82R	EXTERIOR LTS-STOP LTS	117A	ALARME & SIGN.-TR. OIL TEMP
28H	T.T.LT MODULE - HI A/C PRES.	53E	WIPER & WASHER SYSTEM	83	ENG. CTR-MAST. KEY SW ACC.	119	WORLD TRANSM-ENGINE BRAKE
28T	T.T.LT MODULE - LO A/C PRES.	53J	WIPER & WASHER SYSTEM	84	ENG. CTR-MAST KEY SW START	120	WORLD TRANSM-SOL. C1
29	A/C & HEAT SYS.-DR'S HTR	53K	KEYLESS SYSTEM	84A	ENG. CTR-MAST KEY SW START	121	WORLD TRANSM-SOL.GRD 2
29H	HVAC DASH MODILE	55	EXTERIOR LTS-HI BEAM	84J	ENG. CTR-MAST KEY SW START	123	WORLD TR.-NEUTRAL START
31B	WIPER & WASHER SYSTEM	57	EXTERIOR LTS-HI BEAM	85	24V IGNITION SIGNAL	123A	ALARM & SIGNAL-FIRE DETECT.
31C	WIPER & WASHER SYSTEM	57A	EXTERIOR LTS-HI BEAM	85A	24V IGN DASH INSTRUMENT.	123B	ALARM & SIGNAL-FIRE DETECT.
32	EXTERIOR LTS-BACK-UP	57B	A/C & HEAT SYS.-WATER PUMP	85C	24V IGNITION - FEED	124	WORLD TR.-THROTTLE (HI)
32B	EXTERIOR LTS-BACK-UP	57C	PRE-HEAT WATER HEATER	85W	WORLD TRANSM. - 24V IGN.	124A	WORLD TRANSM-SENSOR PWR
32F	BACK-UP CANCEL SW.	57C	A/C & HEAT SYS.-WATER PUMP	85X	ABS-24V IGN	125	WORLD TR-RETARDER INDICAT.
32G	BACK-UP ALARM	57E	A/C & HEAT SYS.-WATER VALV	85Y	ABS-WARNING LT	125W	WORLD TR-RETARDER INDICAT.
32J	BACK-UP SW. - JUMPER	57W	PRE-HEAT WATER HEATER	86	ENG. CTR-STARTER SOL SIGN	126	WORLD TR.-LUBE PRESS SW.
35B	DRIVER'S LTS - KEYLESS SIGN	58	EXTERIOR LTS-LO BEAM	86A	ENG. CTR-STARTER SOL SIGN	126	24VIGN-LEV.LOW & WORLD TR.
36	ENGINE BRAKE SYSTEM	58A	EXTERIOR LTS-LO BEAM	87B	ENGINE CTR-24V IGNITION	126F	LEVEL LOW SYSTEM
36A	ENGINE BRAKE SYSTEM & RET.	58B	EXTERIOR LTS-LO BEAM	88	ENGINE CTR-RR START SIGNAL	126H	SPEED SIGN 5NC - NOT USED
39	INTERIOR LTS-DRIVER'S LTS	59A	ENGINE BRAKE SYSTEM	89	ENGINE CTR-RR START SIGNAL	126W	WORLD TRANSM-NOT USED
39B	INTERIOR LTS-DRIVER'S LTS	61	EXTERIOR LTS-24V FEED SW	90	CONVERTER - CABLE SPARG	127	24HW DR'S LT PREHEAT & HVAC
39C	INTERIOR LTS-DRIVER'S LTS	61A	EXTERIOR LTS-HEAD SIGNAL	90A	ENG. CTR-MAST KEY SW FEED	127A	PRE-HEAT WATER HEATER
39D	INTERIOR LTS - FRIVER' LTS	63	EXTERIOR LTS-CLEAR. FEED	90B	A/C & H. SYS.-COND FAN MOT	127W	PRE-HEAT WATER HEATER
39K	DR'S LTS - KEYLESS SIGN.	63B	EXTERIOR LTS-CLEARANCE	90B	ENG. CTR-MAST KEY SW FEED	128	WORLD TRANSM-SOL. C2
41	A/C SYS.-COND FAN MOTOR	63C	EXT. LTS-MARKER SIGNAL	91	PARKING BRAKE SW SIGNAL	128A	PRE-HEAT WATER HEATER
41A	A/C SYS.-COND FAN MOTOR	63F	EXT. LTS-MARKER BLINKER	91A	DDEC III-FAST IDLE SIGNAL	128B	PRE-HEAT WATER HEATER
41B	A/C SYS.-COND FAN MOTOR	64	DRIVER'S FAN SPEED CTR	91C	PARKING BRAKE - T.T.LT	128W	PRE-HEAT WATER HEATER
42A	A/C SYS.-COND FAN MOTOR	64A	DRIVER'S FAN SPEED CTR	91J	FAST IDLE - JUMPER SW.	129	WORLD TRANSM-SOL. C5
43	A/C & HEAT SYS. - FAN SPEED	64B	DRIVER'S FAN SPEED CTR	92	BATT. EQUAL.-CHECK BALANCE	129	PRE-HEAT WATER HEATER
44	EXTERIOR LTS-FOG	65	FOOT DAMPER MOTOR	93	BATT. EQUALIZ.-CHECK LO/HI	129B	PRE-HEAT WATER HEATER
44A	EXTERIOR LTS-FOG	65A	FOOT DAMPER MOTOR	95A	ENG. BRAKE & RETARDER SYS.	130	WORLD TRANSM-SOL. GRD 3
44B	EXTERIOR LTS-FOG	65D	DRIVER'S REC. DAMPER	95B	ENG. BRAKE & RETARDER SYS.	131	WORLD TRANSM-SOL.C4

# CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
132	WORLD TRANSM-ENGINE BRAKE	146A	WORLD TRANSM-12V IGNITION	170T	LUGG DOOR LOCK-SIGN T.T.LT	286A	KEYLESS SYS-CENTER DOOR
132A	LEVEL LOW SYSTEM	146AA	WORLD TRANSM-DIAGN.CONN.	170V	LUGG DOOR LOCK-SIGN T.T.LT	290	FAN CLUTCH RADIATOR-FEED
132B	LEVEL LOW SYSTEM	147	WORLD TRANSM-OIL TEMP	170W	LUGGAGE DOOR LOCK-FEED	290A	FAN CLUTCH RADIATOR-FEED
132C	LEVEL LOW SYSTEM	147	ABS SYSTEM-VALVE	170X	LUGG DOOR LOCK-SIGN T.T.LT	291	FAN CLUTCH RADIATOR SPD 1
132D	LEVEL LOW SYSTEM	147A	ETHER COLD START	170Y	LUGGAGE DOOR LOCK-FEED	292	FAN CLUTCH RADIATOR SPD 2
132E	LEVEL LOW SYSTEM	147A	DAYTIME LST-ALT.SIGNAL	170Z	LUGGAGE DOOR LOCK	292A	FAN CLUTCH RADIATOR SPD 2
132F	LEVEL LOW SYSTEM	147C	ETHER COLD START	171	WORLD TRANSM-SHIFTER	294	KEYLESS SYSTEM-ANTI-THEFT
135	WORLD TRANSM-RET.TEMP.	148	ABS SYSTEM-VALVE	172	WORLD TRANSM-SHIFTER	295	KEYLESS SYS-LED INDICATOR
135A	WORLD TR.-RES MODULE RET.	148	WORLD TR.-OUTPUT SPEED LO	173	WORLD TRANSM-SHIFTER	417	DDEC-LIMIT SPEED GOVERNOR
135B	A/C & HEAT SYS.-AIR SENSOR	149	WORLD TR.-TURBINE SPEED HI	174	WORLD TRANSM-SHIFTER	419	DDEC -CHEK ENGINE LIGHT
135C	A/C & HEAT SYS.-AIR SENSOR	149	ABS SYSTEM-SENSOR	175A	WORLD TRANSM-SHIFTER	439	DDEC-12V IGNITION
136A	WORLD TRANSM-12V BATTERY	149A	ABS SYSTEM	176	WORLD TRANSM-SHIFTER	451	DDEC-A/C FAN CLUTCH
136AA	WORLD TRANSM-SHIFTER PWR	150	WORLD TR.-ENGINE SPEED LO	180	WORLD TRANSM-SHIFTER	505	DDEC-TACHOMETER DRIVE
136V	WORLD TRANSM-12V BATTERY	150	DDEC III-ECM BATTERY GRD	180	OUTSIDE TEMP. DISPLAY	509	DDEC-STOP ENGINE LIGHT
136W	WORLD TRANSM-12V BATTERY	150A	DDEC III-ECM BATTERY GRD	180A	OUTSIDE TEMP. DISPLAY	510	DDEC-FAST IDLE SIGNAL
137	WORLD TRANSM-RETARDER	151	DDEC III-ECM BATTERY GRD	180A	WORLD TRANSM-SHIFTER	524	DDEC-ENGINE BRAKEDISABLE
137	RR VIEW MIRROR	151	ABS SYSTEM-SPARE	180B	OUTSIDE TEMP. DISPLAY	525	DDEC-FAST IDLE SIGNAL
137A	RR VIEW MIRROR	152	ABS SYSTEM-SPARE	180C	OUTSIDE TEMP. DISPLAY	528	DDEC-STOP ENG. OVERRIDE
137B	RR VIEW MIRROR	153	ELECTRICAL DRIVER'S SEAT	181	FROZEN POINT T.T.LT	531	DDEC-CRUISE CLUTCH CUT OUT
137C	RR VIEW MIRROR	154	WORLD TRANSM-ABS INPUT (-)	181A	THERMOMETER INSIDE SENSOR	540	DDEC-CRUISE ENABLE T.T.LT
137D	RR VIEW MIRROR	156A	ABS SYSTEM-FEED	181B	THERMOMETER INSIDE SENSOR	541	DDEC-CRUISE SET SW
137D	RR VIEW MIRROR	157	ABS SYSTEM-FEED	181C	THERMOMET. OUTSIDE SENSOR	542	INPUT PARK BRAKE INTERLOCK
137E	RR VIEW MIRROR	157A	ABS SYSTEM-FEED	181D	THERMOMET. OUTSIDE SENSOR	543	DDEC-CRUISE STOP SW CUT IN
137F	RR VIEW MIRROR	157B	ABS SYSTEM	195	WORLD TRANSM-TRANS ID	544	DDEC-CRUISE ON/OFF SW
137H	RR VIEW MIRROR	159	WORLD TRANSM-DIAGNOSTIC	197	FUEL WATER FILTER	545	DDEC-CRUISE RESUME SW
137J	RR VIEW MIRROR	160	ALARM & SIGN.-TAG PRESS SW	197A	FUEL WATER FILTER	555	DDEC-FAN CLUTCH SPEED#1
137K	RR VIEW MIRROR	161B	WORLD TRANSM-SIGNALGRD	201	WORLD TRANSM-SPARE	556	DDEC-VEHICULE SPEED (+)
137L	RR VIEW MIRROR	162	WORLD TRANSM-PRESS. SW C3	202	WORLD TRANSM-SPARE	557	DDEC-VEHICULE SPEED (-)
137M	RR VIEW MIRROR FEED	163	WORLD TR.-RETARDER ENABLE	203	WORLD TRANSM-SPARE	563	DDEC-FAN CLUTCH SPEED#2
137R	WORLD TRANSM-RETARDER	164	WORLD TR.-RET. ACTUAT. SIGN	204	WORLD TRANSM-SPARE	564	DDEC-DIGTAL OUTPUT
137T	MIRROR HEAT SW-JUMPER	165	WORLD TR.-OIL LEVEL SIGNAL	214	WORLD TR.-BACK-UP SIGNAL	565	DDEC-ENGINE BRAKE ACTIVE
138	WORLD TR.-RETARDER TEMP	166B	A/C & HEAT SYS.-EVAP. MOD.	231	WORLD TR.-NEUTRAL SIGN GRD	583	DDEC-ENGINE BRAKE 4 CYL.
138	ABS SYSTEM-SENSOR	167	WORLD TR.-SPEED 5N0, 5NC	240	DDEC III-ECM 12V FEEDING	900	DDEC-DATA LINK (+)
138A	ABS SYSTEM-SENSOR	169	WORLD TRANSM-INPUT 12	241	DDEC III-ECM 12V FEEDING	901	DDEC-DATA LINK (-)
139	ABS SYSTEM-VALVE	170	WORLD TRANSM-SHIFTER	260	WINDOW AJAR-T.T.LT	908	DDEC-HYDRAU. PWM#1 OUTPUT
139	WORLD TR.-OUTPUT SPEED HI	170C	LUGGAGE DOOR LOCK-T.T.LT	270	KEYLESS MODULE-FEED	916	DDEC-SENSOR SUPPLY (5VDC)
140	WORLD TR.-OUTPUT SPEED LO	170D	LUGGAGE DOOR LOCK-FEED	270A	ENTRANCE DOOR AIR LOCK	952	DDEC-SENSOR RETURN
140	ABS SYSTEM-VALVE	170E	LUG. DOOR LOCK-UNLOCK SIGN	272	KEYLESS SYSTEM-KEYBOARD	953	DDEC-BATTERY GRD
141	ABS SYSTEM-VALVE	170F	LUGGAGE DOOR LOCK-FEED	274	KEYLESS SYSTEM-KEYBOARD	979	DDEC-ENGINE BRAKE 2 CYL.
141	WORLD TR.-ENGINE SPEED HI	170G	LUGGAGE DOOR LOCK-FEED	276	KEYLESS SYSTEM-KEYBOARD	2123	FLASHER SIGNAL LTS
142	ABS SYSTEM-VALVE	170H	LUGGAGE DOOR-LOCK SIGN	277	KEYLESS SYS-DR'V LTS SIGN		
143	ABS SYSTEM-SENSOR	170K	LUGGAGE DOOR-LOCK SIGN	278	KEYLESS SYSTEM-KEYBOARD		
143A	ABS SYSTEM-SENSOR	170LA	LUGG DOOR LOCK-T.T.LT WE	280	KEYLESS SYSTEM-KEYBOARD		
143A	WORLD TRANS-BATERY GRD	170LB	LUGG DOOR LOCK-T.T.LT WE	283	KEYLESS SYSTEM-ANTI-THEFT		
143W	WORLD TRANSM-BATTERY GRD	170L	LUGG DOOR LOCK-SIGN T.T.LT	283A	KEYLESS SYS-ENT. DOOR SIGN		
143X	WORLD TRANSM-BATTERY GRD	170M	LUGG DOOR LOCK-SIGN T.T.LT	284A	KEYLESS SYSTEM		
144	ABS SYSTEM-SENSOR	170N	LUGG DOOR LOCK-SIGN T.T.LT	285	KEY. SYS-UNLOCK ENT. DOOR		
144A	ABS SYSTEM-SENSOR	170P	LUGG DOOR LOCK-SIGN T.T.LT	285B	KEYLESS SYSTEM		
145	ABS SYSTEM-VALUE	170R	LUGG DOOR LOCK-ENTR. DOOR	285C	KEYLESS SYSTEM		
146	ABS SYSTEM-VALUE	170S	LUGG DOOR LOCK-SIGN T.T.LT	286	LUGG DOOR LOCK-ENT. DOOR		