

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
RF1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1	R 61	9.3	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
RF2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2	R 62	5.1	24V	561707	FR JCT BOX	DDEC PARK BRAKE SIGNAL
RF3	8.1	24V	560772	RR JCT BOX	TIME DELAY	R 63	15.3	24V	560772	FR JCT BOX	EVAP. CPT.
R 1	1.1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR	R 64	11.2	12V	562092	FR JCT BOX	ENTRANCE DOOR LTS
R 2	2.1	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR	R 65	9.2	24V	561707	FR JCT BOX	CORNERING LTS CONTROL
R 3	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM	R 66	9.2	24V	561707	FR JCT BOX	LOW DOCKING LTS -FR CORNERING
R 4	4.1	24V	561005	BATT. CPT.	STARTING MOTOR	R 67	9.3	24V	561707	RR JCT BOX	LOW DOCKING LTS
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.	R 68					
R 6	9.3	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE	R 69	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR LOCK
R 7	5.1	24V	561707	FR JCT BOX	FAST IDLE	R 70	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR UNLOCK
R 8	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM	R 71	12.1	24V	561707	RR JCT BOX	LUGGAGE DOOR UNLOCK T.T. LT.
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS	R 72					
R 10						R 73					
R 11						R 74	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR LOCK
R 12	7.1	12V	562092	FR JCT BOX	ELECTRICAL HORNS	R 75	12.1	12V	562092	RR JCT BOX	LUGGAGE DOOR UNLOCK
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS	R 76					
R 14	9.1	24V	561707	FR JCT BOX	BLINKER	R 77					
R 15	9.1	24V	561707	FR JCT BOX	FR MARKER LTS	R 78	1.1	24V	561707	FR JCT BOX	MASTER SWITCH WITH ALT. BOSCH
R 16	9.1	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS	R 78	1.1	12V	562092	FR JCT BOX	MASTER SWITCH WITH ALT. DELCO
R 17	9.1	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS	R 79					
R 18	9.1	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-IN	R 80	11.1	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R 19	9.1	24V	561707	FR JCT BOX	HEADLAMPS (HI)	R 81					
R 20	9.1	24V	561707	FR JCT BOX	HEADLAMPS (LO)	R 82	21.1	24V	561707	FR JCT BOX	RETARDER WT
R 21	9.2	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT	R 83					
R 22						R 84	8.1	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R 23	9.2	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT	R 85	8.1	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R 24	9.2	24V	561707	FR JCT BOX	R.H. CORNERING LT	R 86					
R 25	9.2	24V	561707	FR JCT BOX	L.H. CORNERING LT	R 87	21.1	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS	R 88					
R 27						R 89	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT	R 90	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 29						R 91	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 30						R 92	13.1	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R 31						R 93	14.1	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER (WEBASTO)
R 32						R 94					
R 33	4.1	12V	562092	FR JCT BOX	BLOWER CUT-IN RLY	R 95					
R 33	9.1	24V	561707	FR JCT BOX	DAYTIME RUNNING LIGHT	R 96					
R 34	15.1	24V	561707	RJB A/C JCT PANEL	A/C CONTROL	R 97					
R 35	15.1	24V	561707	RJB A/C JCT PANEL	WATER PUMP	R 98					
R 36	15.1	24V	561707	RJB A/C JCT PANEL	A/C COMPRESSOR CLUTCH	R 99	8.1	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 37						R 100	4.1	12V	561538	RR JCT BOX	GENERATOR SIGNAL
R 38	15.1	24V	561707	RJB A/C JCT PANEL	A/C LIQ. SOL. VALVE	R 101					
R 39	15.3	24V	561005	EVAP. CPT.	CONDENSER FAN MOTOR	R 102	12.1	12V	562092	UNDER DASH RH	DRIVER'S DOOR UNLOCK
R 40	15.3	24V	561014	EVAP. CPT.	CONDENSER SPEED CTR HI	R 103					
R 41	15.3	24V	561005	EVAP. CPT.	CONDENSER SPEED CTR HI	R 104	4.1	12V	563054	UNDER DASH RH	ANTI-THEFT
R 42						R 105	12.1	12V	562092	UNDER DASH RH	DRIVER'S & LUGGAGE DOOR LOCK
R 43						R 106	11.2	24V	562341	UNDER DASH RH	TIME DELAY RLY DRIVER'S LTS
R 44						R 113	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 45						R 114	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 46	20.1	12V	562092	FR JCT BOX	CAMERA DOOR	R 115	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 47						R 116	12.2	12V	563054	UNDER DASH RH	KEYLESS SYSTEM
R 48						R 2010	14.2	24V	561230	WEBASTO PRE-HEAT	WEBASTO
R 49	22.1	24V	561707	FR JCT BOX	ABS - SERVICE BRK RLY	V IMN	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
R 50	15.3	24V	561005	EVAP.CPT.	EVAP. FAN 1 ST SPEED	V IMR	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-BU SIGNAL
R 51	11.2	24V	561707	FR JCT BOX	DRIVER'S LTS	V IM1	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
R 52	22.1	24V	561707	FR JCT BOX	ABS SYSTEM	V IM2	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
R 53	1.1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR	V IM3	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NO
R 54	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR	V IM4	6.1	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARD. ON SIGNAL
R 55	1.1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR	RA 1	4.2	24V	561707	RR JCT BOX	EXCITING RELAY ALT. #1
R 56						RA 2	4.2	24V	561707	RR JCT BOX	EXCITING RELAY ALT. #2
R 57	9.1	24V	561707	FR JCT BOX	DAY'S BLINKER	RA 3	4.2	24V	561707	RR JCT BOX	RUN RELAY ALT. #1 OR ALT. #2
R 58						RA 4	4.2	24V	561707	RR JCT BOX	RUN RELAY ALT.#1 AND ALT. #2
R 59	9.3	24V	561707	RR JCT BOX	DOCKING LTS						
R 60	15.3	24V	561707	EVAP. CPT.	EVAP. FAN SPEED #2						

RELAYS NUMBER CODE

No. PAGE COIL V #PREV. LOCATION FUNCTION

No. PAGE COIL V #PREV. LOCATION FUNCTION