

Instruction Sheet

ELECTRIC CONNECTION GUIDE FOR THE REPLACEMENT OF BLAUPUNKT RADIO ("CALGARY" MODEL) BY A "SONY" RADIO

Material

Kit #40-3631 includes the following parts.

Part no	Description	Qty
40-3629	"Sony" radio	1
06-3067	Connector assembly	1
06-3060	Wire harness	1
06-3214	Shrinkable tubing 1/8 x 6" (3 x 152 mm)	1
IS-92042	Instruction sheet	1
FI-92042	Feuille d'instructions	1

Procedure

1. Park vehicle safely, then set battery main disconnect switch(es) to the "OFF" position.
2. Disconnect at back of "Blaupunkt" radio, the wires identified LH, 1, 2, 3 and RH.
3. Cut each wire near its connector, discard connectors, then strip extremity of each wire.
4. Cut shrinkable tubing (supplied with kit) in 7 even lengths of 3/4" (19 mm), then slide a piece of tube on each previously stripped wire.
5. Join and solder each wire of connector assembly #06-3067 to the previously stripped wires according to the color code in figure on next page.
6. Position shrinkable tubing in order to insulate the junctions, then heat as required.
7. Connect connector assembly #06-3067 to the corresponding connector of "Sony" radio.
8. Disconnect 8 pin (DIN) connector of cable at rear of "Blaupunkt" radio, then insert the male section (from PA system) in the round connector of wire harness #06-3060.
9. Connect each wire on the other end of wire harness to each corresponding wire of "Sony" radio, according to the code in figure on next page.
10. Reset battery main disconnect switch(es) to the "ON" position.

NOTE: We recommend the use of an electric soldering gun with a resin core solder combination of 60% tin and 40% lead.

CAUTION: When vehicle is parked overnight or for an extended period of time, the battery main disconnect switches should be set to the "OFF" position.

