

DATE: May 1994

NO: 94-12
SECTION: 06**SUBJECT:** NEW LOCATION OF BATTERY MONITOR**APPLICATION:**

Models	V.I.N.s
XL Buses	Starting with 2P9L33409R1001798
XL Shells 40'	Starting with 2P9M3340XR1001801
XL Shells 45'	Starting with 2P9M33493R1001797
XL Shells 45'E	Starting with 2P9E33493R1001805

DESCRIPTION

In order to group together all battery accessories, the battery monitor is now located closer to batteries.

On XL Shells, the battery monitor is now fixed to the vehicle structure, above the battery assembly, in the engine compartment (Fig. 1).

On XL Buses, the battery monitor is now fixed to the vehicle structure, on rear baggage compartment ceiling, next to the battery equalizers (Fig. 2).

XL Shells

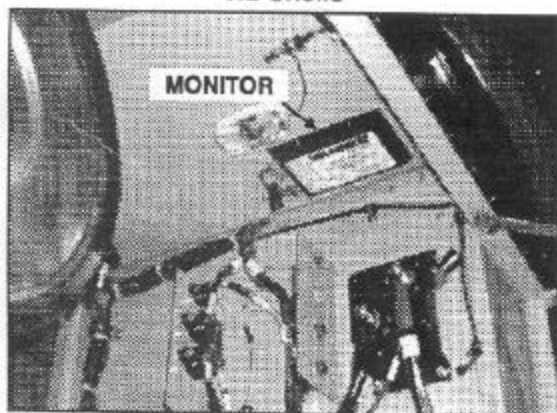


Fig. 1

XL Buses

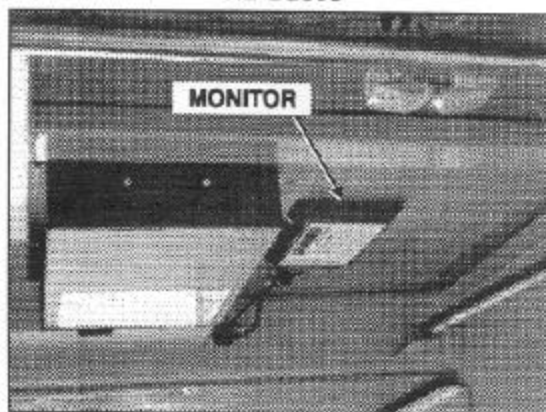


Fig. 2