

PREVOST

Instruction Sheet

IS-06020

Level-Low Selector Replacement

Level-low selector p/n 562517 is superseded by level-low selector p/n 563086.

MATERIAL

Kit #065381 includes the following parts:

Part No.	Description	Qty
391994	Decal, Level Low	1
392317	Plastic Cover, 4-Positions Selector, Level-Low	1
561457	Terminal, Spade spring	7
563086	Selector, 4-Positions, Level-Low Control	1
D390096	Diagram, Dashboard, Left Module, MTH	1
D390113	Diagram, Dashboard, Left Module, VIP MUX	1
IS-06020	Instruction Sheet	1
FI-06020	Feuille d'instructions	1

NOTE

Material can be obtained through regular channels.

PROCEDURE



DANGER

Park vehicle safely, apply parking brake, stop engine and set battery master switch(es) to the OFF position prior to working on the vehicle.

1. From under the lateral control panel, disconnect the seven electrical wires connected to the level-low selector SW107.
2. Remove the four screws and the present level-low selector SW107 #562517.
3. On the existing electrical harness, install seven new spade spring terminals #561457 on the electrical wires.
4. Install the new level-low selector #563086, the new plastic cover #392317 and the new decal #391994.

NOTE

The new level-low selector is installed with four screws.

5. From under the lateral control panel, connect the seven electrical wires to the selector according to the following table and figure. You can also refer to wiring diagrams # D390096 or #D390113.

Table 1: Level-Low Selector Wire Connections

Selector Terminal	Wire Number
1	132F
2	132B
3	Not Used
4	132C
5	Not Used
6	132D
7	Not Used
8	104
9	24V18
10	126F

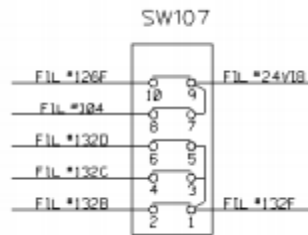


Figure 1: Level-Low Selector Connection

6. With the vehicle still at neutral (N), set the ignition key to the ON position.

NOTE

The engine can be running or not.

7. Set the level-low selector to LEFT and press on the height control selector (up or down) and make sure the rear left suspension inflates or deflates accordingly.

8. Repeat last step with the selector at RIGHT and FRONT positions.

NOTE

When at position RIGHT, the rear right suspension is controlled.

When at position FRONT, it is the entire front suspension that is controlled.

9. Set the level-low selector at OFF and the ignition key at OFF.

PARTS / WASTE DISPOSAL

Discard waste according to applicable environmental regulations (Municipal/State[Prov.]/ Federal)