

# Instruction Sheet

## ELECTRIC CONNECTION GUIDE FOR THE REPLACEMENT OF BLAUPUNKT RADIO ("DENVER" MODEL) BY A "SONY" RADIO

### Material

Kit #40-3630 includes the following parts.

Part no	Description	Qty
40-3629	"Sony" radio	1
06-3067	Connector assembly	1
06-3060	Wire harness	1
06-3214	Shrinkable tubing 1/8 x 6" (3 x 152 mm)	1
06-2608	Cable adaptor 7 pins F/8 pins M	1
IS-92043	Instruction sheet	1
FI-92043	Feuille d'instructions	1

### Procedure

1. Park vehicle safely, then set battery main disconnect switch(es) to the "OFF" position.
2. Disconnect at back of "Blaupunkt" radio, the wires identified LH, 1, 2, 3 and RH.
3. Cut each wire near its connector, discard connectors, then strip extremity of each wire.
4. Cut shrinkable tubing (supplied with kit) in 7 even lengths of 3/4" (19 mm), then slide a piece of tube on each previously stripped wire.
5. Join and solder each wire of connector assembly #06-3067 to the previously stripped wires according to the color code in figure on next page.

**NOTE:** We recommend the use of an electric soldering gun with a resin core solder combination of 60% tin and 40% lead.

6. Position shrinkable tubing in order to insulate the junctions, then heat as required.

7. Connect connector assembly #06-3067 to the corresponding connector of "Sony" radio.
8. Disconnect 7 pin (DIN) connector of cable at rear of "Blaupunkt" radio, then insert the male section (from PA system) in cable adaptor #06-2608.
9. Connect the other end of cable adaptor to wire harness #06-3060, then connect each wire on the other extremity of this wire harness to its corresponding wire of "Sony" radio, according to the code in figure on next page.
10. Reset battery main disconnect switch(es) to the "ON" position.

**CAUTION:** When vehicle is parked overnight or for an extended period of time, the battery main disconnect switches should be set to the "OFF" position.

