

# MULTIPLEX ERROR MESSAGES LIST

FMI 3 = Shorted High ; FMI 4 = Shorted Low ; FMI 5 = Open Circuit ; FMI 6 = Current above Normal

Cluster message	SID/PSID	FMI	Module.Pin#	Page	Cluster message	SID/PSID	FMI	Module.Pin#	Page
A/C Pres HiSd	PSID #12	3, 4	A52.J1:13	18.2	FrontMkr Lts LH	PSID #148	3, 4, 6	A45.J1:21	26.1
A/C Pres LoSd	PSID #13	3, 4	A52.J1:14	18.2	FrontMkr Lts RH	PSID #149	3, 4, 6	A48.J1:7	26.1
Backup Light &	PSID #167	3, 4, 5, 6	A50.J1:3	26.2	FrStart Enable Sw	PSID #56	3, 4	A53.J1:9	3.2
Battery Equalizer	SID #61	3, 4	A45.J1:12	26.1	Fuel Filt Sens	PSID #81	3, 4	A49.J1:20	13.1
Blinker Sw	PSID #139	3, 4	A43.J1:5	26.1	Hazard Switch	PSID #138	3, 4	A36.JB:4	26.1
Brk Lts Sens	PSID #119	3, 4	A36.JB:13	12.1	Hd Light Call	PSID #140	3, 4	A43.J1:3	26.1
Ceiling Door Lt	PSID #108	3, 4, 5, 6	A44.J1:5	29.1	HdLamp Wsh Pmp	SID #48	3, 4, 5, 6	A46.J1:21	34.1
Center Flash LH	PSID #124	3, 4, 6	A50.J1:5	26.2	Head Lights Pos1	PSID #143	3, 4	A43.J1:4	26.1
Center Flash RH	PSID #125	3, 4, 6	A50.J1:7	26.2	Hi Low Beam	SID #62	3, 4	A43.J1:8	26.1
Center Mkr	PSID #27	3, 4, 6	A50.J1:8	26.2	High Beam LH	PSID #141	3, 4, 5, 6	A45.J1:6	26.1
Cond Rly spd1	PSID #41	3, 4, 5, 6	A54.J1:5	18.2	High Beam RH	PSID #145	3, 4, 5, 6	A48.J1:3	26.1
Cond Rly spd2	PSID #42	3, 4, 6	A49.J1:16	18.2	Hill Start Ass	PSID #5	6	A44.J1:6	15.3
Condensor Door Sw	PSID #7	3, 4	A54.J1:11	25.1	Horn	PSID #83	3, 4, 5, 6	A45.J1:20	9.1
Cornering Dash	PSID #200	3, 4	A55.J1:8	26.3	Indir Lts Rly	PSID #110	3, 4, 5, 6	A49.J1:12	23.1
Cyclope Lt	PSID #116	3, 4, 6	A51.J1:7	26.2	Indirect Lts	PSID #111	3, 4	A41.J1:3	23.1
Direct Lts Relay	PSID #102	3, 4, 5, 6	A49.J1:11	24.1	Knee down Sol	PSID #89	3, 4, 5, 6	A41.J1:14	32.1
Direct Lts Sw	PSID #103	3, 4	A41.J1:4	24.1	Knee Down Sw	PSID #93	3, 4	A41.J1:7	32.1
Docking Dash Sw	PSID #40	3, 4	A55.J1:7	26.3	Knee Up Sol	PSID #95	3, 4, 5, 6	A41.J1:15	32.1
Driver Def Fan	PSID #180	3, 4, 5, 6	A47.J1:1	18.1	Knee Up Sw	PSID #94	3, 4	A41.J1:6	32.1
Driver heat Sol	PSID #16	3, 4, 5, 6	A46.J1:6	18.1	Kneeling Alm	PSID #85	3, 4, 5, 6	A42.J1:14	32.1
Driver Rfg Sol	PSID #29	3, 4, 5, 6	A46.J1:5	18.1	Lav Door Lock	PSID #96	3	A51.J1:11	11.1
Driver Sensor	PSID #28	3, 4, 5	A55.J1:1	18.1	Lav Emgy Sw	PSID #97	3, 4	A49.J1:6	11.1
Drv air Trap	SID #64	3, 4, 6	A44.J1:2	18.1	Lav Flush Pump	PSID #9	4, 5, 6	A52.J1:7	11.1
Drv Rec Cylind	PSID #30	3, 4, 5, 6	A47.J1:2	18.1	Lav Flush Sw	PSID #8	3, 4, 5, 6	A52.J1:12	11.1
Elec.Horn SW61	PSID #82	3, 4	A45.J1:10	9.1	Lav Fr Occ	PSID #100	3, 4, 5, 6	A41.J1:13	11.1
Emergency Relay	PSID #44	3, 4, 5, 6	A36.JA:24	3.2	Lavatory Fan4	PSID #98	4, 5, 6	A52.J1:4	11.1
Emgy & AisleLts	PSID #101	3, 4, 5, 6	A49.J1:13	20.1	LH Corner Lts	PSID #120	3, 4, 5, 6	A45.J1:5	26.3
Eng Cmpt Sw	PSID #107	3, 4	A52.J1:11		LH Docking Light	PSID #122	3, 4, 5, 6	A51.J1:4	26.3
Engine Door Se	PSID #6	3, 4	A49.J1:2	25.1	Low Beam LH	PSID #142	3, 4, 6	A45.J1:7	26.1
Engine Fan Spd1	PSID #53	3, 4, 5, 6	A52.J1:1	13.1	Low Beam RH	PSID #146	3, 4, 6	A48.J1:4	26.1
Engine Fan Spd2	PSID #54	3, 4, 5, 6	A52.J1:2	13.1	Lower Stop Lamps	PSID #153	3, 4, 6	A50.J1:6	26.2
Ent Close Out	PSID #70	3, 4	A36.JB:17	29.1	Lower Washer pmp	PSID #181	4, 5, 6	A46.J1:3	34.1
Ent close Sens	PSID #63	3, 4	A47.J1:10	29.1	Lower Wip Int	PSID #183	3, 4	A42.J1:8	34.1
Ent Close Sol	PSID #65	3, 4, 5, 6	A47.J1:6	29.1	Lugg Lock Sol	PSID #155	3, 4, 5, 6	A42.J1:13	33.1
Ent Door Close	PSID #64	3, 4	A36.JB:10	29.1	Lugg Lock Sw	PSID #156	3, 4	A46.J1:10	33.1
Ent Full Open	PSID #66	3, 4	A48.J1:11	29.1	Lugg Unlk Sens	PSID #157	3, 4	A46.J1:12	33.1
Ent open out	PSID #71	3, 4	A36.JB:15	29.1	Lugg unlk Sol	PSID #158	3, 4, 5, 6	A42.J1:16	33.1
Ent Open Sol	PSID #67	3, 4, 5, 6	A47.J1:7	29.1	Lugg Unlk Sw	PSID #159	3, 4	A46.J1:11	33.1
Evap Motor Rly	PSID #77	3, 4, 5, 6	A54.J1:7	18.2	P Rack Fan	PSID #19	4, 5, 6	A54.J1:1	18.2
Foot trap	PSID #37	3, 4, 6	A45.J1:2	18.1	P Rack Fan	PSID #20	4, 5, 6	A54.J1:2	18.2
FR Clearance lights	PSID #137	3, 4, 6	A44.J1:8	26.1	P Rack Fan	PSID #21	3, 4	A41.J1:20	18.2
Fr Side Flsh	PSID #10	3, 4, 6	A48.J1:20	26.1	P Rack Rfg	PSID #22	3, 4, 5, 6	A53.J1:20	18.2
Fr Start Sw	PSID #58	3, 4	A36.JB:22	3.2	Park brak Sens	PSID #162	3, 4	A36.JB:9	12.1

# MULTIPLEX ERROR MESSAGES LIST

FMI 3 = Shorted High ; FMI 4 = Shorted Low ; FMI 5 = Open Circuit ; FMI 6 = Current above Normal

Cluster message	SID/PSID	FMI	Module.Pin#	Page				
Park brake Sol	PSID #163	3, 6	A42.J1:12	32.1				
Pass Heat Sol	PSID #24	3, 4, 6	A54.J1:8	18.2				
Pass On_Off Sig	SID #29	3, 4, 5, 6	A54.J1:21	18.2				
Pass Rec.Cylinder	SID #63	3, 4, 5, 6	A54.J1:20	18.2				
Pass Rfg Sol	PSID #23	3, 4, 5, 6	A54.J1:3	18.2				
Pass. Wtr pump	PSID #17	3, 4, 6	A54.J1:4	18.2				
Read Lts Rly	PSID #113	3, 4, 5, 6	A49.J1:15	22.1				
Read Lts Sw	PSID #114	3, 4	A41.J1:10	22.1				
Rear CutOut Sw	PSID #18	3, 4	A36.JB:21	3.2				
Rear High Buoy	PSID #197	4, 6	A41.J1:30	32.1				
RearFlsh LH	PSID #131	3, 4, 6	A51.J1:21	26.2				
RearFlsh RH	PSID #132	3, 4, 6	A51.J1:3	26.2				
Retarder signal	PSID #164	3, 4	A50.J1:12	12.1				
RH Corner Light	PSID #121	3, 4, 5, 6	A48.J1:5	26.3				
RH Docking Light	PSID #123	3, 4, 5, 6	A51.J1:5	26.3				
Rr Clearance lights	PSID #151	3, 4, 6	A50.J1:4	26.2				
Rr Start Sw	PSID #59	3, 4	A53.J1:11	3.2				
RrStart Enable Sw	PSID #57	3, 4	A53.J1:10	3.2				
Ser Brake Trans	SID #49	3, 4, 6	A51.J1:1	15.1				
Starter Relay	PSID #60	4, 6	A53.J1:6	3.2				
StepLts	PSID #117	3, 4, 6	A47.J1:5	29.1				
Tag axle Sw	PSID #165	3, 4	A43.J1:19	32.1				
Trans Inh Sig	SID #25	3, 4, 5, 6	A50.J1:2	15.1				
Trans Neutral Sens	PSID #168	3, 4	A50.J1:11	3.2				
Under Floor lights	PSID #112	4, 6	A46.J1:20	25.1				
Unloader LHO	PSID #31	3, 4, 5, 6	A52.J1:8	18.2				
Unloader RH	PSID #32	3, 4, 5, 6	A52.J1:21	18.2				
Up Def Wtr	PSID #173	4, 6	A47.J1:20	18.1				
Upper Brk Lamp	PSID #43	3, 4, 6	A51.J1:6	26.2				
Upper Def Fan	PSID #33	4, 6	A46.J1:7	18.1				
Upper Wash Pmp	PSID #189	4, 5, 6	A46.J1:4	34.1				
Upper Wash Sw	PSID #190	3, 4	A55.J1:18	34.1				
Upper Wiper Int	PSID #191	3, 4	A55.J1:20	34.1				
Upper Wiper Sw	PSID #192	3, 4	A55.J1:21	34.1				
UpperWiper Mot	PSID #193	3, 4, 5, 6	A46.J1:2	34.1				
WakeUp Rly	SID #30	4, 5, 6	A36.JA:15	3.3				
Watch Step Lts	PSID #118	3, 4, 5, 6	A43.J1:11	29.1				
WCL Lower Door	PSID #175	3, 4	A53.J1:12	36.1				
WCL Pump Rly	PSID #176	3, 4, 5, 6	A53.J1:5	36.1				
WCLDorSig to USonic	SID #24	3, 4, 5, 6	A53.J1:7	36.1				
WCLSlid DoorLt	SID #33	3, 4, 5, 6	A50.J1:1	36.1				