

PREVOST

Instruction Sheet

IS-20920

Parcel Rack Scissor Partition Installation

First Release

05-28-2020

MATERIAL

Kit #IS20920 includes the following parts:

Part No.	Description	Qty
7771117	SCISSOR SHADE, W/TRANSPARENT FILM	26
402823	SUPPORT, MONITOR LCD HATRACK	26
7771116	PASSENGER PARTITION ADAPTER PLATE	26
5001923	SCREW CAP HEX SS NSS M6X45	52
502709	WASHER FL N050 .260X.688X.05 (M6,1/4)	78
IS-20920	INSTRUCTION SHEET (EN)	1
FI-20920	INSTRUCTION SHEET (FR)	1

Kit #7771120 includes the following parts:

Part No.	Description	Qty
7771117	SCISSOR SHADE, W/TRANSPARENT FILM	1
402823	SUPPORT, MONITOR LCD HATRACK	1
7771116	PASSENGER PARTITION ADAPTER PLATE	1
5001923	SCREW CAP HEX SS NSS M6X45	2
502709	WASHER FL N050 .260X.688X.05 (M6,1/4)	3
IS-20920	INSTRUCTION SHEET (EN)	1
FI-20920	INSTRUCTION SHEET (FR)	1

NOTE

Material can be obtained through regular channels.

PROCEDURE




DANGER

Park vehicle safely, apply parking brake, stop engine. Prior to working on the vehicle, set the ignition switch to the OFF position and trip the main circuit breakers equipped with a trip button. On Commuter type vehicles, set the battery master switch (master cut-out) to the OFF position.

Lock out & Tag out (LOTO) must be performed during set-up, maintenance or repair activities. Refer to your local procedure for detailed information regarding the control of hazardous energy.

1. Position the 7771116 adapter plate flush with the front part of the overhead console.



NOTE: *The adapter plate holes are not drilled at the same position, the 1.125in extremity goes toward the aisle side of the vehicle.*

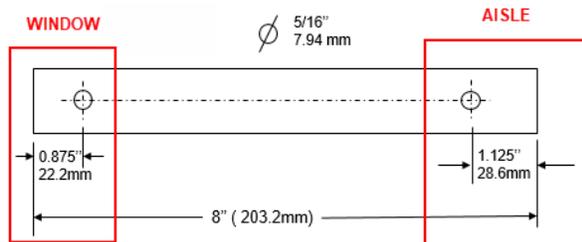

2. Using the adapter plate as a template, drill two 5/16in holes in the overhead panel.





3. Once the holes are drilled, remove the overhead console to gain access to the area over the drilled overhead panel.
4. Insert the **402823** monitor support inside the cavity and position it so the threads of the support are lined up with the previously drilled holes in the panel.

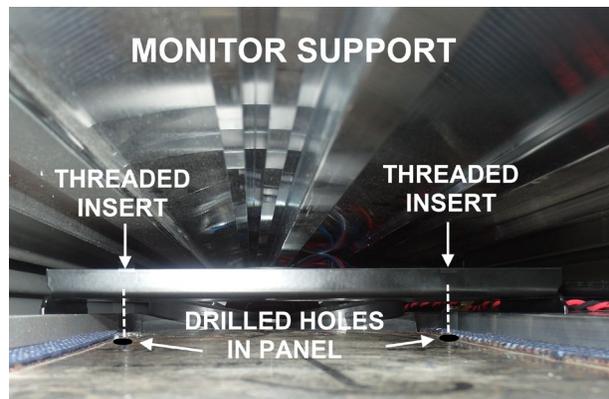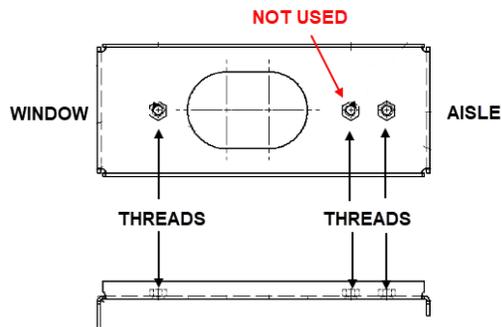

5. Secure both scissor screen clips to the ceiling using the **7771116** adaptor plate and the supplied **5001923** screws and **502709** washers.

NOTE: Three washers are provided. An extra washer is required under the aisle side clip to level the screen.

NOTE: The clip longest tab goes toward the front of the vehicle.

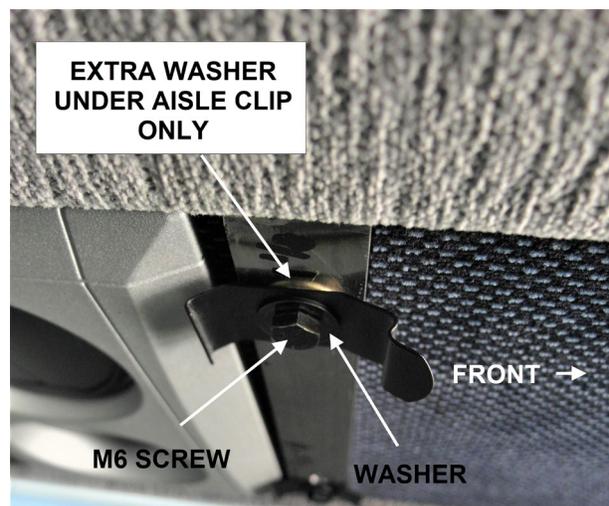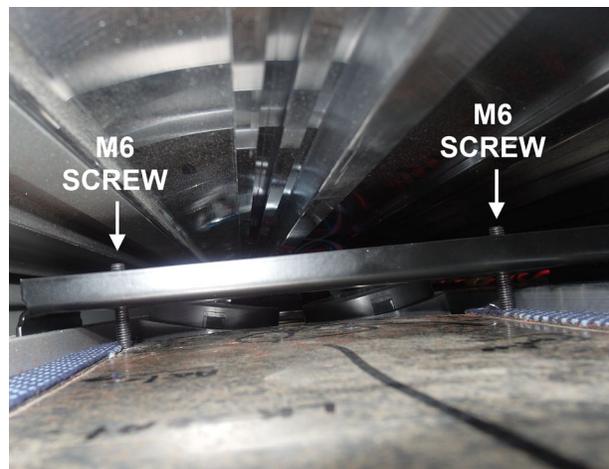

6. Clip in place the scissor screen and check for correct adjustment. The screen should deploy and retract easily and should not contact the side window or lateral sun shade. Adjust laterally as required.



7. Put back the overhead console to finish the installation.



MAINTENANCE

Regular cleaning is recommended with a soft cloth or sponge with soap or detergent and warm water. The material is able to withstand wiping down with disinfectant liquids such as Lysol or similar by using disposable wipes.

PARTS / WASTE DISPOSAL

Discard waste according to applicable environmental regulations (Municipal/State[Prov.]/ Federal)