

WIRING DIAGRAM INDEX

Information Pages Multiplexed Devices Index Arrangement – Harness Glossary Circuit Number Listing Circuit Breaker code Connectors code Diode Number Code Resistors Number Code Fuses Code Relay Code Functions	B1 – B8 C1 D E F G H J L K	E Engine block Heater Engine brake and Retarder Engine compt lighting Engine Start Engine ECM Engine Override Entrance door Ether Switch Engine bloc heater F Fast Idle Fire Alarm Flashers Fog lights Fuel Sender Fuel Prime Pump Fuel water Filter G Grounds H Hazard Head Lights Horn Hvac Defroster Hvac Passenger Hvac Driver onlyr K Keyless keypad L Level low Luggage compt lighting Luggage door Lock/Unlock Luggage door switches M Main Distribution Ignition & Batt. Main Distribution Wake-Up	11.1 12.1 25.1 3.2 14.1 14.1 29.1 13.1 11.1 14.1 9.1 26.1,26.2 26.3 10.1 13.1 13.1 2.1 26.1 26.1 9.1 18.1 18.2 18.3 29.1 32.1 25.1 33.1 24.1 3.1 3.3	Marker Lights Mirror Ramco Multiplexing power distribution Multiplexing Network P Park Brake Sensor Trailer Brake Sensor Parking Brake Release Switch Power Distribution FJB Power Distribution RJB Power Outlet Prime Pump Pneumatic Cut-Out Acc sol R Radiator Fan Clutch Rear junction box door fan S Service Brake Relay Slide out (1-2) Slide out (3-4) Spare Wires Stop lights Sun Visor Steering Control ZF Steering Multi-functions T Tag Tail and Licence Lights Test Switch Transmission ECU Trailer Package Tire Pressure Monitor. Sys. W Window Ajar &Awning Wiper & Washer	26.1,26.2 31.1 7.1 6.1 12.1 12.1 32.1 4.1 5.1 30.1 13.1 9.1 13.1 11.1 12.1 20.1 20.2 8.1 26.2 38.1 37.1 38.1 32.1 26.2 9.1 15.1-15.2 26.4 39.1 27.1 34.1
--	---	--	---	---	---