

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
0	WCLRemoteCtrl	OPA	Galley	4c	wcl_extra_switch
0A	EvaporatorMain	OPR		4CWcl	HostessChimeSig
00A		OPR1	GndDestinationSign	5	EmergandAisleLampsPwr
00A1	GndElectronic	OPR2	Gnd_Fr_Clearance_Lts	5A	UpperDefrostfan
0B	EngineChassisGnd	OPR3	UpperDefrosterGnd	5B	UpperDefrostfan
00B	ElectronicGndofMuxModules	ORA2	RJB_Gnd	5C	UpperDefrostfan
0B1	GndEnginePreheater	ORA3	DiodetoR1	5vKnee	KneelingLevel
0BB	SensorGnd	ORB3	RJB_Chassis_Gnd	5WE	Power5V_weight
0BF	GND_Preheater_Fuel_Filter	ORB3A	ChassisGnd	5WR	Power5V_weight
0BKS		ORB5	GndPre-Heat	6	GndWitnessSw24
0C	GndStarter	ORB6	RJB_Chassis_Gnd	7	GndDriverSensor
0CE	Gnd	ORB7		8	GndParkBrakeSol
0CG	67888	ORB8	GND_to_ACM	9A	EngineDoorOpenSig
0EV1	CondensorGnd	ORC2	GndDefrostUnit	9B	EngineCmpt.Lt
0EV2	GndHvac	ORC3	GndR23	10	LuggageCmpt.LtsPwr
0EV3	Evap_Compt_Gnd	ORC4	GndEntranceLights	10A	LuggageCmpt.LtsPwr
0EV4	PRackChassisGnd	OSA1	ChassisGnd	10R	LuggageDoorOpenSig
0F	FJBDDoorOpenSig	OSB	GndSeatBelt	11	DestinationSignPwr
0FA1	GndofAccessoires	OSB1	SeatBeltSig	12A	12VDtoR3
0FA4	GndPwrOutlet	OSS	VSS_GND	12Ecu	12vEngineEcu
0FB1		OSS1	VSS	12H	Back-Up_Camera
0FB2	GndDriverWdo	OSS2	VSS	12IgnSpare	VSS
0FB3	GndMasterID	OSS2W	wifi_gnd	12ISH	PwrI_Shift
0FC1	Lugg_Relays_Gnd	OSS3	VSS	12MEM	VSS
0FC2	DirectLightSwSig	OSW		12SS	
0FC3	GndSw25	OSW1		12SS1	VSS
0FC4	ElectricalHorn	OSW2		12SS2	VSS
0FDS	Driver_seat_optional	0V	LuggageDoorOpenSig	12VA	12vEqualizer
0FE	Gnd_AFSS	0V2	LuggageDoorOpenSig	12VD	12VDTOCB2
0G	gndIO-BA54	0V3	LuggageDoorOpenSig	12VD1	12VDTOCB2
0H	CoolantLevelGround	0VE	EqualizerGnd	12VD3	12vRearwake-up
00IS	Gnd_IShift	0W	WCLGnd	12VD4	12vEngineEcu
0LAV	EmergencySwSig	0WC	WCLGnd	12VDCust	
0Lav	GndReadingLamps	0WE	GND_weight	12VDF	12VDtoFrontVec
0lav	wclextraswitch	0WR	GND_weight	12VDG	12VDGLI
0LAV1	IndirectLightsPwr	0Y	GndSignal	12VDG1	12vFuseBox3
0Lav1	GndDirectLights	0Y2	GndChassisABSSol	12VDG1A	12vGLI
0Lav2	PRackChassisGnd	0Y3	GndChassisABSSol	12VDG2	12vFuseBox3
0Lav3	GndEmergencyLampsRH	1	Transmission	12VDG3	12vFuseBox3
0LAV4	GndAisleLamps	2B	CondensorLow	12VDG4	12vFuseBox3
0Lav4	GndReadingLamps	3	DoorLatchSig	12VI	12VIttoCB10
0P	Relaisinverter	4A	SOUND_SYSTEM	12VI1	12VlofA44
0P2	Inverter_Gnd	4C	HostessChimeSig	12VI2	Preheater_Fuel_Filter_PWR

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
12VI3	PwrOutletDrawer	22	HazardSwSig	24VI8	24VtoMux
12VI4	PwrOutletandCigarLighter	23	FlasherRHSig	24VI9	24VtoA54
12VI5	12VtoVECR	23A	FrontFlasherRH	24VI9A	24VtoA54
12VI6	PwrtoModuleA50	23AA	FrontFlasherRH	24VI13	Volvo_Link
12VI7	Lugg_Door_Lock	23B	CorneringLtsRH	24VIA	Cut-outPneumaticAcc
12VI8	Lugg_Door_Lock	23C	FlashersRearLH	24VICust	24VICustomer
12VI8A	PwrtoModuleA50	23D	ClearanceLts	24VIF	24VtoFrontVEC
12VI8B	AirDryer	24A	Booster_Block	24VIH1	Cut-outPneumaticAcc
12VI9	TiremonitoringPwr	24Alt	PwrtoExcitationResistor	24VIPR	
12VI10	MirrorPwr	24CO	24COtoSw58	24VIS	12VIgnShift
12VICust	12VICustomer	24D	24Direct	24WC	WCL24VDPower
12VIF	12VtoFrontVec	24DS-Emerg		24WUp1	24WUp_To_A47_A48
12VIF19	12vDDDR	24EE2	24VI_To_CB	24Wup1	24WUp_Front
12VIG	12VIGLI	24ISH	12VIgnShift	24Wup1B	24WUp_Front
12VIG1	12vFuseBox4	24IZ	24VII_Shift	24Wup1D	24WUpFront
12VIG1A	12vGLI	24SS	24VIgnition	24Wup1G	24WUpFront
12VIG2	12vFuseBox4	24SS3	VSS	24WupSS	24WUpFront
12VIG3	12vFuseBox4	24VA	24vEquilizer	25	EngineRunSignal
12VIG4	12VIGLI	24VB	24VEnginePreheater	25A1	ExcitationSignal
12VIG5	12VIGLI	24VB1	24VEnginePreheater	25A2	ExcitationSignal
12VIZF	ZFsterringControl	24VB2	24VEnginePreheater	25A4	BatteryNotChargingSig
12W	DoorUnlockSol	24VD	MasterRelayPwr	26	DriverWindoPwr
12WA	DoorFullOpenSig	24VD1	24VDtoRearVec	26A	DriverWdo
12WUp1	12VWUptoA48	24VD2	24VDEng.StartSw83	26B	DriverWdo
12Wup1	12WUpFront	24VD3	24VDofCECM	27A	EmergencySwSig
12Wup1a	12WUpFront	24VD4	24VDFrontWake-up	29	TagAxleValveSig
12Wup2	12WUptoDash	24VD5	24VDtoPre-Heat	31	UnloaderRH
12Wup5	PwrtoModuleA51	24VD5A	24VDtoPre-Heat	31B	WiperParkPwr
13	GndTransducer	24VD6	24VDPre-Heat	32A	TrailerLightsPackage
14		24VD7	PassandPRackPwr	32AA	BackupLtandalarm
14A	FlushingPumpSig	24VD8	UreaSystem	32D	ReversesigtoBUpMonitor
15A	Flushing_pump	24VD10	Volvo_Link	34	ParkBrakeReleaseValve
16	Speed_Signal	24VDCH	BattCharger	35	EntranceDoorLights
16B	PwrofSensorSpd	24VDCust	24VDCustomer	35A	EntranceDoorLights
17		24VDR4	AFSS	38	DirectLights
18	Wip.WasherLevel	24VDS	Driver_Seat_Power	38AA	IndirectLightsPwr
20	Airdryer	24VI	24VI	39	DriverLtSwSig
21	FlasherLHSig	24VI1	24VtoRearVec	39D	DriverLt
21A	FrontFlasher	24VI2	24VtoSw1	40	WitnessGnd
21AA	FlashersRearLH	24VI4	SunVisor	41	24VCondensor
21B	CorneringLtsLH	24VI5	24VILogic	41A	
21C	FlashersRearRH	24VI6	PwrtoDefrostUnit	41A1	
21D	ClearanceLts	24VI7	LowerWiperPwr	41A2	

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
41A3		62B	LavatoryLts	81	HeadLtCallSw1
41A4		63	ClearanceLts	82A	CyclopeSignal
43	PRackRH	63A	FrontClearanceLts	82Low	StopRearLowerLamp
43F	WitnessGndSw27	63B	ClearanceLts	82Up	StopRearUpperLamps
43G	Parcel_Rack_Vent	64A	Blinker	83	24vAccessories
44	P-RackLHFan	65	FootDamper	84	
45	Pre-HeatSigRly	65A	FootDamper	84B	StartSigSw83
45A	PassengerHeatSig	65D	DriverCylinder	85	24VIgnition
46	FrontFlasherRh	65P	Pass.Cylinder	85A	Ign-AccSignal
46A		65T	SignalToPre-heatrelay	85B	Wake-upSig
46B	MarkersCenter	66	MarkersSigSw2	85BB	Ign-AccSignal
47	DoorOpenSignal	67	EvaporatorPwr	85C	PositionNormalSw58
47A	DoorOpenSignal	67A	Condensor1stSpdSig	85D	RearStartPwr
48A	DoorOpenSol	68	DashDamper	85E	RearStartSignal
49	DoorCloseSignal	68A	DashDamper	85F	EgnineStartPwr
49A	DoorInsideSwCloseSig	69	ElectricalHorn	85G	DiodetoR1
50	DriverHeatValve	69A	HornSignal	85X	24VIgn
51	WitnessGnd	72A	CorneringLtsRH	85Z	ABS_Trailer_Sig
52	RJB_Spare52	72B	SunVisor	86	DefrostunitSpd
52A	ElectricalHorn	72C	SunVisor	86ARtn	EntranceCeilingLtGnd
53	LowerWip1stSpd	73	HostessChimePwr	86BRtn	Gnd
53B	LowerWip2ndSpd	73A	RearOccupiedSig	87	GndSignal
53C	LowerWip.IntSig	73B	RearOccupiedSig	88	TransducerPwr
53D	Washer_ctrl	74	ReadingLampSig	89	DriverSensorSig
53E	LowerWiper1stSpd	74A	wcl_extra_switch	90H	Evap_Rly_Power
53F	LowerWasherPump	74AB	Reading_Lamp_RH	90H1	EvaporatorMain
53G	LowerWip1stSpd	74B	ReadingLampsLH	91	ParkBrakeSig
53H	LowerWip.IntSig	74D	Reading_Lamp_Pwr	91B	WitnessSigSw14
53J	Washer_ctrl	75	wcl_extra_switch	92	TrailerParkBrakeSig
55	Lugg_Door_Lock_Signal	75A	ReadingLampsLH	95A	DockingLTSwSig
57A	WaterPump	76	FuelLevelSig	96A	CorneringLTSwSig
57G	Pre-HeatWebasto	76C	FuelGaugeWrn	99	Sw20Gnd
57GA	Pre-HeattoWtrPmpRly	77	TransducerHi-Side	100	IndirectLight
57H		77AC	A/Cclutch	100A	IndirectLightLH
57L	Hi-Beam	77B	PassandPRackLiquidValve	100B	IndirectLight
57R	HighBeamRH	77BA	A/Cclutch	100L	LDW
57Rtn	SignalRtnHeadLtsLH	77C	PassandPRackLiquidValve	100R	LDW
58L	LowBeam	78	StopLightSensorSig	101	R1toStarter
58R	LowBeamRH	78BA		101A	StarterCtr
58Rtn	HeadLampRHRtn	78BB		101B	StarterCtr
59	Hi/LowBeamSignal	79	TranducerLow-Side	102A	Alternator
60	FogsLtsSwSig	79A	StopLightSensorSig	103	LowBuoySig
61	HeadLtsSig	80	BrakeRedundant	104	Pwrl_Shift

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
105	FogLtsLH	136AA	ShifterSignal	159	Transmission
106	FogLtsRH	137	Transmission	160	TagSignal
107	Pwrl_Shift	137A	MirrorPwrSig	161	LDW
108	Pwrl_Shift	137B	Mirrors	162	Gnd_Service_Brake
109	Cmd_Ground	137C	Mirrors	163	Retarder_Sig
110	Pwrl_Shift	137D	Mirrors	163A	RetarderSig
111	Transmission	137E	Mirrors	163B	Retarder_Sig
114	DriverLt	137F	Mirrors	164	HandLevelSig
114A	Backlight	137H	Mirrors	166	WitnessSigSw16
114AA	Backlight	137J	Mirrors	167	ACCTimeGap
115	Transmission	137K	Mirrors	168	ACCTimeGap
115A	WitnessPwr	137L	Mirrors	170	LuggageLock_UnlockSig
116	DriverLiq	137M	Mirrors	170A	Lugg_Door_Lock
116A	DriverLiq	137N	Mirrors	170B	Lugg_Door_Lock
118	Transmission	137P	Mirrors	170D	
119	Transmission	138	ABSSensor	170E	Lugg_Door_Lock
120	Transmission	138A	ABSSensor	170F	Lugg_Door_Lock
122	Digital_Clock	139	ABSSolenoid	170G	Lugg_Door_Lock
123	123_Fire_Alarme_Signal	140	ABSSolenoid	170H	Lugg_Door_Lock_Signal
124	FireAlarm_Detector	141	ABSSolenoid	170Q	LuggageLock_UnlockSig
124A	fake	142	ABSSolenoid	170R	LuggageLock_UnlockSig
124B	fake	143	ABSSensor	170S	ElectronicGnd
125	RetarderActiveLamp	143A	ABSSensor	170T	LuggageLock_UnlockSig
126A	KneelingUpSwSig	144	ABSSensor	170U	LuggageLock_UnlockSig
126B	KneelingDownSwSig	144A	ABSSensor	170V	LuggageLock_UnlockSig
126F	KneelingDownSol	145	ABSSolenoid	170W	LuggageLock_UnlockSig
126G	KneelingUpSol	146	ABSSolenoid	170X	LuggageLock_UnlockSig
126H	KneelingCtrl.Sol	146A	PwrtoModuleA50	171	LuggageUnlockSwSig
126J	KneelingHi-BuoySol	147	ABSSolenoid	174	Transmission
126JR	GndKneeling	148	ABSSolenoid	175	Transmission
126P	KneelingBuzzer	149	ABSSensor	176	Transmission
127	Pre-HeatSignal	149A	ABSSensor	177	Transmission
127D	ChargerRlyGndSig	150	Transmission	180	Transmission
128	Pre-HeatStatus	151	GndtoEcm	181	PassengerSensor
128B	Pre-HeatTTLT	151A	GNDECM	185	TransmissionInhibitSig
129	SunVisor	151B	GNDECM	188	AutomaticTagUnload
130	SunVisor	151C	GNDECM	201	headlampwashersignal
131	Evaporator2ndSpd	152	ABSRearAtcSolenoid	202	Headlampwasherpump
133	Transmission	153	12VtoACC	203	VannerCtr
135	Transmission	154	Transmission	204	VannerCtr
135A	HandLevelSig	155	Transmission	205	VannerCtr
136	Transmission	156A	12VtoABS	206	VannerCtr
136A	TransmissionPwr	157D	ATCSignal	207	VannerCtr

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
208	VannerCtr	347	Fire_Detect_Alarme	526	UreaSystem
209	VannerCtr	347A	FireAlarm_Detector	526A	DPFVolvo
210	VannerCtr	348	See_H3_Design	526B	DPFVolvo
211	VannerCtr	351	EngineShout-downSignal	526C	UreaSystem
225	LavatoryFan	352	OverrideSignal	527	UreaSystem
225R		360	ClusterCtr	528	UreaSystem
231	NeutralSig	361	ClusterCtr	530	UreaSystem
231A	StarterRelay	362	ClusterCtr	531	UreaSystem
240A	ECMPOWER	363	ClusterCtr	532	UreaSystem
240B	CPC_Supply	364	Trans.RearAirBrake	533	Control_Ground_Relay
241A	ECMPOWER	365	Trans.RearAirBrake	534	Control_Ground_Relay
241B	PowertoEcm	366	Trans.RearAirBrake	535	WettankPress5v
241C	WIF_Heater	367	Trans.RearAirBrake	536	WettankPressOut
260	WindowAjarSig	368	AccAirPressureSig	537	WettankPress5v
290	GndFanClutch	369	AccAirPressureSig	541	CruiseSetSig
290A	GndFanClutch	400		544	CruiseOn_OffSignal
291	FanClutch	401		544A	CruiseOn-OffLed
292	FanClutch	402		545	CruiseResumeSig
300	WCLTopLightSliding	403	CadecSw	583	EngineBrakeB
301	WheelChairLiftSwitch	404	CadecSw	600	ABSSensor
302	WCLRicon	417	ThrottlePositionSignal	600A	ABSSensor
302A	WCLSlidingdoorSig	439	12VtoABS	601	ABSSensor
303	WCLRicon	439G	Gaateway	601A	ABSSensor
304	WheelChairLift	500	12VPwrIdleValid	602	ABSSteering&Yawsensor
304A	WheelChairLift	501	SupplyControl	603	ABSSteering&Yawsensor
305	ParkBrakeSol	502	IVSOut	604	ABSSteering&Yawsensor
305A	WCLUpperDoorSignal	504	UreaSystem	605	ABSSteering&Yawsensor
306	WCLTopLights	505	UreaSystem	606	ABSPressuresensor
307	WCL	506	UreaSystem	607	ABSPressuresensor
308	WCL	507	DeltaPSignals	608	ABSPressuresensor
309	WCL	510	FastIdleSignal	610	ABSPressuresensor
313	WCL	511	UreaSystem	611	AbsTagSolenoid
314	WCL_Se62	512	UreaSystem	612	AbsTagSolenoid
326A		513	UreaSystem	613	AbsTagSolenoid
326B		515	GroundPreheaterRelay	614	ABSSteeringSolenoid
341	Pwr_AFSS_Sys	516	UreaSystem	614A	ABSSteeringSolenoid
342	AFSS_Panel_Gnd	517	UreaSystem	618	Hill_Start_Assist_Sig
343	Fire-EngineStopTTL	520	UreaSystem	618Rtn	HillStartAssist
343A	See_H3_Design	521	UreaSystem	900	
344	ExtinguisherSignal	522	UreaSystem	901	
345	See_H3_Design	523	UreaSystem	910	L_SPEAKER_HARNESS
346	PowerSensors	524C	IdleValidationSig	911	EmergencyCutoutRlySignal
346A	FireAlarm_Detector	525	UreaSystem	916	5VSensorPwr

PREVOST	WIRING DIAGRAM	No:	D061350	REVISION Page E.5
----------------	-----------------------	------------	---------	----------------------

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
952	GndSensorRtn	DL2L	BB2	N4	A42Adress
953	GNDPCPC	DL3H	DBusSignal	N5	A43Adress
979	EngineBrakeA	DL3L	DBusSignal	N6	A43Adress
9001		DL7H	EngineSubnet	N7	A44Adress
A4A	Retarder	DL7L	EngineSubnet	N8	A44Adress
A4B	Retarder	DL9H	J1939Prop	N9	A45Adress
A4C	Retarder	DL9L	J1939Prop	N10	A45Adress
A4D	Retarder	down	ClusterCtr	N11	A46Adress
A4E	Retarder	DSL+++	VSS	N12	A46Adress
A4F	Retarder	DSL---	VSS	N13	A47Adress
A4G	Retarder	DSR+++	VSS	N14	A47Adress
A4H	Retarder	DSR---	VSS	N15	A48Adress
AMP	VSS	DVD_GND	VSS	N16	A48Adress
ANT	VSS	DVD_Gnd	VSS	N17	A49Adress
AXLE	LoadMonitor	DVD_L+	VSS	N18	A49Adress
BKK1	VSS	DVD_R+	VSS	N19	A50Adress
BLACK	120VacOutlet	escape	ClusterCtr	N20	A50Adress
Black	PwrBatteryCharger	FAKE	L_SPEAKER_HARNESS	N21	A51Adress
BLK1	VSS	FAKE1	R_SPEAKER_HARNESS	N22	A51Adress
BlkFR	TiremonitoringGnd	gnd_1		N23	A52Adress
BlkRL	TiremonitoringGnd	Gnd_2		N24	A52Adress
BlkRR	TiremonitoringGnd	GndA	ComputerSignals	N25	A53Adress
BRef1	SensorGnd	GndG	GndCadec	N26	A53Adress
Bref2	PassengerSensor	GndG1	GndCadec	N27	A54Adress
BussBar		GREEN	120VacOutlet	N28	A54Adress
CAN1-HI		Green	PwrBatteryCharger	N29	A36Adress
CAN1-LO		GRN1	VSS	N30	A55address
CanH2	SpareCan	HOSTESS		N31	A55address
CanL2	SpareCan	KneeLevel	KneelingLevel	NEG	GndDestinationSign
Cd1	ComputerSignals	KneeRef	KneelingLevel	OP2	Inverter_Gnd
Chgr	Battery_Charger_Gnd	L+	VSS	ORB7	
COM	GndDestinationSign	L-	VSS	PB1	
CTS	MCMDData	LF+	L_SPEAKER_HARNESS	POS	GndDestinationSign
Cts	ComputerSignals	LF+LL	VSS	PP1	InverterPwr
DATA+	GndDestinationSign	LF-	L_SPEAKER_HARNESS	R+	VSS
DH3L		LF-LL	VSS	R-	VSS
DL0H	SparesFr-to-RearHarness	LIN	Gaateway	RadioAudioGnd	VSS
DL0HS	SparesCanFrontHarness	LR+	R_SPEAKER_HARNESS_WCL	RadioL+	VSS
DL0L	SparesFr-to-RearHarness	LR-	FR_SPEAKER_HARNESS_	RadioR+	VSS
DL0LS	SparesCanFrontHarness	MUTE	VSS	RED1	VSS
DL1H	J1939	N1	A41Adress	RedFR	Tiremonitoring12v
DL1L	J1939	N2	A41Adress	RedRL	Tiremonitoring12v
DL2H	BB2	N3	A42Adress	RedRR	Tiremonitoring12v

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
Ref1	gndsensor	SL57	L_SPEAKER_HARNESS	spare62	spareABSHarness
Res00A		SL68	L_SPEAKER_HARNESS	spare64	Spares_Transmission
Res12		SL1012	L_SPEAKER_HARNESS	spare65	Spares_Transmission
ResAXLE		SL1113	L_SPEAKER_HARNESS	spare72	spare
ResGnd		SL1214	L_SPEAKER_HARNESS	spare73	spare
RF+	L_SPEAKER_HARNESS	SL1315	L_SPEAKER_HARNESS	spare210	spare
RF+LL	VSS	SL1416	L_SPEAKER_HARNESS	spare212	spare
RF-	L_SPEAKER_HARNESS	sp52	Pre-HeatSignal	spare214	spare
RF-LL	VSS	spare1	spare	SR13	FR_SPEAKER_HARNESS_
RR+	FR_SPEAKER_HARNESS_	spare10	SparesInteriorLtsHarness	SR24	FR_SPEAKER_HARNESS_
RR-	FR_SPEAKER_HARNESS_	spare11	SparesInteriorLtsHarness	SR35	FR_SPEAKER_HARNESS_
RTS	MCMData	spare12	SparesInteriorHarness	SR46	FR_SPEAKER_HARNESS_
Rts	ComputerSignals	spare13	SparesInteriorHarness	SR57	FR_SPEAKER_HARNESS_
RX	DataTireMon	spare14	SparesInteriorHarness	SR68	FR_SPEAKER_HARNESS_
Rx		spare15	SparesInteriorHarness	SR911	R_SPEAKER_HARNESS_WCL
RxD	ComputerSignals	spare16	SparesInteriorHarness	SR1012	R_SPEAKER_HARNESS_WCL
RxTx	MCMData	spare17	SparesFr-to-RearHarness	SR1113	R_SPEAKER_HARNESS_WCL
S8		spare18	SparesFr-to-RearHarness	SR1214	R_SPEAKER_HARNESS_WCL
S9		spare19	SparesFr-to-RearHarness	SR1315	R_SPEAKER_HARNESS_WCL
S10		spare20	SparesClearanceLts	SR1416	R_SPEAKER_HARNESS_WCL
S11		spare21	SparesClearanceLts	STO-LOC	WCLRemoteCtrl
select	ClusterCtr	spare22	SparesClearanceLts	Sub1+	SUBWOOFER
SH1	I_ShiftGearLevelSignal	spare23	SparesClearanceLts	Sub1-	SUBWOOFER
SH2	I_ShiftGearLevelSignal	spare24	SparesClearanceLts	Sub2+	SUBWOOFER
SH3	I_ShiftGearLevelSignal	spare25	SparesClearanceLts	Sub2-	SUBWOOFER
SH4	I_ShiftGearLevelSignal	spare28	SparesFrontHarness	TrigCam	VSS
SH5	I_ShiftGearLevelSignal	spare29	SparesFrontHarness	TrigDVD	VSS
SH6	I_ShiftGearLevelSignal	spare30	SparesFrontHarness	TrigNav	VSS
SH7	I_ShiftGearLevelSignal	spare31	SparesFrontHarness	TrigPaDr	VSS
SH8	I_ShiftGearLevelSignal	spare32	SparesFrontHarness	TrigTv	VSS
SHIELD	GndDestinationSign	spare33	SparesFrontHarness	TX	DataTireMon
Shield_PS	GndShield	spare34	SparesFrontHarness	Tx	
Shield_Ps	gndshield	spare35	SparesFrontHarness	TxD	MCMData
shieldT1	gndShield	spare39	SparesDash	up	ClusterCtr
ShieldT2	gndshield	spare40	SparesDash	VBKS	
shieldT2	gndShield	spare41	SparesDash	VDALT	PwrforAlternatorregulator
shieldT3	gndshield	spare42	SparesDash	ve+	
SHL2	VSS	spare43	SparesDash	WC2	WCLRemoteCtrl
SIGNAL	signal_weight	spare44	SparesDash	WC3	WCLRemoteCtrl
SL13	L_SPEAKER_HARNESS	spare51	SparesEngineCradle	WC4	WCLRemoteCtrl
SL24	L_SPEAKER_HARNESS	spare52	SparesEngineCradle	WC6	WCLRemoteCtrl
SL35	L_SPEAKER_HARNESS	spare53	SparesEngineCradle	WC7	WCLRemoteCtrl
SL46	L_SPEAKER_HARNESS	spare54	SparesEngineCradle	WHITE	120VacOutlet

