

# MULTIPLEX ERROR MESSAGES LIST

FMI 3 = Shorted High ; FMI 4 = Shorted Low ; FMI 5 = Open Circuit ; FMI 6 = Current above Normal

Cluster message	SID/PSID	FMI	Module.Pin#	Page	Cluster message	SID/PSID	FMI	Module.Pin#	Page
A/C Clutch SO9	PSID #4	3, 4, 5, 6	A52.J1:20		Ent close Sens SE17	PSID #63	3, 4	A47.J1:10	29.1
A/C Pres HiSd SE23	PSID #28	3, 4	A52.J1:13	18.2	Ent Close Sol SO6	PSID #65	3, 4, 5, 6	A47.J1:6	29.1
A/C Pres LoSd SE24	PSID #29	3, 4	A52.J1:14	18.2	Ent Door Close SW32	PSID #64	3, 4	A36.JB:10	29.1
Backlit to CtrlHead	SID #32	3, 4	A36.JA:11	28.1	Ent Full Open SE15	PSID #66	3, 4	A48.J1:11	29.1
Backup Light & Alm	PSID #167	3, 4, 5, 6	A50.J1:3	26.3	Ent open out SW34	PSID #71	3, 4	A36.JB:15	
Blinker SW1	PSID #139	3, 4	A43.J1:20		Ent Open Sol SO5	PSID #67	3, 4, 5, 6	A47.J1:7	29.1
Brk Lts Sens SE19	PSID #119	3, 4	A36.JB:13		Ent Unlk Sens SE16	PSID #69	3, 4	A47.J1:11	29.1
Ceiling Door Lt L17	PSID #108	3, 4, 5, 6	A44.J1:5	29.1	Evap Motor Rly R12	PSID #77	3, 4, 5, 6	A54.J1:7	18.2
Center Flash LH L70	PSID #124	3, 4, 6	A50.J1:5	26.2	Evap Spd Ctrl MO9	PSID #78	4, 6	A53.J1:21	18.2
Center Flash RH L68	PSID #125	3, 4, 6	A50.J1:7	26.2	Fire Sensor	PSID #79	3, 4	A36.JB:5	9.1
Center Mkr L67-L70	PSID #27	3, 4, 6	A50.J1:8	26.2	Flash RH SW1	PSID #133	3, 4	A48.J1:12	26.1
Cond Rly spd1 R10	PSID #41	3, 4, 5, 6	A54.J1:5	18.2	Flasher LH Sw1	PSID #130	3, 4	A45.J1:9	26.1
Cond Rly spd2 R9	PSID #42	3, 4, 5, 6	A53.J1:8	18.2	Flsh Audibl Rly R16	PSID #37	3, 4, 5, 6	A45.J1:8	26.1
Condensor Door Sw7	PSID #7	3, 4	A54.J1:11	25.1	Fog's Lights LH L95	PSID #134	3, 4, 6	A45.J1:4	26.3
Cornering Dash Sw30	PSID #200	3, 4	A43.J1:21	26.3	Fog's lights RH L96	PSID #136	3, 4, 6	A48.J1:8	26.3
Cyclope Lt L81	PSID #116	3, 4, 6	A51.J1:7	26.2	Foot trap Mo4	PSID #14	3, 4, 6	A45.J1:2	18.1
Direct Lts Relay R6	PSID #102	3, 4, 5, 6	A49.J1:11	24.1	FR Clearance lights	PSID #137	3, 4, 6	A44.J1:8	26.1
Direct Lts Sw25	PSID #103	3, 4	A41.J1:4	24.1	Fr Flsh-Mkr LH L62	PSID #128	3, 4, 6	A45.J1:3	26.1
Docking Dash Sw31	PSID #3	3, 4	A43.J1:7	9.1	Fr Side Flsh RH L64	PSID #10	3, 4, 6	A48.J1:20	26.1
Driver Def Fan L198	PSID #180	3, 4, 5, 6	A47.J1:1	18.1	Fr Start Enable SW58	PSID #56	3, 4	A53.J1:9	3.2
Driver heat Sol SO8	PSID #16	3, 4, 5, 6	A46.J1:6	18.1	Fr Start SW83	PSID #58	3, 4	A36.JB:22	3.2
Driver Light L16	PSID #104	3, 4, 5, 6	A44.J1:3	19.1	Front Flash RH L61	PSID #126	3, 4, 6	A48.J1:6	26.1
Driver Light SW24	PSID #105	3, 4	A43.J1:18	19.1	Front Mkr Lts LH L62	PSID #148	3, 4, 6	A45.J1:21	26.1
Driver Rfg Sol SO7	PSID #13	3, 4, 5, 6	A46.J1:5	18.1	Front Mkr Lts RH L61	PSID #149	3, 4, 6	A48.J1:7	26.1
Driver Sensor SE21	PSID #12	3, 4, 5	A46.J1:13	18.1	Hazard Switch Sw4	PSID #138	3, 4	A36.JB:4	26.1
Drv air Trap MO3	PSID #5	3, 4, 6	A44.J1:2	18.1	Hd Light Call SW1	PSID #140	3, 4	A43.J1:3	26.1
Drv Rec Cylind L203	PSID #30	3, 4, 5, 6	A47.J1:2	18.1	HdLamp Wsh Pmp Mo54	SID #48	3, 4, 6	A46.J1:21	34.1
Elec Horn L185 L186	PSID #83	3, 4, 5, 6	A45.J1:20	9.1	Head Lights Pos1 SW2	PSID #143	3, 4	A43.J1:4	26.1
Elec. Horn SW61 SW62	PSID #82	3, 4	A45.J1:10	9.1	Head Lt Sw Pos2 Sw2	PSID #11	3, 4	A45.J1:12	
Emergency Relay R21	PSID #44	3, 4, 5, 6	A36.JA:24	3.2	Hi Low Beam Sw1	PSID #6	3, 4	A43.J1:8	26.1
Emgy & Aisle Lts R15	PSID #101	3, 4, 5, 6	A49.J1:13	20.1	High Beam LH L60	PSID #141	3, 4, 5, 6	A45.J1:6	26.1
Eng Brk Active Sig	PSID #45	3, 4	A42.J1:18		High Beam RH L59	PSID #145	3, 4, 5, 6	A48.J1:3	26.1
Eng Cmpt Bulb L173	PSID #106	3, 4, 5, 6	A52.J1:5	25.1	Indir Lts Rly R13	PSID #110	3, 4, 5, 6	A49.J1:12	23.1
Eng Cmpt Sw	PSID #107	3, 4	A52.J1:11	25.1	Indirect Lts Sw25	PSID #111	3, 4	A41.J1:3	23.1
Eng Ether SW23	PSID #50	3, 4	A42.J1:5	13.1	Knee down Sol SO16	PSID #89	3, 4, 6	A41.J1:14	32.1
Eng Fan Dash SW22	PSID #55	3, 4	A36.JB:14	13.1	Knee Down Sw10	PSID #93	3, 4	A41.J1:7	32.1
Eng Fan Spd1 Req	PSID #51	3, 4	A52.J1:9	13.1	Knee Press Sens SE26	PSID #90	3, 4	A41.J1:18	32.1
Eng Fan Spd2 Req	PSID #52	3, 4	A52.J1:10	13.1	Knee Proxi Pwr SE27	PSID #92	3, 4, 6	A41.J1:12	32.1
Eng. Ether Sol SO1	PSID #49	3, 4, 6	A52.J1:6	13.1	Knee Proxi Sens SE27	PSID #91	3, 4	A41.J1:19	32.1
Engine Fan Spd1 MO2	PSID #53	3, 4, 5, 6	A52.J1:1	13.1	Knee Up Sol SO15	PSID #95	3, 4, 6	A41.J1:15	32.1
Engine Fan Spd2 MO2	PSID #54	3, 4, 5, 6	A52.J1:2	13.1	Knee Up SW10	PSID #94	3, 4	A41.J1:6	32.1
EngRun Sig Hvac A15	SID #31	3, 4, 5, 6	A36.JA:13	3.2	Kneeling Alm L188	PSID #85	3, 4, 5, 6	A42.J1:14	32.1
Ent Close Out SW34	PSID #70	3, 4	A36.JB:17	29.1	Lav Door Lock SE28	PSID #96		3A49.J1:5	11.1

# MULTIPLEX ERROR MESSAGES LIST

FMI 3 = Shorted High ; FMI 4 = Shorted Low ; FMI 5 = Open Circuit ; FMI 6 = Current above Normal

Cluster message	SID/PSID	FMI	Module.Pin#	Page	Cluster message	SID/PSID	FMI	Module.Pin#	Page
Lav Emgy SW55	PSID #97	3, 4	A49.J1:6	11.1	Starter Relay SO2	PSID #60	4, 6	A53.J1:6	3.2
Lav Flush Pump Mo13	PSID #9	4, 6	A52.J1:7	11.1	Starter Relay SO2	PSID #60	3, 6	A53.J1:1	3.2
Lav Flush Sw56	PSID #8	3, 4, 5, 6	A49.J1:2		Step Lts L18 L19 L20	PSID #117	3, 4, 5, 6	A47.J1:5	29.1
Lav Fr Occ Lt L143	PSID #100	3, 4, 5, 6	A41.J1:13	11.1	Stop Eng Signal In	PSID #62	3	A42.J1:9	
Lavatory Fan MO14	PSID #98	4, 6	A52.J1:4	11.1	Tail Lights	PSID #152	3, 4, 6	A51.J1:8	26.2
LH Corner Lts L97	PSID #120	3, 4, 5, 6	A45.J1:5	26.3	Trans Inh Sig A1	SID #25	3, 4, 5, 6	A50.J1:2	15.1
LH Docking Light L93	PSID #122	3, 4, 5, 6	A51.J1:4	26.3	Trans Neutral Sens	PSID #168	3, 4	A50.J1:11	3.2
Low Beam LH L60	PSID #142	3, 4, 6	A45.J1:7	26.1	Under Floor lights	PSID #112	4, 6	A46.J1:20	25.1
Low Beam RH L59	PSID #146	3, 4, 6	A48.J1:4	26.1	Unloader LH L200	PSID #31	3, 4, 5, 6	A52.J1:8	
Low Wip Spd1 Mo22	PSID #184	3, 4, 5, 6	A47.J1:3	34.1	Unloader RH L199	PSID #32	3, 4, 5, 6	A52.J1:21	18.2
Lower Stop Lamps	PSID #153	3, 4, 6	A50.J1:6	12.1	Up Def Wtr Pmp MO6	PSID #173	4, 6	A47.J1:20	18.1
Lower Washer pmp	PSID #181	4, 6	A46.J1:3	34.1	Upper Brk Lamp	PSID #43	3, 4, 6	A51.J1:6	26.2
Lower Washer SW1	PSID #188	3, 4	A44.J1:9	34.1	Upper Def Fan MO5	PSID #33	4, 6	A46.J1:7	18.1
Lower Wip Int SW1	PSID #183	3, 4	A42.J1:4	34.1	Upper Wash Pmp MO18	PSID #189	4, 6	A46.J1:4	34.1
Lugg Lock Sol SO19	PSID #155	3, 4, 6	A42.J1:13	33.1	Upper Wash SW6	PSID #190	3, 4	A42.J1:19	34.1
Lugg Lock SW18	PSID #156	3, 4	A46.J1:10	33.1	Upper Wiper Int SW5	PSID #191	3, 4	A42.J1:20	34.1
Lugg Unlk SW18	PSID #159	3, 4	A46.J1:11	33.1	Upper Wiper Mot MO21	PSID #193	3, 4, 5, 6	A46.J1:2	34.1
Lugg unlock Sol SO18	PSID #158	3, 4, 6	A42.J1:16	33.1	Upper Wiper SW5	PSID #192	3, 4	A42.J1:21	34.1
Non-Smoking Lt L2	PSID #160	3, 4, 6	A42.J1:11	11.1	WakeUp Relay R17-R19	SID #30	4, 5, 6	A36.JA:15	3.3
OutDoor Sens SE20	PSID #161	3, 4, 5	A54.J1:14	18.1	Watch Step Lts L1	PSID #118	3, 4, 5, 6	A43.J1:13	9.1
P Rack Fan LH MO10	PSID #19	4, 6	A54.J1:1	18.2	WCL Lower Door Sens	PSID #175	3, 4	A53.J1:12	36.1
P Rack Fan RH MO11	PSID #20	4, 6	A54.J1:2	18.2	WCL Pump Rly L207	PSID #176	3, 4, 6	A53.J1:5	36.1
P Rack Fan Sw SW27	PSID #21	3, 4	A41.J1:20	18.2	WCLDor Sig to USonic	SID #24	3, 4, 6	A53.J1:7	36.1
P Rack Rfg sol SO10	PSID #22	3, 4, 6	A53.J1:20	18.2	WCLSlid Door Lt L206	SID #33	3, 4, 5, 6	A50.J1:1	36.1
Park brake Sens Se18	PSID #162	3, 4	A36.JB:9		ZF Trans Inh Sig A22	SID #26	3, 4, 5, 6	A53.J1:2	15.2
Park brake Sol SO17	PSID #163	4, 6	A42.J1:30	32.1					
Pass Heat Sol SO13	PSID #24	3, 4, 6	A54.J1:8	18.2					
Pass On_Off Sig R26	SID #29	3, 4, 5, 6	A54.J1:21	18.2					
Pass Rfg Sol SO11	PSID #23	3, 4, 5, 6	A54.J1:3	18.2					
Pass. Wtr pump MO12	PSID #17	3, 4, 6	A54.J1:4	18.2					
Read Lts Rly R14	PSID #113	3, 4, 5, 6	A49.J1:15	22.1					
Read Lts SW26	PSID #114	3, 4	A41.J1:10	22.1					
Rear CutOut Sw82	PSID #18	3, 4	A36.JB:21	3.2					
Rear Flsh LH L71 L75	PSID #131	3, 4, 6	A51.J1:21	26.2					
Rear Flsh RH L73 L76	PSID #132	3, 4, 6	A51.J1:3						
Rear High Buoy Sol	PSID #197	4, 6	A41.J1:30	32.1					
Retarder signal	PSID #164	3, 4	A50.J1:12	12.1					
RH Corner Light L98	PSID #121	3, 4, 5, 6	A48.J1:5	26.3					
RH Docking Light L94	PSID #123	3, 4, 5, 6	A51.J1:5	26.3					
Rr Clearance lights	PSID #151	3, 4, 6	A50.J1:4	26.2					
Rr Start enable SW58	PSID #57	3, 4	A53.J1:10	3.2					
Rr Start SW59	PSID #59	3, 4	A53.J1:11	3.2					
Ser Brake Trans A1	SID #49	3, 4, 6	A51.J1:1	15.1					