

CIRCUITNUMBERLISTING

CircuitID	Description	CircuitID	Description	CircuitID	Description	CircuitID	Description
2	DoorUnlockSig	0Lav2	GndAisleLamps	12MEM	SOUND_SYSTEM	17	UpperWasherSwSignal
2B	CondSndSpdSig	0Lav3	GndEmergencyLampsRH	12SS	Power_Harness	18	Wip.WasherLevel
3	DoorLatchSig	0Lav4	GndAisleLampsLH	12SS1	SOUND_SYSTEM	19A	TagUnload
4A	HostessChimeSig	0P	Galley	12SS2	SOUND_SYSTEM	19B	TagUnload
4C	HostessChimeSig	0PR1	EntranceCeilingLtGnd	12VA	12vEqualizer	20	
5	UpperDefrostfan	0PR2	GndWatchYourStep	12VD1	12VDFrontWake-up	21	FlasherLHSig
6	GndWitnessSw24	0PR3	UpperDefrosterGnd	12VD3	12vRearwake-up	21A	FrontFlasher
7	GndDriverSensor	0R	GndPrimePump	12VD4	12vDDDR	21AA	FlashersRearLH
8	GndParkBrakeSol	0RA2	GndCoolantsensor	12VDCust	12VDCustomer	21B	CorneringLtsLH
9	EngCmpt.LtsSwitch	0RA3	GndR1-R3	12VDF	12VDtoFrontVec	22	HazardSwSig
9A	EngineDoorOpenSig	0RB1	LavatoryGnd	12VI	12VItoCB10	23	FlasherRHSig
9B	EngineCmpt.Lt	0RB3	GndRearClearanceLts	12VI1	12VIofA44	23A	FrontFlasherRH
9H	9v reverse signal	0RB4	GndGalley	12VI2	MirrorPwr	23AA	FrontFlasherRHSide
0A	Evap.Gnd	0RB5	GndPre-Heat	12VI3	PwrOutletDrawer	23B	CorneringLtsRH
00A	GndElectronic	0RB6	RJBGndCustomer	12VI4	PwrOutletandCigarLighter	24	MasterRelayPwr
0B	EngineChassisGnd	0RC2	GndDriverCylinder	12VI5	12VItoVECR	24A	BoosterBlock
00B	ElectronicGndofMuxModules	0RC3	GndR23	12VI6	PwrtoModuleA50	24CO	PwrtoExcitationResistor
0C	GndStarter	0RC4	GndEntranceLights	12VI7		24D	24DtoCB6
0CD	SOUND_SYSTEM	0SA1	GndAlternator	12VI8		24DZ	ZFTransmission
0CE	ChassisGndtoA47A48	0SA2	GndAlternator	12VI9	TireMonitoringPwr	24E	24VItoCB1
00D	RJBajarSignal	0SS	Parcel_Rack_Pwr	12VICust	12VICustomer	24FPS	
0EV1	GndCondensor	0SS1	SOUND_SYSTEM	12VIF	12VItoFrontVec	24GA	Galley
0EV2	GndHvac	0SS2	SOUND_SYSTEM	12VISS1	SOUNDSYSTEM	24IZ	ZFTransmission
0EV3	GndPRackLH	0SS3	SOUND_SYSTEM	12VISS2	SOUND_SYSTEM	24ND	
0EV6	RHP-RackMotorGnd	0SS4	SOUND_SYSTEM	12VISS3	SOUND_SYSTEM	24P	
0F	FJBDoorOpenSig	0V	LuggageDoorOpenSig	12VISS4	SOUND_SYSTEM	24PV	Galley
0FA1	GndofAccessoires	0VE	EqualizerGnd	12VISS5	SOUND_SYSTEM	24PVA	Galley
0FA4	GndPwrOutlet	0W	WCLGnd	12VIZF	ZFsterringControl	24SS	Power_Harness
0FB1	E-RideGnd	0WC	WCLRemoteCtrl	12W	DoorUnlockSol	24SS1	SOUND_SYSTEM
0FB2	GndSw28	0Y	GndChassistoABSModule	12WA	DoorFullOpenSig	24SS2	SOUND_SYSTEM
0FB3	GndMasterId	10	LuggageCmpt.LtsPwr	12WUp1	12VWUptoA48	24SS11	SOUND_SYSTEM
0FC1	left/right_luggage_door_lock	10A	LuggageCmpt.LtsPwr	12Wup1	12WUpFront	24SS12	SOUND_SYSTEM
0FC4	ElectricalHorn	10R	LuggageDoorOpenSig	12Wup2	12WUptoDash	24SS13	SOUND_SYSTEM
0FE	Gnd	11		12WUp5	PwrtoModuleA51	24SS21	SOUND_SYSTEM
0FE1	Gnd	12A	12VDtoR3	13	SignalToPre-heatrelay	24SS22	SOUND_SYSTEM
0FE2	Gnd	12B	12VDtoCB4	14A	FlushingPumpSig	24VA	24vEquitlizer
0G	GndofA54	12CD	SOUND_SYSTEM	15	UpperWipInt.Signal	24VD	24VDEng.StartSw83
0K	AirDryer	12DZ	ZFTransmission	15A	UpperWip.1StSpdSig	24VD1	24VDDriverLiq
0Lav	GndReadingLamps	12F	12VDto12PostRJB	16	SpeedSignal	24VD2	24VDtoRearVec
0Lav1	GndDirectLights	12H	DestinationSignPower	16A	UpperWasherPump	24VD3	24VDofCECM

CIRCUITNUMBERLISTING

CircuitID	Description	CircuitID	Description	CircuitID	Description	CircuitID	Description
24VD4	24VDFrontWake-up	32D		53E	LowerWiper1stSpd	70D	HatRackLighting
24VD5	24VDtoPre-Heat	32EE	UpperWiperMotor	53F	LowerWasherPump	70E	GndHatRackLamps
24VD6	24VDPre-Heat	33	UnloaderLH	53G	LowerWip1stSpd	70F	GndHatRackLamps
24VD7	PassandPRackPwr	34	ParkBrakeReleaseSignal	53H	LowerWiper	70G	GndHatRackLamps
24VD8		35	EntranceDoorLights	54	TestSwitch	70H	GndHatRackLamps
24VDCust	24VDCustomer	35A	WatchYourStepLts	55	LuggageLockSol	70J	GndHatRackLamps
24VI	24VI	36	EngineBrake	55R	left/right_luggage_door_lock	71	UpperDefrostPump
24VI1	24VItoRearVec	38	DirectLights	57A	WaterPump	71A	DockingLtsLH
24VI2	24VI	38A	DirectLights	57G	Pre-HeatWebasto	72A	DockingLtsRH
24VI3	UpperWip.MotorPwr	38AA	DirectLightsRHRicon	57GA	Pre-HeattoWtrPmpRly	72B	SunVisorRHSig
24VI4	SunVisorsPwr	38BB	DirectLightsLH	57H	Pre-HeattoWtrPmpRly	72C	SunVisorSignal
24VI5	24VlofMuxmodules	38C	DirectLightSwSig	57L	Hi-Beam	72D	SunVisorRHSig
24VI6	PwrtoDefrostUnit	39	DriverLtSwSig	57R	HighBeamRH	72E	SunVisorRHSig
24VI7	LowerWiperPwr	39D	DriverLt	57Rtn	SignalRtnHeadLtsLH	72F	SunVisorSignal
24VI8	24VItoMux	40	WitnessGnd	58L	LowBeam	73	HostessChimePwr
24VI9	24VlofA54	41	24VCondensior	58R	LowBeamRH	73A	RearOccupiedSig
24VI9A	24VlofA54	41A	CondensiorPwr	58Rtn	HeadLampRHRtn	74	ReadingLampSig
24VI9B	24VlofA54	42A	12VCondensior	59	Hi/LowBeamSignal	74A	ReadingLampsRH
24VI10	24VI	43	PRackRH	60	FogsLtsSwSig	74B	ReadingLampsLH
24VI12	RJBLightPwr	43F	WitnessGndSw27	61	HeadLtsSig	74C	ReadingLamp
24VIA	Cut-outPneumaticAcc	43G	PassandPRackLiquidValve	62	FrontOccupiedLts	74D	ReadingLamps
24VICust	24VICustomer	43H	PassandPRackLiquidValve	62B	LavatoryLts	75	ReadingLampsRH
24VIF	24VItoFrontVEC	44	P-RackLHFan	63	ClearanceLts	75A	ReadingLampsLH
24WC	WCL24VIPower	45	UpperFanSig	63A	FrontClearanceLts	76	FuelLevelSig
24WUp1	24WUpFront	45A	PassengerHeatSig	63C	CtrlHeadBacklight	76C	FuelLowLevelSig
24Wup1	24WUpFront	46	FrontFlasherRh	64	EmergencyLampsSig	76P	PrimePumpSig
25	EngineRunSignal	46A	FrontMarkers	64A	Blinker	77	TransducerHi-Side
25A1	ExcitationSignal	47	DoorOpenSignal	65	FootDamper	77B	PassandPRackLiquidValve
25A2	ExcitationSignal	47A	DoorOpenSignal	65A	FootDamper	77BA	A/CClutch
26	DriverWdoPwr	48A	DoorOpenSol	65D	DriverCylinder	77C	PassandPRackLiquidValve
26A	DriverWdo	49	DoorCloseSignal	65P	Pass.Cylinder	78	StopLightSensorSig
26B	DriverWdo	49A	DoorCloseSol	66	MarkersSigSw2	79	DecelSignal
26C	DriverWdo	50	WitnessGndSig	67	EvaporatorPwr	80	StopLightSensorSig
27A	EmergencySwSig	51	WitnessGnd	67A	Condensior1stSpdSig	81	HeadLtCallSw1
28	AudibleRlySig	52B	PneumaticHorn	68	DashDamper	82A	CyclopeLamp
30A	Galley	53	LowerWip.Spd1Sig	68A	DashDamper	82Low	StopRearLowerLamp
31	UnloaderRH	53A	ElectricalHorn	69	ElectricalHorn	82Up	StopRearUpperLamps
31B	WiperIntermitentSignal	53B	LowerWip.Spd2Sig	70A	HatRackLighting	83	24vAccessories
31EE	UpperWipSpd.1	53C	LowerWip.IntSig	70B	HatRackLighting	84	StartSigSw83
32A	BackupLtandalarm	53D	LowerWip.WasherSwSig	70C	HatRackLighting	84A	StartSigSw83

CIRCUITNUMBERLISTING

CircuitID	Description	CircuitID	Description	CircuitID	Description	CircuitID	Description
84B	StartSigSw83	100D	IndirectLightPwr	133C	Galley	150	Transmission
85	24VIgnition	101	PwrtoStarter	134	Galley	151	GndtoEcm
85A	Ign-AccSignal	102A	Alternator	134A	Galley	151A	GndtoEcm
85B	Ign-AccSignal	103	LowBuoySig	134B	Galley	151B	GndtoEcm
85C	PositionNormalSw58	105	FogLtsLH	135	Transmission	151C	GndtoEcm
85D	RearStartPwr	106	FogLtRH	135A	HandLevelSig	151D	GndtoEcm
85E	RearStartSignal	111	Transmission	136	Transmission	152	Transmission
85F	EgnineStartPwrSw58	114	BacklightPwr	136A		154	Transmission
85G	Ign-AccSignal	114A	Backlight	136AA	ShifterSignal	155	Transmission
85X	24VIgn	114AA	ClusterKeyPadBacklight	136C	Galley	155Z	ZFTransmission
85Y	ABSTTLT	115	CoolantLevelSignal	137	ServiceBrakeSig	156A	12VltoABS
85Z	AbsTrailerWarningSignal	115A	WitnessPwr	137A	MirrorPwrSig	157B	
86	DefrostunitSpd	115W		137B	Mirrors	157D	ATCTTLT
86Rtn	GndDefrostUnit	116	DriverLiq	137C	Mirrors	159	Transmission
87	TrailerParkBrakeSig	116A	DriverLiq	137D	Mirrors	160	TagSignal
88	TransducerPwr	119	Transmission	137E	Mirrors	163	RetarderSig
89	DriverSensorSig	120	Transmission	137F	Mirrors	164	HandLevelSig
90H	24VltoEvap	122	DigitalClock	137H	Mirrors	166	WitnessSigSw16
90H1	Evaporator	123	FireAlarm	137J	Mirrors	170C	left/right_luggage_door_lock
91	ParkBrakeSig	124A		137K	Mirrors	170E	LuggageLockSwSig
91B	WitnessSigSw14	125		137L	Mirrors	170H	LuggageUnlockSol
92	TrailerParkBrakeSig	126A	KneelingUpSwSig	137M	Mirrors	170HR	left/right_luggage_door_lock
95		126B	KneelingDownSwSig	138	Transmission	171	LuggageUnlockSwSig
96		126C	ProximitySwSig	138A	ABSSensor	174	Transmission
99	Sw20Gnd	126D	ProximitySwPwr	139	Transmission	175	Transmission
00A1	GndElectronic	126E	Kneeling15PsiPress.Sw.	140	Transmission	175C	TagUnload
00B1	GndEng.Start	126F	KneelingDownSol	141	Transmission	176	Transmission
0G1	Galley	126G	KneelingUpSol	142	ABSSolenoid	177	Transmission
0V1	LuggageDoorOpenSig	126H	KneelingCtrl.Sol	143	ABSSensor	180	Transmission
0V2	LuggageDoorOpenSig	126J	KneelingHi-BuoySol	143A	ABSSensor	181	OutsideSensorSig
0V3	LuggageDoorOpenSig	126JR	GndKneeling	144	ABSSensor	197	FuelFilterSig
0Y2	GndChassisABSSol	126P	KneelingBuzzer	144A	ABSSensor	201	Headlampcleaningsignal
0Y3	GndSignal	127	Transmission	145	ABSSolenoid	202	headlampcleaningpump
0Z0	GndZFTrans.	127D	ChargerRlyGndSig	146	ABSSolenoid	225	LavatoryFan
0Z1	ZFTransmission	128		146A		231	Neutral
0Z2	ZFTransmission	128B	Pre-HeatTTLT	147	EtherSignal	231A	StarterRelay
100	IndirectLight	131	Transmission	147A	EtherSolenoid	231B	StarterRelay
100A	IndirectLight	133	Transmission	148	Transmission	240	
100B	IndirectLightLH	133A	Galley	149	Transmission	240A	PowertoEcm
100C	IndirectLightsSig	133B	Galley	149A	ABSSensor	240B	PowertoEcm

CIRCUITNUMBERLISTING

CircuitID	Description	CircuitID	Description	CircuitID	Description	CircuitID	Description
241		417	ThrottlePositionSignal	916	5VSensorPwr	CanH1	
241A	PowerToEcm	419	CheckEng.TTLT	917	ZFTransmission	CanHInA34	
241B	PowerToEcm	439	IgnitionToEcm	919	ZFTransmission	CanHOut	
253	Galley	509	StopEng.TTLT	925	ZFTransmission	CanH_ERide	
253A	Galley	510	FastIdleSignal	926	ZFTransmission	CanH_In	
254	Galley	510A	FastIdleSignal	930	ZFTransmission	CanL	CanLSignal
254F	Galley	524		932	ZFTransmission	CanL1	
255	Galley	524B	IdleValidationSig	952	GndSensorRtn	CanLInA34	
255B	Galley	528	OverrideSignal	953	GndEcm	CanLOut	
255BA	Galley	541	CruiseSetSig	953A	ThrottleInhibit	CanL_ERide	
260	WindowAjarSig	542	ParkBrakeSig	979		CanL_In	
290	GndFanClutch	544	CruiseEnableSig	979A		CanL_Out	
291	FanClutch	544A	CruiseOn-OffLed	ANT	SOUND_SYSTEM	Cd	ComputerSignals
292	FanClutch	545	CruiseResumeSig	AUX1	SOUND_SYSTEM	Cd1	ComputerSignals
293	FanClutchSwSig	555	FanClutchSignal	Aux1_Gnd	SOUND_SYSTEM	Cd1_Gnd	SOUND_SYSTEM
300	WCLTopLightSliding	556		Aux1_L+	SOUND_SYSTEM	Cd1_L+	SOUND_SYSTEM
301	WheelChairLiftSwitch	563	FanClutchSignal	Aux1_R+	SOUND_SYSTEM	Cd1_R+	SOUND_SYSTEM
302	WCLRicon	564	StarterLockout	AUX2	SOUND_SYSTEM	Cd2_Gnd	SOUND_SYSTEM
302A	WCLSlidingdoorSig	564B	OutZFDecelSig	Aux2_Gnd	SOUND_SYSTEM	Cd2_L+	SOUND_SYSTEM
303	WCLRicon	565	Eng.BrakeActive	Aux2_L+	SOUND_SYSTEM	Cd2_R+	SOUND_SYSTEM
304	WheelChairLift	583	EngineBrakeHiSig	Aux_R+	SOUND_SYSTEM	CD3_Gnd	SOUND_SYSTEM
305	ParkBrakeSol	700	ZFTransmission	B1A	DirectLighting	CD3_L+	SOUND_SYSTEM
305A	WCLUpperDoorSignal	701	ZFTransmission	B1B	DirectLighting	CD3_R+	SOUND_SYSTEM
306	WCLTopLights	705	ZFTransmission	B2A	DirectLighting	Chgr	BatteryChargerGnd
307		706	ZFTransmission	B2B	DirectLighting	Chgr_C	SOUND_SYSTEM
308	WCL	707	ZFTransmission	B3A	DirectLighting	Chgr_L	SOUND_SYSTEM
309	WCL	717	ZFTransmission	B3B	DirectLighting	Chgr_R	SOUND_SYSTEM
311		719	ZFTransmission	B4A	DirectLighting	Cts	ComputerSignals
313		723	ZFTransmission	B4B	DirectLighting	D1	UpperWiperMotor
341	PowerProtectionPanel	740	ZFTransmission	B5A	DirectLighting	DATA	SOUND_SYSTEM
342	FireExting.Gnd	761	ZFTransmission	B5B	DirectLighting	DBusH	DBusSignal
343	Fire-EngineStopTTL	770	ZFTransmission	B6A	DirectLighting	DBusL	DBusSignal
343A		900	J1587	B6B	DirectLighting	DSL+++	DRIVER_SPEAKERS
344	ExtinguisherSignal	901	J1587L	B7A	DirectLighting	DSL---	DRIVER_SPEAKERS
345	ManualSignal	902	ZFTransmission	B7B	DirectLighting	DSR+++	DRIVER_SPEAKERS
346	PowerSensors	905	TCISensorSig	BLK1	SOUND_SYSTEM	DSR---	DRIVER_SPEAKERS
347	FireSignal	906	ZFTransmission	BLK2	SOUND_SYSTEM	DVD1_Gnd	Sound_System
348	PowerManualSignal	907	ZFTransmission	Bref1	PassengerSensor	DVD1_L+	Sound_System
351	EngineShout-downSignal	910	L_SPEAKER_HARNESS	CAM2	SOUND_SYSTEM	DVD1_R+	Sound_System
352	OverrideSignal	911	EmergencyCutoutRlySignal	CanH	CanHSignal	Dvd2_Gnd	SOUND_SYSTEM

CIRCUITNUMBERLISTING

CircuitID	Description	CircuitID	Description	CircuitID	Description	CircuitID	Description
Dvd2_L+	SOUND_SYSTEM	N4	A42Adress	RF-	DISTRIBUTION_SOUND_HARNESS	spare17	SparesFr-to-RearHarness
Dvd2_R+	SOUND_SYSTEM	N5	A43Adress	RR+	DISTRIBUTION_SOUND_HARNESS	spare18	SparesFr-to-RearHarness
FAKE	L_SPEAKER_HARNESS	N6	A43Adress	RR-	SOUND_SYSTEM	spare19	SparesFr-to-RearHarness
FAKE1	R_SPEAKER_HARNESS	N7	A44Adress	RT	ZFTtransmission	spare20	SparesClearanceLts
GndA	ComputerSignals	N8	A44Adress	R_DRIVER	SOUND_SYSTEM	spare21	SparesClearanceLts
GndOA34		N9	A45Adress	Rts	ComputerSignals	spare22	SparesClearanceLts
GndOA37		N10	A45Adress	RTV	SOUND_SYSTEM	spare23	SparesClearanceLts
GRN1	SOUND_SYSTEM	N11	A46Adress	RxD	ComputerSignals	spare24	SparesClearanceLts
GRN2	SOUND_SYSTEM	N12	A46Adress	SHD1	SOUND_SYSTEM	spare25	SparesClearanceLts
H1_L+	SOUND_SYSTEM	N13	A47Adress	SHD2	SOUND_SYSTEM	spare26	SparesFrontHarness
H1_L-	SOUND_SYSTEM	N14	A47Adress	SHIELD	jack_3_5mm	spare27	SparesFrontHarness
H1_R+	SOUND_SYSTEM	N15	A48Adress	Shield		spare28	SparesFrontHarness
H1_R-	SOUND_SYSTEM	N16	A48Adress	SHLD	SOUND_SYSTEM	spare29	SparesFrontHarness
H2_L+	SOUND_SYSTEM	N17	A49Adress	SL13	L_SPEAKER_HARNESS	spare30	SparesFrontHarness
H2_L-	SOUND_SYSTEM	N18	A49Adress	SL24	L_SPEAKER_HARNESS	spare31	SparesFrontHarness
H2_R+	SOUND_SYSTEM	N19	A50Adress	SL35	L_SPEAKER_HARNESS	spare32	SparesFrontHarness
H2_R-	SOUND_SYSTEM	N20	A50Adress	SL46	L_SPEAKER_HARNESS	spare33	SparesFrontHarness
HOSTESS	SOUND_SYSTEM	N21	A51Adress	SL57	L_SPEAKER_HARNESS	spare34	SparesFrontHarness
IPJ1	Cluster	N22	A51Adress	SL68	L_SPEAKER_HARNESS	spare35	SparesFrontHarness
IPJ2	Cluster	N23	A52Adress	SL1012	L_SPEAKER_HARNESS	spare36	SparesFrontHarness
IPJ5	Cluster	N24	A52Adress	SL1113	L_SPEAKER_HARNESS	spare37	SparesFrontHarness
IPJ6	Cluster	N25	A53Adress	SL1214	L_SPEAKER_HARNESS	spare38	SparesFrontHarness
IPJ7	Cluster	N26	A53Adress	SL1315	L_SPEAKER_HARNESS	spare39	SparesDash
IPJ8	Cluster	N27	A54Adress	SL1416	L_SPEAKER_HARNESS	spare40	SparesDash
J1939H	J1939Signals	N28	A54Adress	sp52	EvaporatorEngageSig	spare41	SparesDash
J1939L	J1939Signals	N29	A36Adress	spare2	SparesFr-to-RearHarness	spare42	SparesDash
LF+	DISTRIBUTION_SOUND_HARNESS	NavSpk+++	Nav. Sound signal +	spare3	SparesFr-to-RearHarness	spare43	SparesDash
LF-	DISTRIBUTION_SOUND_HARNESS	NavSpk---	Nav. Sound signal -	spare4	SparesEvap.Harness	spare44	SparesDash
LR+	DISTRIBUTION_SOUND_HARNESS	OR	TagUnloadValve	spare5	SparesEvap.Harness	spare45	SparesFr-to-RearHarness
LR-	DISTRIBUTION_SOUND_HARNESS	ORB4	TagUnload	spare6	SparesEvap.Harness	spare46	SparesFr-to-RearHarness
LX5	ClusterKeyPad	PwrOA34		spare7	SparesEvap.Harness	spare49	SparesEngineCradle
LX6	ClusterKeyPad	PwrOA37		spare8	SparesEvap.Harness	spare50	SparesEngineCradle
LX7	ClusterKeyPad	Rem1	Remote Control Navigator	spare9	SparesEvap.Harness	spare51	SparesEngineCradle
LX16	ClusterKeyPad	Rem2	Remote Control Navigator	spare10	SparesInteriorLtsHarness	spare52	SparesEngineCradle
LX21	ClusterKeyPad	Rem3	Remote Control Navigator	spare11	SparesInteriorLtsHarness	spare53	SparesEngineCradle
L_DRIVER	SOUND_SYSTEM	RED	jack_3_5mm	spare12	SparesInteriorHarness	spare54	SparesEngineCradle
MUTE	SOUND_SYSTEM	RED1	SOUND_SYSTEM	spare13	SparesInteriorHarness	spare55	SparesEnginesAccessories
N1	A41Adress	RED2	SOUND_SYSTEM	spare14	SparesInteriorHarness	spare56	SparesEnginesAccessories
N2	A41Adress	Ref1	GndPassengerSensor	spare15	SparesInteriorHarness	spare57	SparesEnginesAccessories
N3	A42Adress	RF+	DISTRIBUTION_SOUND	spare16	SparesInteriorHarness	spare58	SparesEnginesAccessories

CIRCUITNUMBERLISTING

CircuitID	Description	CircuitID	Description
spare59	SparesEnginesAccessories	WC6	WCLRemoteCtrl
spare60	SparesEnginesAccessories	WC7	WCL
spare61	SparesEnginesAccessories	WHITE	jack_3_5mm
spare62	spareABSHarness	WHT1	SOUND_SYSTEM
spare63	spareABSHarness	WHT2	SOUND_SYSTEM
spare64	SapreTransmission	Y1A	DirectLighting
spare65	SparesTransmission	Y1B	DirectLighting
spare68	SPARE_SOUND_SYSTEM	Y2A	DirectLighting
spWcl1	SpareWCL	Y2B	DirectLighting
spWcl2	SpareWCL	Y3A	DirectLighting
SR13	FR_SPEAKER_HARNESS_	Y3B	DirectLighting
SR24	FR_SPEAKER_HARNESS_	Y4A	DirectLighting
SR35	FR_SPEAKER_HARNESS_	Y4B	DirectLighting
SR46	FR_SPEAKER_HARNESS_	Y5A	DirectLighting
SR57	FR_SPEAKER_HARNESS_	Y5B	DirectLighting
SR68	FR_SPEAKER_HARNESS_	Y6A	DirectLighting
SR911	FR_SPEAKER_HARNESS_	Y6B	DirectLighting
SR1012	R_SPEAKER_HARNESS_WCL	Y7A	DirectLighting
SR1113	R_SPEAKER_HARNESS_WCL	Y7B	DirectLighting
SR1214	R_SPEAKER_HARNESS_WCL	zf1	SteeringCtrl
SR1315	R_SPEAKER_HARNESS_WCL	zf2	SteeringCtrl
SR1416	R_SPEAKER_HARNESS_WCL		
Sub1+	SUBWOOFER_HARNESS		
Sub1-	SUBWOOFER_HARNESS		
Sub2+	SUBWOOFER_HARNESS		
Sub2-	SUBWOOFER_HARNESS		
SW	ZFTransmission		
TRIG1	SOUND_SYSTEM		
TRIG2	SOUND_SYSTEM		
TRIG3	SOUND_SYSTEM		
TRIG4	SOUND_SYSTEM		
TRIG5	SOUND_SYSTEM		
TxD	ComputerSignals		
VCAM	Camera video signal		
VHSRL+	Sound_System		
VHS_Gnd	Sound_System		
VHS_RL+	Sound_System		
WC2	WCLRemoteCtrl		
WC3	WCLRemoteCtrl		
WC4	WCLRemoteCtrl		