

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
ZF_Can2_L	ZFTransmission	TRIG5	SOUND_SYSTEM	spare46	SparesFr-to-RearHarness
ZF_Can2_H	ZFTransmission	TRIG4	SOUND_SYSTEM	spare45	SparesFr-to-RearHarness
ZF_Can1_L	ZFTransmission	TRIG3	SOUND_SYSTEM	spare44	SparesDash
ZF_Can1_H	ZFTransmission	TRIG2	SOUND_SYSTEM	spare43	SparesDash
zf2	SteeringCtrl	TRIG1	SOUND_SYSTEM	spare42	SparesDash
zf1	SteeringCtrl	TEST1		spare41	SparesDash
YloRR		TEST		spare40	SparesDash
YloRL		SW	ZFTransmission	spare39	SparesDash
YloFR		Sub2-	SUBWOOFER_HARNESS	spare38	SparesFrontHarness
Y7B	DirectLighting	Sub2+	SUBWOOFER_HARNESS	spare37	SparesFrontHarness
Y7A	DirectLighting	Sub1-	SUBWOOFER_HARNESS	spare36	SparesFrontHarness
Y6B	DirectLighting	Sub1+	SUBWOOFER_HARNESS	spare35	SparesFrontHarness
Y6A	DirectLighting	SR1416	R_SPEAKER_HARNESS_WCL	spare34	SparesFrontHarness
Y5B	DirectLighting	SR1315	R_SPEAKER_HARNESS_WCL	spare33	SparesFrontHarness
Y5A	DirectLighting	SR1214	R_SPEAKER_HARNESS_WCL	spare32	SparesFrontHarness
Y4B	DirectLighting	SR1113	R_SPEAKER_HARNESS_WCL	spare31	SparesFrontHarness
Y4A	DirectLighting	SR1012	R_SPEAKER_HARNESS_WCL	spare30	SparesFrontHarness
Y3B	DirectLighting	SR911	R_SPEAKER_HARNESS_WCL	spare29	
Y3A	DirectLighting	SR68	FR_SPEAKER_HARNESS_	spare28	SparesFrontHarness
Y2B	DirectLighting	SR57	FR_SPEAKER_HARNESS_	spare27	SparesFrontHarness
Y2A	DirectLighting	SR46	FR_SPEAKER_HARNESS_	spare26	SparesFrontHarness
Y1B	DirectLighting	SR35	FR_SPEAKER_HARNESS_	spare25	SparesClearanceLts
Y1A	DirectLighting	SR24	FR_SPEAKER_HARNESS_	spare24	SparesClearanceLts
XM_R-		SR13	FR_SPEAKER_HARNESS_	spare23	SparesClearanceLts
XM_R+		spWcl2	SpareWCL	spare22	SparesClearanceLts
XM_L-		spWcl1	SpareWCL	spare21	SparesClearanceLts
XM_L+		spare65	SparesTransmission	spare20	SparesClearanceLts
WhtRR		spare64	SapreTransmission	spare19	
WhtRL		spare63	spareABSHarness	spare18	
WhtFR		spare62	spareABSHarness	spare17	
WHT2	SOUND_SYSTEM	spare61	SparesEnginesAccessories	spare16	SparesInteriorHarness
WHT1	SOUND_SYSTEM	spare60	SparesEnginesAccessories	spare15	SparesInteriorHarness
WHITE	jack_3_5mm	spare59	SparesEnginesAccessories	spare14	SparesInteriorHarness
WC7	WCL	spare58	SparesEnginesAccessories	spare13	SparesInteriorHarness
WC6	WCLRemoteCtrl	spare57	SparesEnginesAccessories	spare12	SparesInteriorHarness
WC4	WCLRemoteCtrl	spare56		spare11	SparesInteriorLtsHarness
WC3	WCLRemoteCtrl	spare55		spare10	SparesInteriorLtsHarness
WC2	WCLRemoteCtrl	spare54	SparesEngineCradle	spare9	SparesEvap.Harness
VI14		spare53	SparesEngineCradle	spare8	SparesEvap.Harness
UP	Flip_Down_Screen	spare52	SparesEngineCradle	spare7	SparesEvap.Harness
TxD	ComputerSignals	spare51	SparesEngineCradle	spare6	SparesEvap.Harness
TX		spare50	SparesEngineCradle	spare5	SparesEvap.Harness
TRIG SAT		spare49	SparesEngineCradle	spare4	SparesEvap.Harness

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
spare3		PANA_LR-		LX21	ClusterKeyPad
spare2	SparesFr-to-RearHarness	PANA_L+		LX16	ClusterKeyPad
sp52	EvaporatorEngageSig	ORB4	TagUnload	LX7	ClusterKeyPad
SL1416	L_SPEAKER_HARNESS	ORA2	GndR25etR11	LX6	ClusterKeyPad
SL1315	L_SPEAKER_HARNESS	OR	TagUnloadValve	LX5	ClusterKeyPad
SL1214	L_SPEAKER_HARNESS	OPR1		LR-	SOUND_SYSTEM
SL1113	L_SPEAKER_HARNESS	OFC1		LR+	PSRCEL_RACK_SOUND_HARNESS
SL1012	L_SPEAKER_HARNESS	OFB3		LF-	SOUND_SYSTEM
SL68	L_SPEAKER_HARNESS	NavSpk---	GPS	LF+	PSRCEL_RACK_SOUND_HARNESS
SL57	L_SPEAKER_HARNESS	NavSpk+++	GPS	L+	
SL46	L_SPEAKER_HARNESS	N31	addressA55	J1939L	J1939Signals
SL35	L_SPEAKER_HARNESS	N30	addressA55	J1939H	J1939Signals
SL24	L_SPEAKER_HARNESS	N29	A36Address	IPOD	IPOD_OPTION
SL13	L_SPEAKER_HARNESS	N28	A54Address	IPJ8	Cluster
SHLD2		N27	A54Address	IPJ7	Cluster
SHLD	SOUND_SYSTEM	N26	A53Address	IPJ6	Cluster
SHIELD	jack_3_5mm	N25	A53Address	IPJ5	Cluster
SHD2		N24	A52Address	IPJ2	Cluster
SHD1	SOUND_SYSTEM	N23	A52Address	IPJ1	Cluster
SE1		N22	A51Address	HOSTESS	SOUND_SYSTEM
SAT		N21	A51Address	H2_RL-	
RxD	ComputerSignals	N20	A50Address	H2_R-	SOUND_SYSTEM
R_DRIVER	SOUND_SYSTEM	N19	A50Address	H2_R+	SOUND_SYSTEM
RX		N18	A49Address	H2_L-	SOUND_SYSTEM
RTV	SOUND_SYSTEM	N17	A49Address	H2_L+	SOUND_SYSTEM
Rts	ComputerSignals	N16	A48Address	H1_R-	SOUND_SYSTEM
RT	ZFTransmission	N15	A48Address	H1_R+	SOUND_SYSTEM
RR-	SOUND_SYSTEM	N14	A47Address	H1_L-	SOUND_SYSTEM
RR+	SOUND_SYSTEM	N13	A47Address	H1_L+	SOUND_SYSTEM
RR		N12	A46Address	GRN2	SOUND_SYSTEM
RF-	SOUND_SYSTEM	N11	A46Address	GRN1	SOUND_SYSTEM
RF+	SOUND_SYSTEM	N10	A45Address	GRN	
Rem3	GPS	N9	A45Address	GndOA37	
Rem2	GPS	N8	A44Address	GndOA34	
Rem1	GPS	N7	A44Address	GndA	ComputerSignals
Ref1	GndPassengerSensor	N6	A43Address	fuilf	j
RED2	SOUND_SYSTEM	N5	A43Address	FLIP	Flip_Down_Screen
RED1	SOUND_SYSTEM	N4	A42Address	FAKE1	R_SPEAKER_HARNESS
RED	jack_3_5mm	N3	A42Address	FAKE	L_SPEAKER_HARNESS
R+		N2	A41Address	Engine_Can-	EngineCan
PwrOA37		N1	A41Address	Engine_Can+	EngineCan
PwrOA34		Mute	GPS	Dvd2_R+	SOUND_SYSTEM
PANA R+		L DRIVER	SOUND SYSTEM	Dvd2 L+	SOUND SYSTEM

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
Dvd2_Gnd	SOUND_SYSTEM	CanH1		911	EmergencyCutoutRlySignal
DVD1_RL-		CanH	CanHSigal	910	L_SPEAKER_HARNESS
DVD1_R+	Sound_System	CAN2-L	EngineCan2	907	ZFTransmission
DVD1_L+	Sound_System	CAN2-H	EngineCan2	906	ZFTransmission
DVD1_Gnd	Sound_System	Bref1	PassengerSensor	902	ZFTransmission
DSR---	DRIVER_SPEAKERS	BikRR		901	900-901
DSR+++	GPS	BikRL		900	900-901
DSL---	GPS	BikFR		770	ZFTransmission
DSL+++	GPS	BLK2	SOUND_SYSTEM	740	ZFTransmission
DOWN	Flip_Down_Screen	BLK1	SOUND_SYSTEM	723	ZFTransmission
DBusL		blabla		719	ZFTransmission
DBusH	DBusSignal	B7B	DirectLighting	718	ZFTransmission
DATA	SOUND_SYSTEM	B7A	DirectLighting	709	ZFTransmission
D1	UpperWiperMotor	B6B	DirectLighting	708	ZFTransmission
Cts	ComputerSignals	B6A	DirectLighting	707	ZFTransmission
com		B5B	DirectLighting	706	ZFTransmission
COM		B5A	DirectLighting	705A	ZFTransmission
Chgr_R	SOUND_SYSTEM	B4B	DirectLighting	705	ZFTransmission
Chgr_L	SOUND_SYSTEM	B4A	DirectLighting	617	ABStrailersolenoid
Chgr_C	SOUND_SYSTEM	B3B	DirectLighting	616	ABStrailersolenoid
Chgr	BatteryChargerGnd	B3A	DirectLighting	615	ABStrailersolenoid
CD3_R+	SOUND_SYSTEM	B2B	DirectLighting	614A	ABSSteeringSolenoid
CD3_L+	SOUND_SYSTEM	B2A	DirectLighting	614	ABSSteeringSolenoid
CD3_Gnd	SOUND_SYSTEM	B1B	DirectLighting	613	AbsTagSolenoid
Cd2_R+	SOUND_SYSTEM	B1A	DirectLighting	612	AbsTagSolenoid
Cd2_L+	SOUND_SYSTEM	Aux_R+	SOUND_SYSTEM	611	AbsTagSolenoid
Cd2_Gnd	SOUND_SYSTEM	Aux2_L+	SOUND_SYSTEM	610	ABSPressuresensor
Cd1_R+	SOUND_SYSTEM	Aux2_Gnd	SOUND_SYSTEM	609	ABSPressuresensor
Cd1_L+	SOUND_SYSTEM	Aux1_R+	SOUND_SYSTEM	608	ABSPressuresensor
Cd1_Gnd	SOUND_SYSTEM	Aux1_L+	SOUND_SYSTEM	607	ABSPressuresensor
Cd1	ComputerSignals	Aux1_Gnd	SOUND_SYSTEM	606	ABSPressuresensor
Cd	ComputerSignals	ANT	SOUND_SYSTEM	605	ABSSteering&Yawsensor
CanL_Out		979A	EngineBrakeMedSig	604	ABSSteering&Yawsensor
CanL_In		979	EngineBrakeA	603	ABSSteering&Yawsensor
CanL_ERide		953	Electronic_ground_DDEC_VI	602	ABSSteering&Yawsensor
CanLOut		952	GndSensorRtn	601A	ABSSensor
CanLinA34		932	ZFTransmission	601	ABSSensor
CanL1		930	ZFTransmission	600A	ABSSensor
CanL	CanLSignal	926	ZFTransmission	600	ABSSensor
CanH_In		925	ZFTransmission	583	EngineBrakeHiSig
CanH_ERide		919	ZFTransmission	564B	OutZFDecelSig
CanHOut		917	ZFTransmission	563	FanClutchSignal
CanHInA34		916	5VSensorPwr	555	FanClutchSignal

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
545	CruiseResumeSig	306	WCLTopLights	177	Transmission
544A	CruiseOn-OffLed	305A	WCLUpperDoorSignal	176	Transmission
544	CruiseOn_OffSignal	305	ParkBrakeSol	175C	TagUnload
541	CruiseSetSig	304	WheelChairLift	175	Transmission
528	OverrideSignal	303	WCLRicon	174	Transmission
524C	IdleValidationSig	302A	WCLSlidingdoorSig	171	LuggageUnlockSwSig
524B	IdleValidationSig	302	WCLRicon	170HR	left/right_luggage_door_lock
517	EngineBrakeHiSig	301	WheelChairLiftSwitch	170H	LuggageUnlockSol
516	EngineBrakeLowSig	300	WCLTopLightSliding	170E	LuggageLockSwSig
515	GroundPreheaterRelay	293	FanClutchSwSig	170C	left/right_luggage_door_lock
514	DPFSensor	292	FanClutch	166	WitnessSigSw16
513	DPFSensor	291	FanClutch	164	HandLevelSig
512	DPFSensor	290	GndFanClutch	163B	RetarderSig
511	DPFSensor	260	WindowAjarSig	163A	
510	FastIdleSignal	255BA	Galley	163	RetarderEnable
508	DPFSensor	255B	Galley	160	TagSignal
507	DPFSensor	255	Galley	159	Transmission
506	DPFSensor	254F	Galley	157D	ATCTTLT
505	DPFSensor	254	Galley	156A	12VtoABS
503	DPF_Malfunction	253j		155Z	ZFTTransmission
502	IVSOut	253A	Galley	155	Transmission
501	Control_Ground_Relay	253	Galley	154	Transmission
500	Ground/Supply_Detroit/Volvo	241C	WaterInFuelHeater	152	Transmission
485B		241B	PowertoEcm	151D	GndtoEcm
485A		241A	PowertoEcm	151C	GndtoEcm
439		241		151B	GndtoEcm
417	ThrottlePositionSignal	240B	PowertoEcm	151A	GndtoEcm
352	OverrideSignal	240A	PowertoEcm	151	GndtoEcm
351	EngineShout-downSignal	240		150	Transmission
348	PowerManualSignal	231B	StarterRelay	149A	ABSSensor
347	FireSignal	231A	CrankSignal	149	Transmission
346	PowerSensors	231	Neutral	148	Transmission
345	ManualSignal	225	LavatoryFan	147A	EtherSolenoid
344	ExtinguisherSignal	202	headlampcleaningpump	147	EtherSignal
343A		201	Headlampcleaningsignal	146A	ZFTTransmission
343	Fire-EngineStopTTL	197	FuelFilterSig	146	ABSSolenoid
342	FireExting.Gnd	190	TransPresetSig	145	ABSSolenoid
341	PowerProtectionPanel	185	TransmissionInhibitSig	144A	ABSSensor
313		184	CustomerC	144	ABSSensor
311		183	SunVisor	143A	ABSSensor
309	WCL	182	SunVisor	143	ABSSensor
308	WCL	181	OutsideSensorSig	142	ABSSolenoid
307		180	Transmission	141	Transmission

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
140	Transmission	126D	ProximitySwPwr	99	Sw20Gnd
139	Transmission	126C	ProximitySwSig	96	CorneringLTswSig
138A	ABSSensor	126B	KneelingDownSwSig	95	DockingLTswSig
138	Transmission	126A	KneelingUpSwSig	92	TrailerParkBrakeSig
137M	Mirrors	125		91B	WitnessSigSw14
137L	Mirrors	124A		91	ParkBrakeSig
137K	Mirrors	123	FireAlarm	90H1	Evaporator
137J	Mirrors	122	DigitalClock	90H	24VltoEvap
137H	Mirrors	121	SteeringOutSignal	89	DriverSensorSig
137F	Mirrors	120	Transmission	88	TransducerPwr
137E	Mirrors	119	Transmission	87	
137D	Mirrors	116A	DriverLiq	86Rtn	GndDefrostUnit
137C	Mirrors	116	DriverLiq	86	DefrostunitSpd
137B	Mirrors	115W		85Z	AbsTrailerWarningSignal
137A	MirrorPwrSig	115A	WitnessPwr	85Y	
137		115	CoolantLevelSignal	85X	24Vlgn
136C	Galley	114AA	ClusterKeyPadBacklight	85G	lgn-AccSignal
136AA	ShifterSignal	114A	Backlight	85F	24Vlgnition
136A		114	BacklightPwr	85E	RearStartSignal
136	Transmission	111	Transmission	85D	RearStartPwr
135A	HandLevelSig	106	FogLtrH	85C	PositionNormalSw58
135	Transmission	105	FogLtsLH	85B	lgn-AccSignal
134B	Galley	103	LowBuoySig	85A	lgn-AccSignal
134A	Galley	102A	Alternator	85	24Vlgnition
134	Galley	102	Alternator	84B	StartSigSw83
133C	Galley	101	PwrtoStarter	84A	StartSigSw83
133B	Galley	100D	IndirectLightPwr	84	StartSigSw83
133A	Galley	100C	IndirectLightsSig	83	24v_Accessories
133	Transmission	100B	IndirectLightLH	82Up	
131	Transmission	100A	IndirectLight	82UP	
130		100	IndirectLight	82Low	StopRearLowerLamp
129		0Z2	ZFTtransmission	82A	CyclopeLamp
128B	Pre-HeatTTLT	0Z1	ZFTtransmission	81	HeadLtCallSw1
128		0Z0	GndZFTrans.	80	BrakeRedundant
127D	ChargerRlyGndSig	0Y3	GndChassisABSSol	79A	DecelSignal
127	Transmission	0Y2	GndChassisABSSol	79	DecelSignal
126P	KneelingBuzzer	0V3	LuggageDoorOpenSig	78	ServiceBrakeSignal
126JR	GndKneeling	0V2	LuggageDoorOpenSig	77C	PassandPRackLiquidValve
126J	KneelingHi-BuoySol	0V1	LuggageDoorOpenSig	77BA	
126H	KneelingCtrl.Sol	0G1	Galley	77B	PassandPRackLiquidValve
126G	KneelingUpSol	00B1	GndEng.Start	77	TransducerHi-Side
126F	KneelingDownSol	0B1	GndEnginePreheater	76P	PrimePumpSig
126E	Kneelina15PsiPress.Sw.	00A1	GndElectronic	76C	FuelLowLevelSig

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
76	FuelLevelSig	62	FrontOccupiedLts	42A	12VCondensor
75A	ReadingLampsLH	61	HeadLtsSig	41A	CondensorPwr
75	ReadingLampsRH	60	FogsLtsSwSig	41	24VCondensor
74D	ReadingLamps	59	Hi/LowBeamSignal	40	WitnessGnd
74C	ReadingLamp	58Rtn	HeadLampRHRtn	39D	DriverLt
74B	ReadingLampsLH	58R	LowBeamRH	39	DriverLtSwSig
74A	ReadingLampsRH	58L	LowBeam	38C	DirectLightSwSig
74	ReadingLampSig	57Rtn	SignalRtnHeadLtsLH	38BB	DirectLightsLH
73B	RearOccupiedSig	57R	HighBeamRH	38AA	DirectLightsRHRicon
73A	RearOccupiedSig	57L	Hi-Beam	38A	DirectLights
73	HostessChimePwr	57H	Pre-HeattoWtrPmpRly	38	DirectLights
72D	SunVisorRHSig	57GA	Pre-HeattoWtrPmpRly	35A	WatchYourStepLts
72C	SunVisorSignal	57G	Pre-HeatWebasto	35	EntranceDoorLights
72B	SunVisorRHSig	57A	WaterPump	34	ParkBrakeReleaseSignal
72A	DockingLtsRH	55R	left/right_luggage_door_lock	33	UnloaderLH
71A	DockingLtsLH	55	LuggageLockSol	32EE	UpperWiperMotor
71	UpperDefrostPump	54	TestSwitch	32D	
70J	GndHatRackLamps	53H	LowerWiper	32A	BackupLTandalarm
70H	GndHatRackLamps	53G	LowerWip1stSpd	31EE	UpperWipSpd.1
70G	GndHatRackLamps	53F	LowerWasherPump	31B	WiperIntermitentSignal
70F	GndHatRackLamps	53E	LowerWiper1stSpd	31	UnloaderRH
70E	GndHatRackLamps	53D	LowerWip.WasherSwSig	30A	Galley
70D	HatRackLighting	53C	LowerWip.IntSig	28	AudibleRlySig
70C	HatRackLighting	53B	PneumaticHorn	27A	EmergencySwSig
70B	HatRackLighting	53A	ElectricalHorn	26B	DriverWdo
70A	HatRackLighting	53	LowerWip.Spd1Sig	26A	DriverWdo
69A	HornTogglesig	52B	PneumaticHorn	26	DriverWdoPwr
69	ElectricalHorn	51	WitnessGnd	25A2	ExcitationSignal
68A	DashDamper	50	WitnessGndSig	25A1	ExcitationSignal
68	DashDamper	49A	DoorCloseSol	25	EngineRunSignal
67A	Condensor1stSpdSig	49	DoorCloseSignal	24Wup1	24WUpFront
67	EvaporatorPwr	48A	DoorOpenSol	24WUp1	24WUpFront
66	MarkersSigSw2	47A	DoorOpenSignal	24WC	WCL24VIPower
65P	Pass.Cylinder	47	DoorOpenSignal	24VIF	24VltoFrontVEC
65D	DriverCylinder	46A	FrontMarkers	24VICust	24VICustomer
65A	FootDamper	46	FrontFlasherRh	24VIA	Cut-outPneumaticAcc
65	FootDamper	45A	PassengerHeatSig	24VI13	24VI
64A	Blinker	45	UpperFanSig	24VI12	RJBLightPwr
64	EmergencyLampsSig	44	P-RackLHFan	24VI10	24VI
63C	CtrlHeadBacklight	43H	PassandPRackLiquidValve	24VI9B	24VlOfA54
63A	FrontClearanceLts	43G	PassandPRackLiquidValve	24VI9A	24VlOfA54
63	ClearanceLts	43F	WitnessGndSw27	24VI9	24VlOfA54
62B		43	PRackRH	24VI8	24VltoMux

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
24V17	LowerWiperPwr	24	MasterRelayPwr	12V14	PwrOutletandCigarLighter
24V16	PwrtoDefrostUnit	23B	CorneringLtsRH	12V13	PwrOutletDrawer
24V15	24VlofMuxmodules	23AA	FrontFlasherRHSide	12V11	12VlofA44
24V14	SunVisorsPwr	23A	FrontFlasherRH	12VI	12VltoCB10
24V13	UpperWip.MotorPwr	23	FlasherRHSig	12VDF	12VDtoFrontVec
24V12	24VI	22	HazardSwSig	12VDCust	12VDCustomer
24V11	24VltoRearVec	21B	CorneringLtsLH	12VD4	12vEngineEcu
24VI	24VI	21AA		12VD3	12vRearwake-up
24VDCust	24VDCustomer	21A	FrontFlasher	12VD2	12VD_CPC
24VD9	24VD	21	FlasherLHSig	12VD1	12VDFrontWake-up
24VD8		20		12VA	12vEqualizer
24VD7	PassandPRackPwr	19B	TagUnload	12SS2	SOUND_SYSTEM
24VD6	24VDPre-Heat	19A	TagUnload	12SS1	SOUND_SYSTEM
24VD5	24VDtoPre-Heat	18	Wip.WasherLevel	12SS	Power_Harness
24VD4	24VDFrontWake-up	17	UpperWasherSwSignal	12MEM	SOUND_SYSTEM
24VD3	24VDofCECM	16A	UpperWasherPump	12H	DestinationSignPower
24VD2	24VDtoRearVec	16	SpeedSignal	12F	12VDto12PostRJB
24VD1	24VDInsideDoorOpen	15A	UpperWip.1StSpdSig	12Ecu	12vEngineEcu
24VD	24VDEng.StartSw83	15	UpperWipInt.Signal	12CPC	12vWupCPC
24VB2	24VEnginePreheater	14A	FlushingPumpSig	12CD	SOUND_SYSTEM
24VB1	24VEnginePreheater	13	SignalToPre-heatrelay	12B	12VDtoCB4
24VB	24VEnginePreheater	12WUp5	PwrtoModuleA51	12A	12VDtoR3
24VA	24vEqualizer	12WUp2	12WUptoDash	11	
24SS22	SOUND_SYSTEM	12WUp1	12WUpFront	10R	LuggageDoorOpenSig
24SS21	SOUND_SYSTEM	12WUp1	12VWUptoA48	10A	LuggageCmpt.LtsPwr
24SS13	Flip_Down_Screen	12WA	DoorFullOpenSig	10	LuggageCmpt.LtsPwr
24SS12	SOUND_SYSTEM	12W	DoorUnlockSol	0Y	
24SS11	SOUND_SYSTEM	12VIZF	ZFsterringControl	0WC	WCLRemoteCtrl
24SS2	SOUND_SYSTEM	12VISS5		0W	WCLGnd
24SS1	SOUND_SYSTEM	12VISS4	SOUND_SYSTEM	0VE	EqualizerGnd
24SS	Power_Harness	12VISS3	SOUND_SYSTEM	0V	LuggageDoorOpenSig
24PVA		12VISS2	SOUND_SYSTEM	0ST	GndSterringMultifuntion
24PV		12VISS1	SOUND_SYSTEM	0SS4	SOUND_SYSTEM
24P		12VIM		0SS3	SOUND_SYSTEM
24ND		12VIF19		0SS2	
24IZ	ZFTransmission	12VIF	12VltoFrontVec	0SS1	SOUND_SYSTEM
24GA	Galley	12VICust	12VICustomer	0SS	Parcel_Rack_Pwr
24FPS		12VI10	MirrorPwr	0SA2	GndAlternator
24E	24VltoCB1	12VI9	TireMonitoringPwr	0SA1	GndAlternator
24DZ	ZFTransmission	12VI8		0RC4	GndEntranceLights
24D	24DtoCB6	12VI7		0RC3	GndR23
24CO	PwrtoExcitationResistor	12VI6	PwrtoModuleA50	0RC2	GndDriverCylinder
24A	BoosterBlock	12VI5	12VltoVECR	0RB6	RJBGndCustomer

CIRCUITS LIST

CircuitID	Description	CircuitID	Description		
0RB5	GndPre-Heat	9	EngCmpt.LtsSwitch		
0RB4		8	GndParkBrakeSol		
0RB3	GndRearClearanceLts	7	GndDriverSensor		
0RB1	LavatoryGnd	6	GndWitnessSw24		
0RA3	GndR1-R3	5	UpperDefrostfan		
0RA2	GndLavatory	4C	HostessChimeSig		
0R	GndPrimePump	4A	SOUND_SYSTEM		
0PR3	UpperDefrosterGnd	3	DoorLatchSig		
0PR2	GndWatchYourStep	2B	CondSndSpdSig		
0PR1	EntranceCeilingLtGnd	2	DoorUnlockSig		
0P	Galley				
0Lav4	GndAisleLampsLH				
0Lav3	GndEmergencyLampsRH				
0Lav2	GndAisleLamps				
0Lav1	GndDirectLights				
0Lav	GndReadingLamps				
0K	AirDryer				
0H	GroundCoolantSensor				
0G	GndofA54				
0FE	Gnd				
0FC4	ElectricalHorn				
0FC1	left/right_luggage_door_lock				
0FB3	GndMasterId				
0FB2	GndDriverWdo				
0FB1	E-RideGnd				
0FA5					
0FA4	GndPwrOutlet				
0FA1	GndofAccessoires				
0F	FJBDDoorOpenSig				
0EV6	RHP-RackMotorGnd				
0EV3	GndPRackLH				
0EV2	GndHvac				
0EV1	GndCondensor				
00D	RJBAjarSignal				
0CE	ChassisGndtoA47				
0CD	SOUND_SYSTEM				
0C	GndStarter				
00B	ElectronicGndofMuxModules				
0B	EngineChassisGnd				
00A	GndElectronic				
0A	Evap.Gnd				
9B	EngineCmpt.Lt				
9A	EnaineDoorOpenSig				