

# WIRING DIAGRAM INDEX

|  |   |   |
|--|---|---|
| <b>A</b> A/C & HEAT SYSTEM (FULL AIR) Page: 15.1<br>A/C & HEAT SYSTEM (DRIVER ONLY) Page: 15.3<br>ALARM & SIGNAL Page: 7<br>ALTERNATOR DELCO & STARTER Page: 4.1<br>ALTERNATOR BOSCH & STARTER Page: 4.2<br>ABS Page: 22<br>ARRANGEMENT - CABLE Page: B<br>ARRANGEMENT - HARNESS Page: C<br>ARRANGEMENT - SPARE WIRE Page: D | DRIVER'S & CO-PILOT SEAT-HEATER Page: 13<br><br><b>E</b> ENGINE BLOCK HEATER Page: 14<br>ENGINE BREAKE SYSTEM Page: 21<br>ENGINE CONTROL Page: 4<br>ETHER COLD START Page: 8<br>EXTERIOR LIGHTING Page: 9<br><br><b>F</b> FAN-CLUTCH RADIATOR Page: 8<br>FAST IDLE - DDEC Page: 5<br>FIRE DETECTOR Page: 7.2<br>FUEL WATER FILTER Page: 8<br>FUEL PRIME PUMP Page: 14 | <b>S</b> SLIDE-OUT Page: 24<br>SUN VISOR Page: 19<br>STEERING CONTROL Page: 17.1<br><br><b>T</b> TACHOMETER (VDO) Page: 17<br>TELL TALE LIGHT MODULES Page: 23<br>THERMOMETER-DIGITAL Page: 23<br>TRANSMISSION - WORLD Page: 6<br><br><b>W</b> WINDOW AJAR Page: 7.3<br>WIPER & WASHER Page: 10<br>W.C.L. RICON 9000 Page: 24.1 |
| <b>B</b> BACK-UP ALARM Page: 9.3<br>BACK-UP MONITOR Page: 20   | <b>G</b> GROUND SYSTEM Page: 3<br><br><b>I</b> INTERIOR LIGHTING Page: 11<br><br><b>K</b> KEYLESS ENTRY SYSTEM Page: 12   |   |
| <b>C</b> CIGAR LIGHTER Page: 19<br>CODE - CIRCUIT NUMBER Page: E<br>CODE - CIRCUIT BREAKER Page: F<br>CODE - CONNECTOR Page: G<br>CODE - DIODE Page: H<br>CODE - RELAY Page: I<br>CODE - RESISTOR Page: J<br>CODE - WIRING KEY Page: K<br>CODE - FUSE Page: L<br>CODE - MODULE Page: M<br>CRUISE CONTROL - DDEC Page: 5      | <b>L</b> LEVEL LOW SYSTEM Page: 18<br>LUGGAGE DOOR LOCK Page: 12<br><br><b>M</b> MIRROR-REAR VIEW Page: 16  |   |
| <b>D</b> DDEC Page: 5<br>DISTRIBUTION 12V Page: 2<br>DISTRIBUTION 24V Page: 1<br>DRIVER'S WINDOW LIFTER Page: 19<br>DRIVER'S SEAT-ELECT. ADJUST Page: 13   | <b>P</b> PARKING BREAKE ALARM Page: 8<br>PARKING BREAKE SWITCH Page: 8<br>PRODRIVER Page: 8<br><br><b>R</b> RETARDER - WORLD TRANSM. Page: 21   |   |