

RELAYS LIST

No	Location	Part #	Function	Page	No	Location	Part #	Function	Page
R1	RJB	562364	MasterRelay	3.1	R-12VISS		563337	*opt*	35.5
R2	RJB	563332	TransmissionZF	15.2	r2_33				28.1
R3	RJB	563348	12vIgn&AccRelay	3.1	r3_33				28.1
R4		563332	Cutoffpreheater	38.1	r4_33				28.1
R5	RJB	563332	ChargerRelay	17.1	RL_Strobe				35.4
R6	FuseBoxRJB	563332	DirectLightsRelay	24.1	Rooter2_84	*opt*	*opt*	*opt*	35.4
R08	*opt*	*opt*	*opt*	14.5	Rooter3_84	*opt*	*opt*	*opt*	35.4
R10	Evap_Cmpt_	563348	CondensorPowerRelay	18.2	Rooter4_84	*opt*	*opt*	*opt*	35.4
R11	RJB_VECR	563332	ZFIgn	5.1	RR_Strobe				35.4
R12	Evap_Cmpt_	563348	EvaporatorRelay	18.2	RZF1	RJB	563332	TransmissionZF	15.2
R13	FuseBoxRJB	563332	Ind.LightRelay	23.1					
R14	RJB	561991	ReadingLampRelay	22.1					
R15	FuseBoxRJB	563332	EmergencyLamps	20.1					
R16	DashBoard	563332	AudibleFlasherRelay	26.1					
R17	RJB	561991	12vRrWUpRelay	3.3					
R18	FJB	561991	24vFrWUpRelay	3.3					
R19	FJB	561991	12vFrWUpRelay	3.3					
R20	Evap_Cmpt_	563332	WaterPumpRelay	17.1					
R21	RJB	563269	EmergencyCutoutRelay	3.2					
R22		563269	*opt*	4.1					
R23	RHConsole	563332	LowerWiperRelay	34.1					
R24	FJB	563332	UpperWiperRelay	34.1					
R25	RJB_VECR	563332	Ecmlgn	5.1					
R26	Evap_Cmpt_	563332	Pre-HeatRelay	18.2					
R27			Hostess_Gong	22.1					
R29	RJB	563348	Preheater_Volvo	14.2					
R31	RJB	561991	12vRrEngineEcu	3.3					
R32		563332	*opt*	4.1					
R35			*opt*	40.1					
R36			*opt*	40.1					
R37			FrigoRelay	40.1					
R41			*opt*	41.1					
R42			*opt*	41.1					
R43			*opt*	41.1					
R44			*opt*	41.1					
R45			*opt*	41.1					
R72		*opt*	InverterRelay	40.1					
R73	RJB	563348	InverterRelay	40.1					
R74		563332	*opt*	15.3					
R_24WupSS		563337	*opt*	35.6					
R_Starter		*opt*	*opt*	3.2					
R_Tv		563337	*opt*	35.5					
r1_33				28.1					