

FUSES LIST

No	Location	Part #	Function	Rating	Page
F1	FuseBoxFJB	563279	CecmPower	3amp	4,1
F2	FuseBoxFJB	563279	FrontStartMainSwitch	3amp	4,1
F3	FuseBoxFJB	563279	EnginePre-HeatH.W.+DrvLiq.Vlv	3amp	4,1
F4	FuseBoxFJB	563280	*opt*	5Amp	4,1
F5	FuseBoxFJB	563165	24vtoWUp	30amp	4,1
F6	FuseBoxFJB	563005	Customer24VD	7.5amp	4,1
F7	FuseBoxFJB	563279	Abs+PreHeatController	3amp	4,1
F8	FuseBoxFJB	563279	AirHorn	3amp	4,1
F9	FuseBoxFJB	563284	SpareFuse	15amp	4,1
F10	FuseBoxFJB	563279	SpareFuse	3amp	4,1
F11	FuseBoxFJB	563279	SunVisor	3amp	4,1
F12	FuseBoxFJB	563282	PwrMuxModule	20amp	4,1
F13	FuseBoxFJB	563282	PwrMuxModule	20amp	4,1
F14	FuseBoxFJB	563284	Customer	15amp	4,1
F15	FuseBoxFJB	563004	*opt*	2Amp	4,1
F16	FuseBoxFJB	563153	DefrosterUnit	25Amp	4,1
F17	FuseBoxFJB	563280	DestinationSign	5Amp	4,1
F18	FuseBoxFJB	563284	UpperWiper	15amp	4,1
F19	FuseBoxFJB	563279	Prodriver	3amp	4,1
F20	FuseBoxFJB	563005	*opt*	7.5amp	4,1
F21	FuseBoxFJB	563282	PwrMuxA44	20amp	4,1
F22	FuseBoxFJB	563279	SteeringCtrl	3amp	4,1
F23	FuseBoxFJB	563165	ABS	30amp	4,1
F24	FuseBoxFJB	563005	Mirror	7.5amp	4,1
F25	FuseBoxFJB	563280	BackupCamera	5Amp	4,1
F26	FuseBoxFJB	563279	SpareFuse	3amp	4,1
F27	FuseBoxFJB	563284	Customer	15amp	4,1
F28	FuseBoxFJB	563282	DriverWindow	20amp	4,1
F29	FuseBoxFJB	563279	ClusterandDDDR	3amp	4,1
F30	FuseBoxFJB	563284	PwrOutletandCigarLighter	15amp	4,1
F31	FuseBoxFJB	563279	KeylessModule	3amp	4,1
F32	FuseBoxFJB	563282	SpareFuse	20amp	4,1
F33	FuseBoxFJB	563165	12VDtoWakeUp	30amp	4,1
F34	FuseBoxFJB	563165	*opt*	30amp	4,1
F35	FuseBoxFJB	563283	12vPwrOutlet	10amp	4,1
F36	FuseBoxFJB	563279	PwrHvacandTTItModule	3amp	4,1
F37	FuseBoxFJB	563283	SpareFuse	10amp	4,1
F38	FuseBoxFJB	563283	SpareFuse	10amp	4,1
F39	FuseBoxFJB	563283	SpareFuse	10amp	4,1
F40	FuseBoxFJB	563283	SpareFuse	15amp	4,1
F41	FuseBoxFJB	563283	SpareFuse	10amp	4,1
F42	Parcel_Rack_LH_1st_Cmpt_	562407	*opt*	10Amp	35,0
F43	Evap_Cmpt	560893	ToPre-Heater		18,2

FUSES LIST

No	Location	Part #	Function	Rating	Page
F44		560599	FuseDestinationSign		3,3
F45		562604	FireProtectionSyst.		3,3
F46	Parcel_Rack_LH_1st_Cmpt_	562396	Sound_System	30Amp	35,0
F50	FuseBoxRJB	563284	EnginePre-Heat	15amp	5,1
F51	FuseBoxRJB	563153	EnginePre-Heat	25Amp	5,1
F52	FuseBoxRJB	563284	SpareFuse	15amp	5,1
F53	FuseBoxRJB	563284	PwrMuxA54	15amp	5,1
F54	FuseBoxRJB	563284	Customer	25amp	5,1
F55	FuseBoxRJB	563283	EmergencyLts	10amp	5,1
F56	FuseBoxRJB	563282	IndirectLightingLH	20amp	5,1
F57	FuseBoxRJB	563283	IndirectLightingRH	10amp	5,1
F58	FuseBoxRJB	563283	DirectLightingLH	20amp	5,1
F59	FuseBoxRJB	563283	DirectLightingRH	10amp	5,1
F60	FuseBoxRJB	563282	ReadingLampRH	20amp	5,1
F61	FuseBoxRJB	563282	ReadingLampLH	20amp	5,1
F62	FuseBoxRJB	563283	LavatoryNightLight	10amp	5,1
F63	FuseBoxRJB	563283	EnginePre-Heat	10amp	5,1
F64	FuseBoxRJB	563283	Spare	10amp	5,1
F65	FuseBoxRJB	563165	PwrMuxModuleRJB	30amp	5,1
F66	FuseBoxRJB	563279	RadiatorFanClutch	3amp	5,1
F67	FuseBoxRJB	563153	PwrMuxA54	25Amp	5,1
F68	FuseBoxRJB	563153	PwmMuxA54	25Amp	5,1
F69	FuseBoxRJB	563005	HatRackLightingLHandRH	3amp	5,1
F70	FuseBoxRJB	563005	Customer24Vl	7.5amp	5,1
F71	FuseBoxRJB	563284	SpareFuse	15amp	5,1
F72	FuseBoxRJB	563153	PwrMuxA50	25Amp	5,1
F73	FuseBoxRJB	563282	SpareFuse	20amp	5,1
F74	FuseBoxRJB	563283	EcuEngineIgnition	10amp	5,1
F75	FuseBoxRJB	563283	EcuTransmissionIgn	10amp	5,1
F76	FuseBoxRJB	563283	Customer	10amp	5,1
F77	FuseBoxRJB	563283	EcuTransmissionWakeUp	10amp	5,1
F78	FuseBoxRJB	563284	EcuEngineWakeUp	15amp	5,1
F79	FuseBoxRJB	563284	EcuEngineWakeUp	15amp	5,1
F80	FuseBoxRJB	563284	PwrMuxA51	15amp	5,1
F81	FuseBoxRJB	563004	PwrOfRearSwitchBox	2Amp	5,1
F83	FuseBoxFJB	563005	SoundSystem	10amp	4,1
F84	FuseBoxFJB	563284	Customer	15amp	4,1
F85	FuseBoxRJB	563283	SpareFuse	10amp	5,1
F86	FuseBoxRJB	563283	SpareFuse	10amp	5,1
F87	FuseBoxRJB	563283	SpareFuse	20amp	5,1
F88	FuseBoxRJB	563283	SpareFuse	20amp	5,1
F89	FuseBoxRJB	563284	SpareFuse	20amp	5,1
F90	FuseBoxRJB	563153	*oot*	25Amp	5,1

FUSES LIST

No	Location	Part #	Function	Rating	Page
F91	FuseBoxRJB	563153	E_RideRearPwr	15Amp	5,1
F92		*opt*	*opt*		40,1
F93		*opt*	*opt*		40,1
F94		*opt*	*opt*		40,1
F96	FuseBoxRJB	563284	*opt*	20amp	5,1
F96	Parcel_Rack_LH_1st_Cmpt_	562605	Sound_System	20Amp	35,0
F97	Parcel_Rack_LH_1st_Cmpt_	562407	*opt*	10Amp	35,0
F98	FuseBoxRJB	563284	*opt*	15amp	5,1
F98	Parcel_Rack_LH_1st_Cmpt_	562407	Sound_System	10Amp	35,0
F99	FuseBoxRJB	563153	*opt*	15Amp	5,1
F99	Parcel_Rack_LH_1st_Cmpt_	562407	Sound_System	10Amp	35,0
F100	Parcel_Rack_LH_1st_Cmpt_	562407	*opt*	10Amp	35,0
F101	Parcel_Rack_LH_1st_Cmpt_	562407	Sound_System	10Amp	35,0
F12_2_258	FuseBoxFJB	563282	PwrMuxModule	20amp	4,1
F35_7_258	FuseBoxFJB	563283	12vPwrOutlet	10amp	4,1
FL_Strobe					35,4
FR_Strobe					35,4
FRONT_CAM		561904	*opt*		35,5
Fuse_ATO_10A_211100_189_1_189		562407	F96	10A	35,5
Fuse_ATO_15A_208779_189_1_189		562604	F42	15A	35,5
Fuse_ATO_15A_208783_189_1_189		562604	F99	15A	35,5
Fuse_ATO_1A_206486_150_1_150		562597		125A	14,2
Fuse_ATO_30A_208777_189_1_189		562396	F46	30A	35,5
FUSE_BOX_1	Parcel_Rack_LH_1st_Cmpt_	562610	Fuse_Box		35,0
FUSE_BOX_2	Parcel_Rack_LH_1st_Cmpt_	562610	Fuse_Box		35,0
FWG114	*opt*	*opt*	*opt*		35,3