


Ground Distribution

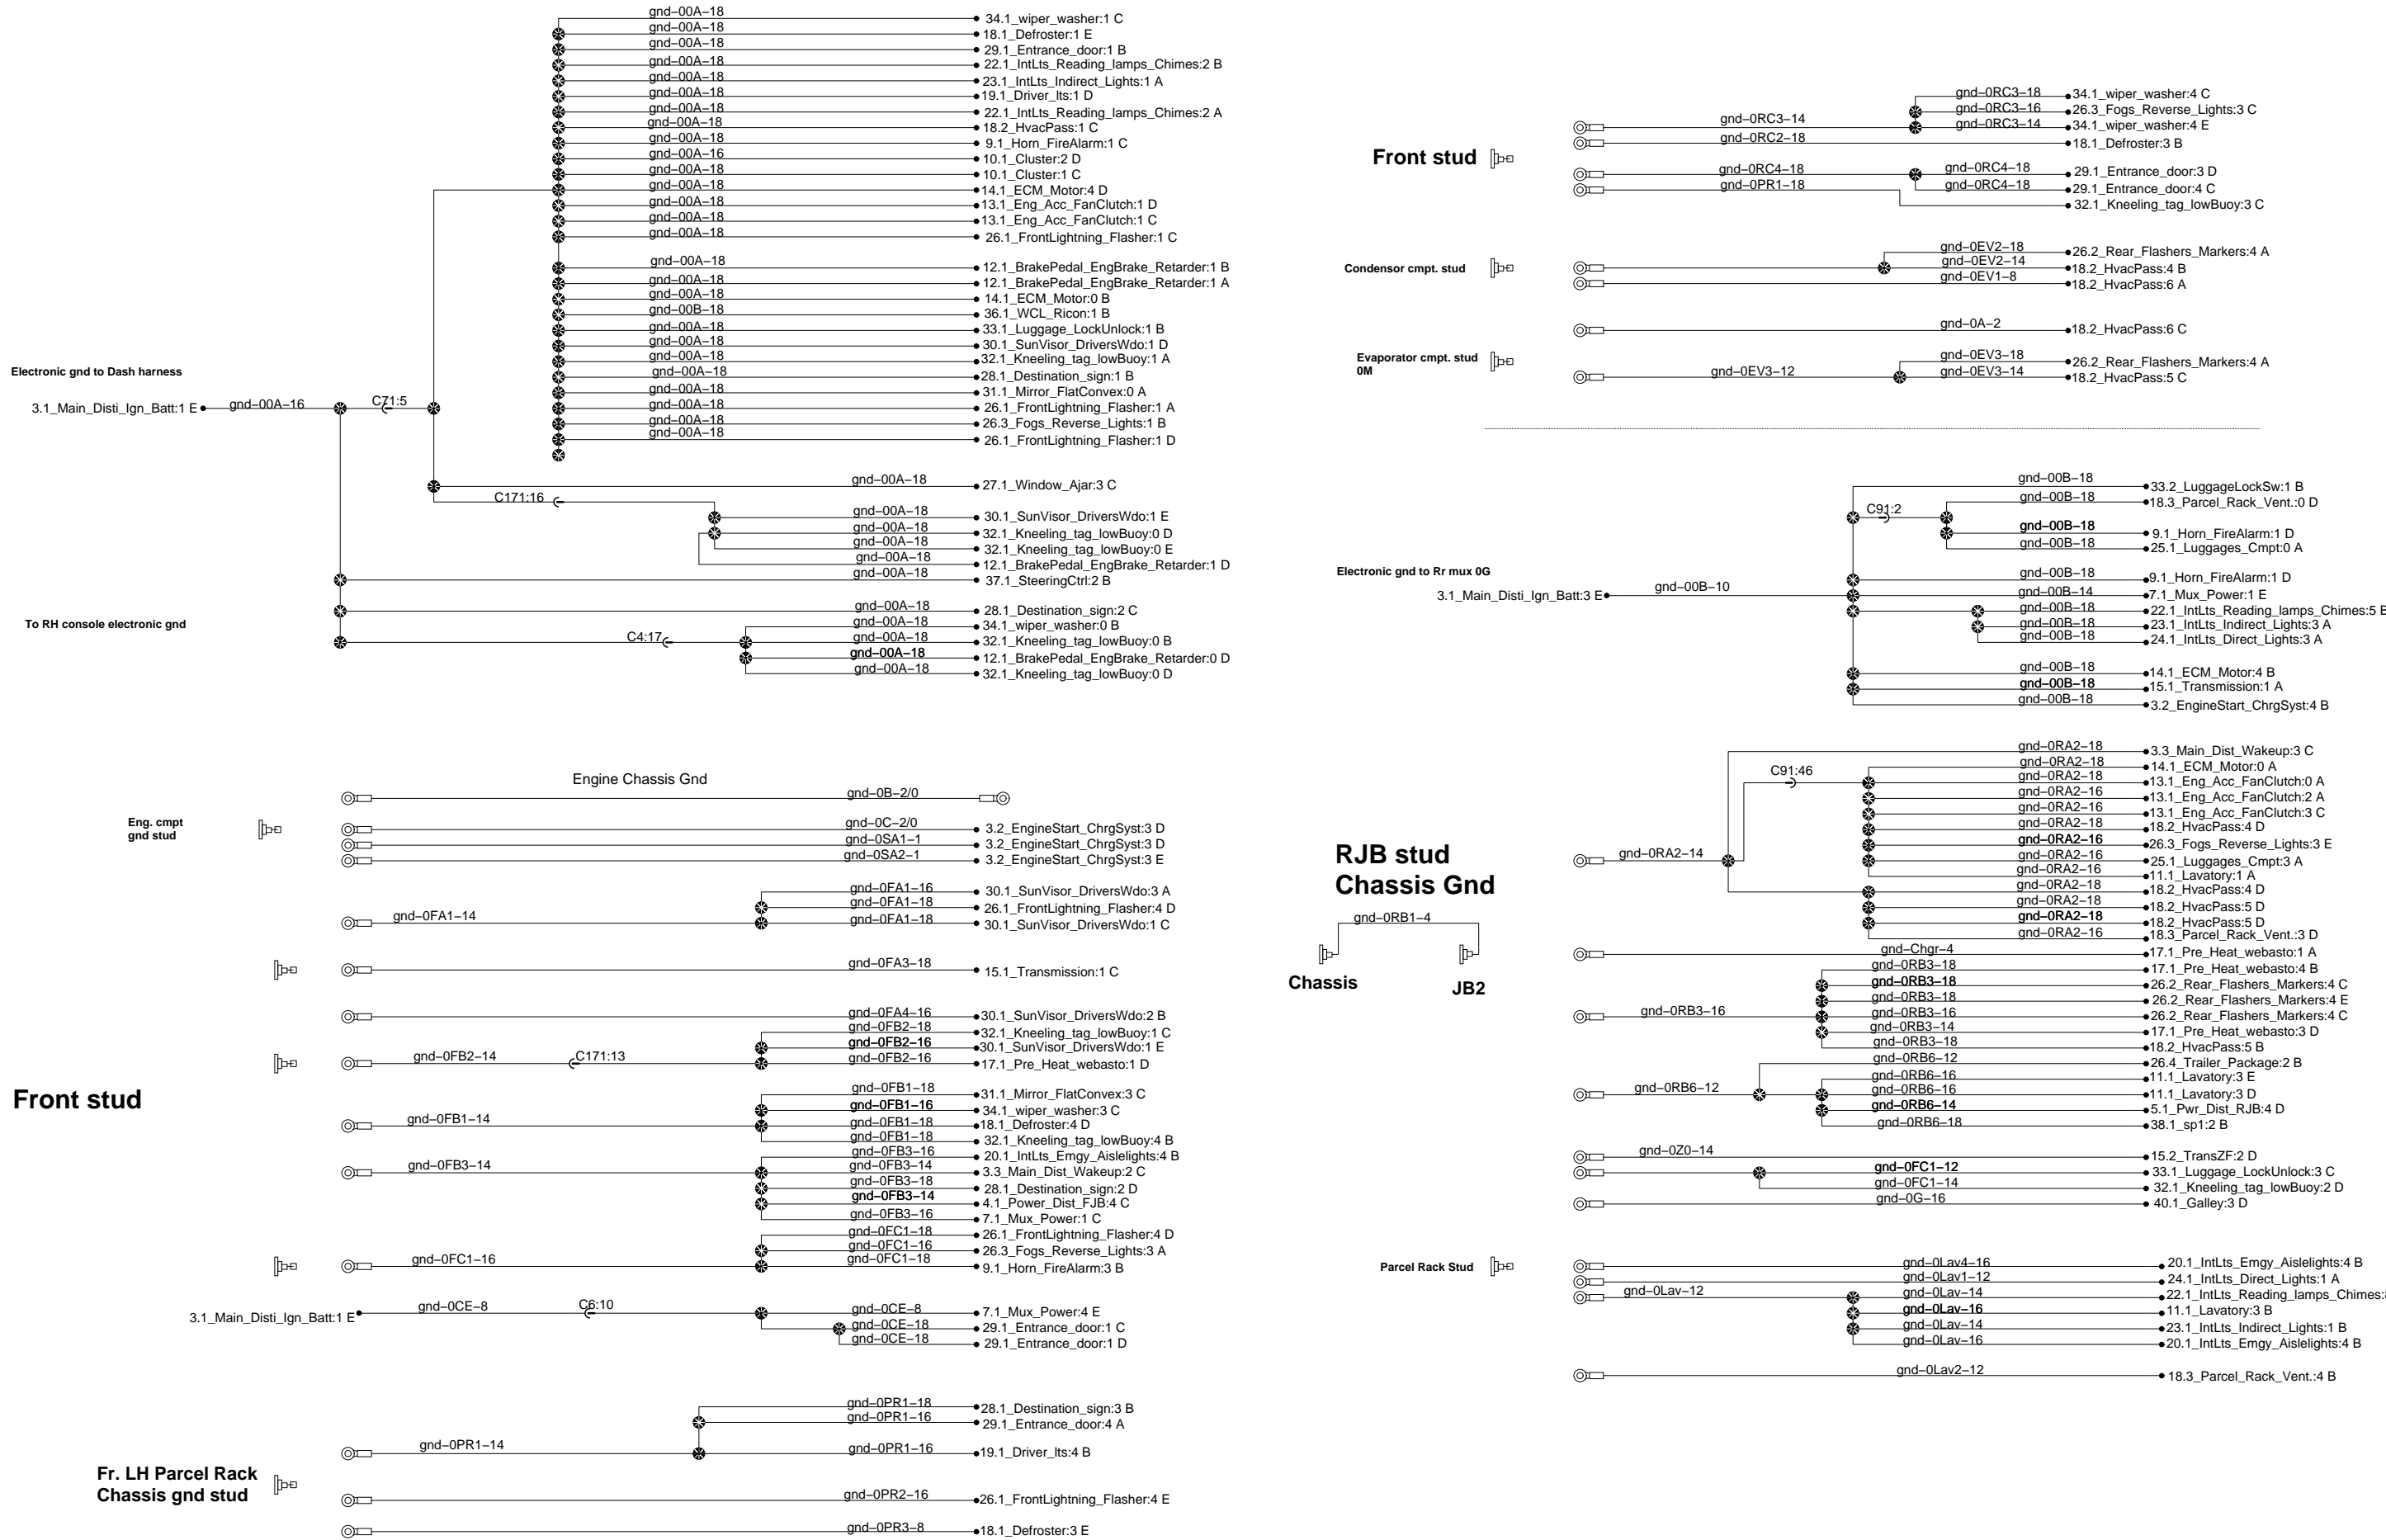

Rev:00

Page:2.1

No:D061030

WIRING DIAGRAM

PREVOST®