

NO.	PAGE	AMPERE	#PREVOST	LOCATION	FUNCTION	NO.	PAGE	AMPERE	#PREVOST	LOCATION	FUNCTION
CB1	1	200A	560838	BAT JCT CPT	24V FEED A/C JCT BOX	CB83	4	20A	561794	RR JCT BOX	WORLD TRANSMISSION VIM POWER
CB3	1	70A	561767	BAT JCT CPT	12V FEED RR JCT BOX	CB86	20	8A	561791	RR JCT BOX	LAVATORY PUMP
CB4	1	90A	560298	BAT JCT CPT	12V FEED FR JCT BOX	CB89	20	8A	561791	RR JCT BOX	LAVATORY LIGHTING
CB6	1	90A	560298	BAT JCT CPT	24V FEED RR JCT BOX	CB92	19	6A	561790	FR JCT PANEL	SPEED SW & KNEELING SYST.
CB7	1	90A	560298	BAT JCT CPT	24V FEED FR JCT BOX	CB94	12	8A	561791	FR JCT PANEL	READING LTS & GENERAL LTS MAIN SW
CB9	1	120A	560465	A/C JCT CPT	EVAPORATOR FAN MOTOR	CB102	28-29	15A	561793	FR JCT PANEL	SOUND SYSTEM
CB10	2	8A	561791	FR JCT PANEL	MASTER SWITCH	CB104	24	6A	561790	FR JCT PANEL	ABS E.C.U.
CB11	1	25A	561795	BAT JCT PANEL	24V HOT WIRE FEED RR & FR	CB105	24	20A	561794	FR JCT PANEL	ABS E.C.U.
CB12	15	15A	561793	FR JCT PANEL	WATER BOOSTER PUMP	CB106	24	10A	561792	FR SERV JCT BOX	ABS E.C.U.
CB13	10	8A	561791	FR JCT PANEL	LUGGAGE CPT LTS	CB107	24	10A	561792	FR SERV JCT BOX	ABS E.C.U.
CB16	2	8A	561791	RR JCT BOX	ENGINE-RR CTR & START SW	CB109	20	8A	561791	RR JCT PANEL	LAVATORY EXH. FAN
CB17	1	25A	561795	BAT JCT PANEL	12V HOT WIRE FEED RR & FR	CB117	18	8A	561791	FR JCT PANEL	RR VIEW MIRROR
CB18	2	8A	561791	RR JCT BOX	ENGINE-FR CTR SW	CB118	22	20A	561794	FR JCT PANEL	LUGGAGE DOOR LOCK MOTOR
CB19	3	15A	561793	RR JCT BOX	DDEC III E.C.M. POWER	CB119	22	3A	561797	FR JCT PANEL	LUGGAGE UNLOCK TT LT & SW
CB20	3	15A	561793	RR JCT BOX	DDEC III E.C.M. POWER	CB120	22	20A	561794	FR JCT PANEL	LUGGAGE DOOR LOCK MOTOR
CB21	3	6A	561790	RR JCT BOX	DDEC III 12V IGNITION	CB121	18	10A	561792	FR JCT PANEL	CIGAR LIGHTER
CB22	27	15A	561793	GALLEY	GALLEY BATTERY CHARGER	CB125	7	20A	561794	FR JCT PANEL	DIRECTIONAL LTS LH
CB23	26-27	8A	560828	GALLEY	GALLEY CONTAINER RH	CB126	7	20A	561794	FR JCT PANEL	DIRECTIONAL LTS RH
CB24	26-27	8A	560828	GALLEY	GALLEY CONTAINER LH	CB129	17	15A	561793	RR JCT BOX	WATER HEATER
CB25	26-27	6A	560827	GALLEY	GALLEY LAMP	CB130	5	6A	561790	RR JCT BOX	FAN CLUTCH RADIATOR
CB26	8	10A	561792	RR JCT BOX	BACK-UP LTS & ALARM	CB131	30	40A	560703	BAT JCT CPT	INVERTER
CB27	5	8A	561791	FR JCT PANEL	24V IGN DASH ACCESSORIES	CB132	17	15A	561793	RR JCT BOX	WATER HEATER
CB29	5	20A	561794	FR JCT PANEL	ELECTRICAL HORNS	CB133	28-29	15A	561793	FR JCT PANEL	SOUND SYSTEM
CB30	5	10A	561793	FR JCT PANEL	FIRE ALARM & WATER HTR TIMER	CB134	16	15A	561793	A/C JCT BOX	CONDENSER FAN MOTOR
CB31	5	8A	561791	FR JCT PANEL	AIR DRYER	CB135	16	15A	561793	A/C JCT BOX	CONDENSER FAN MOTOR
CB35	6	6A	561790	FR JCT PANEL	FOG & HAZARD SW	CB136	16	15A	561793	A/C JCT BOX	CONDENSER FAN MOTOR
CB36	6	15A	561793	FR JCT PANEL	FOG LTS	CB137	16	15A	561793	A/C JCT BOX	CONDENSER FAN MOTOR
CB37	6	8A	561791	FR JCT PANEL	HEAD & MULTI-FUNC. SW						
CB38	6	10A	561792	FR JCT PANEL	MARKER LTS						
CB39	6	6A	561791	FR JCT PANEL	12VI DASHBOARD-SPEEDO & TACHO						
CB40	6	8A	561791	FR JCT PANEL	FR & RR CLEARANCE & ID. LTS						
CB42	6	10A	561792	FR JCT PANEL	RR MARKER, TAIL, LICENCE LTS						
CB43	6	20A	561794	FR JCT PANEL	HEADLAMP (HI)						
CB44	6	15A	561793	FR JCT PANEL	HEADLAMP (LO)						
CB45	7	10A	561792	FR JCT PANEL	MULTI-FUNC. SW (WIPER CTR)						
CB48	8	6A	561790	FR JCT PANEL	STOP SW						
CB49	8	15A	561793	RR JCT BOX	LH STOP LTS						
CB50	11	6A	561790	RR JCT BOX	HAT RACK LIGHTING						
CB51	8	20A	561794	FR JCT PANEL	RH STOP & CYCLOP LTS						
CB52	14	6A	561790	FR JCT PANEL	HOSTESS & PASSENGER CHIME						
CB55	11	10A	561792	FR JCT PANEL	AISLE LTS						
CB56	11	8A	561791	RR JCT BOX	EMERGENCY EXIT LTS						
CB59	12	8A	561791	FR JCT PANEL	DRIVER'S LTS SW.						
CB60	12	15A	561793	RR JCT BOX	READING LTS LH						
CB61	12	15A	561793	RR JCT BOX	READING LTS RH						
CB63	13	8A	562293	FR SERVICE CPT	110V FLUORESCENT LH						
CB64	13	8A	562293	FR SERVICE CPT	110V FLUORESCENT RH						
CB65	13	15A	561793	RR JCT BOX	24V FLUORESCENT RH						
CB66	13	15A	561793	RR JCT BOX	24V FLUORESCENT LH						
CB67	16	10A	561792	A/C AUX UNIT	AUXILIARY A/C FAN						
CB68	16	10A	561792	A/C AUX UNIT	AUXILIARY A/C FAN						
CB70	15-16	8A	561791	FR JCT PANEL	BLOWER CUT-IN RELAY						
CB71	16	8A	561791	A/C AUX UNIT	AUXILIARY A/C TEMP CTRL						
CB72	16	6A	561790	RR JCT BOX	AUXILIARY A/C COMPR. CLUTCH						
CB74	16	20A	561794	RR JCT BOX	AUXILIARY A/C UNIT POWER						
CB75	26-27	20A	561794	RR JCT BOX	GALLEY						
CB79	15-16	10A	561792	FR JCT PANEL	DRIVER'S HTR FAN						