

INDEX

<u>A</u>	A/C & HEAT SYSTEM-STANDARD	P. 12
	A/C & HEAT SYSTEM-FULL AIR	P. 13
	AIR DRYER	P. 5
	ALARM AND SIGNAL	P. 5
	ABS	P. 17
	ARRANGEMENT - CABLE	P. B
	ARRANGEMENT - HARNESS	P. C
	ARRANGEMENT - SPARE WIRE	P. D
<u>B</u>	BACK-UP ALARM	P. 5
<u>C</u>	CHARGING SYSTEM	P. 1
	CENTER DOOR-AIR LOCK	P. 11
	CIGAR LIGHTER	P. 14
	CODE - CIRCUIT NUMBER	P. E
	CODE - CIRCUIT BREAKER	P. F
	CODE - CONNECTOR	P. g
	CODE - DIODE	P. H
	CODE - RELAY	P. I
	CODE - RESISTOR	P. J
	CODE - WIRING KEY	P. K
	CO-PILOT SEAT HEATER	P. 15
	CRUISE CONTROL - D.D.E.C.	P. 3

<u>D</u>	D.D.E.C. III	P. 3
	DIFFERENTIAL OIL TEMP.	P. 5
	DRIVER'S SEAT ELEC. ADJUST.	P. 15
	DRIVER'S SEAT HEATER	P. 15
<u>E</u>	ENGINE BLOCK HEATER	P. 11
	ENGINE BRAKE SYSTEM	P. 15
	ENGINE CONTROL	P. 2
	ENTRANCE DOOR (AIR LOCK)	P. 11
	ETHER COLD START	P. 5
	EXTERIOR LIGHTING	P. 6
<u>F</u>	FAN CLUTCH-RADIATOR	P. 5
	FUEL PRIME PUMP	P. 20
	FUEL WATER FILTER	P. 5
<u>I</u>	INTERIOR LIGHTING	P. 9
<u>L</u>	LEVEL-LOW SYSTEM	P. 19
	LUGGAGE DOOR LOCK	P. 16
<u>M</u>	MIRROR-RR VIEW ADJUST. & HEATED	P. 14
<u>P</u>	PARKING BRAKE SWITCH	P. 5
	PARKING BRAKE ALARM	P. 11
	PRODRIVER	P. 11
	PYROMETER	P. 16

<u>R</u>	RETARDER	P. 15
<u>S</u>	SPEEDOMETER (VDO)	P. 16
	SUN VISOR	P. 20
<u>T</u>	TACHOMETER (VDO)	P. 16
<u>W</u>	WATER HEATER PRE-HEAT	P. 18
	WINDOW AJAR	P. 11
	WIPER & WASHER WINDSHIELD	P. 8
	WORLD TRANSMISSION	P. 4