

WIRING DIAGRAM PAGES LIST

| Information pages | | D | | K | | T | |
|-------------------------------|-----------|------------------------------|-----------|------------------------------------|------------|-----------------------------|-----------|
| Multiplex output list | B1 | Dash Lights | 19,1 | Kneeling system | 32,1 | Tag Automatic unload system | 32,1 |
| Multiplex input list | B2 | Destination Sign | 28,1 | | | Tail and Licence Lights | 26,2 |
| Multiplex error messages list | B3 | Direct Lighting | 24,1 | L | | Test Switch | 9,1 |
| Arrangement - Harness | C1 | Docking Lights (Optional) | 26,3 | Lavatory | 11,1 | Transmission ECU | 15.1-15.2 |
| Sound System | C2 | Driver's Light and Backlight | 19,1 | Low Buoy | 32,1 | Trailer Package | 26,4 |
| Can Configuration | C3 | Driver's Power Window | 30,1 | Luggage Door Lock/Unlock | 33.1, 33.2 | TPMS | 39,1 |
| Glossary | D | Digital Clock | 28,1 | | | Tire Press. Monitoring Sys | 39,1 |
| Circuit Number Listing | E | | | M | | | |
| Circuit Breaker code | F | E | | Main Distribution Ignition & Batt. | 3,1 | U | |
| Connectors code | G | Emergency and Aisle lights | 20,1 | Main Distribution Wake-Up | 3,3 | Under Floor Lighting | 25,1 |
| Diode Number Code | H | Engine brake and Retarder | 12,1 | Marker Lights | 26.1,26.2 | | |
| Resistors Number Code | J | Engine Start | 3,2 | Mirror Ramco | 31,1 | V | |
| Fuses Code | L | Engine ECM | 14,1 | Multiplexing Power | 7,1 | Volvo Link | 37,1 |
| Relay Code | K | Engine Override | 14,1 | Multiplexing Network | 6,1 | | |
| Multiplexed Devices Index | B1 | Entrance door & Lights | 29,1 | | | W | |
| Multiplexed Devices Index | B2 | Ether Start | 13,1 | P | | Watch your step | 29,1 |
| Multiplexed Devices Index | B3 | | | Parcel Rack A/C system | 18,2 | Wheelchair Lift Ricon | 36,1 |
| Multiplex Output List | B1 | F | | Park Brake Sensor | 12,1 | Window Ajar | 27,1 |
| Multiplex Input List | B2 | Fast Idle | 14,1 | Park Brake Trailer Sensor | 12,1 | Wiper & Washer | 34,1 |
| Multiplex Error Messages List | B3 | Fire Alarm | 9,1 | Parking Brake Release Switch | 32,1 | Water Pre-Heater | 17,1 |
| | | Flashers | 26.1,26.2 | Power Distribution FJB | 4,1 | | |
| A | | Fog lights | 26,3 | Power Distribution RJB | 5,1 | | |
| Abs | 16.1,16.2 | Fuel Gauge | 10,1 | Power Outlet | 30,1 | | |
| Air Dryer (Optional) | 38.1sp1 | Fuel Prime Pump | 13,1 | Prime Pump | 13,1 | | |
| | | Fuel water Filter | 13,1 | Pneumatic Cut-Out Acc. | 9,1 | | |
| B | | Fire Suppression System | 38,1 | | | | |
| Back-up Camera | 28,1 | | | R | | | |
| Back-up lights and alarm | 26,3 | G | | Radiator Fan Clutch | 13,1 | | |
| Battery and Equalizer | 1,1 | Grounds | 2,1 | Reading Lamp | 22,1 | | |
| Battery Charger | 17,1 | Galley | 40,1 | | | | |
| Brake Pedal Sensor | 12,1 | | | S | | | |
| | | H | | Service Brake Relay | 12,1 | | |
| C | | Hat Rack Lighting | 21,1 | Sound System | 35.0-35.5 | | |
| Charging System | 3,2 | Hazard | 26,1 | Spare Wires | 8,1 | | |
| Cigar lighter | 30,1 | Head Lights | 26,1 | Stop lights | 26,2 | | |
| Clearance lights rear & front | 26.1,26.2 | Horn | 9,1 | Sun Visor | 30,1 | | |
| Cluster | 10,1 | Hostess Chime | 22,1 | Steering Control ZF | 37,1 | | |
| Cornering Lights (Optional) | 26,3 | Hvac Defroster | 18,1 | Steering Wheel Control | 41,1 | | |
| Cruise control | 14,1 | Hvac Passenger | 18,2 | Steering Wheel Controls | 41,1 | | |
| | | | | | | | |
| | | I | | | | | |
| | | Indirect lighting | 23,1 | | | | |