

CIRCUITNUMBERLISTING

CircuitID	Description	CircuitID	Description	CircuitID	Description
0	WCLRemoteCtrl	0Lav1	GndDirectLights	12H	Dest_Sign
2	DoorUnlockSig	0Lav2	PRackChassisGnd	12MEM	SOUND_SYSTEM
2B	CondensorLow	0Lav4	GndAisleLampsLH	12SS	12VISoundSystem
3	DoorLatchSig	0PR1	EntranceCeilingLtGnd	12SS1	SOUND_SYSTEM
4A	HostessChimeSig	0PR2	Gnd_Fr_Clearance_Lts	12SS2	SOUND_SYSTEM
4C	HostessChimeSig	0PR3	UpperDefrosterGnd	12VA	12vEqualizer
4c	wcl_extra_switch	0R	GndPrimePump	12VD	12VD_Battery
5	EmergandAisleLampsPwr	0RA2	GndR1-R3	12VD1	12VDFrontWake-up
5A	UpperDefrostfan	0RA3	GndR1-R3	12VD3	12vRearwake-up
5B	UpperDefrostfan	0RB1	RJB_Chassis_GND	12VD4	12vDDDR
5C	UpperDefrostfan	0RB3	gnd	12VDCust	12VDCustomer
6	GndWitnessSw24	0RB4	AirdryerGnd	12VDF	12VDtoFrontVec
7	GndDriverSensor	0RB5		12VI	12VItoCB10
8	GndParkBrakeSol	0RB6	RJB_Chassis_Gnd	12VI1	12VIofA44
9	EngCmpt.LtsSwitch	0RC2	GndDriverCylinder	12VI2	MirrorPwr
9A	EngineDoorOpenSig	0RC3	GndR23	12VI3	PwrOutletDrawer
9B	EngineCmpt.Lt	0RC4	GndEntranceLights	12VI4	PwrOutletandCigarLighter
0A	Evap.Gnd	0SA1	GndAlternator	12VI5	12VItoVECR
00A	GndElectronic	0SA2	GndAlternator	12VI6	PwrtoModuleA50
0B	EngineChassisGnd	0SS	SOUND_SYSTEM	12VI7	Lugg_Door_Lock
00B	ElectronicGndofMuxModules	0SS1	SOUND_SYSTEM	12VI8	Lugg_Door_Lock
0C	GndStarter	0SS2	SOUND_SYSTEM	12VI10	24VICustomer
0CD	SOUND_SYSTEM	0SS3	SOUND_SYSTEM	12VICust	12VICustomer
0CE		0SS4	SOUND_SYSTEM	12VIF	12VItoFrontVec
0CG	Batteries_Chassis_Gnd	0V	LuggageDoorOpenSig	12VISS1	SOUND_SYSTEM
0EV1	CondensorGnd	0VE	GndEqualizer	12VISS2	SOUND_SYSTEM
0EV2	GndFlashersandMarkersCenter	0W	WCLGnd	12VISS3	SOUND_SYSTEM
0EV3	Evap_Cmpt_Gnd	0WC	WCLGnd	12VISS4	SOUND_SYSTEM
0EV6	PRackChassisGnd	0Y	GndChassistoABSModule	12VISS5	
0F	FJBDDoorOpenSig	0lav	wclextraswitch	12VIZF	ZFsterringControl
0FA1	GndofAccessoires	10	LuggageCmpt.LtsPwr	12W	DoorUnlockSol
0FA3	GndShifter	10A	LuggageCmpt.LtsPwr	12WA	DoorFullOpenSig
0FA4	GndPwrOutlet	10R	LuggageDoorOpenSig	12WUp1	12VWUptoA48
0FB1	GndMirrors	11	DestinationSignPwr	12Wup1	12WUpFront
0FB2	GndSw28	12	G12_To_G24	12Wup2	12WUptoDash
0FB3	GndMasterID	12A	12VDtoR3	12WUp5	PwrtoModuleA51
0FC1	Lugg_Door_Gnd	12B	12VD_Battery	13	SignalToPre-heatrelay
0FC4	ElectricalHorn	12CD	SOUND_SYSTEM	14A	FlushingPumpSig
0G	Refrigerator_Option	12DZ	ZFTransmission	15A	
0Lav	LavatoryGnd	12F	12VDto12PostRJB	16	

CIRCUITNUMBERLISTING

CircuitID	Description	CircuitID	Description	CircuitID	Description
18	Wip.WasherLevel	24VI	24VI	39	DriverLtSwSig
20	Airdryer	24VI1	24VItoRearVec	39D	DriverLt
21	FlasherLHSig	24VI2	24VItoSw1	40	WitnessGnd
21A	FrontFlasher	24VI4	SunVisorsPwr	41	24VCondensor
21AA	FlashersRearLH	24VI5	24VlofMuxmodules	41A	CondensorPwr
21B	CorneringLtsLH	24VI6	PwrtoDefrostUnit	41A1	CondensorFan
21C	ClearanceLts	24VI7	LowerWiperPwr	41B	CondensorPwr
21D	ClearanceLts	24VI8	24VItoMux	41Pwm	CondensorLow
22	HazardSwSig	24VI9	TrailerLlghtsPackage	42A	CondensorPwr
23	FlasherRHSig	24VI10	24VI	42B	CondensorPwr
23A	FrontFlasherRH	24VI12	HatRackLampsPwr	43	WCL
23AA	FrontFlasherRHSide	24VIA	Cut-outPneumaticAcc	43F	WitnessGndSw27
23B	CorneringLtsRH	24VICust	24VICustomer	43G	Parcel_Rack_Vent
23C	ClearanceLts	24VIF	24VItoFrontVEC	44	P-RackLHFan
23D	ClearanceLts	24WC	WCL24VIPower	45	UpperFanSig
24A	Booster_Block	24WL	WCLPowerFeed	45A	PassengerHeatSig
24CO	PwrtoExcitationResistor	24WUp1	24WUp_To_A47_A48	46	FrontFlasherRh
24D	24DtoCB6	24Wup1	For_Master_ID	46A	FrontMarkers
24DZ	ZFTtransmission	25	EngineRunSignal	47	DoorOpenSignal
2.40E+02	24VItoCB1	25A1	ExcitationSignal	47A	DoorOpenSignal
2.40E+03	24VItoCB1	25A2	ExcitationSignal	48A	DoorOpenSol
24IZ	ZFTtransmission	26	DriverWdoPwr	49	DoorCloseSignal
24SS	24VISoundSystem	26A	DriverWdo	49A	DoorCloseSol
24SS1	SOUND_SYSTEM	26B	DriverWdo	50	WitnessGndSig
24SS2	SOUND_SYSTEM	26C	DriverWdo	51	WitnessGnd
24SS11	SOUND_SYSTEM	27A	EmergencySwSig	52A	ElectricalHorn
24SS12	SOUND_SYSTEM	28	AudibleRlySig	52B	PneumaticHorn
24SS13	SOUND_SYSTEM	31	UnloaderRH	53	LowerWip1stSpd
24SS21	SOUND_SYSTEM	31B	WiperParkPwr	53B	LowerWip2ndSpd
24SS22	SOUND_SYSTEM	32A	TrailerLlghtsPackage	53C	LowerWip.IntSig
24VA	24vEquilizer	32D		53D	Washer_ctrl
24VD	24VD_Battery	33	UnloaderLH	53E	LowerWiper1stSpd
24VD1	24VDtoRearVec	34	ParkBrakeReleaseSignal	53F	LowerWasherPump
24VD2	24VDtoRearVec	35	EntranceDoorLlghts	53G	LowerWip1stSpd
24VD3	24VDofCECM	36	EngineBrake	53H	LowerWiper
24VD4	24VDFrontWake-up	38	DirectLlghts	54	TestSwitch
24VD5	24VDtoPre-Heat	38A	DirectLlghts	55	Lugg_Door_Lock_Signal
24VD6	24VDPre-Heat	38AA	DirectLlghtsRHRicon	57A	WaterPump
24VD7	PassandPRackPwr	38BB	DirectLlghtsLH	57G	Pre-HeatWebasto
24VDCust	24VDCustomer	38C	DirectLightSwSig	57GA	Pre-HeattoWtrPmpRly

CIRCUITNUMBERLISTING

CircuitID	Description	CircuitID	Description	CircuitID	Description
57H	Pre-HeattoWtrPmpRly	72D	SunVisorRHSig	85X	24VIgn
57L	Hi-Beam	72E	SunVisorRHSig	85Y	ABSTTLT
57R	HighBeamRH	72F	SunVisorSignal	85Z	AbsTrailerWarningSignal
57Rtn	SignalRtnHeadLtsLH	73	wclextraswitch	86	DefrostunitSpd
58L	LowBeam	73A	RearOccupiedSig	86Rtn	GndDefrostUnit
58R	LowBeamRH	74	ReadingLampSig	87	TrailerParkBrakeSig
58Rtn	SignalRtnHeadLtsRH	74A	wcl_extra_switch	88	TransducerPwr
59	Hi/LowBeamSignal	74B	ReadingLampsLH	89	DriverSensorSig
60	FogsLtsSwSig	74C	ReadingLamp	90H	Evap_Rly_Power
61	HeadLtsSig	74D	ReadingLamps	90H1	EvaporatorMain
62B	LavatoryLts	75	wcl_extra_switch	91	ParkBrakeSig
63	ClearanceLts	75A	ReadingLampsLH	91B	WitnessSigSw14
63A	FrontClearanceLts	76	FuelLevelSig	92	TrailerParkBrakeSig
63B	ClearanceLts	76C	FuelLowLevelSig	95	DockingLTSwSig
63C	CtrlHeadBacklight	76P	PrimePumpSig	96	CorneringLTSwSig
64	EmergencyLampsSig	77	TransducerHi-Side	97	E-RidePwr
64A	Blinker	77B	PassandPRackLiquidValve	99	Sw20Gnd
65	FootDamper	77BA	A/CClutch	00A1	GndElectronic
65A	FootDamper	77C	PassandPRackLiquidValve	00B1	GndEng.Start
65D	DriverCylinder	78	StopLightSensorSig	0V2	LuggageDoorOpenSig
65P	Pass.Cylinder	78BA		0V3	LuggageDoorOpenSig
66	MarkersSigSw2	79	DecelSignal	0Y2	GndChassisABSSol
67	EvaporatorPwr	80	StopLightSensorSig	0Y3	GndSignal
67A	Condensor1stSpdSig	81	HeadLtCallSw1	0Z0	ZFTtransmission
68	DashDamper	82A	CyclopeSignal	0Z1	ZFTtransmission
68A	DashDamper	82Low	StopRearLowerLamp	0Z2	ZFTtransmission
69	ElectricalHorn	82Up	TrailerLghtsPackage	100	IndirectLight
70A	HatRackLighting	83	24vAccessories	100A	IndirectLight
70B	HatRackLighting	84	StartSigSw83	100B	IndirectLightLH
70C	HatRackLighting	84A	StartSigSw83	100C	IndirectLightsSig
70D	HatRackLighting	84B	StartSigSw83	100D	IndirectLightPwr
70E	GndHatRackLamps	85	24VIgnition	101	R1toStarter
70F	GndHatRackLamps	85A	Ign-AccSignal	102	Transmission
70G	GndHatRackLamps	85B	Wake-upSig	102A	Alternator
70H	GndHatRackLamps	85BB		103	LowBuoySig
70J	GndHatRackLamps	85C	PositionNormalSw58	104	Transmission
71A	DockingLtsLH	85D	RearStartPwr	105	FogLtsLH
72A	DockingLtsRH	85E	RearStartSignal	106	FogLtsRH
72B	SunVisorRHSig	85F	EgnineStartPwrSw58	107	Transmission
72C	SunVisorSignal	85G	Ign-AccSignal	110	Transmission

CIRCUITNUMBERLISTING

CircuitID	Description	CircuitID	Description	CircuitID	Description
111	Transmission	136A	TransmissionPwr	155Z	WCLSignal
113Z	NeutralSigal	136AA	ShifterSignal	156A	12VtoABS
114	BacklightPwr	137	ServiceBrakeSig	157B	ABSActive
114A	Backlight	137A	MirrorPwrSig	157C	ABSActive
114AA	ClusterKeyPadBacklight	137B	Mirrors	157D	ATCTTLT
115	CoolantLevelSignal	137C	Mirrors	159	Transmission
115A	WitnessPwr	137D	Mirrors	160	TagSignal
115W	ZFTransmission	137E	Mirrors	162	Transmission
116	DriverLiq	137F	Mirrors	163	RetarderSig
116A	DriverLiq	137H	Mirrors	164	HandLevelSig
119	Eng.BrakeLow	137J	Mirrors	165	Transmission
120	Transmission	137K	Mirrors	166	WitnessSigSw16
121	Transmission	137L	Mirrors	167	Aux.A/CLowPressSig
122	DigitalClock	137M	Mirrors	168	Aux.A/CHighPressSig
123	FireAlarm	138	Transmission	170	ShifterSignal
124	Transmission	138A	ABSSensor	170A	Lugg_Door_Lock
124A	ShifterSignal	139	Transmission	170B	Lugg_Door_Lock
125	RetarderInd	140	Transmission	170D	Lugg_Door_Lock
126A	KneelingUpSwSig	141	Transmission	170E	Lugg_Door_Lock
126B	KneelingDownSwSig	142	ABSSolenoid	170F	Lugg_Door_Lock
126C	ProximitySwSig	143	ABSSensor	170G	Lugg_Door_Lock
126D	ProximitySwPwr	143A	ShifterSignal	170H	Lugg_Door_Lock_Signal
126E	Kneeling15PsiPress.Sw.	144	ABSSensor	170L	LuggageLock_UnlockSig
126F	KneelingDownSol	144A	ABSSensor	170M	LuggageLock_UnlockSig
126G	KneelingUpSol	145	ABSSolenoid	170N	LuggageLock_UnlockSig
126H	KneelingCtrl.Sol	146	ABSSolenoid	170P	LuggageLock_UnlockSig
126J	KneelingHi-BuoySol	146A	TransmissionIgn	170R	LuggageLock_UnlockSig
126JR	GndKneeling	147	EtherSignal	170S	ElectronicGnd
126P	KneelingBuzzer	147A	EtherSolenoid	170T	LuggageLock_UnlockSig
127	Transmission	148	Transmission	170V	LuggageLock_UnlockSig
127D	ChargerRlyGndSig	149	Transmission	170W	LuggageLock_UnlockSig
128	Transmission	149A	ABSSensor	170X	LuggageLock_UnlockSig
128B	Pre-HeatTTLT	150	Transmission	170Y	Lugg_Door_Lock
129	Transmission	151	GndtoEcm	170Z	Lugg_Door_Lock
130	Transmission	151A	GndToEcm	171	LuggageUnlockSwSig
131	Transmission	151B	GndToEcm	172	ShifterSignal
133	Transmission	151C	GndToEcm	173	ShifterSignal
135	Transmission	152	Transmission	174	ShifterSignal
135A	HandLevelSig	154	Transmission	175	Transmission
136	Transmission	155	WCLSignal	175A	ShifterSignal

CIRCUITNUMBERLISTING

CircuitID	Description	CircuitID	Description	CircuitID	Description
176	ShifterSignal	314	WCL_Se62	910	L_SPEAKER_HARNESS
177	Transmission	352	SigtoFireExtin.Sys	911	EmergencyCutoutRlySignal
180	Transmission	417	ThrottlePositionSignal	916	5VSensorPwr
180A	ShifterSignal	419	CheckEng.TTLLT	917	ZFTransmission
181	OutsideSensorSig	439	IgnitiontoEcm	918	ZFTransmission
188	AutomaticTagUnload	509	StopEng.TTLLT	919	ZFTransmission
195	Transmission	510	FastIdleSignal	930	ZFTransmission
197	FuelFilterSig	510A	FastIdleSignal	932	ZFTransmission
201	headlampwashersignal	524	EngBraketoEcm	952	GndSensorRtn
202	Headlampwasherpump	524B	IdleValidationSig	953	Gnd_ECM
214	Reverse	528	OverrideSignal	979	EngineBrakeLowSig
225	LavatoryFan	541	CruiseSetSig	979A	EngineBrakeLowSig
231	Neutral	542	ParkBrakeSig	ANT	SOUND_SYSTEM
231A	StarterRelay	544	CruiseEnableSig	AUX1	SOUND_SYSTEM
231B	StarterRelay	544A		Aux1_Gnd	SOUND_SYSTEM
240	PowertoEcm	545	CruiseResumeSig	Aux1_L+	SOUND_SYSTEM
240A	PowertoEcm	555	FanClutchSignal	Aux1_R+	SOUND_SYSTEM
240B	PowertoEcm	556	SpeedSignal	AUX2	SOUND_SYSTEM
241	PowertoEcm	563	FanClutchSignal	Aux2_Gnd	SOUND_SYSTEM
241A	PowertoEcm	564	StarterLockout	Aux2_L+	SOUND_SYSTEM
241B	PowertoEcm	564B	OutZFDecelSig	Aux_R+	SOUND_SYSTEM
254	Frigo	565	Eng.BrakeActive	B1A	DirectLighting
260	escape_Hatch_sensor	583	EngineBrakeHiSig	B1B	DirectLighting
290	GndFanClutch	700	ZFTransmission	B2A	DirectLighting
291	FanClutch	701	ZFTransmission	B2B	DirectLighting
292	FanClutch	705	ZFTransmission	B3A	DirectLighting
293	FanClutchSwSig	706	ZFTransmission	B3B	DirectLighting
300	WCLTopLightSliding	707	ZFTransmission	B4A	DirectLighting
301	WheelChairLiftSwitch	717	ZFTransmission	B4B	DirectLighting
302	WCLRicon	719	ZFTransmission	B5A	DirectLighting
303	WCL	723	ZFTransmission	B5B	DirectLighting
304	WheelChairLift	740	ZFTransmission	B6A	DirectLighting
305	ParkBrakeSol	761	ZFTransmission	B6B	DirectLighting
305A	WCLUpperDoorSignal	770	ZFTransmission	B7A	DirectLighting
306	WCLTopLights	900	J1587L	B7B	DirectLighting
307	WCL	901	J1587+	Black	
308	WCL	902	ZFTransmission	BLK1	SOUND_SYSTEM
309	WCL	905	TCISensorSig	BLK2	SOUND_SYSTEM
311	WCL	906	ZFTransmission	Bref1	PassengerSensor
313	WCL	907	ZFTransmission	CAM2	SOUND_SYSTEM

CIRCUITNUMBERLISTING

CircuitID	Description	CircuitID	Description	CircuitID	Description
CanH	CanHSignal	GndA	ComputerSignals	N10	A45Address
CanH1	SparesFr-to-RearHarness	Green		N11	A46Address
CanH2	SpareCan	GRN1	SOUND_SYSTEM	N12	A46Address
CanHERide		GRN2	SOUND_SYSTEM	N13	A47Address
CanL	CanLSignal	H1_L+	SOUND_SYSTEM	N14	A47Address
CanL1	SparesFr-to-RearHarness	H1_L-	SOUND_SYSTEM	N15	A48Address
CanL2	SpareCan	H1_R+	SOUND_SYSTEM	N16	A48Address
CanL_ERide		H1_R-	SOUND_SYSTEM	N17	A49Address
Cd	ComputerSignals	H2_L+	SOUND_SYSTEM	N18	A49Address
Cd1	ComputerSignals	H2_L-	SOUND_SYSTEM	N19	A50Address
Cd1_Gnd	SOUND_SYSTEM	H2_R+	SOUND_SYSTEM	N20	A50Address
Cd1_L+	SOUND_SYSTEM	H2_R-	SOUND_SYSTEM	N21	A51Address
Cd1_R+	SOUND_SYSTEM	HOSTESS	SOUND_SYSTEM	N22	A51Address
Cd2_Gnd	SOUND_SYSTEM	IPJ1	Cluster	N23	A52Address
Cd2_L+	SOUND_SYSTEM	IPJ2	Cluster	N24	A52Address
Cd2_R+	SOUND_SYSTEM	IPJ5	Cluster	N25	A53Address
CD3_Gnd	SOUND_SYSTEM	IPJ6	Cluster	N26	A53Address
CD3_L+	SOUND_SYSTEM	IPJ7	Cluster	N27	A54Address
CD3_R+	SOUND_SYSTEM	IPJ8	Cluster	N28	A54Address
Chgr	Battery_Charger_Gnd	J1939H	J1939Signals	N29	A36Address
Chgr_C	SOUND_SYSTEM	J1939L	J1939Signals	OP2	Inverter_Gnd
Chgr_L	SOUND_SYSTEM	LF+	PSRCEL_RACK_SOUND_HARNESS	ORA2	
Chgr_R	SOUND_SYSTEM	LF-	SOUND_SYSTEM	PP1	for_inverter
Cts	ComputerSignals	LR+	PSRCEL_RACK_SOUND_HARNESS	PV1	for_inverter
DATA	SOUND_SYSTEM	LR-	SOUND_SYSTEM	R1A	DirectLighting
DBusH	DBusSignal	LX5	ClusterKeyPad	R1B	DirectLighting
DBusL	DBusSignal	LX6	ClusterKeyPad	R2A	DirectLighting
DSL+++	DRIVER_SPEAKERS	LX7	ClusterKeyPad	R2B	DirectLighting
DSL---	DRIVER_SPEAKERS	LX16	ClusterKeyPad	RED	jack_3_5mm
DSR+++	DRIVER_SPEAKERS	LX21	ClusterKeyPad	RED1	SOUND_SYSTEM
DSR---	DRIVER_SPEAKERS	L_DRIVER	SOUND_SYSTEM	RED2	SOUND_SYSTEM
DVD1_Gnd	Sound_System	N1	A41Address	Ref1	GndPassengerSensor
DVD1_L+	Sound_System	N2	A41Address	RF+	SOUND_SYSTEM
DVD1_R+	Sound_System	N3	A42Address	RF-	SOUND_SYSTEM
Dvd2_Gnd	SOUND_SYSTEM	N4	A42Address	RR+	DISTRIBUTION_SOUND_HARNES
Dvd2_L+	SOUND_SYSTEM	N5	A43Address	RR-	SOUND_SYSTEM
Dvd2_R+	SOUND_SYSTEM	N6	A43Address	RT	ZFTtransmission
E3	Inv_MastrerrelayToBreaker	N7	A44Address	Rts	ComputerSignals
FAKE	L_SPEAKER_HARNESS	N8	A44Address	RTV	SOUND_SYSTEM
FAKE1	R_SPEAKER_HARNESS	N9	A45Address	R_DRIVER	SOUND_SYSTEM

CIRCUITNUMBERLISTING

CircuitID	Description	CircuitID	Description	CircuitID	Description
RxD	ComputerSignals	spare23	SparesClearanceLts	spare64	Spare_Transmission
SHD1	SOUND_SYSTEM	spare24	SparesClearanceLts	spare65	Spare_Transmission
SHD2	SOUND_SYSTEM	spare25	SparesClearanceLts	spare66	spare
SHIELD	jack_3_5mm	spare26	SparesFrontHarness	spare67	spare
Shield		spare27	SparesFrontHarness	spare68	SPARE_SOUND_SYST
SHLD	SOUND_SYSTEM	spare28	SparesFrontHarness	spare70	spare
SL13	L_SPEAKER_HARNESS	spare29	SparesFrontHarness	spare71	spare
SL24	L_SPEAKER_HARNESS	spare30	SparesFrontHarness	spare72	spare
SL35	L_SPEAKER_HARNESS	spare31	SparesFrontHarness	spare73	spare
SL46	L_SPEAKER_HARNESS	spare32	SparesFrontHarness	spare74	spare
SL57	L_SPEAKER_HARNESS	spare33	SparesFrontHarness	spare75	spare
SL68	L_SPEAKER_HARNESS	spare34	SparesFrontHarness	spare76	spare
SL1012	L_SPEAKER_HARNESS	spare35	SparesFrontHarness	spare77	spare
SL1113	L_SPEAKER_HARNESS	spare36	SparesFrontHarness	spare78	spare
SL1214	L_SPEAKER_HARNESS	spare37	SparesFrontHarness	spWcl1	SpareWCL
SL1315	L_SPEAKER_HARNESS	spare38	SparesFrontHarness	spWcl2	SpareWCL
SL1416	L_SPEAKER_HARNESS	spare39	SparesDash	SR13	FR_SPEAKER_HARNESS_
sp52		spare40	SparesDash	SR24	FR_SPEAKER_HARNESS_
SpareLock_UnlockHarn	SpareLock_UnlockHarn	spare41	SparesDash	SR35	FR_SPEAKER_HARNESS_
spare1	SpareLock_UnlockHarn	spare42	SparesDash	SR46	FR_SPEAKER_HARNESS_
spare2	SpareLock_UnlockHarn	spare43	SparesDash	SR57	FR_SPEAKER_HARNESS_
spare4	SparesEvap.Harness	spare44	SparesDash	SR68	FR_SPEAKER_HARNESS_
spare5	SparesEvap.Harness	spare45	SpareEvapCmpt.	SR911	R_SPEAKER_HARNESS_WCL
spare6	SparesCondHarness	spare46	SpareEvapCmpt.	SR1012	R_SPEAKER_HARNESS_WCL
spare7	SparesCondHarness	spare47	SpareEvapCmpt.	SR1113	R_SPEAKER_HARNESS_WCL
spare8	SparesEvap.Harness	spare49	SparesEngineCradle	SR1214	R_SPEAKER_HARNESS_WCL
spare9	SparesEvap.Harness	spare50	SparesEngineCradle	SR1315	R_SPEAKER_HARNESS_WCL
spare10	SparesInteriorLtsHarness	spare51	SparesEngineCradle	SR1416	R_SPEAKER_HARNESS_WCL
spare11	SparesInteriorLtsHarness	spare52	SparesEngineCradle	Sub1+	SUBWOOFER_HARNESS
spare12	SparesInteriorHarness	spare53	SparesEngineCradle	Sub1-	SUBWOOFER_HARNESS
spare13	SparesInteriorHarness	spare54	SparesEngineCradle	Sub2+	SUBWOOFER_HARNESS
spare14	SparesInteriorHarness	spare55	SparesEnginesAccessories	Sub2-	SUBWOOFER_HARNESS
spare15	SparesInteriorHarness	spare56	SparesEnginesAccessories	SW	ZFTransmission
spare16	SparesInteriorHarness	spare57	SparesEnginesAccessories	TRIG1	SOUND_SYSTEM
spare17	SparesFr-to-RearHarness	spare58	SparesEnginesAccessories	TRIG2	SOUND_SYSTEM
spare18	SparesFr-to-RearHarness	spare59	SparesEnginesAccessories	TRIG3	SOUND_SYSTEM
spare19	SparesFr-to-RearHarness	spare60	SparesEnginesAccessories	TRIG4	SOUND_SYSTEM
spare20	SparesClearanceLts	spare61	SparesEnginesAccessories	TRIG5	SOUND_SYSTEM
spare21	SparesClearanceLts	spare62	spareABSHarness	TxD	ComputerSignals
spare22	SparesClearanceLts	spare63	spareABSHarness	VHSRL+	Sound_System

CIRCUITNUMBERLISTING

CircuitID	Description	CircuitID	Description	CircuitID	Description
VHS_Gnd	Sound_System	WHT1	SOUND_SYSTEM	Y4B	DirectLighting
VHS_RL+	Sound_System	WHT2	SOUND_SYSTEM	Y5A	DirectLighting
WC2	WCLRemoteCtrl	Y1A		Y5B	DirectLighting
WC3	WCLRemoteCtrl	Y1B		Y6A	DirectLighting
WC4	WCLRemoteCtrl	Y2A		Y6B	DirectLighting
WC6	WCLRemoteCtrl	Y2B		Y7A	DirectLighting
WC7		Y3A	DirectLighting	Y7B	DirectLighting
WHITE	jack_3_5mm	Y3B	DirectLighting		
White		Y4A	DirectLighting		