

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
0	WCLRemoteCtrl	0Lav4	GndAisleLampsLH	12VA	12vEqualizer
2	DoorUnlockSig	0PR1	GndDestinationSign	12VD	12VD_Battery
2B	CondensorLow	0PR2	Gnd_Fr_Clearance_Lts	12VD1	12VDFrontWake-up
3	DoorLatchSig	0PR3	UpperDefrosterGnd	12VD3	12vRearwake-up
4A	HostessChimeSig	0R	GndPrimePump	12VD4	12vDDDR
4C	HostessChimeSig	0RA2	GndR1-R3	12VDCust	12VDCustomer
4c	wcl_extra_switch	0RA3	GndR1-R3	12VDF	12VDtoFrontVec
5	EmergandAisleLampsPwr	0RB1	RJB_Chassis_GND	12VI	12VItoCB10
5A	UpperDefrostfan	0RB3	gnd	12VI1	12VIofA44
5B	UpperDefrostfan	0RB4	AirdryerGnd	12VI2	MirrorPwr
5C	UpperDefrostfan	0RB5		12VI3	PwrOutletDrawer
6	GndWitnessSw24	0RB6	RJB_Chassis_Gnd	12VI4	PwrOutletandCigarLighter
7	GndDriverSensor	0RC2	GndDriverCylinder	12VI5	12VItoVECR
8	GndParkBrakeSol	0RC3	GndR23	12VI6	PwrtoModuleA50
9	EngCmpt.LtsSwitch	0RC4	GndEntranceLights	12VI7	Lugg_Door_Lock
9A	EngineDoorOpenSig	0SA1	GndAlternator	12VI8	Lugg_Door_Lock
9B	EngineCmpt.Lt	0SA2	GndAlternator	12VI10	24VICustomer
9H		0SS	SOUND_SYSTEM	12VICust	12VICustomer
0A	Evap.Gnd	0SS1	SOUND_SYSTEM	12VIF	12VItoFrontVec
00A	GndElectronic	0SS2	Flip_Down_Screen	12VISS1	SOUND_SYSTEM
0B	EngineChassisGnd	0SS3	SOUND_SYSTEM	12VISS2	SOUND_SYSTEM
00B	ElectronicGndofMuxModules	0SS4	SOUND_SYSTEM	12VISS3	SOUND_SYSTEM
0C	GndStarter	0V	LuggageDoorOpenSig	12VISS4	SOUND_SYSTEM
0CD	SOUND_SYSTEM	0VE	GndEqualizer	12VISS5	
0CE		0W	WCLGnd	12VIZF	ZFsterringControl
0CG	Batteries_Chassis_Gnd	0WC	WCLGnd	12W	DoorUnlockSol
0EV1	CondensorGnd	0Y	GndChassistoABSModule	12WA	DoorFullOpenSig
0EV2	GndFlashersandMarkersCenter	0lav	wclextraswitch	12WUp1	12VWUptoA48
0EV3	Evap_Compt_Gnd	10	LuggageCmpt.LtsPwr	12Wup1	12WUpFront
0EV6	PRackChassisGnd	10A	LuggageCmpt.LtsPwr	12Wup2	12WUptoDash
0F	FJBDdoorOpenSig	10R	LuggageDoorOpenSig	12Wup5	PwrtoModuleA51
0FA1	GndofAccessoires	11	DestinationSignPwr	13	SignalToPre-heatrelay
0FA3	GndShifter	12	G12_To_G24	14A	FlushingPumpSig
0FA4	GndPwrOutlet	12A	12VDtoR3	15A	
0FB1	GndMirrors	12B	12VD_Battery	16	
0FB2	GndSw28	12CD	SOUND_SYSTEM	18	Wip.WasherLevel
0FB3	GndMasterID	12DZ	ZFTransmission	20	Airdryer
0FC1	Lugg_Door_Gnd	12F	12VDto12PostRJB	21	FlasherLHSig
0FC4	ElectricalHorn	12H	Dest_Sign	21A	FrontFlasher
0G	Refrigerator_Option	12MEM	SOUND_SYSTEM	21AA	FlashersRearLH
0Lav	LavatoryGnd	12SS	12VISoundSystem	21B	CorneringLtsLH
0Lav1	GndDirectLights	12SS1		21C	ClearanceLts
0Lav2	PRackChassisGnd	12SS2	SOUND_SYSTEM	21D	ClearanceLts

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
22	HazardSwSig	24VIA	Cut-outPneumaticAcc	45	UpperFanSig
23	FlasherRHSig	24VICust	24VICustomer	45A	PassengerHeatSig
23A	FrontFlasherRH	24VIF	24VltoFrontVEC	46	FrontFlasherRh
23AA	FrontFlasherRHSide	24WC	WCL24VIPower	46A	FrontMarkers
23B	CorneringLtsRH	24WL	WCLPowerFeed	47	DoorOpenSignal
23C	ClearanceLts	24WUp1	24WUp_To_A47_A48	47A	DoorOpenSignal
23D	ClearanceLts	24Wup1	For_Master_ID	48A	DoorOpenSol
24A	Booster_Block	25	EngineRunSignal	49	DoorCloseSignal
24CO	PwrtoExcitationResistor	25A1	ExcitationSignal	49A	DoorCloseSol
24D	24DtoCB6	25A2	ExcitationSignal	50	WitnessGndSig
24DZ	ZFTransmission	26	DriverWdoPwr	51	WitnessGnd
2.40E+02	24VltoCB1	26A	DriverWdo	52A	ElectricalHorn
2.40E+03	24VltoCB1	26B	DriverWdo	52B	PneumaticHorn
24IZ	ZFTransmission	26C	DriverWdo	53	LowerWip1stSpd
24SS	24VISoundSystem	27A	EmergencySwSig	53B	LowerWip2ndSpd
24SS1	SOUND_SYSTEM	28	AudibleRlySig	53C	LowerWip.IntSig
24SS2	SOUND_SYSTEM	31	UnloaderRH	53D	Washer_ctrl
24SS11	SOUND_SYSTEM	31B	WiperParkPwr	53E	LowerWiper1stSpd
24SS12	SOUND_SYSTEM	32A	TrailerLightsPackage	53F	LowerWasherPump
24SS13	Flip_Down_Screen	32D		53G	LowerWip1stSpd
24SS21	SOUND_SYSTEM	33	UnloaderLH	53H	LowerWiper
24SS22	SOUND_SYSTEM	34	ParkBrakeReleaseSignal	54	TestSwitch
24VA	24vEquilizer	35	EntranceDoorLights	55	Lugg_Door_Lock_Signal
24VD	24VD_Battery	36	EngineBrake	57A	WaterPump
24VD1	24VDtoRearVec	38	DirectLights	57G	Pre-HeatWebasto
24VD2	24VDtoRearVec	38A	DirectLights	57GA	Pre-HeattoWtrPmpRly
24VD3	24VDofCECM	38AA	DirectLightsRHRicon	57H	Pre-HeattoWtrPmpRly
24VD4	24VDFrontWake-up	38BB	DirectLightsLH	57L	Hi-Beam
24VD5	24VDtoPre-Heat	38C	DirectLightSwSig	57R	HighBeamRH
24VD6	24VDPre-Heat	39	DriverLtSwSig	57Rtn	SignalRtnHeadLtsLH
24VD7	PassandPRackPwr	39D	DriverLt	58L	LowBeam
24VDCust	24VDCustomer	40	WitnessGnd	58R	LowBeamRH
24VI	24VI	41	24VCondensor	58Rtn	SignalRtnHeadLtsRH
24VI1	24VltoRearVec	41A	CondensorPwr	59	Hi/LowBeamSignal
24VI2	24VltoSw1	41A1	CondensorFan	60	FogsLtsSwSig
24VI4	SunVisorsPwr	41B	CondensorPwr	61	HeadLtsSig
24VI5	24VlofMuxmodules	41Pwm	CondensorLow	62B	LavatoryLts
24VI6	PwrtoDefrostUnit	42A	CondensorPwr	63	ClearanceLts
24VI7	LowerWiperPwr	42B	CondensorPwr	63A	FrontClearanceLts
24VI8	24VltoMux	43	WCL	63B	ClearanceLts
24VI9	TrailerLightsPackage	43F	WitnessGndSw27	63C	CtrlHeadBacklight
24VI10	24VI	43G	Parcel_Rack_Vent	64	EmergencyLampsSig
24VI12	HatRackLampsPwr	44	P-RackLHFan	64A	Blinker

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
65	FootDamper	78BA		0Y3	GndSignal
65A	FootDamper	79	DecelSignal	0Z0	ZFTransmission
65D	DriverCylinder	80	StopLightSensorSig	0Z1	ZFTransmission
65P	Pass.Cylinder	81	HeadLtCallSw1	0Z2	ZFTransmission
66	MarkersSigSw2	82A	CyclopeSignal	100	IndirectLight
67	EvaporatorPwr	82Low	StopRearLowerLamp	100A	IndirectLight
67A	Condensor1stSpdSig	82Up	TrailerLgthsPackage	100B	IndirectLightLH
68	DashDamper	83	24vAccessories	100C	IndirectLightsSig
68A	DashDamper	84	StartSigSw83	100D	IndirectLightPwr
69	ElectricalHorn	84A	StartSigSw83	101	R1toStarter
70A	HatRackLighting	84B	StartSigSw83	102	Transmission
70B	HatRackLighting	85	24VIgnition	102A	Alternator
70C	HatRackLighting	85A	Ign-AccSignal	103	LowBuoySig
70D	HatRackLighting	85B	Wake-upSig	104	Transmission
70E	GndHatRackLamps	85BB		105	FogLtsLH
70F	GndHatRackLamps	85C	PositionNormalSw58	106	FogLtrH
70G	GndHatRackLamps	85D	RearStartPwr	107	Transmission
70H	GndHatRackLamps	85E	RearStartSignal	110	Transmission
70J	GndHatRackLamps	85F	EgnineStartPwrSw58	111	Transmission
71A	DockingLtsLH	85G	Ign-AccSignal	114	BacklightPwr
72A	DockingLtsRH	85X	24VIgn	114A	Backlight
72B	SunVisorRHSig	85Y	ABSTTLT	114AA	ClusterKeyPadBacklight
72C	SunVisorSignal	85Z	AbsTrailerWarningSignal	115	CoolantLevelSignal
72D	SunVisorRHSig	86	DefrostunitSpd	115A	WitnessPwr
72E	SunVisorRHSig	86ARtn	EntranceCeilingLtGnd	115W	ZFTransmission
72F	SunVisorSignal	86Rtn	GndDriverLt	116	DriverLiq
73	wclextraswitch	87	TrailerParkBrakeSig	116A	DriverLiq
73A	RearOccupiedSig	88	TransducerPwr	119	Eng.BrakeLow
74	ReadingLampSig	89	DriverSensorSig	120	Transmission
74A	wcl_extra_switch	90H	Evap_Rly_Power	121	Transmission
74B	ReadingLampsLH	90H1	EvaporatorMain	122	DigitalClock
74C	ReadingLamp	91		123	FireAlarm
74D	ReadingLamps	91B	WitnessSigSw14	124	Transmission
75	wcl_extra_switch	92	TrailerParkBrakeSig	124A	ShifterSignal
75A	ReadingLampsLH	95	DockingLTSwSig	125	RetarderInd
76	FuelLevelSig	96	CorneringLTSwSig	126A	KneelingUpSwSig
76C	FuelLowLevelSig	97	E-RidePwr	126B	KneelingDownSwSig
76P	PrimePumpSig	99	Sw20Gnd	126C	ProximitySwSig
77	TransducerHi-Side	00A1	GndElectronic	126D	ProximitySwPwr
77B	PassandPRackLiquidValve	00B1	GndEng.Start	126E	Kneeling15PsiPress.Sw.
77BA	A/Cclutch	0V2	LuggageDoorOpenSig	126F	KneelingDownSol
77C	PassandPRackLiquidValve	0V3	LuggageDoorOpenSig	126G	KneelingUpSol
78	StoolLightSensorSig	0Y2	GndChassisABSSol	126H	KneelingCtrl.Sol

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
126J	KneelingHi-BuoySol	148	Transmission	170Y	Lugg_Door_Lock
126JR	GndKneeling	149	Transmission	170Z	Lugg_Door_Lock
126P	KneelingBuzzer	149A	ABSSensor	171	LuggageUnlockSwSig
127	Transmission	150	Transmission	172	ShifterSignal
127D	ChargerRlyGndSig	151	GndtoEcm	173	ShifterSignal
128	Transmission	151A	GndToEcm	174	ShifterSignal
128B	Pre-HeatTTLT	151B	GndToEcm	175	Transmission
129	Transmission	151C	GndToEcm	175A	ShifterSignal
130	Transmission	152	Transmission	176	ShifterSignal
131	Transmission	154	Transmission	177	Transmission
133	Transmission	155	WCLSignal	180	Transmission
135	Transmission	155Z	WCLSignal	180A	ShifterSignal
135A	HandLevelSig	156A	12VtoABS	181	OutsideSensorSig
136	Transmission	157B	ABSActive	188	AutomaticTagUnload
136A	TransmissionPwr	157C	ABSActive	195	Transmission
136AA	ShifterSignal	157D	ATCTTLT	197	FuelFilterSig
137	ServiceBrakeSig	159	Transmission	201	headlampwashersignal
137A	MirrorPwrSig	160	TagSignal	202	Headlampwasherpump
137B	Mirrors	162	Transmission	214	Reverse
137C	Mirrors	163	RetarderSig	225	LavatoryFan
137D	Mirrors	164	HandLevelSig	231	Neutral
137E	Mirrors	165	Transmission	231A	StarterRelay
137F	Mirrors	166	WitnessSigSw16	231B	StarterRelay
137H	Mirrors	167	Aux.A/CLowPressSig	240	PowertoEcm
137J	Mirrors	168	Aux.A/CHighPressSig	240A	PowertoEcm
137K	Mirrors	170	ShifterSignal	240B	PowertoEcm
137L	Mirrors	170A	Lugg_Door_Lock	241	PowertoEcm
137M	Mirrors	170B	Lugg_Door_Lock	241A	PowertoEcm
138	Transmission	170D	Lugg_Door_Lock	241B	PowertoEcm
138A	ABSSensor	170E	Lugg_Door_Lock	254	Frigo
139	Transmission	170F	Lugg_Door_Lock	260	escape_Hatch_sensor
140	Transmission	170G	Lugg_Door_Lock	290	GndFanClutch
141	Transmission	170H	Lugg_Door_Lock_Signal	291	FanClutch
142	ABSSolenoid	170L	LuggageLock_UnlockSig	292	FanClutch
143	ABSSensor	170M	LuggageLock_UnlockSig	293	FanClutchSwSig
143A	ShifterSignal	170N	LuggageLock_UnlockSig	300	WCLTopLightSliding
144	ABSSensor	170P	LuggageLock_UnlockSig	301	WheelChairLiftSwitch
144A	ABSSensor	170R	LuggageLock_UnlockSig	302	WCLRicon
145	ABSSolenoid	170S	ElectronicGnd	303	WCL
146	ABSSolenoid	170T	LuggageLock_UnlockSig	304	WheelChairLift
146A	TransmissionIgn	170V	LuggageLock_UnlockSig	305	ParkBrakeSol
147	EtherSignal	170W	LuggageLock_UnlockSig	305A	WCLUpperDoorSignal
147A	EtherSolenoid	170X	LuggageLock_UnlockSig	306	WCLTopLights

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
307	WCL	906	ZFTransmission	CanH1	SparesFr-to-RearHarness
308	WCL	907	ZFTransmission	CanH2	SpareCan
309	WCL	910	L_SPEAKER_HARNESS	CanHERide	
311	WCL	911	EmergencyCutoutRlySignal	CanL	CanLSignal
313	WCL	916	5VSensorPwr	CanL1	SparesFr-to-RearHarness
314	WCL_Se62	917	ZFTransmission	CanL2	SpareCan
352	SigtoFireExtin.Sys	918	ZFTransmission	CanL_ERide	
417	ThrottlePositionSignal	919	ZFTransmission	Cd	ComputerSignals
419	CheckEng.TTLT	930	ZFTransmission	Cd1	ComputerSignals
439	IgnitiontoEcm	932	ZFTransmission	Cd1_Gnd	SOUND_SYSTEM
509	StopEng.TTLT	952	GndSensorRtn	Cd1_L+	SOUND_SYSTEM
510	FastIdleSignal	953	Gnd_ECM	Cd1_R+	SOUND_SYSTEM
510A	FastIdleSignal	979	EngineBrakeLowSig	Cd2_Gnd	SOUND_SYSTEM
524	EngBraketoEcm	979A	EngineBrakeLowSig	Cd2_L+	SOUND_SYSTEM
524B	IdleValidationSig	ANT		Cd2_R+	SOUND_SYSTEM
528	OverrideSignal	AUX1	SOUND_SYSTEM	CD3_Gnd	SOUND_SYSTEM
541	CruiseSetSig	Aux1_Gnd	SOUND_SYSTEM	CD3_L+	SOUND_SYSTEM
542	ParkBrakeSig	Aux1_L+	SOUND_SYSTEM	CD3_R+	SOUND_SYSTEM
544	CruiseEnableSig	Aux1_R+	SOUND_SYSTEM	Chgr	Battery_Charger_Gnd
544A		AUX2	SOUND_SYSTEM	Chgr_C	SOUND_SYSTEM
545	CruiseResumeSig	Aux2_Gnd	SOUND_SYSTEM	Chgr_L	SOUND_SYSTEM
555	FanClutchSignal	Aux2_L+	SOUND_SYSTEM	Chgr_R	SOUND_SYSTEM
556	SpeedSignal	Aux_R+	SOUND_SYSTEM	Cts	ComputerSignals
563	FanClutchSignal	B1A	DirectLighting	DATA	SOUND_SYSTEM
564	StarterLockout	B1B	DirectLighting	DBusH	DBusSignal
564B	OutZFDecelSig	B2A	DirectLighting	DBusL	DBusSignal
565	Eng.BrakeActive	B2B	DirectLighting	DOWN	Flip_Down_Screen
583	EngineBrakeHiSig	B3A	DirectLighting	DRL+++	
700	ZFTransmission	B3B	DirectLighting	DSL+++	DRIVER_SPEAKERS
701	ZFTransmission	B4A	DirectLighting	DSL---	
705	ZFTransmission	B4B	DirectLighting	DSR+++	
706	ZFTransmission	B5A	DirectLighting	DSR---	
707	ZFTransmission	B5B	DirectLighting	DVD1_Gnd	Sound_System
717	ZFTransmission	B6A	DirectLighting	DVD1_L+	Sound_System
719	ZFTransmission	B6B	DirectLighting	DVD1_R+	Sound_System
723	ZFTransmission	B7A	DirectLighting	Dvd2_Gnd	SOUND_SYSTEM
740	ZFTransmission	B7B	DirectLighting	Dvd2_L+	SOUND_SYSTEM
761	ZFTransmission	Black		Dvd2_R+	SOUND_SYSTEM
770	ZFTransmission	BLK1	SOUND_SYSTEM	E3	Inv_MastrerelayToBreaker
900	J1587L	BLK2	SOUND_SYSTEM	FAKE	L_SPEAKER_HARNESS
901	J1587+	Bref1	PassengerSensor	FAKE1	R_SPEAKER_HARNESS
902	ZFTransmission	CAM2	SOUND_SYSTEM	FLIP	Flip_Down_Screen
905	TCISensorSig	CanH	CanHSignal	GndA	ComputerSignals

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
Green		N13	A47Address	SHD1	SOUND_SYSTEM
GRN1	SOUND_SYSTEM	N14	A47Address	SHD2	SOUND_SYSTEM
GRN2	SOUND_SYSTEM	N15	A48Address	SHIELD	jack_3_5mm
H1_L+	SOUND_SYSTEM	N16	A48Address	SHLD	SOUND_SYSTEM
H1_L-	SOUND_SYSTEM	N17	A49Address	SL13	L_SPEAKER_HARNESS
H1_R+	SOUND_SYSTEM	N18	A49Address	SL24	L_SPEAKER_HARNESS
H1_R-	SOUND_SYSTEM	N19	A50Address	SL35	L_SPEAKER_HARNESS
H2_L+	SOUND_SYSTEM	N20	A50Address	SL46	L_SPEAKER_HARNESS
H2_L-	SOUND_SYSTEM	N21	A51Address	SL57	L_SPEAKER_HARNESS
H2_R+	SOUND_SYSTEM	N22	A51Address	SL68	L_SPEAKER_HARNESS
H2_R-	SOUND_SYSTEM	N23	A52Address	SL1012	L_SPEAKER_HARNESS
HOSTESS	SOUND_SYSTEM	N24	A52Address	SL1113	L_SPEAKER_HARNESS
IPJ1	Cluster	N25	A53Address	SL1214	L_SPEAKER_HARNESS
IPJ2	Cluster	N26	A53Address	SL1315	L_SPEAKER_HARNESS
IPJ5	Cluster	N27	A54Address	SL1416	L_SPEAKER_HARNESS
IPJ6	Cluster	N28	A54Address	sp52	
IPJ7	Cluster	N29	A36Address	SpareLock_UnlockHarn	SpareLock_UnlockHarn
IPJ8	Cluster	NavSpk+++		spare1	SpareLock_UnlockHarn
J1939H	J1939Signals	NavSpk---		spare2	SpareLock_UnlockHarn
J1939L	J1939Signals	OP2	Inverter_Gnd	spare4	SparesEvap.Harness
LF+	PSRCEL_RACK_SOUND_HARNESS	ORA2		spare5	SparesEvap.Harness
LF-	SOUND_SYSTEM	PP1	for_inverter	spare6	SparesCondHarness
LR+	PSRCEL_RACK_SOUND_HARNESS	PV1	for_inverter	spare7	SparesCondHarness
LR-	SOUND_SYSTEM	R1A	DirectLighting	spare8	SparesEvap.Harness
LX5	ClusterKeyPad	R1B	DirectLighting	spare9	SparesEvap.Harness
LX6	ClusterKeyPad	R2A	DirectLighting	spare10	SparesInteriorLtsHarness
LX7	ClusterKeyPad	R2B	DirectLighting	spare11	SparesInteriorLtsHarness
LX16	ClusterKeyPad	RED	jack_3_5mm	spare12	SparesInteriorHarness
LX21	ClusterKeyPad	RED1	SOUND_SYSTEM	spare13	SparesInteriorHarness
L_DRIVER	SOUND_SYSTEM	RED2	SOUND_SYSTEM	spare14	SparesInteriorHarness
MUTE		Ref1	GndPassengerSensor	spare15	SparesInteriorHarness
N1	A41Address	Rem1		spare16	SparesInteriorHarness
N2	A41Address	Rem2		spare17	SparesFr-to-RearHarness
N3	A42Address	Rem3		spare18	SparesFr-to-RearHarness
N4	A42Address	RF+	SOUND_SYSTEM	spare19	SparesFr-to-RearHarness
N5	A43Address	RF-	SOUND_SYSTEM	spare20	SparesClearanceLts
N6	A43Address	RR+	DISTRIBUTION_SOUND_HARNESS	spare21	SparesClearanceLts
N7	A44Address	RR-	SOUND_SYSTEM	spare22	SparesClearanceLts
N8	A44Address	RT	ZFTransmission	spare23	SparesClearanceLts
N9	A45Address	Rts	ComputerSignals	spare24	SparesClearanceLts
N10	A45Address	RTV	SOUND_SYSTEM	spare25	SparesClearanceLts
N11	A46Address	R_DRIVER	SOUND_SYSTEM	spare26	SparesFrontHarness
N12	A46Address	RxD	ComputerSignals	spare27	SparesFrontHarness

CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
spare28	SparesFrontHarness	spare73	spare	White	
spare29	SparesFrontHarness	spare74	spare	WHT1	SOUND_SYSTEM
spare30	SparesFrontHarness	spare75	spare	WHT2	SOUND_SYSTEM
spare31	SparesFrontHarness	spare76	spare	Y1A	
spare32	SparesFrontHarness	spare77	spare	Y1B	
spare33	SparesFrontHarness	spare78	spare	Y2A	
spare34	SparesFrontHarness	spWcl1	SpareWCL	Y2B	
spare35	SparesFrontHarness	spWcl2	SpareWCL	Y3A	DirectLighting
spare36	SparesFrontHarness	SR13	FR_SPEAKER_HARNESS_	Y3B	DirectLighting
spare37	SparesFrontHarness	SR24	FR_SPEAKER_HARNESS_	Y4A	DirectLighting
spare38	SparesFrontHarness	SR35	FR_SPEAKER_HARNESS_	Y4B	DirectLighting
spare39	SparesDash	SR46	FR_SPEAKER_HARNESS_	Y5A	DirectLighting
spare40	SparesDash	SR57	FR_SPEAKER_HARNESS_	Y5B	DirectLighting
spare41	SparesDash	SR68	FR_SPEAKER_HARNESS_	Y6A	DirectLighting
spare42	SparesDash	SR911	R_SPEAKER_HARNESS_WCL	Y6B	DirectLighting
spare43	SparesDash	SR1012	R_SPEAKER_HARNESS_WCL	Y7A	DirectLighting
spare44	SparesDash	SR1113	R_SPEAKER_HARNESS_WCL	Y7B	DirectLighting
spare45	SpareEvapCmpt.	SR1214	R_SPEAKER_HARNESS_WCL		
spare46	SpareEvapCmpt.	SR1315	R_SPEAKER_HARNESS_WCL		
spare47	SpareEvapCmpt.	SR1416	R_SPEAKER_HARNESS_WCL		
spare49	SparesEngineCradle	Sub1+	SUBWOOFER_HARNESS		
spare50	SparesEngineCradle	Sub1-	SUBWOOFER_HARNESS		
spare51	SparesEngineCradle	Sub2+	SUBWOOFER_HARNESS		
spare52	SparesEngineCradle	Sub2-	SUBWOOFER_HARNESS		
spare53	SparesEngineCradle	SW	ZFTransmission		
spare54	SparesEngineCradle	TRIG1	SOUND_SYSTEM		
spare55	SparesEnginesAccessories	TRIG2	SOUND_SYSTEM		
spare56	SparesEnginesAccessories	TRIG3	SOUND_SYSTEM		
spare57	SparesEnginesAccessories	TRIG4	SOUND_SYSTEM		
spare58	SparesEnginesAccessories	TRIG5	SOUND_SYSTEM		
spare59	SparesEnginesAccessories	TxD	ComputerSignals		
spare60	SparesEnginesAccessories	UP	Flip_Down_Screen		
spare61	SparesEnginesAccessories	VHSRL+	Sound_System		
spare62	spareABSHarness	VHS_Gnd	Sound_System		
spare63	spareABSHarness	VHS_RL+	Sound_System		
spare64	Spare_Transmission	V_CAM+			
spare65	Spare_Transmission	V_CAM-			
spare66	spare	WC2	WCLRemoteCtrl		
spare67	spare	WC3	WCLRemoteCtrl		
spare68	SPARE_SOUND_SYST	WC4	WCLRemoteCtrl		
spare70	spare	WC6	WCLRemoteCtrl		
spare71	spare	WC7			
spare72	spare	WHITE	jack 3 5mm		