

EXT. TEMP DISPLAY


•1 - 12V PWR MUST BE TURNED ON
 •2 - 12V IGN MUST BE TURNED ON

C573

8 ← ENABLE
 7 ← CLK
 6 ← DATA
 5 ← GND
 4 ←
 3 ←
 2 ←
 1 ←

180-20
 180A-20
 180B-20
 180C-20

OUTSIDE TEMPERATURE SIGNAL FROM HVAC DASH MODULE C540 SEE P 15.1 OR 15.3

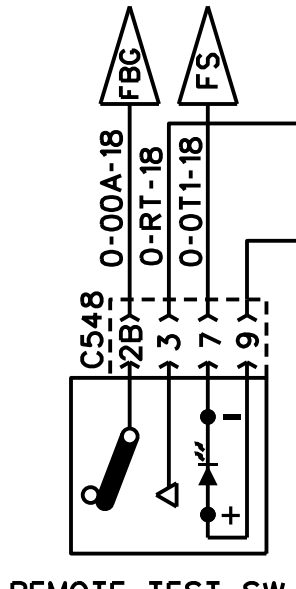

TELL TALE LIGHTS MODULE