

## RESISTORS NUMBER CODE

No	Location	Part #	Function	Page
Res1	FJB	563205	ABS	16.1
Res2	FJB	563205	PullDownresistor	28.1
Res3	RJB	563593	CAN_Nertwork	6.1
Res4	FJB	563593	CAN_Nertwork	6.1
Res5	Dash	563593	DBus_Network	6.1
Res6	FJB	563593	DBus_Network	6.1
Res7	RJB	563593	J1939_Resistor	7.1
Res8	Rear_Axle_Cmpt	563593	TerminaisonResistor	32.1
Res9	DashBoard	100R	CurrentLimitRes	10.1
Res10	RJBCloseECU	562470	SignalDropRes	15.1
Res11	Rear_Axle_Cmpt	563593	TerminaisonResistor	32.1
Res12	Engine_Cmpt	563593	J1939_Resistor	14.1
Res13	RJB	563154	ExcitationresistorAlt.1	3.2
Res14	RJB	563154	ExcitationresistorAlt.2	3.2
Res16	RJB	563006	UpperRearLampRH	26.2
Res17	RJB	563006	UpperRearLampLH	26.2