

# RELAYS LIST

No	Location	Part #	Function	Page	No	Location	Part #	Function	Page
R1	RJB	562364	MasterRelay	3.1	Res5	Dash	563593	DBus_Network	6.1
R2	RJB	563332	ZF_Trans_Easy_Start_Sol	15.2	Res6	FJB	563593	DBus_Network	6.1
R3	RJB	563348	12VIgn&AccRelay	3.1	Res7	RJB	563593	J1939_Resistor	7.1
R5	RJB	563332	Charging_Relay_Optionnal	17.1	Res8	Rear_Axle_Cmpt	563593	TerminaisonResistor	32.1
R6	RJB	563332	DirectLightsRelay	24.1	Res9	DashBoard	100R	CurrentLimitRes	10.1
R8	FuseBoxRJB	563269	ServiceBrakeRelay	12.1					
R10	Evap_Cmpt	563348	CondensorPowerRelay	18.2					
R11	RJB_VECR	563332	ZFIgn	5.1					
R12	RJB	563348	EvaporatorRelay	18.2					
R13	RJB	563332	IndirectLightRelay	23.1					
R14	RJB	561991	ReadingLampRelay	22.1					
R15	RJB	563332	Aisle&Emerg.Lts	20.1					
R16	DashBoard	561706	AudibleFlasherRelay	26.1					
R17	RJB	561991	12vRrWUpRelay	3.3					
R18	FJB	561991	24vFrWUpRelay	3.3					
R19	FJB	561991	12vFrWUpRelay	3.3					
R20	RJB	563332	WaterPumpRelay	17.1					
R21	RJB	563269	EmergencyCutoutRelay	3.2					
R22	FuseBoxFJB	563269	EngineBrakeRelay	12.1					
R23	RHConsole	563332	LowerWiperRelay	34.1					
R25	RJB_VECR	563332	Ecmlgn	5.1					
R26	Evap_Cmpt	563332	Pre-HeatRelay	18.2					
R30	RJB	563332	Lugg_Door_Lock	33.1					
R31	RJB	563332	Lugg_Door_Lock	33.1					
R32	RJB	563332	Lugg_Door_Unlock	33.1					
R33	RJB	563332	Lugg_Door_Unlock	33.1					
R_AMPLI	Parcel_Rack_LH_1st_Cmpt_	561991	SOUND_SYSTEM	35					
R_Tv	Parcel_Rack_LH_1st_Cmpt_	563337	SOUND_SYSTEM	35					
R-12VISS	Parcel_Rack_LH_1st_Cmpt_	563337	SOUND_SYSTEM	35					
Res1	FJB	563205	ABS	16.1					
Res10	RJBcloseECU	562470	SignalDropRes	15.1					
Res11	Rear_Axle_Cmpt	563593	TerminaisonResistor	32.1					
Res12	Engine_Cmpt	563593	J1939_Resistor	14.1					
Res13	RJB	563154	ExcitationresistorAlt.1	3.2					
Res14	RJB	563154	ExcitationresistorAlt.2	3.2					
Res16	RJB	563006	UpperRearLampRH	26.2					
Res17	RJB	563006	UpperRearLampLH	26.2					
Res2	FJB	563205	PullDownresistor	28.1					
Res3	RJB	563593	CAN_Network	6.1					
Res4	FJB	563593	CAN_Network	6.1					