

## Relays list

No	Location	Part #	Function	Page
R-12VISS	RJB	563332	VSS	35.6_VSS05 6 F
R1	RJB	562364	Master Relay	3.1_Main_Disti 2 A
R3	RJB	563348	12v Ign & Acc Relay	3.1_Main_Disti 2 B
R4	RJB	563332	Cut off water preheater	38.1_Fire_Supp 3 B
R5	RJB	563332	Charging_Relay_Optionnal	17.1_Pre_Heat 3 C
R12	Evap_Cmpt	563348	Evaporator Relay	18.2_HvacPass 4 C
R20	RJB	563332	Water Pump Relay	17.1_Pre_Heat 3 B
R21	FJB_VECF	563269	Emergency cutout relay	4.1_Dist_12V_FJB 1 B
R22	FJB_VECF	563269	Ecu Ign	4.1_Dist_12V_FJB 1 C
R23	FJB_VECF	563269	Shutdown	4.1_Dist_12V_FJB 1 D
R24	FJB_VECF	563269	Ecu IShift	4.1_Dist_12V_FJB 1 D
R25	FJB_VECF	563269	24V Ign	4.2_Dist_24V_FJB 1 C
R26	Evap_Cmpt	563332	Pre-Heat Relay	18.2_HvacPass 3 B
R27	RH Console	563332	Wipers	34.1_wiper_washer 3 C
R29	RJB	563348	Preheater Volvo	14.1_Engine_Ecu 2 E
R30	RJB	563269	12v ENG RUN	4.1_Dist_12V_FJB 4 A
R31	RJB	563269	12v IGN	4.1_Dist_12V_FJB 4 B
R34	RJB	564218	12v Rr Engine Ecu	3.2_Ign_Start 3 C
R36	RJB	563269	Fire extinguisher	9.1_Horn 1 A
R37	RJB	563269	Electric horn	9.1_Horn 2 B
R38	RJB	563269	Cigar lighter relay / 12V Outlet	30.2_Outlet_12v 1 B
R40	RJB	563332	Transmission IShift	15.2_Trans_IShift 1 D
R47	WCL Pump	563332	WCL Door Open	36.1_WCL_Ricon 6 C
R52	RJB_VECT	563270	Position lights & side markers (Trailer interface)	26.4_Trailler_interface
R53	RJB_VECT	563270	Flashers left side (Trailer interface)	26.4_Trailler_interface
R54	RJB_VECT	563270	Brake lights (Trailer interface)	26.4_Trailler_interface
R55	RJB_VECT	563270	Flashers right side (Trailer interface)	26.4_Trailler_interface
R56	RJB_VECT	563270	Tail lights & licence lights (Trailer interface)	26.4_Trailler_interface
R72	Under lavatory	563348	Inverter Relay 1	40.1_Inverters 3 C
R73	Under lavatory	563348	Inverter Relay 2	40.1_Inverters 3 C
R_Starter	RJB	564095	Starter Relay Ctr	3.2_Ign_Start 3 D