

Fuses list

No	Location	Part #	Function	Rating	Page
F4	Fuse Box FJB	563280	Trans IShift & Volvo link	5 A	4.2_Dist_24V_FJB 2 B
F10	Fuse Box FJB	563280	Networks, Cluster & lights	5 A	4.1_Dist_12V_FJB 1 A
F11	Fuse Box FJB	563284	Horn	15 A	4.1_Dist_12V_FJB 1 A
F12	Fuse Box FJB	563284	Spares VECF	15 A	4.1_Dist_12V_FJB 1 A
F13	Fuse Box FJB	563284	12VD Customer	15 A	4.1_Dist_12V_FJB 1 A
F14	Fuse Box FJB	563280	Spares VECF	5 A	4.1_Dist_12V_FJB 1 A
F15	Fuse Box FJB	563280	Spares VECF	5 A	4.1_Dist_12V_FJB 1 A
F16	Fuse Box FJB	563284	12V Eng. run	15 A	4.1_Dist_12V_FJB 1 A
F17	Fuse Box FJB	563165	Multiplex power	30 A	4.1_Dist_12V_FJB 1 A
F18	Fuse Box FJB	563165	Multiplex power	30 A	4.1_Dist_12V_FJB 1 A
F19	Fuse Box FJB	563165	Multiplex power	30 A	4.1_Dist_12V_FJB 1 A
F20	Fuse Box FJB	563280	Multiplex power	5 A	4.1_Dist_12V_FJB 1 A
F21	Fuse Box FJB	563165	Multiplex power	30 A	4.1_Dist_12V_FJB 1 B
F22	Fuse Box FJB	563280	Cadec	5 A	4.1_Dist_12V_FJB 1 B
F23	Fuse Box FJB	563165	ESP	30 A	4.1_Dist_12V_FJB 1 B
F24	Fuse Box FJB	563280	12V Ign	5 A	4.1_Dist_12V_FJB 1 B
F25	Fuse Box FJB	563284	12V outlets	15 A	4.1_Dist_12V_FJB 1 B
F26	Fuse Box FJB	563284	Spares VECF	15 A	4.1_Dist_12V_FJB 1 B
F27	Fuse Box FJB	563283	Spares VECF	10 A	4.1_Dist_12V_FJB 1 B
F29	Fuse Box FJB	563283	Networks	10 A	4.1_Dist_12V_FJB 1 C
F30	Fuse Box FJB	563280	Networks	5 A	4.1_Dist_12V_FJB 1 C
F33	Fuse Box FJB	563280	Multiplex power	5 A	4.2_Dist_24V_FJB 2 B
F34	Fuse Box FJB	563280	Multiplex power	5 A	4.2_Dist_24V_FJB 2 B
F35	Fuse Box FJB	563280	Multiplex power	5 A	4.2_Dist_24V_FJB 2 A
F36	Fuse Box FJB	563280	Start switch	5 A	4.2_Dist_24V_FJB 2 A
F37	Fuse Box FJB	563280	24 VD	5 A	4.2_Dist_24V_FJB 2 A
F39	Fuse Box FJB	563284	24 VD	15 A	4.2_Dist_24V_FJB 2 B
F40	Fuse Box FJB	563280	Fire suppression	5 A	4.2_Dist_24V_FJB 2 B
F41	Fuse Box FJB	563280	Spares VEF	5 A	4.2_Dist_24V_FJB 2 B
F42	Fuse Box FJB	563283	Transmission IShift	10 A	4.1_Dist_12V_FJB 1 D
F43	Fuse Box FJB	563282	Transmission IShift	20 A	4.1_Dist_12V_FJB 1 D
F44	Fuse Box FJB	563165	Multiplex power	30 A	4.2_Dist_24V_FJB 2 B
F45	Fuse Box FJB	563165	Multiplex power	30 A	4.2_Dist_24V_FJB 2 B

Fuses list

No	Location	Part #	Function	Rating	Page
F46	Fuse Box FJB	563280	Multiplex power	5 A	4.2_Dist_24V_FJB 2 B
F47	Fuse Box FJB	563280	Multiplex power	5 A	4.2_Dist_24V_FJB 2 B
F50	Fuse Box FJB	563165	HVAC defroster	30 A	4.2_Dist_24V_FJB 2 C
F51	Fuse Box FJB	563280	Destination signs	5 A	4.2_Dist_24V_FJB 2 C
F52	Fuse Box FJB	563280	Spares VERF	5 A	4.2_Dist_24V_FJB 2 C
F53	Fuse Box FJB	563283	Clock & VSS	10 A	4.2_Dist_24V_FJB 2 C
F54	Fuse Box FJB	563284	Spares VERF	15 A	4.2_Dist_24V_FJB 2 C
F55	Fuse Box FJB	563283	Spares VERF	10 A	4.2_Dist_24V_FJB 2 D
F56	Fuse Box FJB	563284	Spares VERF	15 A	4.2_Dist_24V_FJB 2 D
F57	Fuse Box FJB	563283	Spares VERF	10 A	4.2_Dist_24V_FJB 2 D
F58	Fuse Box FJB	563284	Spares VERF	15 A	4.2_Dist_24V_FJB 2 D
F73	Fuse Box RJB	563282	Engine ECU Volvo	20 A	5.1_Dist_RJB 2 B
F90	Fuse Box RJB	563282	Urea system	20 A	5.1_Dist_RJB 1 A
F91	Fuse Box RJB	563282	Engine ECU Volvo	20 A	5.1_Dist_RJB 2 A
F95	Fuse Box FJB	563280	Trans Alisson & Volvo link	5 A	4.2_Dist_24V_FJB 2 C
F96	Fuse Box RJB	563282	Urea system	20 A	5.1_Dist_RJB 1 C
F99	Fuse Box RJB	563165	Engine ECU Volvo	30 A	5.1_Dist_RJB 1 A
F100	Fuse Box RJB	563283	Engine ECU Volvo	10 A	5.1_Dist_RJB 2 A
F101	Fuse Box RJB	564520	Power for Master relay	300 A	3.1_Main_Disti 3 A
F105	Fuse Box RJB	563282	Spares VECR	20 A	5.1_Dist_RJB 2 A
F106	Fuse Box RJB	563163	Multiplex power	30 A	5.1_Dist_RJB 1 A
F107	Fuse Box RJB	563163	Multiplex power	30 A	5.1_Dist_RJB 2 A
F108	Fuse Box RJB	563280	Networks	5 A	5.1_Dist_RJB 1 B
F109	Fuse Box RJB	563280	Engine & RJB cmpt. lights	5 A	5.1_Dist_RJB 2 B
F110	Fuse Box RJB	563283	Transmission Alisson	10 A	5.1_Dist_RJB 1 B
F112	Fuse Box RJB	563165	Trailer interface	30 A	5.1_Dist_RJB 1 B
F113	Fuse Box RJB	563283	Spares VECR	10 A	5.1_Dist_RJB 2 B
F114	Fuse Box RJB	563284	Spares VECR	15 A	5.1_Dist_RJB 1 B
F115	Fuse Box RJB	563283	Spares VECR	10 A	5.1_Dist_RJB 2 B
F116	Fuse Box RJB	563284	Spares VECR	15 A	5.1_Dist_RJB 1 B
F117	Fuse Box RJB	563283	Spares VECR	10 A	5.1_Dist_RJB 2 B
F118	Fuse Box RJB	563284	Spares VECR	15 A	5.1_Dist_RJB 1 B
F119	Fuse Box RJB	563283	Spares VECR	10 A	5.1_Dist_RJB 2 B

Fuses list

No	Location	Part #	Function	Rating	Page
F120	Fuse Box RJB	563284	Spares VECR	15 A	5.1_Dist_RJB 1 B
F121	Fuse Box RJB	563284	Power for customer	15 A	5.1_Dist_RJB 2 B
F122	Fuse Box RJB	563283	Spares VECR	10 A	5.1_Dist_RJB 2 C
F123	Fuse Box RJB	563153	Pre-heat	25 A	5.1_Dist_RJB 1 C
F124	Fuse Box RJB	563153	Pre-heat	25 A	5.1_Dist_RJB 2 C
F126	Fuse Box RJB	563280	Engine ECU & HVAC	5 A	5.1_Dist_RJB 2 C
F127	Fuse Box RJB	563284	Pre-heat	15 A	5.1_Dist_RJB 1 C
F129	Fuse Box RJB	563284	Spares VECR	15 A	5.1_Dist_RJB 1 C
F130	Fuse Box RJB	563284	Spares VECR	15 A	5.1_Dist_RJB 2 C
F131	Fuse Box RJB	563280	Power for customer	5 A	5.1_Dist_RJB 1 C
F132	Fuse Box RJB	563280	Multiplex power	5 A	5.1_Dist_RJB 1 C
F133	Fuse Box RJB	563165	Multiplex power	30 A	5.1_Dist_RJB 2 D
F134	Fuse Box RJB	563165	Multiplex power	30 A	5.1_Dist_RJB 1 D
F135	Fuse Box RJB	563165	Multiplex power	30 A	5.1_Dist_RJB 2 D
F136	Fuse Box RJB	563165	Multiplex power	30 A	5.1_Dist_RJB 1 D
F137	Fuse Box RJB	563280	Equalizer	5 A	5.1_Dist_RJB 2 D
F138	Fuse Box RJB	563280	Reading lamps & chime	5 A	5.1_Dist_RJB 1 D
F139	Fuse Box RJB	563283	Alternators	10 A	5.1_Dist_RJB 2 D
F140	Fuse Box RJB	563283	Spares VECR	10 A	5.1_Dist_RJB 1 D
F141	Fuse Box RJB	563284	Spares VECR	15 A	5.1_Dist_RJB 2 D
F142	Fuse Box RJB	563283	Spares VECR	10 A	5.1_Dist_RJB 1 D
F143	Fuse Box RJB	563284	Spares VECR	15 A	5.1_Dist_RJB 2 D
F144	Fuse Box RJB	563283	Spares VECR	10 A	5.1_Dist_RJB 1 D
F145	Fuse Box RJB	563284	Spares VECR	15 A	5.1_Dist_RJB 2 D
F146	Fuse Box RJB	563283	Spares VECR	10 A	5.1_Dist_RJB 1 D
F147	Fuse Box RJB	563284	Power for customer	15 A	5.1_Dist_RJB 2 D
F148	Fuse Box RJB	563165	VSS	30 A	5.1_Dist_RJB 2 E
F149	Fuse Box RJB	563284	Spares VECR	15 A	5.1_Dist_RJB 1 E
F150	Fuse Box RJB	563283	Spares VECR	10 A	5.1_Dist_RJB 2 E
F151	Fuse Box RJB	563284	Spares VECR	15 A	5.1_Dist_RJB 1 E
F152	Fuse Box RJB	563283	Spares VECR	10 A	5.1_Dist_RJB 2 E
F199	RJB	564520	Fans electric drive	300 A	13.1_FanDriveElectric 0 B
F200	Parcel_Rack_LH_1st_Cmpt_	563284	12V VSS power	15 A	35.6_VSS05 4 F

Fuses list

No	Location	Part #	Function	Rating	Page
F201	Parcel_Rack_LH_1st_Cmpt_	563284	12V VSS power	15 A	35.6_VSS05 4 G
F202	Parcel_Rack_LH_1st_Cmpt_	563284	24V VSS power	15 A	35.6_VSS05 4 G
F203	Parcel_Rack_LH_1st_Cmpt_	563282	24V VSS power	20 A	35.6_VSS05 4 G
F209	RJB	564174	Engine pre-heater power	150 A	14.1_Engine_Ecu 3 E
F243	RJB	560893	24V while Evap. relay powered	3 A	18.2_HvacPass 4 C
F250	Parcel_Rack_LH	563283	Cadec Fuse box 3	10 A	42.1_Cadec_SP1 1 B
F251	Parcel_Rack_LH	563283	Cadec Fuse box 3	10 A	42.1_Cadec_SP1 1 B
F252	Parcel_Rack_LH	563283	Cadec Fuse box 3	10 A	42.1_Cadec_SP1 1 B
F253	Parcel_Rack_LH	563283	Cadec Fuse box 3	10 A	42.1_Cadec_SP1 1 B
F254	Parcel_Rack_LH	563283	Cadec Fuse box 4	10 A	42.1_Cadec_SP1 1 C
F255	Parcel_Rack_LH	563283	Cadec Fuse box 4	10 A	42.1_Cadec_SP1 1 C
F256	Parcel_Rack_LH	563283	Cadec Fuse box 4	10 A	42.1_Cadec_SP1 1 C
F257	Parcel_Rack_LH	563283	Cadec Fuse box 4	10 A	42.1_Cadec_SP1 1 C
F258	Parcel_Rack_LH	563283	Cadec Fuse box 5	10 A	42.1_Cadec_SP1 1 D
F259	Parcel_Rack_LH	563283	Cadec Fuse box 5	10 A	42.1_Cadec_SP1 1 D
F300	VECT (Spare)	563153	Trailer interface	25 A	26.4_Trailler_interface
F301	VECT (Spare)	563284	Trailer interface	15 A	26.4_Trailler_interface
F302	VECT (Position lights & side markers)	563284	Trailer interface	15 A	26.4_Trailler_interface
F303	VECT (Flashers left side)	563284	Trailer interface	15 A	26.4_Trailler_interface
F304	VECT (Brake lights)	563284	Trailer interface	15 A	26.4_Trailler_interface
F305	VECT (Flashers right side)	563284	Trailer interface	15 A	26.4_Trailler_interface
F306	VECT (Tail & licence lights)	563284	Trailer interface	15 A	26.4_Trailler_interface
F307	VECT (Aux. & ABS power)	563153	Trailer interface	25 A	26.4_Trailler_interface
F308	VECT (Spare)	563284	Trailer interface	15 A	26.4_Trailler_interface
F309	VECT (Spare)	563284	Trailer interface	15 A	26.4_Trailler_interface
F310	VECT (Spare)	563284	Trailer interface	15 A	26.4_Trailler_interface
F311	VECT (Spare)	563283	Trailer interface	10 A	26.4_Trailler_interface
F312	VECT (Spare)	563283	Trailer interface	10 A	26.4_Trailler_interface
F313	VECT (Spare)	563283	Trailer interface	10 A	26.4_Trailler_interface
F314	VECT (Spare)	563283	Trailer interface	10 A	26.4_Trailler_interface