

## RELAYS CODE (R)

Page 1:1

NO.	PAGE	COIL V	#PREVOST	LOCATION	FUNCTION
R1	1	24V	561991	FR JCT BOX	ENGINE RUN (24) FR
R2	2	24V	561991	BATT. CPT.	ENGINE RUN (12) FR & RR
R3	4	24V	561707	BATT. CPT.	FIELD RELAY
R4	4	24V	561005	BATT. CPT.	STARTING MOTOR
R5	5	24V	561707	FR JCT BOX	CRUISE CTR. STOP SIGN.
R6	11	24V	561707	RR JCT BOX	STOP LTS-PARKING BRAKE
R7	5	24V	561707	FR JCT BOX	FAST IDLE
R8	6	24V	561707	RR JCT BOX	12V IGNITION WT
R9	11	24V	561707	RR JCT BOX	BACK-UP LTS
R11	5	24V	561707	RR JCT BOX	12V IGNITION DDEC3
R12	7	12V	562092	FR JCT BOX	ELECTRICAL HORNS
R13	11	24V	561707	FR JCT BOX	FOG LTS
R14	9	24V	561707	FR JCT BOX	BLINKER
R15	9	24V	561707	FR JCT BOX	FR MARKER LTS
R16	9	24V	561707	FR JCT BOX	IDENT. & CLEARANCE LTS
R17	9	24V	561707	RR JCT BOX	TAIL,LICENCE,MARKER-RR LTS
R18	9	24V	561707	FR JCT BOX	D R L-PARK BRK CUT-IN
R19	9	24V	561707	FR JCT BOX	HEADLAMPS (HI)
R20	9	24V	561707	FR JCT BOX	HEADLAMPS (LO)
R21	10	24V	561707	FR JCT BOX	L.H. DIRECTIONNAL LT
R22	7	24V	561707	FR JCT BOX	PARKING BRAKE - ALARM
R23	10	24V	561707	FR JCT BOX	R.H. DIRECTIONNAL LT
R24	10	24V	561707	FR JCT BOX	R.H. CORNERING LT
R25	10	24V	561707	FR JCT BOX	L.H. CORNERING LT
R26	11	24V	561707	RR JCT BOX	STOP LTS
R28	14	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT
R33	18	12V	561538	FR JCT BOX	BLOWER CUT-IN RLY
R34	18	24V	561707	A/C JCT BOX	A/C LOGIC PANEL
R35	18	24V	561707	A/C JCT BOX	WATER PUMP
R36	18	24V	561707	A/C JCT BOX	A/C COMPRESSOR CLUTCH
R39	19	24V	560407	A/C JCT BOX	CONDENSER FAN MOTOR
R40	19	24V	561014	A/C JCT BOX	CONDENSER SPEED CTR HI
R41	19	24V	560407	A/C JCT BOX	CONDENSER SPEED CTR HI
R46	24	12V	562092	RR JCT BOX	CAMERA DOOR
R49	26	24V	561707	FR JCT BOX	ABS - SERVICE BRK RLY
R50	26	24V	561707	FR JCT BOX	ABS - VR2 RLY
R51	26	24V	561707	FR JCT BOX	ABS - WARNING RLY
R52	26	24V	561707	FR JCT BOX	ABS - VR1 RLY
R53	1	24V	561991	RR JCT BOX	ENGINE RUN (24) RR
R54	1	24V	561991	BATT. CPT.	12V CUT OUT RLY RR
R55	1	24V	561991	BATT. CPT.	12V CUT OUT RLY FR
R57	9	24V	561707	FR JCT BOX	DAY'S BLINKER
R59	11	24V	561707	RR JCT BOX	DOCKING LTS
R60	9	12V	561538	FR JCT BOX	DAYTIME RUN LTS
R61	11	24V	561707	RR JCT BOX	STOP LTS-JACOB & RET. SIGNAL
R64	14	12V	562092	FR JCT BOX	ENTRANCE DOOR Sw. & LTS
R65	10	24V	561707	FR JCT BOX	CORNERING LTS CONTROL
R66	10	24V	561707	FR JCT BOX	LOW DOCKING-FR (CORNERING)
R67	11	24V	561707	RR JCT BOX	LOW DOCKING LTS
R68	26	24V	561557	FR JCT BOX	SOUND SYSTEM CUT IN
R69	15	12V	562092	RR JCT BOX	LUGGAGE DOOR LOCK
R70	15	12V	562092	RR JCT BOX	LUGGAGE DOOR UNLOCK
R71	15	24V	561707	RR JCT BOX	LUGGAGE DOOR UNLOCK T.T. LT.
R74	15	12V	562092	RR JCT BOX	LUGGAGE DOOR LOCK
R75	15	12V	562092	RR JCT BOX	LUGGAGE DOOR UNLOCK
R78	1	12V	561538	FR JCT BOX	MASTER SWITCH
R80	13	24V	561707	RR JCT BOX	ENGINE COMPARTMENT LTS
R82	25	24V	561707	FR JCT BOX	RETARDER WT

## RELAYS CODE (R)

Page 1:1

NO.	PAGE	COIL V	#PREVOST	LOCATION	FUNCTION
R83	9	12V	561538	FR JCT BOX	DAYTIME RUN LTS
R84	8	24V	561707	RR JCT BOX	FAN CLUTCH-FIRST SPEED
R85	8	24V	561707	RR JCT BOX	FAN CLUTCH-SECOND SPEED
R87	25	24V	561707	RR JCT BOX	ENGINE BRAKE REQUEST WT
R88	11	24V	561707	RR JCT BOX	DOCKING LTS WITH FLASHER (SPECIAL)
R89	16	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R90	16	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R91	16	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R92	16	24V	561707	FR JCT BOX	HEATING WINDSHIELD
R93	17	24V	561707	RR JCT BOX	PRE-HEAT WATER HEATER (WEBASTO)
R99	8	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
RF1	8	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 1
RF2	8	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. SPEED 2
RF3	8	24V	561707	RR JCT BOX	FAN CLUTCH W/RET. TIME DELAY
VIMN	6	12V	562092	RR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
VIMR	6	12V	562092	RR JCT BOX	VIM WORLD TR.-B/U SIGNAL
VIM1	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 1
VIM2	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
VIM3	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 3 SPD SW. 5MPH NO NC
VIM4	6	12V	562092	RR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARDER ON SIGNAL