

No.	SYSTEM	No.	SYSTEM
0	BC - BAT. CPT GRD	0X2	FR JCT BOX CPT GRD STUD
0	CONDENSER CPT GRD	0Y	RR JCT BOX GRD
0	A/C - A/C JCT BOX GRD	0Y	FR JCT BOX CPT GRD STUD
0	FJB - FR JCT BOX GRD	0Y	ABS FR JCT BOX CPT GRD STUD
0A	A/C - A/C JCT BOX GRD	0Y1	ABS FR JCT BOX CPT GRD STUD
0A	FRS - FR ROOF ACCES. GRD	0Z	FR JCT BOX CPT GRD STUD
0A	RS - LUG. CPT ACCES. GRD	0Z	RR JCT BOX CPT GRD STUD
0A	AJB - ALARM JCT BOX GRD	00	RR JCT BOX CPT BATT. GRD
0A	FJB - FR JCT BOX GRD	1	TACHO SYSTEM
0AA	RS - VOLTAGE REGULATOR GRD	2B	A/C & HEAT SYSTEM-COOL 1 SIGN
0B	EC - ENGINE GRD	2C	A/C & HEAT SYSTEM-LO PRESS SW
0B	FRS - FR ROOF HEAT WIND GRD	2D	A/C & HEAT SYSTEM-LO PRESS TT LT
0B	FS - FR ROOF ACCES. GRD	8	TACHOMETER GRD SHIELD
0B	RS - LUG. CPT ACCES. GRD	9	INTERIOR LTS-ENGINE CPT
0B	A/C - A/C JCT BOX GRD	9A	INTERIOR LTS-ENGINE CPT
0B	FJB - FR JCT BOX GRD	9E	INTERIOR LTS-FR SERVICE CPT
0BE	RJB - BAT. EQUAL. BAT GRD	9F	INTERIOR LTS-FR SERVICE CPT
0C	EC - STARTER MOTOR GRD	10	INTERIOR LTS-LUGGAGE CPT
0C	BAT. EQUALIZER GRD	10A	INTERIOR LTS-LUGGAGE CPT
0C	FS - SERV. CPT ACCES. GRD	10B	INTERIOR LTS-LUGGAGE CPT
0C	RS - ENGINE ACCES. GRD	10D	INTERIOR LTS-LUGGAGE CPT
0C	RJB - SPEED SW. BATT. GRD	10F	INTERIOR LTS-LUGGAGE CPT
OCR	24V DISC. SW. RLY GRD SIGNAL	10H	INTERIOR LTS-LUGGAGE CPT
OCS	24V DISC. SW. RLY GRD SIGNAL	10K	INTERIOR LTS-LUGGAGE CPT
OD	FS - SERV. CPT ACCES. GRD	10R	INTERIOR LTS-LUGGAGE DOOR AJAR
ODF	RS - RR SIDE FLASH & MARK GRD	12	BAT CPT 12V BATTERY
OE	FS - FR LAMPS GRD	12	FR JCT BOX 12V DISC SW
OE2	FRS - HEAD & CORNERING LTS GRD	12	12V BAT CPT JCT BLOCK
OEE	FRS - HEAD & CORNERING LTS GRD	12A	FR JCT BOX 12V DISC SW
OG	FS - INSTR. PANEL LH GRD	12A	RR JCT BOX 12V DISC SW
OH	FS - INSTR. PANEL CENT GRD	12B	FR JCT BOX 12V DISC SW
OJ	FS - INSTR. PANEL RH GRD	12B	12V BAT CPT JCT BLOCK
OJ	FS - SW CONSOLE LH GRD	12BE	BAT. EQUALIZER MONITOR
OJ	RS - RR ROOF ACCES. GRD	12C	FR JCT BOX 12V DISC SW
OK	RS - RR ROOF ACCES. GRD	12D	BAT CPT 12V BATTERY
OL	RS - ENGINE CPT ACCES. GRD	12E	FR JCT BOX 12V DISC SW
OL	FS - UNDER DASH RH GRD	12E	RR JCT BOX 12V DISC SW
OLH	RS - RR END LAMPS LH GRD	12F	FR JCT BOX 12V DISC SW
OM	RS - ENGINE CPT ACCES. GRD	12F	RR JCT BOX 12V DISC SW
OM	FS - UNDER DASH RH GRD	12F	BAT CPT 12V FJB & IC
OMR	24V DISC. SW. RLY GRD SIGNAL	12I	RR JCT BOX 12V IGNITION
OMS	24V DISC. SW. RLY GRD SIGNAL	12I	12V IGNITION DISTRIBUTION
ON	FS - UNDER DASH RH GRD	12IA	FR JCT BOX 12V IGNITION
ON	RS - ENGINE CPT ACCES. GRD	12IA	12V IGNITION DISTRIBUTION
OP	FS - ALARM JCT BOX GRD	12IB	FR JCT BOX 12V IGNITION
OP	RS - ENGINE CPT ACCES. GRD	12IF	FR JCT BOX 12V IGNITION
OR	FS - UNDER DASH LH GRD	12R	BAT CPT 12V DISC RLY TO RJB
OR	RS - ENGINE CPT ACCES. GRD	12SS	FJB TO BAT 12V HOT WIRE
ORH	RS - RR END LAMPS RH GRD	12VA	BATTERY TO EQUALIZER 12V
OT	FS - LUG. CPT ACCES. GRD	12VD	12V HOT WIRE DISTRIBUTION
OV	RR JCT BOX CPT GRD STUD	12VF	BAT CPT 12V FJB & IC
OV	FS - FR JCT BOX CPT GRD STUD	12VI	12V IGNITION DISTRIBUTION
OVA	BATTERY TO EQUALISER OV	12VR	BAT CPT 12V DISC RLY TO RJB
OW	FS - UNDER DASH CENT GRD	12W	12V BATTERY DDEC III
OW	RS - RR JCT BOX GRD	12X	FR JCT BOX 12V DISC SW
OW	FS - FR JCT BOX CPT GRD STUD	12X2	FR JCT BOX 12V DISC SW
OWB	PRE-HEAT WATER HEATER	12Y	FR JCT BOX 12V DISC SW
OX	FS - TO LH CONS. C483 NOT USED	13A	ALARM & SIGNAL-LO AIR PRIM.
OX	FR JCT BOX CPT GRD STUD	13B	ALARM & SIGNAL-LO AIR SEC.
OX	RS - RR JCT BOX GRD		

No.	SYSTEM	No.	SYSTEM
15	EXTERIOR LTS-MULTI FUNC LEVEL	24S	24V DISC SW RLY SIGNAL
15A	WIPER & WASHER UPPER WINDSHIELD	24T	RR JCT BOX 24V DISC SW
16	SPEEDO - SIGN	24V2	RR JCT BOX 24V DISC SW
16S	SPEEDO - TRANSMITTER	24V3	RR JCT BOX 24V DISC SW
16T	SPEEDO - TRANSMITTER	24V4	RR JCT BOX 24V DISC SW
17	EXTERIOR LTS-FLASHER UNIT	24V5	RR JCT BOX 24V DISC SW
17A	EXTERIOR LTS-FLASHER UNIT	24VA	BATTERY TO EQUALIZER 24V
19	DIFFERENTIAL OIL TEMP	24VD	24V HOT WIRE DISTRIBUTION
20	SPEEDO - NEGATIVE SIGN	24VF	BAT CPT 24V SW TO FJB & IC
20T	SPEEDO - NEGATIVE SIGN	24VI	RR JCT BOX 24V IGNITION
21	EXTERIOR LTS-DIRECTIONNAL LH	24VR	BAT CPT 24V DISC SW TO RJB
21A	EXTERIOR LTS-DIRECTIONNAL LH	24X	FR JCT BOX 24V DISC SW
21B	EXTERIOR LTS-HAZARD	24X2	FR JCT BOX 24V DISC SW
21C	EXTERIOR LTS-CORNERING LH	24Y	FR JCT BOX 24V DISC SW
21H	EXTERIOR LTS-DIRECTIONNAL LH	24Y2	FR JCT BOX 24V DISC SW
21K	EXTERIOR LTS-CORNERING	25	12VAC GEN RLY ON SIGNAL
21N	EXTERIOR LTS-CORNERING LH	25A	NOT GENERATOR-WARNING LT
21R	EXTERIOR LTS-HI CORNERING	25B	EXTERIOR LTS-DAYTIME RUN LTS
21P	EXTERIOR LTS-CORNERING LH	26	DRIVER'S WINDOW LIFTER
23	EXTERIOR LTS-DIRECTIONNAL RH	26	CIGAR LIGHTER
23	EXTERIOR LTS-DIRECTIONNAL RH	26A	CIGAR LIGHTER
23A	EXTERIOR LTS-DIRECTIONNAL RH	26B	DRIVER'S WINDOW LIFTER
23B	EXTERIOR LTS-DIRECTIONNAL RH	26C	DRIVER'S WINDOW LIFTER
23C	EXTERIOR LTS-CORNERING RH	27	PARKING BRAKE SONALERT
23K	EXTERIOR LTS-HI DOCKING	27A	PARKING BRAKE SONALERT
23N	EXTERIOR LTS-CORNERING RH	28A	A/C & HEAT SYSTEM-HI PRESSURE
23P	EXTERIOR LTS-CORNERING RH	29	A/C & HEAT SYSTEM-DRIVER'S HTR
23T	EXTERIOR LTS-HI CORNERING	29A	A/C & HEAT SYSTEM-DRIVER'S HTR
24	BAT CPT 24V BATTERY	29B	A/C & HEAT SYSTEM-DRIVER'S HTR
24	FR JCT BOX 24V DISC SW	31A	A/C & HEAT SYSTEM-UNLOADER
24A	BOOSTER BLOCK 24V DISC SW	31B	A/C & HEAT SYSTEM-UNLOADER
24A	FR JCT BOX 24V DISC SW	31B	WIPER & WASHER SYSTEM
24B	RR JCT BOX 24V DISC SW	31C	WIPER & WASHER SYSTEM
24B	FR JCT BOX 24V DISC SW	31D	WIPER & WASHER SYSTEM
24B	24V STARTER RLY FEEDING	31E	WIPER & WASHER SYSTEM
24BE	RJB CPT-BAT ED MONITOR HOT WIRE	31J	WIPER & WASHER SYSTEM
24C	FR JCT BOX 24V DISC SW	31X	WIPER & WASHER SYSTEM
24D	BAT CPT 24V HOT WIRE	32	EXTERIOR LTS-BACK-UP
24D	FR JCT BOX 24V HOT WIRE	32B	EXTERIOR LTS-BACK-UP
24D	RR JCT BOX 24V HOT WIRE	32C	BACK-UP PWR & SIGNAL
24DP	A/C JCT BOX 24V HOT WIRE	32D	BACK-UP ALARM
24E	BAT CPT 24V DISC SW	32F	BACK-UP MONITOR
24E	FR JCT BOX 24V DISC SW	35	ENTRANCE DOOR
24F	FR JCT BOX 24V DISC SW	35B	ENTRANCE DOOR
24F	RR JCT BOX 24V DISC SW	36	JACOB BRAKE SYSEM
24G	FR JCT BOX 24V DISC SW	36A	JACOB BRAKE SYSEM
24H	FR JCT BOX 24V DISC SW	39	INTERIOR LTS-DRIVER'S LTS
24I	FR JCT BOX 24V IGNITION	39A	INTERIOR LTS-DRIVER'S LTS
24I	RR JCT BOX 24V IGNITION	39B	INTERIOR LTS-DRIVER'S LTS
24IA	FR JCT BOX 24V IGNITION	39C	INTERIOR LTS-DRIVER'S LTS
24IA	RR JCT BOX 24V IGNITION	41	A/C & HEAT SYSTEM-COND FAN MOT
24IB	FR JCT BOX 24V IGNITION	41A	A/C & HEAT SYSTEM-COND FAN MOT
24IB	RR JCT BOX 24V IGNITION	41B	A/C & HEAT SYSTEM-COND FAN MOT
24IC	FR JCT BOX 24V IGNITION	42	A/C & HEAT SYSTEM-COND FAN MOT
24ID	FR JCT BOX 24V IGNITION	42A	A/C & HEAT SYSTEM-COND FAN MOT
24IF	FR JCT BOX 24V IGNITION	44	EXTERIOR LTS-FOG
24J	FR JCT BOX 24V DISC SW	44A	EXTERIOR LTS-FOG
24K	FR JCT BOX 24V DISC SW	44B	EXTERIOR LTS-FOG
24P	FR JCT BOX 24V DISC SW	44C	EXTERIOR LTS-FOG & HAZARD

No.	SYSTEM	No.	SYSTEM
45B	A/C & HEAT SYSTEM-HEAT 3 SIGN	71K	EXTERIOR LTS-LO DOCKING
45D	A/C & HEAT SYSTEM-WATER VALVE	71L	EXTERIOR LTS-DOCKING
45E	A/C & HEAT SYSTEM-HEAT 1 SIGN	71R	EXTERIOR LTS-DOCKING
45G	A/C & HEAT SYSTEM-DRIVER'S HTR	72	SUN VISOR-FEEDING
45H	A/C & HEAT SYSTEM-DRIVER'S HTR	72A	SUN VISOR-RH
45W	A/C & HEAT SYSTEM-DRIVER'S HTR	72B	SUN VISOR-RH
46	EXTERIOR LTS-MARKER	72C	SUN VISOR-LH
46A	EXTERIOR LTS-MARKER	72D	SUN VISOR-LH
46B	EXTERIOR LTS-MARKER	76	FUEL TANK GAUGE
46B	EXTERIOR LTS-MARKER	76B	LOW FUEL LT & ETHER COLD START
46C	EXTERIOR LTS-MARKER	76C	LOW FUEL LT
47	A/C & HEAT SYSTEM-DRIVER'S HTR	77	A/C & HEAT SYSTEM-HI PRESSURE
50	AIR DRYER	77A	A/C & HEAT SYSTEM-DRIVER'S HTR
52	ALARM & SIGNAL-ELEC. HORN	77B	A/C & HEAT SYSTEM-COMPRESSOR
52A	ALARM & SIGNAL-ELEC. HORN	77C	A/C & HEAT SYSTEM-COMPRESSOR
53	ALARM & SIGNAL-ELEC. HORN	77H	A/C & HEAT SYSTEM-COMPRESSOR
53A	WIPER & WASHER SYSTEM	81	EXTERIOR LTS-STOP SW
53B	WIPER & WASHER SYSTEM	82	EXTERIOR LTS-STOP SIGNAL
53C	WIPER & WASHER SYSTEM	82A	EXTERIOR LTS-STOP SIGNAL
53E	WIPER & WASHER SYSTEM	82B	EXTERIOR LTS-STOP LTS
53J	WIPER & WASHER SYSTEM	82K	EXTERIOR LTS-STOP PARK BRK
55	EXTERIOR LTS-HI BEAM	82L	EXTERIOR LTS-LH STOP
57	EXTERIOR LTS-HI BEAM	82R	EXTERIOR LTS-LH STOP
57A	EXTERIOR LTS-HI BEAM	83	ENGINE CTR-KEY SW ACCES SIGN
57A	A/C & HEAT SYSTEM-WATER PUMP	84	ENGINE CTR-KEY SW START SIGN
57B	A/C & HEAT SYSTEM-WATER PUMP	85	ENGINE CTR-KEY SW IGNITION SIGN
57C	PRE-HEAT WATER HEATER	85	24V IGNITION SIGNAL
57CC	PRE-HEAT WATER HEATER	85A	24V IGN DASH INSTRUMENTATION
57E	EXTERIOR LTS-HEAD LTS	85B	ENGINE CTR-24V IGNITION
58	EXTERIOR LTS-LO BEAM	85C	PARKING BRAKE SWITCH
58A	EXTERIOR LTS-LO BEAM	85F	LO AIR SONALERT
58B	EXTERIOR LTS-LO BEAM	85F	ENGINE CTR-ENGINE CTRL SW IGN
58E	EXTERIOR LTS-LO BEAM	85W	24V IGN ANTI SKID
59A	JACOB BRAKE SYSTEM	85X	24V IGN ANTI SKID
61	EXTERIOR LTS-24V FEED SW	85Y	ANTI SKID-WARNING LT
61A	EXTERIOR LTS-HEAD SIGNAL	86	ENGINE CTR-STARTER SOL SIGN
63	EXTERIOR LTS-CLEARANCE	86A	ENGINE CTR-STARTER SOL SIGN
63A	EXTERIOR LTS-CLEARANCE	88	ENGINE CTR-RR START SIGNAL
63B	EXTERIOR LTS-CLEARANCE	89	ENGINE CTR-RR START SIGNAL
63C	EXTERIOR LTS-MARKER SIGNAL	90A	A/C & HEAT SYSTEM-COND FAN MOT
63D	EXTERIOR LTS-MARKER & TAIL	90B	A/C & HEAT SYSTEM-COND FAN MOT
63E	EXTERIOR LTS-CLEARANCE	90B	ENGINE CTR-MAST KEY SW FEED
63F	EXTERIOR LTS-MARKER BLINKER	90C	A/C & HEAT SYSTEM-COND FAN MOT
63H	EXTERIOR LTS-TAIL	90D	A/C & HEAT SYSTEM-EVAP FAN MOT
67	A/C & HEAT SYSTEM	90F	CHARG SYST-VOLTAGE REGUL. "B"
67A	A/C & HEAT SYSTEM	90G	A/C & HEAT SYSTEM-COND FAN MOT
67AA	A/C & HEAT SYSTEM	90H	A/C & HEAT SYSTEM-EVAP FAN MOT
67B	A/C & HEAT SYSTEM	90J	A/C & HEAT SYSTEM-COND FAN MOT
67C	A/C & HEAT SYSTEM & HEAT WINDS.	91	PARKING BRAKE SW SIGNAL
67K	A/C & HEAT SYSTEM-COND FAN CTR	91A	DDEC-FAST IDLE SIGNAL
67L	A/C & HEAT SYSTEM-COND FAN CTR	92	BATTERY EQUALIZER-CHECK BALANCE
67V	A/C & HEAT SYSTEM-WATER VALVE	93	BATTERY EQUALIZER-CHECK LO/HI
71	EXTERIOR LTS-DOCKING	95A	ENGINE BRAKE & RETARDER SYSTEM
71A	EXTERIOR LTS-HI DOCKING	97	TACHOMETER (-)
71C	EXTERIOR LTS-DOCKING	101	24V STARTER SOL FEEDING
71D	EXTERIOR LTS-DOCKING	101	WORLD TRANSM-LO SIGNAL SOL. LO
71E	EXTERIOR LTS-LO DOCKING	102	24V STARTER TO GENERATOR
71F	EXTERIOR LTS-LO DOCKING	102	WORLD TRANSM-SOL. GRD 1
71G	EXTERIOR LTS-DOCKING	102	WORLD TRANSM-SOL. C3
71H	EXTERIOR LTS-LO DOCKING	104	WORLD TRANSM-SOL. FORWARD

No.	SYSTEM	No.	SYSTEM
104	LEVEL LOW SYSTEM	130	WORLD TRANSM-SOL. GRD 3
105	WORLD TRANSM-RETARDER & SUMP	131	WORLD TRANSM-SOL. C4
105W	WORLD TRANSM-RETARDER & SUMP	132	WORLD TRANSM-ENG BRK OUTPUT (-)
106	WORLD TRANSM-OIL LEVEL HI	132A	LEVEL LOW SYSTEM
107	CHARG SYST-VOLTAGE REGUL. "F"	132B	LEVEL LOW SYSTEM
107	WORLD TRANSM-LOCKUP SOL. HI	132C	LEVEL LOW SYSTEM
108	WORLD TRANSM-REMOTE PWR WAKE UP	132D	LEVEL LOW SYSTEM
109	WORLD TRANSM-RET. SOL. LO	132E	LEVEL LOW SYSTEM
110	ALARM & SIGNAL-WATER TEMP	132F	LEVEL LOW SYSTEM
110	WORLD TRANSM-LOCKUP SOL. LO	132G	LEVEL LOW SYSTEM
111	WORLD TRANSM-SOL. C6	132H	LEVEL LOW SYSTEM
112	WORLD TRANSM-SPARE OUTPUT (+)	132J	LEVEL LOW SYSTEM
113	ALARM & SIGNAL-OIL PRESS	132K	LEVEL LOW SYSTEM
113	WORLD TRANSM-REVERSE WARNING	132W	WORLD TRANSM-ENG BRK OUTPUT (-)
114	WORLD TRANSM-SPARE OUTPUT (-)	133	WORLD TRANSM-RET. ACTUATOR HI
114	INTERIOR LTS-DASH LT REGUL.	134	WORLD TRANSM-RET. APPLY SOL. HI
114A	INTERIOR LTS-DASH LT	135	A/C & HEAT SYSTEM-AIR SENSOR
114B	INTERIOR LTS-DASH LT REGUL.	135	WORLD TRANSM-ANALOG GRD
114D	INTERIOR LTS-DASH LT REGUL.	135A	A/C & HEAT SYSTEM-AIR SENSOR
114E	INTERIOR LTS-DASH LT REGUL.	135C	WORLD TRANSM-RETARDER TEMP
115	ALARM & SIGNAL-TAG PRESS	135C	A/C & HEAT SYSTEM-AIR SENSOR
115	DDEC III-COOLANT LEVEL	135D	WORLD TRANSM-RETARDER RES MOD
115	WORLD TRANSM-DO NOT SHIFT SIGNAL	135D	A/C & HEAT SYSTEM-AIR SENSOR
115C	DDEC III-COOLANT LEVEL	136	WORLD TRANSM-ECU POWER
115W	WORLD TRANSM-DO NOT SHIFT SIGNAL	136V	WORLD TRANSM-12V BATTERY
116	WORLD TRANSM-LO SIGNAL SOL. HI	136W	WORLD TRANSM-12V BATTERY
116B	A/C & HEAT SYSTEM-DRIVER'S HTR	136X	WORLD TRANSM-12V BATTERY
117	WORLD TRANSM-SPARE INPUT (-)	137	WORLD TRANSM-RETARDER
117A	ALARM & SIGNAL-TRANSM OIL TEMP	137	MIRROR (SPARTAN & RAMCO)
117A	ALARM & SIGNAL-TRANSM OIL TEMP	137A	MIRROR (SPARTAN & RAMCO)
118	WORLD TRANSM-SPARE INPUT (+)	137B	RR VIEW MIRROR (SPARTAN)
119	WORLD TRANSM-ENG BRK INPUT (+)	137C	RR VIEW MIRROR (SPARTAN)
120	WORLD TRANSM-SOL. C1	137D	RR VIEW MIRROR (SPARTAN)
121	WORLD TRANSM-SOL. GRD 2	137E	RR VIEW MIRROR (SPARTAN)
122	WORLD TRANSM-SOL. GRD 4	137F	RR VIEW MIRROR (SPARTAN)
122	A/C & HEAT SYSTEM-DRIVER'S HTR	137G	RR VIEW MIRROR (SPARTAN)
122A	A/C & HEAT SYSTEM-FRESH AIR	138	WORLD TRANSM-RETARDER TEMP
123	A/C & HEAT SYSTEM-FRESH AIR	138	ABS SYSTEM
123A	WORLD TRANSM-NEUTRAL START	138A	ABS SYSTEM
123B	ALARM & SIGNAL-FIRE DETECTOR	139	WORLD TRANSM-OUTPUT SPEED HI
124	ALARM & SIGNAL-FIRE DETECTOR	139	ABS SYSTEM
124	WORLD TRANSM-THROTTLE (HI)	140	WORLD TRANSM-OUTPUT SPEED LO
125	WORLD TRANSM-RETARDER INDICATOR	140	ABS SYSTEM
125W	WORLD TRANSM-RETARDER INDICATOR	141	ABS SYSTEM
126	WORLD TRANSM-LUBE PRESS SW.	141	WORLD TRANSM-ENGINE SPEED HI
126	LEVEL LOW SYSTEM	142	ABS SYSTEM
127	WORLD TRANSM-RETARDER FEED SOL.	142	WORLD TRANSM-SERIAL COM. A
127	PRE-HEAT WATER HEATER	143	ABS SYSTEM
127A	PRE-HEAT WATER HEATER	143	WORLD TRANSM-ECU BATTERY GRD
127B	PRE-HEAT WATER HEATER	143A	ABS SYSTEM
127S	PRE-HEAT WATER HEATER	143W	WORLD TRANSM-BATTERY GRD
127W	PRE-HEAT WATER HEATER	143X	WORLD TRANSM-BATTERY GRD
128	WORLD TRANSM-SOL. C2	144	WORLD TRANSM-ECU CHASSIS GRD
128	PRE-HEAT WATER HEATER	144	ABS SYSTEM
128A	PRE-HEAT WATER HEATER	144A	ABS SYSTEM
128B	PRE-HEAT WATER HEATER	145	ABS SYSTEM
128W	PRE-HEAT WATER HEATER	146	ABS SYSTEM
129	PRE-HEAT WATER HEATER	146	WORLD TRANSM-IGNITION SENSE
129	WORLD TRANSM-SOL. C5	146W	WORLD TRANSM-12V IGNITION
129B	PRE-HEAT WATER HEATER	146X	WORLD TRANSM-12V IGNITION

No.	SYSTEM	No.	SYSTEM
147	WORLD TRANSM-OIL TEMP	170L	LUGGAGE DOOR LOCK
147	ABS SYSTEM	170M	LUGGAGE DOOR LOCK
147	ETHER COLD START	170N	LUGGAGE DOOR LOCK
147C	ETHER COLD START	170P	LUGGAGE DOOR LOCK
148	WORLD TRANSM-OUTPUT SPEED LO	170R	LUGGAGE DOOR LOCK
148	ABS SYSTEM	170S	LUGGAGE DOOR LOCK
149	WORLD TRANSM-TURBINE SPEED HI	170V	LUGGAGE DOOR LOCK
149	ABS SYSTEM	170W	LUGGAGE DOOR LOCK
149A	ABS SYSTEM	170X	LUGGAGE DOOR LOCK
150	WORLD TRANSM-ENGINE SPEED LO	170Y	LUGGAGE DOOR LOCK
150	DDEC III-ECM BATTERY GRD	170Z	LUGGAGE DOOR LOCK
150A	DDEC III-ECM BATTERY GRD	173	BACK-UP MONITOR
151	DDEC III-ECM BATTERY GRD	174	BACK-UP MONITOR
151	WORLD TRANSM-SERIAL COM. B	175	BACK-UP MONITOR
151	ABS SYSTEM	175A	BACK-UP MONITOR
151A	ABS SYSTEM	175B	BACK-UP MONITOR
152	ABS SYSTEM	175C	BACK-UP MONITOR
152A	ABS SYSTEM	180	DIGITAL THERMOMETER
153	ABS SYSTEM	180	DRIVER'S SEAT HEATER
153	WORLD TRANSM-SPARE INPUT (-)	180A	DRIVER'S SEAT HEATER
153	ABS SYSTEM	180B	CO-PILOT SEAT HEATER
154	WORLD TRANSM-ABS RETARDER INPUT	180C	CO-PILOT SEAT HEATER
154	ABS SYSTEM	181	DIGITAL THERMOMETER
155	WORLD TRANSM-SPARE INPUT (-)	182	PYROMETER
155	ABS SYSTEM	182A	PYROMETER
156	WORLD TRANSM-THROTTLE POS.	197	FUEL WATER FILTER
156	ABS SYSTEM	197A	FUEL WATER FILTER
156A	ABS SYSTEM	197B	FUEL WATER FILTER
157	WORLD TRANSM-SPEEDOMETER SIGNAL	201	WORLD TRANSM-SPARE
157	ABS SYSTEM	202	WORLD TRANSM-SPARE
157A	ABS SYSTEM	203	WORLD TRANSM-SPARE
157B	ABS SYSTEM	204	WORLD TRANSM-SPARE
158	WORLD TRANSM-DIMMER	205	WORLD TRANSM-SPARE
160	ALARM & SIGNAL-TAG PRESS SW	206	WORLD TRANSM-SPARE
160	WORLD TRANSM-SER. INTERFACE (-)	214	WORLD TRANSM-BACK UP SIGNAL
161	WORLD TRANSM-SIGNAL GRD	231	NEUTRAL SIGNAL GRD
161B	WORLD TRANSM-SIGNAL GRD	240	DDEC III-ECM 12V FEEDING
162	WORLD TRANSM-PRESS. SW C3	241	DDEC III-ECM 12V FEEDING
163	WORLD TRANSM-RETARDER ENABLE	251	PRODRIVER FEEDING
164	WORLD TRANSM-RET. ACTUATOR SIGN	257	WINDSHIELD HEATED
165	WORLD TRANSM-OIL LEVEL SIGNAL	257A	WINDSHIELD HEATED
165	A/C & HEAT SYSTEM-TRANSMITER	257B	WINDSHIELD HEATED
165A	A/C & HEAT SYSTEM-TRANSMITER	257C	WINDSHIELD HEATED
165B	A/C & HEAT SYSTEM-TRANSMITER	257D	WINDSHIELD HEATED SPARE
165C	A/C & HEAT SYSTEM-TRANSMITER	257E	WINDSHIELD HEATED SPARE
165D	A/C & HEAT SYSTEM-TRANSMITER	258	WINDSHIELD HEATED
166B	A/C & HEAT SYSTEM-EVAP. MOD.	258A	WINDSHIELD HEATED
167	A/C & HEAT SYSTEM-TEMP. CTR	259	WINDSHIELD HEATED
167A	A/C & HEAT SYSTEM-TEMP. CTR	259A	WINDSHIELD HEATED
168	WORLD TRANSM-SER. INTERFACE (+)	260	WINDOW AJAR
168	A/C & HEAT SYSTEM-HUMIDISTAT	270	KEYLESS ENTRY SYSTEM
168A	A/C & HEAT SYSTEM-HUMIDISTAT	272	KEYLESS ENTRY SYSTEM
170C	LUGGAGE DOOR LOCK	274	KEYLESS ENTRY SYSTEM
170D	LUGGAGE DOOR LOCK	275	KEYLESS ENTRY SYSTEM
170E	LUGGAGE DOOR LOCK	276	KEYLESS ENTRY SYSTEM
170F	LUGGAGE DOOR LOCK	277	KEYLESS ENTRY SYSTEM
170G	LUGGAGE DOOR LOCK	278	KEYLESS ENTRY SYSTEM
170H	LUGGAGE DOOR LOCK	279	KEYLESS ENTRY SYSTEM
170K	LUGGAGE DOOR LOCK	280	KEYLESS ENTRY SYSTEM

No.	SYSTEM	No.	SYSTEM
283	KEYLESS ENTRY SYSTEM	SP9	SPARE-RJB TO LUGG CPT #2
284A	KEYLESS ENTRY SYSTEM	SP10	SPARE-RJB TO LUGG CPT #1
285	KEYLESS ENTRY SYSTEM	SP11	SPARE-RJB TO ENGINE
286	KEYLESS ENTRY SYSTEM	SP12	SPARE-RJB TO ENGINE
286A	KEYLESS ENTRY SYSTEM	SP13	SPARE-RJB TO ENGINE
291	KEYLESS ENTRY SYSTEM	SP14	SPARE-FJB TO FR SERV CPT
293	KEYLESS ENTRY SYSTEM	SP15	SPARE-RJB TO ENGINE
290	FAN CLUTCH RADIATOR	SP16	SPARE-RJB TO ENGINE
291	FAN CLUTCH RADIATOR SPD 1	SP17	SPARE-RJB TO ENGINE
292	FAN CLUTCH RADIATOR SPD 2	SP18	SPARE-FJB TO FR SERV CPT
417	DDEC III-LIMIT SPEED GOVERNOR	SP33	SPARE-FJB TO RJB
419	DDEC III-CHECK ENGINE LIGHT	SP36	SPARE-RJB TO LH SW PANEL
439	DDEC III-12V IGNITION	SP37	SPARE-ALARM JCT BOX
440	DDEC III-12V IGNITION	SP38	SPARE-ALARM JCT BOX TO RJB
440A	DDEC III-12V IGNITION	SP39	SPARE-ALARM JCT BOX TO FJB
451	DDEC III-A/C FAN CLUTCH	SP40	SPARE-ALARM JCT BOX TO FJB
505	DDEC III-TACHOMETER DRIVE	SP43	SPARE-FJB TO RJB
509	DDEC III-STOP ENGINE LIGHT	SP45	SPARE-FJB TO RJB
510	DDEC III-FAST IDLE SIGNAL	SP46	SPARE-RJB TO LH FR ROOF
524	DDEC III-ENGINE BRAKE DISABLE	SP48	SPARE-RJB TO RH FR ROOF
525	DDEC III-FAST IDLE SIGNAL	SP56	SPARE-FJB TO RH SW PANEL
528	DDEC III-STOP ENG. OVERRIDE	SP57	SPARE-FJB TO ENGINE
531	DDEC III-CRUISE CLUTCH RELEASE	SP58	SPARE-FJB TO ENGINE
541	DDEC III-CRUISE SET SW	SP59	SPARE-FJB TO ENGINE
543	DDEC III-CRUISE STOP SW CUT IN	SP61	SPARE-FJB TO RH CONSOLE
544	DDEC III-CRUISE ON/OFF SW	SP68	SPARE-FJB TO ENGINE ECM
545	DDEC III-CRUISE RESUME SW	SP69	SPARE-FJB TO FR AXLE
555	DDEC III-FAN CLUTCH SPEED# 1	SP70	SPARE-FJB TO FR AXLE
556	DDEC III-VEHICLE SPEED (+)	SP71	SPARE-FJB TO RH SW PANEL
563	DDEC III-FAN CLUTCH SPEED# 2	SP72	SPARE-FJB TO FR SERV CPT
564	DDEC III-DIGITAL OUTPUT	SP74	SPARE-FJB TO LH CONSOLE
565	DDEC III-ENGINE BRAKE ACTIVE	SP77	SPARE-FJB TO A/C JB CPT
583	DDEC III-ENGINE BRAKE 4 CYL.	SP78	SPARE-FJB TO A/C JCT BOX
750	PRODRIVER ILLUMINATION	SP79	SPARE-FJB TO A/C JCT BOX
900	DDEC III-DATA LINK (+)	SP80	SPARE-TO A/C JCT BOX CPT
901	DDEC III-DATA LINK (-)	SP82	SPARE-FJB TO LH CONSOLE
901A	ABS SYSTEM	SP83	SPARE-FJB TO RH CONSOLE
908	DDEC III-HYDRAULIC PWM#1 OUTPUT	SP84	SPARE-FJB TO RH CONSOLE
916	DDEC III-SENSOR SUPPLY (5VDC)	SP85	SPARE-FJB TO LH CONS & SW PAN
952	DDEC III-SENSOR RETURN	SP86	SPARE-FJB TO LH CONS & SW PAN
953	DDEC III-BATTERY GRD	SP92	SPARE-RJB TO A/C JCT BOX
979	DDEC III-ENGINE BRAKE 2 CYL.	SP93	SPARE-RJB TO EVAPORATOR CPT
A	LEVEL LOW SYSTEM	SP94	SPARE-RJB TO RR ROOF
B	LEVEL LOW SYSTEM	SP95	SPARE-RJB TO RR ROOF
C	LEVEL LOW SYSTEM	SP96	SPARE-RJB TO LUGG CPT #2
B00	RR JCT BOX CPT BATT GRD	SP97	SPARE-RJB TO LUGG CPT #3
B000	RR JCT BOX CPT BATT GRD	SP98	SPARE-RJB TO LUGG CPT #3
L8	ENG. BLK & WATER TANK-HEATER	SP104	SPARE-RJB TO ENGINE CPT
L9	ENG. BLK & WATER TANK-HEATER	SP105	SPARE-DASH TO ENGINE CRADLE ACCES.
WC	A/C & HEAT SYST-EVAP CTR SIGN		
SH2	SPEEDOMETER-SHIELD GRD		
SH4	SPEEDOMETER-SHIELD GRD		
SP2	SPARE-FJB TO FR SERV CPT		
SP3	SPARE-FJB TO CENTER DASH		
SP4	SPARE-FJB TO CENTER DASH		
SP5	SPARE-RJB TO LUGG CPT #2		
SP6	SPARE-RJB TO LUGG CPT #1		
SP7	SPARE-RJB TO LUGG CPT #1		
SP8	SPARE-RJB TO LUGG CPT #1		