

| No. | SYSTEM | No. | SYSTEM | No. | SYSTEM | No. | SYSTEM |
|-----|--------------------------------|-----|----------------------------------|------|---------------------------------|------|---------------------------------|
| O | IC - INVERTER CPT GRD | ORH | RS - RR END LAMPS RH GRD | 11E | FR DESTINATION SIGN | 21P | EXTERIOR LTS-CORNERING LH |
| O | GALLEY GRD | OSS | SOUNS SYSTEM BATT. GRD | 11K | FR DESTINATION SIGN | 23 | EXTERIOR LTS-DIRECTIONNAL RH |
| O | BC - BAT. CPT GRD | OSA | SOUND SYSTEM BATT. GRD | 12 | BAT CPT 12V BATTERY | 23 | EXTERIOR LTS-DIRECTIONNAL RH |
| O | CONDENSER CPT GRD | OT | FS - LUG. CPT ACCES. GRD | 12 | FR JCT BOX 12V DISC SW | 23A | EXTERIOR LTS-DIRECTIONNAL RH |
| O | A/C - A/C JCT BOX GRD | OV | RR JCT BOX CPT GRD STUD | 12 | 12V BAT CPT JCT BLOCK | 23B | EXTERIOR LTS-DIRECTIONNAL RH |
| O | GALLEY GRD | OV | FS - FR JCT BOX CPT GRD STUD | 12A | FR JCT BOX 12V DISC SW | 23C | EXTERIOR LTS-CORNERING RH |
| O | FJB - FR JCT BOX GRD | OVA | BATTERY TO EQUALISER OV | 12A | RR JCT BOX 12V DISC SW | 23N | EXTERIOR LTS-CORNERING RH |
| O | GALLEY GRD | OW | FS - UNDER DASH CENT GRD | 12B | FR JCT BOX 12V DISC SW | 23P | EXTERIOR LTS-CORNERING RH |
| O | VIDEO GRD | OW | RS - RR JCT BOX GRD | 12B | 12V BAT CPT JCT BLOCK | 24 | BAT CPT 24V BATTERY |
| OA | A/C - A/C JCT BOX GRD | OW | FS - FR JCT BOX CPT GRD STUD | 12BE | BAT. EQUALIZER MONITOR | 24 | FR JCT BOX 24V DISC SW |
| OA | FRS - FR ROOF ACCES. GRD | OWC | RS - RR JCT BOX GRD (WCL) | 12C | FR JCT BOX 12V DISC SW | 24A | BOOSTER BLOCK 24V DISC SW |
| OA | RS - LUG. CPT ACCES. GRD | OX | FS - TO LH CONS. C483 NOT USED | 12C | BAT CPT 12V BATTERY | 24A | RR JCT BOX 24V DISC SW |
| OA | AJB - ALARM JCT BOX GRD | OX | FR JCT BOX CPT GRD STUD | 12D | FR JCT BOX 12V DISC SW | 24A | FR JCT BOX 24V DISC SW |
| OA | FJB - FR JCT BOX GRD | OX | RS - RR JCT BOX GRD | 12E | RR JCT BOX 12V DISC SW | 24B | RR JCT BOX 24V DISC SW |
| OAA | RS - VOLTAGE REGULATOR GRD | OX2 | FR JCT BOX CPT GRD STUD | 12E | FR JCT BOX 12V DISC SW | 24B | FR JCT BOX 24V DISC SW |
| OB | EC - ENGINE GRD | OY | RR JCT BOX GRD | 12F | FR JCT BOX 12V DISC SW | 24B | FR JCT BOX 24V DISC SW |
| OB | FRS - FR ROOF HEAT WIND GRD | OY | FR JCT BOX CPT GRD STUD | 12F | RR JCT BOX 12V DISC SW | 24B | 24V STARTER RLY FEEDING |
| OB | FS - FR ROOF ACCES. GRD | OY | ABS FR JCT BOX CPT GRD STUD | 12F | BAT CPT 12V FJB & IC | 24BE | RJB CPT-BAT EQ MONITOR HOT WIRE |
| OB | RS - LUG. CPT ACCES. GRD | OY1 | ABS FR JCT BOX CPT GRD STUD | 12I | RR JCT BOX 12V IGNITION | 24C | FR JCT BOX 24V DISC SW |
| OB | A/C - A/C JCT BOX GRD | OZ | FR JCT BOX CPT GRD STUD | 12I | 12V IGNITION DISTRIBUTION | 24D | BAT CPT 24V HOT WIRE |
| OB | FJB - FR JCT BOX GRD | OZ | RR JCT BOX CPT GRD STUD | 12IA | FR JCT BOX 12V IGNITION | 24D | FR JCT BOX 24V HOT WIRE |
| OBE | RJB - BAT. EQUAL. BAT GRD | OZ | RR JCT BOX CPT GRD STUD | 12IA | 12V IGNITION DISTRIBUTION | 24D | RR JCT BOX 24V HOT WIRE |
| OC | EC - STARTER MOTOR GRD | 00 | RR JCT BOX CPT BATT. GRD | 12IB | FR JCT BOX 12V IGNITION | 24DP | A/C JCT BOX 24V HOT WIRE |
| OC | BAT. EQUALIZER GRD | 1 | TACHO SYSTEM | 12IF | FR JCT BOX 12V IGNITION | 24E | BAT CPT 24V DISC SW |
| OC | FS - SERV. CPT ACCES. GRD | 2B | A/C & HEAT SYSTEM-COOL 1 SIGN | 12P | INVERTER CPT 12V DISC SW | 24E | FR JCT BOX 24V DISC SW |
| OC | RS - ENGINE ACCES. GRD | 2C | A/C & HEAT SYSTEM-LO PRESS SW | 12PV | INVERTER CPT 12V DISC SW | 24E | RR JCT BOX 24V DISC SW |
| OC | RJB - SPEED SW. BATT. GRD | 2D | A/C & HEAT SYSTEM-LO PRESS TT LT | 12R | BAT CPT 12V DISC RLY TO RJB | 24E | FR JCT BOX 24V DISC SW |
| OCR | 24V DISC. SW. RLY GRD SIGNAL | 4 | HOSTESS & PASSENGER CHIME | 12SS | FJB TO BAT 12V HOT WIRE | 24F | RR JCT BOX 24V DISC SW |
| OC | 24V DISC. SW. RLY GRD SIGNAL | 4A | HOSTESS & PASSENGER CHIME | 12VA | BATTERY TO EQUALIZER 12V | 24F | RR JCT BOX 24V DISC SW |
| OD | FS - SERV. CPT ACCES. GRD | 4B | PASSENGER CHIME | 12VD | 12V HOT WIRE DISTRIBUTION | 24G | FR JCT BOX 24V DISC SW |
| OD | RS - HAT RACK ACCES. LH GRD | 4C | HOSTESS CHIME | 12VF | BAT CPT 12V FJB & IC | 24G | RR JCT BOX 24V DISC SW |
| ODF | RS - RR SIDE FLASH & MARK GRD | 5 | INTERIOR LTS-AISLE & EMERG. EXIT | 12VG | INVERTER CPT 12V DISC SW | 24H | FR JCT BOX 24V DISC SW |
| OE | FS - FR LAMPS GRD | 5 | UPPER WINDSHIELD DEFROSTER | 12VI | 12V IGNITION DISTRIBUTION | 24H | RR JCT BOX 24V DISC SW |
| OE | RS - HAT RACK ACCES. LH GRD | 5D | UPPER WINDSHIELD DEFROSTER | 12VR | BAT CPT 12V DISC RLY TO RJB | 24I | FR JCT BOX 24V IGNITION |
| OE2 | FRS - HEAD & CORNERING LTS GRD | 5E | UPPER WINDSHIELD DEFROSTER | 12W | 12V BATTERY DDEC III | 24I | RR JCT BOX 24V IGNITION |
| OEE | FRS - HEAD & CORNERING LTS GRD | 5N | INTERIOR LTS-EMERGENCY EXIT | 12WA | ENTRANCE DOOR (SEDAN) | 24IA | FR JCT BOX 24V IGNITION |
| OF | RS - HAT RACK ACCES. RH GRD | 6 | INTERIOR LTS-AISLE | 12X | FR JCT BOX 12V DISC SW | 24IA | RR JCT BOX 24V IGNITION |
| OG | RS - HAT RACK ACCES. RH GRD | 7A | SPEED SW 5 MPH N/O | 12X2 | FR JCT BOX 12V DISC SW | 24IB | FR JCT BOX 24V IGNITION |
| OG | FS - INSTR. PANEL LH GRD | 7B | ENTRANCE DOOR (SEDAN) | 12Y | FR JCT BOX 12V DISC SW | 24IB | RR JCT BOX 24V IGNITION |
| OH | FS - INSTR. PANEL CENT GRD | 7C | ENTRANCE DOOR (SEDAN) | 13A | ALARM & SIGNAL-LO AIR PRIM. | 24IC | FR JCT BOX 24V IGNITION |
| OH | RS - LAVATORY ACCES. GRD | 7D | ENTRANCE DOOR (SEDAN) | 13B | ALARM & SIGNAL-LO AIR SEC. | 24ID | FR JCT BOX 24V IGNITION |
| OI | FS - INSTR. PANEL RH GRD | 7DA | ENTRANCE DOOR (SEDAN) | 14 | LAVATORY-FLUSHING PUMP | 24IF | FR JCT BOX 24V IGNITION |
| OJ | FS - SW CONSOLE LH GRD | 7DB | ENTRANCE DOOR (SEDAN) | 14A | LAVATORY-FLUSHING PUMP | 24J | FR JCT BOX 24V DISC SW |
| OJ | RS - RR ROOF ACCES. GRD | 8 | TACHOMETER GRD SHIELD | 15 | EXTERIOR LTS-MULTI FUNC LEVEL | 24K | FR JCT BOX 24V DISC SW |
| OK | RS - RR ROOF ACCES. GRD | 9 | INTERIOR LTS-ENGINE CPT | 15A | WIPER & WASHER UPPER WINDSHIELD | 24P | FR JCT BOX 24V DISC SW |
| OL | RS - ENGINE CPT ACCES. GRD | 9A | INTERIOR LTS-ENGINE CPT | 16 | SPEEDO - SIGN | 24PV | INVERTER CPT 24V DISC SW |
| OL | FS - UNDER DASH RH GRD | 9B | ENGINE DOOR AJAR T.T.LT. | 16S | SPEEDO - TRANSMITTER | 24S | 24V DISC SW RLY SIGNAL |
| OLA | ENTRANCE DOOR (SEDAN) GRD | 9E | INTERIOR LTS-FR SERVICE CPT | 16T | SPEEDO - TRANSMITTER | 24T | RR JCT BOX 24V DISC SW |
| OLH | RS - RR END LAMPS LH GRD | 9F | INTERIOR LTS-FR SERVICE CPT | 17 | EXTERIOR LTS-FLASHER UNIT | 24V2 | RR JCT BOX 24V DISC SW |
| OM | RS - ENGINE CPT ACCES. GRD | 10 | INTERIOR LTS-LUGGAGE CPT | 17A | EXTERIOR LTS-FLASHER UNIT | 24V3 | RR JCT BOX 24V DISC SW |
| OM | FS - UNDER DASH RH GRD | 10A | INTERIOR LTS-LUGGAGE CPT | 19 | DIFFERENTIAL OIL TEMP | 24V4 | RR JCT BOX 24V DISC SW |
| OMR | 24V DISC. SW. RLY GRD SIGNAL | 10B | INTERIOR LTS-LUGGAGE CPT | 20 | SPEEDO - NEGATIVE SIGN | 24V5 | RR JCT BOX 24V DISC SW |
| OMS | 24V DISC. SW. RLY GRD SIGNAL | 10D | INTERIOR LTS-LUGGAGE CPT | 20T | SPEEDO - NEGATIVE SIGN | 24VA | BATTERY TO EQUALIZER 24V |
| ON | FS - UNDER DASH RH GRD | 10F | INTERIOR LTS-LUGGAGE CPT | 21 | EXTERIOR LTS-DIRECTIONNAL LH | 24VD | 24V HOT WIRE DISTRIBUTION |
| ON | RS - ENGINE CPT ACCES. GRD | 10H | INTERIOR LTS-LUGGAGE CPT | 21A | EXTERIOR LTS-DIRECTIONNAL LH | 24VF | BAT CPT 24V SW TO FJB & IC |
| OP | FS - ALARM JCT BOX GRD | 10K | INTERIOR LTS-LUGGAGE CPT | 21B | EXTERIOR LTS-HAZARD | 24VF | INVERTER CPT 24V DISC SW |
| OP | RS - ENGINE CPT ACCES. GRD | 10R | INTERIOR LTS-LUGGAGE DOOR AJAR | 21C | EXTERIOR LTS-CORNERING LH | 24VI | RR JCT BOX 24V IGNITION |
| OR | FS - UNDER DASH LH GRD | 11 | FR DESTINATION SIGN | 21H | EXTERIOR LTS-DIRECTIONNAL LH | 24VR | BAT CPT 24V DISC SW TO RJB |
| OR | RS - ENGINE CPT ACCES. GRD | 11A | FR DESTINATION SIGN | 21K | EXTERIOR LTS-DIRECTIONNAL LH | 24W | RR JCT BOX 24V DISC SW (WCL) |
| | | 11B | FR DESTINATION SIGN | 21N | EXTERIOR LTS-CORNERING LH | 24WC | BATT. CPT TO HYD. PUMP (WCL) |
| | | 11C | FR DESTINATION SIGN | | | | |
| | | 11D | FR DESTINATION SIGN | | | | |

| No. | SYSTEM | No. | SYSTEM |
|------|--------------------------------|-----|---------------------------------|
| 24WL | 24V BATTERY-HYD.PUMP (WCL) | 46A | EXTERIOR LTS-MARKER |
| 24X | FR JCT BOX 24V DISC SW | 46B | EXTERIOR LTS-MARKER |
| 24X2 | FR JCT BOX 24V DISC SW | 46B | EXTERIOR LTS-MARKER |
| 24Y | FR JCT BOX 24V DISC SW | 46C | EXTERIOR LTS-MARKER |
| 24Y2 | FR JCT BOX 24V DISC SW | 47 | A/C & HEAT SYSTEM-DRIVER'S HTR |
| 25 | 12VAC GEN RLY ON SIGNAL | 48 | ENTRANCE DOOR (SEDAN) |
| 25A | NOT GENERATOR-WARNING LT | 49 | ENTRANCE DOOR (SEDAN) |
| 25B | EXTERIOR LTS-DAYTIME RUN LTS | 50 | AIR DRYER |
| 26 | DRIVER'S WINDOW LIFTER | 52 | ALARM & SIGNAL-ELEC. HORN |
| 26 | CIGAR LIGHTER | 52A | ALARM & SIGNAL-ELEC. HORN |
| 26B | DRIVER'S WINDOW LIFTER | 53 | ALARM & SIGNAL-ELEC. HORN |
| 26C | DRIVER'S WINDOW LIFTER | 53A | WIPER & WASHER SYSTEM |
| 27 | LAVATORY-EMERGENCY SONALERT | 53B | WIPER & WASHER SYSTEM |
| 28A | A/C & HEAT SYSTEM-HI PRESSURE | 53C | WIPER & WASHER SYSTEM |
| 29 | A/C & HEAT SYSTEM-DRIVER'S HTR | 53E | WIPER & WASHER SYSTEM |
| 29A | A/C & HEAT SYSTEM-DRIVER'S HTR | 53J | WIPER & WASHER SYSTEM |
| 29B | A/C & HEAT SYSTEM-DRIVER'S HTR | 55 | EXTERIOR LTS-HI BEAM |
| 30A | GALLEY | 57 | EXTERIOR LTS-HI BEAM |
| 31A | A/C & HEAT SYSTEM-UNLOADER | 57A | EXTERIOR LTS-HI BEAM |
| 31B | A/C & HEAT SYSTEM-UNLOADER | 57A | A/C & HEAT SYSTEM-WATER PUMP |
| 31B | WIPER & WASHER SYSTEM | 57B | A/C & HEAT SYSTEM-WATER PUMP |
| 31C | WIPER & WASHER SYSTEM | 57C | PRE-HEAT WATER HEATER |
| 31D | WIPER & WASHER SYSTEM | 57E | EXTERIOR LTS-HEAD LTS |
| 31E | WIPER & WASHER SYSTEM | 58 | EXTERIOR LTS-LO BEAM |
| 31J | WIPER & WASHER SYSTEM | 58A | EXTERIOR LTS-LO BEAM |
| 31X | WIPER & WASHER SYSTEM | 58B | EXTERIOR LTS-LO BEAM |
| 32 | EXTERIOR LTS-BACK-UP | 58E | EXTERIOR LTS-LO BEAM |
| 32B | EXTERIOR LTS-BACK-UP | 59A | JACOB BRAKE SYSTEM |
| 32C | BACK-UP PWR & SIGNAL | 61 | EXTERIOR LTS-24V FEED SW |
| 32D | BACK-UP ALARM | 61A | EXTERIOR LTS-HEAD SIGNAL |
| 32F | BACK-UP MONITOR | 62 | LAVATORY-OCCUPIED LT |
| 35 | ENTRANCE DOOR (SEDAN) | 62A | LAVATORY-FLUOR LT |
| 35B | ENTRANCE DOOR (SEDAN) | 62B | LAVATORY-FLUOR LT |
| 35BB | ENTRANCE DOOR (SEDAN) | 62E | LAVATORY-OCCUP & FLUOR LT |
| 35D | ENTRANCE DOOR (SEDAN) | 63 | EXTERIOR LTS-CLEARANCE |
| 36 | JACOB BRAKE SYSREM | 63A | EXTERIOR LTS-CLEARANCE |
| 36A | JACOB BRAKE SYSREM | 63B | EXTERIOR LTS-CLEARANCE |
| 38 | INTERIOR LTS-24V FLUORESCENT | 63C | EXTERIOR LTS-MARKER SIGNAL |
| 38A | INTERIOR LTS-24V FLUORESCENT | 63D | EXTERIOR LTS-MARKER & TAIL |
| 38C | INTERIOR LTS-24V FLUORESCENT | 63E | EXTERIOR LTS-CLEARANCE |
| 38D | INTERIOR LTS-24V FLUORESCENT | 63F | EXTERIOR LTS-MARKER BLINKER |
| 39 | INTERIOR LTS-24V LH CONSOLE SW | 63H | EXTERIOR LTS-TAIL |
| 39A | INTERIOR LTS-DRIVER'S LTS | 67 | A/C & HEAT SYSTEM |
| 41 | A/C & HEAT SYSTEM-COND FAN MOT | 67A | A/C & HEAT SYSTEM |
| 41A | A/C & HEAT SYSTEM-COND FAN MOT | 67B | A/C & HEAT SYSTEM |
| 41B | A/C & HEAT SYSTEM-COND FAN MOT | 67C | A/C & HEAT SYSTEM & HEAT WINDS. |
| 42 | A/C & HEAT SYSTEM-COND FAN MOT | 67K | A/C & HEAT SYSTEM-COND FAN CTR |
| 42A | A/C & HEAT SYSTEM-COND FAN MOT | 67L | A/C & HEAT SYSTEM-COND FAN CTR |
| 44 | EXTERIOR LTS-FOG | 67V | A/C & HEAT SYSTEM-WATER VALVE |
| 44A | EXTERIOR LTS-FOG | 70 | INTERIOR LTS-HAT RACK & RR RUN. |
| 44B | EXTERIOR LTS-FOG | 71 | EXTERIOR LTS-DOCKING |
| 44C | EXTERIOR LTS-FOG & HAZARD | 71C | EXTERIOR LTS-DOCKING |
| 45B | A/C & HEAT SYSTEM-HEAT 3 SIGN | 71D | EXTERIOR LTS-DOCKING |
| 45D | A/C & HEAT SYSTEM-WATER VALVE | 71R | EXTERIOR LTS-DOCKING |
| 45E | A/C & HEAT SYSTEM-HEAT 1 SIGN | 71G | EXTERIOR LTS-DOCKING |
| 45G | A/C & HEAT SYSTEM-DRIVER'S HTR | 71L | EXTERIOR LTS-DOCKING |
| 45H | A/C & HEAT SYSTEM-DRIVER'S HTR | 72 | SUN VISOR-FEEDING |
| 45W | A/C & HEAT SYSTEM-DRIVER'S HTR | 72A | SUN VISOR-RH |
| 46 | EXTERIOR LTS-MARKER | 72B | SUN VISOR-RH |

| No. | SYSTEM | No. | SYSTEM |
|------|---------------------------------|------|----------------------------------|
| 72C | SUN VISOR-LH | 101 | 24V STARTER SOL FEEDING |
| 72D | SUN VISOR-LH | 101 | WORLD TRANSM-LO SIGNAL SOL. LO |
| 73 | LAVATORY-FEEDING | 102 | 24V STARTER TO GENERATOR |
| 74 | INTERIOR LTS-READING RH | 102 | WORLD TRANSM-SOL. GRD 1 |
| 74A | INTERIOR LTS-READING RH | 102 | WORLD TRANSM-SOL. C3 |
| 74D | INTERIOR LTS-READING SIGNAL | 103 | LOW BUOY |
| 75 | INTERIOR LTS-READING LH | 104 | WORLD TRANSM-SOL. FORWARD |
| 75A | INTERIOR LTS-READING LH | 105 | WORLD TRANSM-RETARDER & SUMP' |
| 76 | FUEL TANK GAUGE | 105W | WORLD TRANSM-RETARDER & SUMP |
| 76B | LOW FUEL LT & ETHER COLD START | 106 | WORLD TRANSM-OIL LEVEL HI |
| 76C | LOW FUEL LT | 107 | CHARG SYST-VOLTAGE REGUL. "F" |
| 76M | FUEL PRIME PUMP | 107 | WORLD TRANSM-LOCKUP SOL. HI |
| 76P | FUEL PRIME PUMP | 108 | WORLD TRANSM-REMOTE PWR WAKE UP |
| 77 | A/C & HEAT SYSTEM-HI PRESSURE | 109 | WORLD TRANSM-RET. SOL. LO |
| 77A | A/C & HEAT SYSTEM-DRIVER'S HTR | 110 | ALARM & SIGNAL-WATER TEMP |
| 77B | A/C & HEAT SYSTEM-COMPRESSOR | 110 | WORLD TRANSM-LOCKUP SOL. LO |
| 77C | A/C & HEAT SYSTEM-COMPRESSOR | 111 | WORLD TRANSM-SOL. C6 |
| 77H | A/C & HEAT SYSTEM-COMPRESSOR | 112 | WORLD TRANSM-SPARE OUTPUT (+) |
| 81 | EXTERIOR LTS-STOP SW | 113 | ALARM & SIGNAL-OIL PRESS |
| 82 | EXTERIOR LTS-STOP SIGNAL | 113 | WORLD TRANSM-REVERSE WARNING |
| 82A | EXTERIOR LTS-STOP SIGNAL | 114 | WORLD TRANSM-SPARE OUTPUT (-) |
| 82B | EXTERIOR LTS-STOP LTS | 114 | INTERIOR LTS-DASH LT REGUL. |
| 82K | EXTERIOR LTS-STOP PARK BRK | 114A | INTERIOR LTS-DASH LT |
| 82L | EXTERIOR LTS-LH STOP | 114B | INTERIOR LTS-DASH LT REGUL. |
| 82R | EXTERIOR LTS-LH STOP | 114D | INTERIOR LTS-DASH LT REGUL. |
| 83 | ENGINE CTR-KEY SW ACCES SIGN | 114E | INTERIOR LTS-DASH LT REGUL. |
| 84 | ENGINE CTR-KEY SW START SIGN | 115 | ALARM & SIGNAL-TAG PRESS |
| 85 | ENGINE CTR-KEY SW IGNITION SIGN | 115 | DDEC III-COOLANT LEVEL |
| 85 | 24V IGNITION SIGNAL | 115 | WORLD TRANSM-DO NOT SHIFT SIGNAL |
| 85A | 24V IGN DASH INSTRUMENTATION | 115C | DDEC III-COOLANT LEVEL |
| 85B | ENGINE CTR-24V IGNITION | 115W | WORLD TRANSM-DO NOT SHIFT SIGNAL |
| 85C | PARKING BRAKE SWITCH | 116 | WORLD TRANSM-LO SIGNAL SOL. HI |
| 85F | LO AIR SONALERT | 116B | A/C & HEAT SYSTEM-DRIVER'S HTR |
| 85F | ENGINE CTR-ENGINE CTRL SW IGN | 117 | WORLD TRANSM-SPARE INPUT (-) |
| 85W | 24V IGN ANTI SKID | 117A | ALARM & SIGNAL-TRANSM OIL TEMP |
| 85X | 24V IGN ANTI SKID | 117A | ALARM & SIGNAL-TRANSM OIL TEMP |
| 85Y | ANTI SKID-WARNING LT | 118 | WORLD TRANSM-SPARE INPUT (+) |
| 86 | ENGINE CTR-STARTER SOL SIGN | 119 | WORLD TRANSM-ENG BRK INPUT (+) |
| 86A | ENGINE CTR-STARTER SOL SIGN | 120 | WORLD TRANSM-SOL. C1 |
| 88 | ENGINE CTR-RR START SIGNAL | 121 | WORLD TRANSM-SOL. GRD 2 |
| 89 | ENGINE CTR-RR START SIGNAL | 122 | WORLD TRANSM-SOL. GRD 4 |
| 90A | A/C & HEAT SYSTEM-COND FAN MOT | 122 | A/C & HEAT SYSTEM-DRIVER'S HTR |
| 90B | A/C & HEAT SYSTEM-COND FAN MOT | 122 | A/C & HEAT SYSTEM-FRESH AIR |
| 90B | ENGINE CTR-MAST KEY SW FEED | 122A | A/C & HEAT SYSTEM-FRESH AIR |
| 90C | A/C & HEAT SYSTEM-COND FAN MOT | 123 | WORLD TRANSM-NEUTRAL START |
| 90D | A/C & HEAT SYSTEM-EVAP FAN MOT | 123A | ALARM & SIGNAL-FIRE DETECTOR |
| 90F | CHARG SYST-VOLTAGE REGUL. "B" | 123B | ALARM & SIGNAL-FIRE DETECTOR |
| 90G | A/C & HEAT SYSTEM-COND FAN MOT | 124 | WORLD TRANSM-THROTTLE (HI) |
| 90H | A/C & HEAT SYSTEM-EVAP FAN MOT | 125 | WORLD TRANSM-RETARDER INDICATOR |
| 90J | A/C & HEAT SYSTEM-COND FAN MOT | 125 | LAVATORY-FAN |
| 91 | PARKING BRAKE SW SIGNAL | 125 | GALLEY-LAMP |
| 91A | DDEC-FAST IDLE SIGNAL | 125W | WORLD TRANSM-RETARDER INDICATOR |
| 91W | PARK. BRAKE SW. SIGN. (WCL) | 126 | WORLD TRANSM-LUBE PRESS SW. |
| 92 | BATTERY EQUALIZER-CHECK BALANCE | 126 | KNEELING SYSTEM |
| 93 | BATTERY EQUALIZER-CHECK LO/HI | 126A | KNEELING SYSTEM |
| 95A | ENGINE BRAKE & RETARDER SYSTEM | 126B | KNEELING SYSTEM |
| 97 | TACHOMETER (-) | 126C | KNEELING SYSTEM |
| 100 | INTERIOR LTS-GENERAL | | |
| 100A | INTERIOR LTS-GENERAL | | |
| 100B | INTERIOR LTS-GENERAL | | |

| No. | SYSTEM | No. | SYSTEM |
|------|---------------------------------|------|---------------------------------|
| 126D | KNEELING SYSTEM | 139 | ABS SYSTEM |
| 126E | KNEELING SYSTEM | 140 | WORLD TRANSM-OUTPUT SPEED LO |
| 126F | KNEELING SYSTEM | 140 | ABS SYSTEM |
| 126G | KNEELING SYSTEM | 141 | ABS SYSTEM |
| 126H | KNEELING SYSTEM | 141 | WORLD TRANSM-ENGINE SPEED HI |
| 126K | KNEELING SYSTEM | 142 | ABS SYSTEM |
| 126R | KNEELING SYSTEM | 142 | WORLD TRANSM-SERIAL COM. A |
| 126T | KNEELING SYSTEM | 143 | ABS SYSTEM |
| 126W | 5 MPH N.C. SIGNAL (WCL) | 143 | WORLD TRANSM-ECU BATTERY GRD |
| 127 | WORLD TRANSM-RETARDER FEED SOL. | 143A | ABS SYSTEM |
| 127 | PRE-HEAT WATER HEATER | 143W | WORLD TRANSM-BATTERY GRD |
| 127A | PRE-HEAT WATER HEATER | 143X | WORLD TRANSM-BATTERY GRD |
| 127B | PRE-HEAT WATER HEATER | 144 | WORLD TRANSM-ECU CHASSIS GRD |
| 127S | PRE-HEAT WATER HEATER | 144 | ABS SYSTEM |
| 127W | PRE-HEAT WATER HEATER | 144A | ABS SYSTEM |
| 128 | WORLD TRANSM-SOL. C2 | 145 | ABS SYSTEM |
| 128 | PRE-HEAT WATER HEATER | 146 | ABS SYSTEM |
| 128A | PRE-HEAT WATER HEATER | 146 | WORLD TRANSM-IGNITION SENSE |
| 128B | PRE-HEAT WATER HEATER | 146W | WORLD TRANSM-12V IGNITION |
| 128W | PRE-HEAT WATER HEATER | 146X | WORLD TRANSM-12V IGNITION |
| 129 | PRE-HEAT WATER HEATER | 147 | WORLD TRANSM-OIL TEMP |
| 129 | WORLD TRANSM-SOL. C5 | 147 | ABS SYSTEM |
| 130 | WORLD TRANSM-SOL. GRD 3 | 147 | ETHER COLD START |
| 131 | WORLD TRANSM-SOL. C4 | 147C | ETHER COLD START |
| 132 | WORLD TRANSM-ENG BRK OUTPUT (-) | 148 | WORLD TRANSM-OUTPUT SPEED LO |
| 132W | WORLD TRANSM-ENG BRK OUTPUT (-) | 148 | ABS SYSTEM |
| 133 | WORLD TRANSM-RET. ACTUATOR HI | 149 | WORLD TRANSM-TURBINE SPEED HI |
| 133 | GALLEY-HEAT CONTAINERS | 149 | ABS SYSTEM |
| 133A | GALLEY-HEAT CONTAINERS | 149A | ABS SYSTEM |
| 133B | GALLEY-HEAT CONTAINERS | 150 | WORLD TRANSM-ENGINE SPEED LO |
| 133C | GALLEY-HEAT CONTAINERS | 150 | DDEC III-ECM BATTERY GRD |
| 134 | WORLD TRANSM-RET. APPLY SOL. HI | 150A | DDEC III-ECM BATTERY GRD |
| 134 | GALLEY-HEAT CONTAINERS | 151 | DDEC III-ECM BATTERY GRD |
| 134A | GALLEY-HEAT CONTAINERS | 151 | WORLD TRANSM-SERIAL COM. B |
| 135 | A/C & HEAT SYSTEM-AIR SENSOR | 151 | ABS SYSTEM |
| 135 | WORLD TRANSM-ANALOG GRD | 151A | ABS SYSTEM |
| 135A | A/C & HEAT SYSTEM-AIR SENSOR | 152 | ABS SYSTEM |
| 135C | WORLD TRANSM-RETARDER TEMP | 152A | ABS SYSTEM |
| 135C | A/C & HEAT SYSTEM-AIR SENSOR | 153 | WORLD TRANSM-SPARE INPUT (-) |
| 135D | WORLD TRANSM-RETARDER RES MOD | 153 | ABS SYSTEM |
| 135D | A/C & HEAT SYSTEM-AIR SENSOR | 154 | WORLD TRANSM-ABS RETARDER INPUT |
| 136 | GALLEY-ACCESSORIES | 154 | ABS SYSTEM |
| 136 | WORLD TRANSM-ECU POWER | 155 | WORLD TRANSM-SPARE INPUT (-) |
| 136V | WORLD TRANSM-12V BATTERY | 155 | ABS SYSTEM |
| 136W | WORLD TRANSM-12V BATTERY | 156 | WORLD TRANSM-THROTTLE POS. |
| 136X | WORLD TRANSM-12V BATTERY | 156 | ABS SYSTEM |
| 137 | WORLD TRANSM-RETARDER | 156A | ABS SYSTEM |
| 137 | MIRROR (SPARTAN & RAMCO) | 157 | WORLD TRANSM-SPEEDOMETER SIGNAL |
| 137A | MIRROR (SPARTAN & RAMCO) | 157 | ABS SYSTEM |
| 137B | RR VIEW MIRROR (SPARTAN) | 157A | ABS SYSTEM |
| 137C | RR VIEW MIRROR (SPARTAN) | 157B | ABS SYSTEM |
| 137D | RR VIEW MIRROR (SPARTAN) | 158 | WORLD TRANSM-DIMMER |
| 137E | RR VIEW MIRROR (SPARTAN) | 160 | ALARM & SIGNAL-TAG PRESS SW |
| 137F | RR VIEW MIRROR (SPARTAN) | 160 | WORLD TRANSM-SER. INTERFACE (-) |
| 137G | RR VIEW MIRROR (SPARTAN) | 161 | WORLD TRANSM-SIGNAL GRD |
| 138 | WORLD TRANSM-RETARDER TEMP | 161B | WORLD TRANSM-SIGNAL GRD |
| 138 | ABS SYSTEM | 162 | WORLD TRANSM-PRESS. SW C3 |
| 138A | ABS SYSTEM | 163 | WORLD TRANSM-RETARDER ENABLE |
| 139 | WORLD TRANSM-OUTPUT SPEED HI | 164 | WORLD TRANSM-RET. ACTUATOR SIGN |

| No. | SYSTEM | No. | SYSTEM |
|------|---------------------------------|------|---------------------------------|
| 165 | WORLD TRANSM-OIL LEVEL SIGNAL | 302B | DOOR AJAR MAGN.SW. (WCL) |
| 165 | A/C & HEAT SYSTEM-TRANSMITER | 303 | REMOTE WALL SW. DWN (WCL) |
| 165A | A/C & HEAT SYSTEM-TRANSMITER | 304 | REMOTE WALL SW. UP (WCL) |
| 165B | A/C & HEAT SYSTEM-TRANSMITER | 305 | PARK. BRAKE SOL. VALVE (WCL) |
| 165C | A/C & HEAT SYSTEM-TRANSMITER | 305A | PARK. BRAKE SAFETY SW. (WCL) |
| 165D | A/C & HEAT SYSTEM-TRANSMITER | 417 | DDEC III-LIMIT SPEED GOVERNOR |
| 166B | A/C & HEAT SYSTEM-EVAP. MOD. | 419 | DDEC III-CHECK ENGINE LIGHT |
| 167 | A/C & HEAT SYSTEM-TEMP. CTR | 439 | DDEC III-12V IGNITION |
| 167A | A/C & HEAT SYSTEM-TEMP. CTR | 440 | DDEC III-12V IGNITION |
| 168 | WORLD TRANSM-SER. INTERFACE (+) | 440A | DDEC III-12V IGNITION |
| 168 | A/C & HEAT SYSTEM-HUMIDISTAT | 451 | DDEC III-A/C FAN CLUTCH |
| 168A | A/C & HEAT SYSTEM-HUMIDISTAT | 505 | DDEC III-TACHOMETER DRIVE |
| 170 | LUGGAGE DOOR LOCK | 509 | DDEC III-STOP ENGINE LIGHT |
| 170C | LUGGAGE DOOR LOCK | 510 | DDEC III-FAST IDLE SIGNAL |
| 170E | LUGGAGE DOOR LOCK | 524 | DDEC III-ENGINE BRAKE DISABLE |
| 170H | LUGGAGE DOOR LOCK | 525 | DDEC III-FAST IDLE SIGNAL |
| 180 | DIGITAL THERMOMETER | 528 | DDEC III-STOP ENG. OVERRIDE |
| 181 | DIGITAL THERMOMETER | 531 | DDEC III-CRUISE CLUTCH RELEASE |
| 197 | FUEL WATER FILTER | 541 | DDEC III-CRUISE SET SW |
| 197A | FUEL WATER FILTER | 543 | DDEC III-CRUISE STOP SW CUT IN |
| 197B | FUEL WATER FILTER | 544 | DDEC III-CRUISE ON/OFF SW |
| 201 | WORLD TRANSM-SPARE | 545 | DDEC III-CRUISE RESUME SW |
| 202 | WORLD TRANSM-SPARE | 555 | DDEC III-FAN CLUTCH SPEED# 1 |
| 203 | WORLD TRANSM-SPARE | 556 | DDEC III-VEHICLE SPEED (+) |
| 204 | WORLD TRANSM-SPARE | 557 | DDEC III-VEHICLE SPEED (-) |
| 205 | WORLD TRANSM-SPARE | 563 | DDEC III-FAN CLUTCH SPEED# 2 |
| 206 | WORLD TRANSM-SPARE | 564 | DDEC III-DIGITAL OUTPUT |
| 214 | WORLD TRANSM-BACK UP SIGNAL | 565 | DDEC III-ENGINE BRAKE ACTIVE |
| 231 | NEUTRAL SIGNAL GRD | 583 | DDEC III-ENGINE BRAKE 4 CYL. |
| 231W | NEUTRAL SIGNAL GRD (WCL) | 900 | DDEC III-DATA LINK (+) |
| 240 | DDEC III-ECM 12V FEEDING | 901 | DDEC III-DATA LINK (-) |
| 241 | DDEC III-ECM 12V FEEDING | 908 | DDEC III-HYDRAULIC PWM#1 OUTPUT |
| 250 | VIDEO SYSTEM & TV RECEIVER | 916 | DDEC III-SENSOR SUPPLY (5VDC) |
| 251 | VIDEO SYSTEM & TV RECEIVER | 952 | DDEC III-SENSOR RETURN |
| 252 | VIDEO SYSTEM & TV RECEIVER | 953 | DDEC III-BATTERY GRD |
| 253 | GALLEY-MICROWAVE | 979 | DDEC III-ENGINE BRAKE 2 CYL. |
| 254 | GALLEY-12V FRIGO NORCOLD | 800 | RR JCT BOX CPT BATT GRD |
| 254A | GALLEY-FRIGO | B000 | RR JCT BOX CPT BATT GRD |
| 255 | GALLEY-COFEEMAKER | BA | INTERIOR LTS-110V FLUORESCENT |
| 255A | GALLEY-COFEEMAKER | BB | INTERIOR LTS-110V FLUORESCENT |
| 257 | WINDSHIELD HEATED | D1 | SOUND SYSTEM-FR RH SPEAKER |
| 257A | WINDSHIELD HEATED | D2 | SOUND SYSTEM-FR RH SPEAKER |
| 257B | WINDSHIELD HEATED | D3 | SOUND SYSTEM-FR RH SPEAKER |
| 257C | WINDSHIELD HEATED | D4 | SOUND SYSTEM-RR RH SPEAKER |
| 257D | WINDSHIELD HEATED SPARE | D5 | SOUND SYSTEM-RR RH SPEAKER |
| 257E | WINDSHIELD HEATED SPARE | D6 | SOUND SYSTEM-RR RH SPEAKER |
| 258 | WINDSHIELD HEATED | D9 | SOUND SYSTEM-DRIVER SPEAKER |
| 258A | WINDSHIELD HEATED | D10 | SOUND SYSTEM-DRIVER SPEAKER |
| 259 | WINDSHIELD HEATED | G1 | SOUND SYSTEM-FR LH SPEAKER |
| 259A | WINDSHIELD HEATED | G2 | SOUND SYSTEM-FR LH SPEAKER |
| 290 | FAN CLUTCH RADIATOR | G3 | SOUND SYSTEM-FR LH SPEAKER |
| 291 | FAN CLUTCH RADIATOR SPD 1 | G4 | SOUND SYSTEM-RR LH SPEAKER |
| 292 | FAN CLUTCH RADIATOR SPD 2 | G5 | SOUND SYSTEM-RR LH SPEAKER |
| 300 | DOOR AJAR MAGN.SW. (WCL) | G6 | SOUND SYSTEM-RR LH SPEAKER |
| 300A | POWER SYSTEM SW. (WCL) | G9 | SOUND SYSTEM-DRIVER SPEAKER |
| 300B | DOOR AJAR ALARM (WCL) | G10 | SOUND SYSTEM-DRIVER SPEAKER |
| 301 | POWER SYSTEM SW. (WCL) | | |
| 302 | DOOR AJAR T.T.LT. (WCL) | | |
| 302A | DOOR AJAR ALARM SIGN.(WCL) | | |

| No. | SYSTEM | No. | SYSTEM | No. | SYSTEM | No. | SYSTEM |
|------|--------------------------------|-------|------------------------------------|-----|--------|-----|--------|
| L1 | VIDEO SYSTEM-110V INVERTER | SP15 | SPARE-RJB TO ENGINE | | | | |
| L1A | INTERIOR LTS-110V FLUORESCENT | SP16 | SPARE-RJB TO ENGINE | | | | |
| L1B | INTERIOR LTS-110V FLUORESCENT | SP17 | SPARE-RJB TO ENGINE | | | | |
| L2 | INTERIOR LTS-110V FLUORESCENT | SP18 | SPARE-FJB TO FR SERV CPT | | | | |
| L2A | INTERIOR LTS-110V FLUORESCENT | SP24 | SPARE-RJB TO LH HAT RACK | | | | |
| L2B | INTERIOR LTS-110V FLUORESCENT | SP25 | SPARE-RJB TO LH HAT RACK | | | | |
| L3A | GALLEY-110V FRIGO | SP26 | SPARE-RJB TO LH HAT RACK | | | | |
| L4 | GALLEY-110V FRIGO | SP27 | SPARE-RJB TO LH HAT RACK | | | | |
| LL0 | 110V RECEPTACLE | SP28 | SPARE-RJB TO LH HAT RACK | | | | |
| LL1 | 110V RECEPTACLE | SP31 | SPARE-RJB TO RH HAT RACK | | | | |
| LL2 | 110V RECEPTACLE | SP32 | SPARE-RJB TO RH HAT RACK | | | | |
| LL3 | GALLEY-110V FRIGO | SP33 | SPARE-FJB TO RJB | | | | |
| L7 | GALLEY-110V MICROWAVE OVEN | SP36 | BACK-UP MONITOR-RJB TO LH SW PANEL | | | | |
| L8 | ENG. BLK & WATER TANK-HEATER | SP37 | SPARE-ALARM JCT BOX | | | | |
| L9 | ENG. BLK & WATER TANK-HEATER | SP38 | SPARE-ALARM JCT BOX TO RJB | | | | |
| N1 | VIDEO SYSTEM-110V INVERTER | SP39 | SPARE-ALARM JCT BOX TO FJB | | | | |
| N7 | GALLEY-110V MICROWAVE OVEN | SP40 | SPARE-ALARM JCT BOX TO FJB | | | | |
| M1 | SOUND SYSTEM-RADIO | SP43 | SPARE-FJB TO RJB | | | | |
| M2 | SOUND SYSTEM-RADIO | SP45 | SPARE-FJB TO RJB | | | | |
| M3 | SOUND SYSTEM-RADIO | SP46 | SPARE-RJB TO LH FR ROOF | | | | |
| M4 | SOUND SYSTEM-SPEAKER CTR SW | SP48 | SPARE-RJB TO RH FR ROOF | | | | |
| M5 | SOUND SYSTEM-SPEAKER CTR SW | SP56 | SPARE-FJB TO RH SW PANEL | | | | |
| M6 | SOUND SYSTEM-RADIO | SP57 | SPARE-FJB TO ENGINE | | | | |
| M7 | SOUND SYSTEM-RADIO | SP58 | SPARE-FJB TO ENGINE | | | | |
| M8 | SOUND SYSTEM-RADIO | SP59 | SPARE-FJB TO ENGINE | | | | |
| M9 | SOUND SYSTEM-RADIO | SP61 | SPARE-FJB TO RH CONSOLE | | | | |
| M10 | SOUND SYSTEM-MICRO OUTLET | SP68 | SPARE-FJB TO ENGINE ECM | | | | |
| M11 | SOUND SYSTEM-MICRO OUTLET | SP69 | SPARE-FJB TO FR AXLE | | | | |
| M12 | SOUND SYSTEM-MICRO OUTLET | SP70 | SPARE-FJB TO FR AXLE | | | | |
| M13 | SOUND SYSTEM-P.A. VOLUME | SP71 | SPARE-FJB TO RH SW PANEL | | | | |
| M14 | SOUND SYSTEM-P.A. VOLUME | SP72 | SPARE-FJB TO FR SERV CPT | | | | |
| M15 | SOUND SYSTEM-P.A. VOLUME | SP74 | SPARE-FJB TO LH CONSOLE | | | | |
| M20 | SOUND SYSTEM-RADIO | SP77 | SPARE-FJB TO A/C JB CPT | | | | |
| M21 | SOUND SYSTEM-RADIO | SP78 | SPARE-FJB TO A/C JCT BOX | | | | |
| M23 | SOUND SYSTEM-RADIO | SP79 | SPARE-FJB TO A/C JCT BOX | | | | |
| M24 | SOUND SYSTEM-RADIO | SP80 | SPARE-TO A/C JCT BOX CPT | | | | |
| M25 | SOUND SYSTEM-RADIO | SP82 | SPARE-FJB TO LH CONSOLE | | | | |
| RA | INTERIOR LTS-110V FLUORESCENT | SP83 | SPARE-FJB TO RH CONSOLE | | | | |
| RB | INTERIOR LTS-110V FLUORESCENT | SP84 | SPARE-FJB TO RH CONSOLE | | | | |
| YC | INTERIOR LTS-110V FLUORESCENT | SP85 | SPARE-FJB TO LH CONS & SW PAN | | | | |
| YD | INTERIOR LTS-110V FLUORESCENT | SP86 | SPARE-FJB TO LH CONS & SW PAN | | | | |
| WC | A/C & HEAT SYST-EVAP CTR SIGN | SP87 | SPARE-RJB TO LH HAT RACK | | | | |
| SH | VIDEO & TV RECEIVER-SHIELD GRD | SP88 | SPARE-RJB TO RH HAT RACK | | | | |
| SH | SOUND SYSTEM-SHIELD GRD | SP92 | SPARE-RJB TO A/C JCT BOX | | | | |
| SH2 | SPEEDOMETER-SHIELD GRD | SP93 | SPARE-RJB TO EVAPORATOR CPT | | | | |
| SH4 | SPEEDOMETER-SHIELD GRD | SP94 | SPARE-RJB TO RR ROOF | | | | |
| SP2 | SPARE-FJB TO FR SERV CPT | SP95 | SPARE-RJB TO RR ROOF | | | | |
| SP3 | SPARE-FJB TO CENTER DASH | SP96 | SPARE-RJB TO LUGG CPT #2 | | | | |
| SP4 | SPARE-FJB TO CENTER DASH | SP97 | SPARE-RJB TO LUGG CPT #3 | | | | |
| SP5 | SPARE-RJB TO LUGG CPT #2 | SP98 | SPARE-RJB TO LUGG CPT #3 | | | | |
| SP6 | SPARE-RJB TO LUGG CPT #1 | SP104 | SPARE-RJB TO ENGINE CPT | | | | |
| SP7 | SPARE-RJB TO LUGG CPT #1 | SP105 | SPARE-DASH TO ENGINE CRADLE ACCES. | | | | |
| SP8 | SPARE-RJB TO LUGG CPT #1 | | | | | | |
| SP9 | SPARE-RJB TO LUGG CPT #2 | | | | | | |
| SP10 | SPARE-RJB TO LUGG CPT #1 | | | | | | |
| SP11 | SPARE-RJB TO ENGINE | | | | | | |
| SP12 | SPARE-RJB TO ENGINE | | | | | | |
| SP13 | SPARE-RJB TO ENGINE | | | | | | |
| SP14 | SPARE-FJB TO FR SERV CPT | | | | | | |