

No.	SYSTEM	No.	SYSTEM
0	GRD BATTERY 1 TO BATTERY 2	10	INTERIOR LTS-LUGGAGE CPT
0	GRD BATTERY 1 TO GRD STUD	10A	INTERIOR LTS-LUGGAGE CPT
0	GRD STARTER MOTOR TO GRD STUD	10A	A/C & HEAT SYSTEM-HI PRES.
0	FJP - INSIDE GRD	10B	INTERIOR LTS-LUGGAGE CPT
0	RJB - INSIDE GRD	10D	INTERIOR LTS-LUGGAGE CPT
0	ATEC1 TEST SW GRD	10E	INTERIOR LTS-LUGGAGE CPT
0A	A/C - A/C JCT BOX GRD	12	12V CUT OUT SW TO BATTERY
0A	FJP - GRD	12	FR JCT PANEL 12V DISC SW
0A	RJB - GRD	12	ENTRANCE DOOR AIR LOCK
0AA	VOLTAGE REGULATOR GRD	12A	FR JCT PANEL 12V DISC SW
0B	FJP - GRD	12A	RR JCT BOX 12V DISC SW
0B	RJB - GRD	12A	ENTRANCE DOOR AIR LOCK
0BE	OV BATTERY MONITOR	12B	FR JCT PANEL 12V DISC SW
0C	FJP - GRD	12B	RR JCT BOX 12V DISC SW
0C	RJB - GRD	12BE	12V BATTERY MONITOR
0D	FJP - GRD	12C	FR JCT PANEL 12V DISC SW
0D	RJB - GRD	12C	RR JCT BOX 12V DISC SW
0E	FJP - GRD	12D	FR JCT PANEL 12V DISC SW
0E	RJB - GRD	12D	RR JCT BOX 12V DISC SW
0G	FJP - GRD	12E	FR JCT PANEL 12V DISC SW
0J	FJP - GRD	12E	RR JCT BOX 12V DISC SW
0P	RJB - GRD	12F	FR JCT PANEL 12V DISC SW
0T	RJB - UNLOAD TAG GRD	12F	RR JCT BOX 12V DISC SW
0T	FR SERVICE CPT-GRD	12G	FR JCT PANEL 12V DISC SW
0VA	GRD BATTERY 2 TO BAT.EQUALIZER	12I	RR JCT BOX 12V IGNITION
0W	FJP - GRD	12I	FR JCT PANEL 12V IGNITION
0W	DDEC II-COOLANT MODULE GRD	12IA	FR JCT PANEL 12V IGNITION
0WA	PRE-HEAT WATER HEATER	12IF	FR JCT PANEL 12V IGNITION
0WB	PRE-HEAT WATER HEATER	12T	RR JCT BOX 12V DISC SW
0X	DDEC II-COOLANT MODULE GRD	12T	RR JCT BOX 12V DISC SW
0Y	ABS SYSTEM-GRD	12V	RR JCT BOX 12V DISC SW
0Y1	ABS SYSTEM-GRD	12VA	12V BATTERY POST TO EQUALIZER
0Z	DDEC II-COOLANT MODULE GRD	12VD	12V HOT WIRE
00	BATTERY GRD	12VDF	12V HOT WIRE FJB
2	A/C & HEAT SYSTEM-CONDENSER	12VDR	12V HOT WIRE RJB
2A	A/C & HEAT SYSTEM-CONDENSER	12VF	12V FR JCT PANEL
2D	A/C & HEAT SYSTEM-CONDENSER	12VIF	FR JCT PANEL 12V IGNITION
3	A/C & HEAT SYSTEM-EVAPORATOR	12VIR	RR JCT BOX 12V IGNITION
3	A/C & HEAT SYSTEM-CLUTCH SW	12VR	12V RR JCT BOX
3A	A/C & HEAT SYSTEM-EVAPORATOR	13A	ALARM & SIGNAL-LO AIR PRIM.
6	EXTERIOR LTS-DOCKING	13B	ALARM & SIGNAL-LO AIR SEC.
6A	EXTERIOR LTS-CORNERING	15	EXTERIOR LTS-MULTI FUNC LEVEL
6B	EXTERIOR LTS-CORNERING	15	ALARM & SIGNAL-DIF. OIL TEMP
6B1	EXTERIOR LTS-CORNERING RH	15	WIPER & WASHER SYSTEM
6C	EXTERIOR LTS-CORNERING	15A	ALARM & SIGNAL-DIF. OIL TEMP
6C1	EXTERIOR LTS-CORNERING LH	16	SPEEDOMETER SIGNAL (+)
6D	EXTERIOR LTS-DOCKING	16T	SPEED SW SIGNAL IN (+)
6E2	EXTERIOR LTS-CORNERING LH	17	EXTERIOR LTS-FLASHER UNIT
6F1	EXTERIOR LTS-CORNERING RH	17A	EXTERIOR LTS-FLASHER UNIT
7	ENTRANCE DOOR	18	ETHER COLD START SYST.
8A	DDEC II-STP ENG. OVERRIDE	19	SPARE - RJB TO RR ROOF RH
9	INTERIOR LTS-ENGINE CPT	20	SPEEDOMETER SIGNAL (-)
9	INTERIOR LTS-RR JCT BOX	20T	SPEED SW SIGNAL IN (-)
9	INTERIOR LTS-FR SERVICE CPT	21	EXTERIOR LTS-DIRECTIONNAL LH
9A	INTERIOR LTS-FR JCT PANEL	21A	EXTERIOR LTS-DIRECTIONNAL LH
9B	INTERIOR LTS-FR JCT PANEL	21B	EXTERIOR LTS-DIRECTIONNAL LH
9C	INTERIOR LTS-FR SERVICE CPT	21C	EXTERIOR LTS-DIRECTIONNAL LH
9E	INTERIOR LTS-LUGGAGE CPT	21H	EXTERIOR LTS-HAZARD SIGNAL
10	A/C & HEAT SYSTEM-LO PRES.	23	EXTERIOR LTS-DIRECTIONNAL RH

No.	SYSTEM	No.	SYSTEM
23A	EXTERIOR LTS-DIRECTIONNAL RH	32D	BACK-UP ALARM
23B	EXTERIOR LTS-DIRECTIONNAL RH	34	A/C & HEAT SYSTEM-CONDENSER
23C	EXTERIOR LTS-DIRECTIONNAL RH	35	INTERIOR LTS-ENTRANCE DOOR
23H	EXTERIOR LTS-HAZARD SIGNAL	35B	ENTRANCE DOOR (SEDAN)
24	BATTERY 3 TO BATTERY 4	35BB	ENTRANCE DOOR (SEDAN)
24	BATTERY 4 TO 24V DISC SW	35D	ENTRANCE DOOR (SEDAN)
24A	RR JCT BOX 24V DISC SW	36	JACOB BRAKE SYSTEM & RETARDER
24A	FR JCT PANEL 24V DISC SW	36A	JACOB BRAKE SYSTEM
24B	RR JCT BOX 24V DISC SW	36B	JACOB BRAKE SYSTEM
24B	FR JCT PANEL 24V DISC SW	38	FUEL WATER FILTER
24BE	BATTERY MONITOR	39	INTERIOR LTS-DRIVER'S LTS
24C	RR JCT BOX 24V DISC SW	39A	INTERIOR LTS-DRIVER'S LTS
24C	FR JCT PANEL 24V DISC SW	39B	INTERIOR LTS-DRIVER'S LTS
24E	FR JCT PANEL 24V DISC SW	39C	INTERIOR LTS-DRIVER'S LTS
24E	RR JCT BOX 24V DISC SW	40	SPARE - F.J.PANEL TO F.SERV CPT
24F	FR JCT PANEL 24V DISC SW	43	A/C & HEAT SYSTEM-FULL AIR
24G	FR JCT PANEL 24V DISC SW	44	EXTERIOR LTS-FOG
24I	FR JCT PANEL 24V IGNITION	44A	EXTERIOR LTS-FOG
24I	RR JCT BOX 24V IGNITION	44B	EXTERIOR LTS-FOG
24IA	FR JCT PANEL 24V IGNITION	44C	EXTERIOR LTS-FOG & HAZARD SW
24IA	RR JCT BOX 24V IGNITION	45	A/C & HEAT SYSTEM-DRIVER'S CTRL
24IB	FR JCT PANEL 24V IGNITION	45	A/C & HEAT SYSTEM-FULL AIR
24IB	RR JCT BOX 24V IGNITION	45A	A/C & HEAT SYSTEM-FULL AIR
24IF	FR JCT PANEL 24V IGNITION	45G	A/C & HEAT SYSTEM-DRIVER'S HTR
24P	FR JCT PANEL 24V DISC SW	46	EXTERIOR LTS-MARKER
24R	24V RR JCT BLK TO STARTER	46A	EXTERIOR LTS-MARKER
24T	FR JCT PANEL 24V DISC SW	46B	EXTERIOR LTS-MARKER
24VA	24V BATTERY POST TO EQUALIZER	46C	EXTERIOR LTS-MARKER
24VI	FR JCT PANEL 24V IGNITION	47	A/C & HEAT SYSTEM-DRIVER'S HTR
24VIF	FR JCT PANEL 24V IGNITION	47	A/C & HEAT SYSTEM-FULL AIR
24VIR	RR JCT BOX 24V IGNITION	50	AIR DRYER
24VD	24V HOT WIRE	52	ALARM & SIGNAL-ELEC. HORN
24VF	FR JCT PANEL 24V DISC SW	52A	ALARM & SIGNAL-ELEC. HORN
24VR	RR JCT BOX 24V DISC SW	53	ALARM & SIGNAL-ELEC. HORN
24X	24V SPEED SW & LEVEL LOW	53B	WIPER & WASHER SYSTEM
25	12VAC GEN RLY ON SIGNAL	53C	WIPER & WASHER SYSTEM
25A	NOT GENERATOR-WARNING LT	53E	WIPER & WASHER SYSTEM
25B	EXTERIOR LTS-DAYTIME RUN LTS	53F	WIPER & WASHER SYSTEM
25C	EXTERIOR LTS-DAYTIME RUN LTS	53J	WIPER & WASHER SYSTEM
25K	12VAC GEN RLY ON SIGNAL	54	SPARE-F.J.B. TO FR ROOF
25L	12VAC GEN RLY ON SIGNAL	55	EXTERIOR LTS-HI BEAM
26A	ATEC1-NEUTRAL SIGNAL	56	TRANSM. OIL TEMP GAUGE
28	A/C & HEAT SYSTEM-WARNING LT	57	EXTERIOR LTS-HI BEAM
28A	A/C & HEAT SYSTEM-WARNING LT	57	A/C & HEAT SYSTEM-WATER PUMP
29	A/C & HEAT SYSTEM-DRIVER'S HTR	57A	EXTERIOR LTS-HI BEAM
29A	A/C & HEAT SYSTEM-DRIVER'S HTR	57B	A/C & HEAT SYSTEM-WATER PUMP
29B	A/C & HEAT SYSTEM-DRIVER'S HTR	57C	PRE-HEAT WATER HEATER
31	A/C & HEAT SYSTEM-WARNING LT	57C	A/C & HEAT SYSTEM-WATER PUMP
31A	A/C & HEAT SYSTEM-WARNING LT	57D	PRE-HEAT WATER HEATER
31A	A/C & HEAT SYSTEM-PRESSURE SW	57E	PRE-HEAT WTR HTR PUMP
31B	A/C & HEAT SYSTEM-PRESSURE SW	57F	PRE-HEAT WATER HEATER
31B	WIPER & WASHER SYSTEM	58	EXTERIOR LTS-LO BEAM
31C	WIPER & WASHER SYSTEM	58A	EXTERIOR LTS-LO BEAM
31D	WIPER & WASHER SYSTEM	58B	EXTERIOR LTS-LO BEAM
31E	WIPER & WASHER SYSTEM	58E	EXTERIOR LTS-LO BEAM
31J	WIPER & WASHER SYSTEM	59	JACOB BRAKE SYSTEM
31X	WIPER & WASHER SYSTEM	59A	JACOB BRAKE SYSTEM
32	EXTERIOR LTS-BACK-UP	60	EXTERIOR LTS-RR & FR ROOF GRD
32B	EXTERIOR LTS-BACK-UP	61	EXTERIOR LTS-24V FEED SW

No.	SYSTEM	No.	SYSTEM
61A	EXTERIOR LTS-HEAD SIGNAL	90B	A/C & HEAT SYSTEM-COND FAN MOT
62	LEVEL-LOW SYSTEM	90B	ENGINE CTR-MAST KEY SW FEED
63	EXTERIOR LTS-CLEARANCE	90B	FR JCT PANEL 24V DISC SW
63A	EXTERIOR LTS-CLEARANCE	90C	ALARM & SIGNAL-FIRE DETECTOR
63B	EXTERIOR LTS-CLEARANCE	90F	CHARG SYST-VOLTAGE REGUL. "B"
63C	EXTERIOR LTS-MARKER SIGNAL	91	PARKING BRAKE SW SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL	91A	PARKING BRAKE SW SIGNAL
63E	EXTERIOR LTS-CLEARANCE	91B	DDEC II-FAST IDLE SIGNAL
63F	EXTERIOR LTS-MARKER BLINKER	91B	EXTERIOR LTS-RUN LTS CANCEL
63H	EXTERIOR LTS-TAIL	91M	PARKING BRAKE ALARM
63K	EXTERIOR LTS-TAIL	91N	PARKING BRAKE ALARM
64	DIFFERENTIAL OIL TEMP GAUGE	92	BATTERY EQUALIZER-CHECK BALANCE
65A	CENTER DOOR AIR LOCK	93	BATTERY EQUALIZER-CHECK LO/HI
65A	LOW FUEL T.T. LT.	95	JACOB BRAKE SYSTEM
67	A/C & HEAT SYSTEM	95A	JACOB BRAKE SYSTEM
67A	A/C & HEAT SYSTEM	97	TACHOMETER-NOT USE
67B	A/C & HEAT SYSTEM	99	UNLOAD TAG SYSTEM
67C	A/C & HEAT SYSTEM	99A	FR SERVICE JCT BOX 12V HOT WIRE
70B	DDEC II & ATEC1 24V IGN.	100B	BACK-UP CANCEL SW
71	BACK-UP CANCEL SW	101	24V DISC SW TO STARTER
71B	BACK-UP CANCEL SW	101	ATEC1 TRANSM-TO ECU
72	BACK-UP CANCEL SW	102	24V STARTER TO GENERATOR
72	SPARE F.J.B. TO R.J.B.	102	24V DISC SW TO A/C JCT BOX
76	FUEL TANK GAUGE	104	LEVEL-LOW SYSTEM
76A	CENTER DOOR AJAR LT	104	ATEC1 DDEC INTERFACE
76L	LOW FUEL LT	105	ATEC1 TRANSM-TO ECU
77	A/C & HEAT SYSTEM	106A	ATEC1 DDEC II INTERFACE
77B	A/C & HEAT SYSTEM	107	CHARG SYST-VOLTAGE REGUL. "F"
77C	A/C & HEAT SYSTEM-COMPRESSOR	107A	ATEC1 TRANSM-TO ECU
77H	A/C & HEAT SYSTEM-FAN CLUTCH	108	ATEC1 TRANSM-TO ECU
80	ATEC1-NEUTRAL SIGNAL	109A	ATEC1 TRANSM-TO ECU
81	EXTERIOR LTS-STOP SW	110	ALARM & SIGNAL-WATER TEMP
82	EXTERIOR LTS-STOP SIGNAL	110A	ATEC1 TRANSM-TO ECU
82A	EXTERIOR LTS-STOP SIGNAL	111	DDEC II & ATEC1 BATTERY GRD
82B	EXTERIOR LTS-STOP LTS	111A	ATEC1 TRANSM-TO ECU
82C	EXTERIOR LTS-STOP SIGNAL	111B	DDEC II & ATEC1 BATTERY GRD
82K	EXTERIOR LTS-STOP RETARDER	112	ATEC1 TRANSM-BACK-UP SIGNAL
82L	EXTERIOR LTS-STOP LTS	112A	ATEC1 TRANSM-SPEED SENSOR
82R	EXTERIOR LTS-STOP LTS	113	ALARM & SIGNAL-OIL PRESS
82S	EXTERIOR LTS-STOP SIGNAL	113A	ATEC1 TRANSM-SPEED SENSOR
83	ENGINE CTR-MAST KEY SW ACCES	114	ATEC1 TRANSM-TO ECU
83A	DDEC II-COOLANT LEVEL PROBE	114	INTERIOR LTS-DASH LT REGUL.
84	ENGINE CTR-MAST KEY SW START	114A	INTERIOR LTS-DASH LT
84A	ENGINE CTR-MAST KEY SW START	114B	INTERIOR LTS-DASH LT REGUL.
85	ENGINE CTR-MAST KEY SW IGN	114C	INTERIOR LTS-DASH LT
85A	24V IGN DASH INSTRUMENTATION	115	ALARM & SIGNAL-TAG PRESS
85B	ENGINE CTR-24V IGNITION	115	DDEC II-COOLANT LEVEL MODULE
85C	PARKING BRAKE SWITCH	115A	ALARM & SIGNAL-TAG PRESS
85F	LO AIR SONALERT	115A	ATEC1 TRANSM-TO ECU
85W	ABS-24V IGN	115A	DDEC II-COOLANT LEVEL MODULE
85X	ABS-24V IGN	116	ATEC1 TRANSM-TO ECU
85Y	ABS-WARNING LT	116A	A/C & HEAT SYSTEM-DRIVER'S HTR
86	ENGINE CTR-STARTER SOL SIGN	116B	A/C & HEAT SYSTEM-DRIVER'S HTR
86A	ENGINE CTR-STARTER SOL SIGN	117	ATEC1 TRANSM-TO ECU
87B	ENGINE CTR-24V IGNITION	117	ALARM & SIGNAL-TRANSM OIL TEMP
88	ENGINE CTR-RR START SIGNAL	117A	ALARM & SIGNAL-TRANSM OIL TEMP
89	ENGINE CTR-RR START SIGNAL	118	ATEC1 TRANSM-TO ECU
90	A/C & HEAT SYSTEM-WATER PUMP	118	DRIVER'S & CO-PILOT SEAT HTR
90A	ENGINE CTR-MAST KEY SW FEED	118A	DRIVER'S & CO-PILOT SEAT HTR

No.	SYSTEM	No.	SYSTEM
119	ATEC1 TRANSM-TO ECU	148	ABS SYSTEM
120	12V HOT WIRE-DISC SW TO FJP	149	ABS SYSTEM
120A	ATEC1 TRANSM-TO ECU	149A	ABS SYSTEM
121	ATEC1 TRANSM-TO ECU	150	ABS SYSTEM-SPARE
121	CIGAR LIGHTER	150	DDEC II ECM BATTERY GRD
122	A/C & HEAT SYSTEM-DRIVER'S HTR	150A	DDEC II ECM BATTERY GRD
122	A/C & HEAT SYSTEM-FRESH AIR	151	ABS SYSTEM-SPARE
122D	ATEC1 TRANSM-TO ECU	152	ABS SYSTEM-SPARE
123	ATEC1 TRANSM-TO ECU	153	ABS SYSTEM
123	ALARM & SIGNAL-FIRE DETECTOR	153	ELECTRICAL DRIVER'S SEAT
123A	ALARM & SIGNAL-FIRE DETECTOR	155	ABS SYSTEM
124	ATEC1 DDEC INTERFACE	156	ABS SYSTEM
126	CENTER DOOR AIR LOCK	156A	ABS SYSTEM
127	PRE-HEAT WATER HEATER	156C	ABS SYSTEM
127A	PRE-HEAT WATER HEATER	156W	ABS SYSTEM
127W	PRE-HEAT WATER HEATER	157	ABS SYSTEM
128A	PRE-HEAT WATER HEATER	157A	ABS SYSTEM
128B	PRE-HEAT WATER HEATER	157B	ABS SYSTEM
128C	PRE-HEAT WATER HEATER	157C	ABS SYST.-CANCEL SEC. BRK
128D	PRE-HEAT WATER HEATER	161	UNLOAD TAG SYSTEM
128W	PRE-HEAT WATER HEATER	161	ATEC1 TRANSM-RETARDER
128X	PRE-HEAT WATER HEATER	161A	ATEC1 TRANSM-RETARDER
129	PRE-HEAT WATER HEATER	161B	ATEC1 TRANSM-RETARDER
129A	PRE-HEAT WATER HEATER	161C	ATEC1 TRANSM-RETARDER
129B	PRE-HEAT WATER HEATER	170C	LUGGAGE DOOR LOCK
130	A/C & HEAT SYSTEM-EVAPORATOR	170D	LUGGAGE DOOR LOCK
131	24V DISC SW TO FR JCT PANEL	170E	LUGGAGE DOOR LOCK
132B	LEVEL-LOW SYSTEM	170F	LUGGAGE DOOR LOCK
132C	LEVEL-LOW SYSTEM	170G	LUGGAGE DOOR LOCK
132D	LEVEL-LOW SYSTEM	170H	LUGGAGE DOOR LOCK
132E	LEVEL-LOW SYSTEM	170J	LUGGAGE DOOR LOCK
132-1A	LEVEL-LOW SYSTEM	170L	LUGGAGE DOOR LOCK
132-1B	LEVEL-LOW SYSTEM	170M	LUGGAGE DOOR LOCK
132-1C	LEVEL-LOW SYSTEM	170N	LUGGAGE DOOR LOCK
132-2A	LEVEL-LOW SYSTEM	170P	LUGGAGE DOOR LOCK
132-2B	LEVEL-LOW SYSTEM	170R	LUGGAGE DOOR LOCK
132-2C	LEVEL-LOW SYSTEM	170S	LUGGAGE DOOR LOCK
135	A/C & HEAT SYSTEM-AIR SENSOR	170V	LUGGAGE DOOR LOCK
135A	A/C & HEAT SYSTEM-AIR SENSOR	170W	LUGGAGE DOOR LOCK
135C	A/C & HEAT SYSTEM-AIR SENSOR	170X	LUGGAGE DOOR LOCK
135D	A/C & HEAT SYSTEM-AIR SENSOR	170Y	LUGGAGE DOOR LOCK
136	GALLEY-ACCESSORIES	170Z	LUGGAGE DOOR LOCK
137	RR VIEW MIRROR	182	PYROMETER
137A	RR VIEW MIRROR	182A	PYROMETER
138	ABS SYSTEM	185	UNLOAD TAG SYSTEM
138A	ABS SYSTEM	185A	UNLOAD TAG SYSTEM
139	ABS SYSTEM	186	UNLOAD TAG SYSTEM
140	ABS SYSTEM	186A	UNLOAD TAG SYSTEM
141	ABS SYSTEM	187	UNLOAD TAG SYSTEM
142	ABS SYSTEM	187C	UNLOAD TAG SYSTEM
143	ABS SYSTEM	188	UNLOAD TAG SYSTEM
143A	ABS SYSTEM	188A	UNLOAD TAG SYSTEM
144	ABS SYSTEM	188B	UNLOAD TAG SYSTEM
144A	ABS SYSTEM	201	ATEC1 TRANSM-CHASSIS GRD
145	ABS SYSTEM	202	DDEC II & ATEC1 12V HOT WIRE
146	ABS SYSTEM	203	ATEC1 TRANSM-MEMORY
147	ABS SYSTEM	204	ATEC1 TRANSM-TO SHIFTER
147	ETHER COLD START	205	ATEC1 TRANSM-SPEED SIGNAL
147C	ETHER COLD START	206	ATEC1 TRANSM-TO SHIFTER

No.	SYSTEM	No.	SYSTEM	No.	SYSTEM	No.	SYSTEM
207	ATEC1 TRANSM-TO DDL DATA	916	DDEC 11-PEDAL SENSOR SUPPLY 5V				
208	ATEC1 TRANSM-BATT GRD	952	DDEC 11-PEDAL SENSOR RETURN				
209	ATEC1 TRANSM-BATT GRD	953	DDEC 11-BATTERY GRD				
210	ATEC1 TRANSM-TO DDL GRD	972	DDEC 11-TACHOMETER #2				
211	ATEC1 TRANSM-RETARDER	A	LEVEL-LOW SYSTEM				
211A	ATEC1 TRANSM-RETARDER	A	A/C & HEAT SYSTEM-HI PRES.				
211B	ATEC1 RET. & DDEC CR-24V IGN	A1	A/C & HEAT SYSTEM-LO PRES.				
212	ATEC1 TRANSM-TO SHIFTER	A2	INTERIOR LTS-DRIVER'S LTS				
213	ATEC1 RETARDER SIGNAL GRD	B	LEVEL-LOW SYSTEM				
213A	ATEC1 RETARDER SIGNAL GRD	B00	RR JCT BOX CPT BATT GRD				
213B	ATEC1 RETARDER SIGNAL GRD	B000	RR JCT BOX CPT BATT GRD				
214	ATEC1 TRANSM-BACK UP SIGN GRD	C	LEVEL-LOW SYSTEM				
214A	ATEC1 TRANSM-BACK UP SIGN GRD	J4	A/C & HEAT SYSTEM-DRIVER'S HTR				
215	ATEC1 WARNING SIGNAL GRD	Q3	A/C & HEAT SYSTEM-DRIVER'S HTR				
215A	ATEC1 CHECK TRANSM T.T.LT.	R1	A/C & HEAT SYSTEM-DRIVER'S HTR				
216	ATEC1 TRANSM-TO DDL TEST	R6	A/C & HEAT SYSTEM-DRIVER'S HTR				
218	ATEC1 TRANSM-TO SHIFTER	SH1	SHIELD WIRE GRD				
219	ATEC1 TRANSM-TO SHIFTER	SH2	SHIELD WIRE GRD				
220	ATEC1 TRANSM-TO SHIFTER	SH3	SHIELD WIRE GRD				
221	ATEC1 TRANSM-TO SHIFTER	V5	A/C & HEAT SYSTEM-DRIVER'S HTR				
222	ATEC1 DDEC 11-THROT. INTERFACE	V7	A/C & HEAT SYSTEM-DRIVER'S HTR				
230	ATEC1 DDEC 11-DASH LTS REGUL.						
231	ATEC1 -NEUTRAL SIGNAL GRD						
235	ATEC1 TRANSM-24V IGNITION						
240	DDEC 11-ECM 12V FEEDING						
241	DDEC 11-ECM 12V FEEDING						
260	WINDOW AJAR						
290	FAN CLUTCH RADIATOR						
291	FAN CLUTCH RADIATOR SPD 1						
292	FAN CLUTCH RADIATOR SPD 2						
417	DDEC 11-PEDAL LIMIT. SPEED						
419	DDEC 11-CHECK ENG T.T.LT.						
439	DDEC 11-12V IGNITION						
451	DDEC 11-DDL						
505	DDEC 11-TACHO DRIVE SIGNAL						
508	DDEC 11-JACOB SIGNAL GRD						
508A	DDEC 11-JACOB SIGNAL GRD CLUTCH						
509	DDEC 11-STOP ENG T.T.LT.						
510	DDEC 11-FAST IDLE SIGNAL						
523	DDEC 11-SPEED GOVERNOR SIGN POS						
524	DDEC 11-ACCEL.ENABL SIGN GRD						
525	DDEC 11-FAST IDLE SIGNAL						
528	DDEC 11-STOP ENG OVERRIDE						
531	DDEC 11-CRUISE CUT OUT						
538	DDEC 11-CRUISE MAINE						
538A	DDEC 11-CRUISE CANCEL SIGN						
538B	DDEC 11-CRUISE CANCEL SIGN						
541	DDEC 11-CRUISE SET SW						
542	DDEC 11-CRUISE SET SW						
543	DDEC 11-CRUISE CUT IN						
544	DDEC 11-CRUISE RESUME SW						
545	DDEC 11-CRUISE RESUME SW						
555	DDEC 11-CRUISE ANABLE T.T.LT.						
556	DDEC 11-SPEED SIGNAL POS						
900	DDEC 11-DDL SERIAL DATA LINK POS						
901	DDEC 11-DDL SERIAL DATA LINK NEG						
902	DDEC 11-DDL CRANK POSITION SIGNAL						
903	DDEC 11-CRUISE SPEED SIGNAL						
908	ATEC1 DDEC 11-THROTTLE INTERFACE						