

## CIRCUIT BREAKER CODE (CB)

Page F : 1

## CIRCUIT BREAKER CODE (CB)

Page F : 1

NO.	PAGE	AMPERE	#PREVOST	LOCATION	FUNCTION
CB2	1	30A	870630	PWR DRAWER	12V HOT WIRE
CB3	1	70A	561767	PWR DRAWER	12V FEED RR JCT BOX
CB4	1	70A	561767	PWR DRAWER	12V FEED FR JCT BOX
CB5	1	30A	870630	PWR DRAWER	24V HOT WIRE
CB6	1	90A	560298	PWR DRAWER	24V FEED RR JCT BOX
CB7	1	90A	560298	PWR DRAWER	24V FEED FR JCT BOX
CB8	1	150A	560299	PWR DRAWER	A/C JCT BOX & EVAP. FAN
CB9	1	150A	560299	PWR DRAWER	CONDENSER FAN MOTOR
CB10	4	8A	561791	FR JCT BOX	MASTER SWITCH
CB11	30	8A	561791	GALLEY	RH HEATING CONTAINER
CB12	30	8A	561791	GALLEY	LH HEATING CONTAINER
CB13	30	6A	561790	GALLEY	REFRIGERATOR
CB14	25	10A	561792	FR JCT BOX	JACOB BRAKE SYSTEM
CB15	17	15A	561793	RR JCT BOX	PRE-HEAT WATER HEATER
CB16	4	8A	561791	RR JCT BOX	ENGINE-RR CTR & START SW
CB18	4	8A	561791	RR JCT BOX	ENGINE-FR CTR SW
CB19	5	20A	561794	RR JCT BOX	E.C.M. DDEC II
CB20	5	20A	561794	RR JCT BOX	E.C.M. DDEC II
CB21	5	6A	561790	RR JCT BOX	LOW COOLANT MODULE
CB22	5	6A	561790	FR JCT BOX	CLUTCH & DECEL SW
CB23	6	6A	561790	RR JCT BOX	RETARDER ATEC CTR
CB24	6	8A	561791	RR JCT BOX	ATEC/DDEC 12V IGN
CB25	6	6A	561790	RR JCT BOX	E.C.U. ATEC MEMORIES
CB26	11	10A	561792	RR JCT BOX	BACK-UP LTS
CB27	7	8A	561791	FR JCT BOX	24V IGN DASH ACCESSORIES
CB28	7	6A	561790	FR JCT BOX	12V VOLTMETER
CB29	7	20A	561794	FR JCT BOX	ELECTRICAL HORNS
CB30	7	6A	561790	FR JCT BOX	FIRE ALARM
CB31	8	8A	561791	RR JCT BOX	AIR DRYER
CB32	8	6A	561790	FR JCT BOX	LO FUEL & ETHER COLD START
CB33	8	6A	561790	FR JCT BOX	PARKING BRAKE SW
CB34	8	6A	561790	RR JCT BOX	BACK-UP ALARM
CB35	8	6A	561790	FR JCT BOX	FOG & HAZARD SW
CB36	8	15A	561793	FR JCT BOX	FOG LTS
CB37	9	6A	561790	FR JCT BOX	HEAD & MULTI-FUNC. SW
CB38	9	10A	561792	FR JCT BOX	FR MARKER LTS
CB39	9	20A	561794	FR JCT BOX	CLEARANCE & IDENT. LTS
CB40	9	8A	561791	FR JCT BOX	FR CLEARANCE & IDENT. LTS
CB41	9	8A	561791	RR JCT BOX	RR CLEARANCE & IDENT. LTS
CB42	9	8A	561791	RR JCT BOX	RR MARKER, TAIL, LICENCE LTS
CB43	9	20A	561794	FR JCT BOX	HEADLAMP (HI)
CB44	9	15A	561793	FR JCT BOX	HEADLAMP (LO)
CB45	10	10A	561792	FR JCT BOX	MULTI-FUNC. SW (WIPER CTR)
CB46	10	20A	561794	FR JCT BOX	FLASHER & HAZARD UNIT
CB47	10	10A	561792	FR JCT BOX	CORNERING LTS
CB48	11	6A	561790	FR JCT BOX	STOP SW
CB49	11	15A	561793	RR JCT BOX	STOP & CYCLOP LTS
CB50	14	6A	561790	RR JCT BOX	HAT RACK COMPT. LTS
CB51	12	10A	561792	FR JCT BOX	UP WINDSH. WIPER & WASHER
CB52	13	15A	561793	RR JCT BOX	LUGGAGE LTS & DOOR AJAR LTS
CB53	13	6A	561790	RR JCT BOX	ENGINE COMPT. LTS
CB54	13	6A	561790	RR JCT BOX	FR SERVICE COMPT. LTS
CB55	14	8A	561791	RR JCT BOX	AILSE LTS
CB56	14	6A	561790	RR JCT BOX	EMERGENCY EXIT LTS
CB57	14	8A	561791	FR JCT BOX	DASH LTS RHEOSTAT
CB59	15	8A	561791	FR JCT BOX	DRIVER'S. READING & GENERAL - LTS
CB60	15	15A	561793	RR JCT BOX	READING LTS RH
CB61	15	15A	561793	RR JCT BOX	READING LTS LH

NO.	PAGE	AMPERE	#PREVOST	LOCATION	FUNCTION
CB62	15	10A	561792	RR JCT BOX	GENERAL LTS
CB63	16	6A	561790	ALARM JCT BOX	110V FLUORESCENT LH
CB64	16	6A	561790	ALARM JCT BOX	110V FLUORESCENT RH
CB65	16	10A	561792	RR JCT BOX	24V FLUORESCENT RH
CB66	16	10A	561792	RR JCT BOX	24V FLUORESCENT LH
CB67	17	6A	561790	FR JCT BOX	HOSTESS & PASSENGER CHIME
CB69	14	6A	561790	ALARM JCT BOX	GALLEY 110V REFRIGERATOR
CB70	18	6A	561790	FR JCT BOX	A/C & HEAT SW
CB71	18	10A	561792	A/C JCT BOX	A/C LOGIC PANEL
CB72	18	6A	561790	A/C JCT BOX	A/C COMPRESSOR CLUTCH
CB73	18	15A	561793	A/C JCT BOX	WATER PUMP
CB75	30	30A	870630	INVERTER COMPT	HEATING CONTAINERS
CB76	30	30A	870630	INVERTER COMPT	COFFEE MAKER
CB77	19	40A	560703	A/C JCT BOX	CONDENSER FAN MOTOR RH
CB78	19	40A	560703	A/C JCT BOX	CONDENSER FAN MOTOR LH
CB79	19	10A	561792	FR JCT BOX	DRIVER'S HTR FAN
CB80	20	8A	561791	FR JCT BOX	MIRROR-ADJUST & HEATED SW
CB81	20	15A	561793	FR JCT BOX	DRIVER'S WINDOW-LIFT & LIGHTER
CB82	20	10A	561792	FR JCT BOX	UPPER WINDSHIELD DEFROST
CB83	21	6A	561790	FR JCT BOX	ELECTRONIC TACHOGRAPH CLOCK
CB84	20	10A	561792	FR JCT BOX	SUN VISOR
CB85	22	6A	561790	FR JCT BOX	ENTRANCE DOOR (SEDAN)
CB86	23	8A	561791	RR JCT BOX	LAVATORY PUMP
CB87	24	3A	561797	RR JCT BOX	CAMERA DOOR SOLENOID
CB88	23	6A	561790	RR JCT BOX	LAVATORY LTS
CB89	23	3A	561797	RR JCT BOX	LAVATORY FLUORESCENT
CB90	23	6A	561790	FR JCT BOX	FR DESTINATION SIGN
CB91	23	6A	561790	FR JCT BOX	DRIVER'S SEAT HEATER
CB92	24	6A	561790	FR JCT BOX	KNEELING SYSTEM
CB93	11	20A	561794	RR JCT BOX	BACK-UP LTS & MONITOR
CB95	24	6A	561790	RR JCT BOX	CAMERA HEATER
CB103	26	15A	561793	FR JCT BOX	SOUND SYSTEM
CB105	27	6A	561790	FR JCT BOX	ANTI-SKID E.C.U.
CB106	27	8A	561791	FR JCT BOX	ANTI-SKID E.C.U.
CB107	27	8A	561791	FR JCT BOX	ANTI-SKID E.C.U.
CB108	24	6A	561790	FR JCT BOX	MONITOR CONVERTER (12V-5V)
CB109	23	8A	561791	RR JCT BOX	LAVATORY FAN & NIGHT LT
CB110	25	3A	561797	FR JCT BOX	LUGGAGE DOOR LOCK
CB111	17	8A	561791	RR JCT BOX	PRE-HEAT WATER HEATER TIME
CB112	28	3A	561797	RR JCT BOX	HYD TRANSM MODULATOR VALVE
CB121	28	20A	561794	FR JCT BOX	HEATING WINDSHIELD LH
CB122	28	20A	561794	FR JCT BOX	HEATING WINDSHIELD RH
CB124	8	3A	561797	RR JCT BOX	FAN CLUTCH