

CONNECTORS CODE (C)					CONNECTORS CODE (C)				
No.	LOCATION	TYPE	CAVITY	HOUSING	No.	LOCATION	TYPE	CAVITY	HOUSING
C3	UNDER DASH LH	AMP CPC	37	56145	56146				
C7	FR JCT PANEL VCR FEED	AMP MNL	3	56111	56180				
C8	FR JCT PANEL VCR FEED	AMP MNL	3	561248	56247				
C11	LH CONSOLE SW-MIRROR	AMP MNL	3	561667	56150				
C12	LH CONSOLE SW-MIRROR	AMP MNL	2	561248	561247				
C13	LH CONSOLE SW-MIRROR	AMP MNL	6	561552	56155				
C14	UNDER DASH LH-MIRROR	AMP MNL	9	561670	561669				
C15	UNDER DASH LH-MIRROR	AMP MNL	9	561670	561669				
C16	UNDER DASH-FIRE ALARM	AMP MNL	9	561670	561669				
C17	UNDER DASH-FIRE ALARM	AMP MNL	2	561670	561669				
C18	UNDER DASH-A/C & HEAT SYST. TC	AMP MNL	10	561072	56110				
C20	RR JCT BOX DOORS	AMP MNL	9	561670	561669				
C21	LUIGAGE COMPT.-LOCK DOOR MDT. PED	AMP MNL	2	561072	561076				
C22	ENGINE COMPT.-CYCLOC LT	AMP MNL	2	561566	561890				
C23	UNDER INSTRUMENT-PANEL RH/EO. TC	AMP MNL	2	561030	560997				
C29	FR SERVICE COMPT.-V.M. FEED	AMP MNL	3	561781	561782				
C32	LH CONSOLE DRV. PANEL-SENSOR	BUNDY	3	561030	56104				
C33	FR SERVICE COMPT.-DOCC VSS	AMP MNL	2	561566	561890				
C34	RH CONSOLE DRV. TEMP. CTRL.	BUNDY	6	561030	56103				
C35	REGULATED AIR CTRL.-SENSOR	BUNDY	3	561030	56104				
C36	LH CONSOLE SW-COURSE ON/OFF	SWF	8	561072	56107				
C37	LH CONSOLE SW-COURSE SET	SWF	8	561072	56107				
C38	LH CONSOLE SW-COURSE RESUME	SWF	8	561072	56107				
C41	UNDER DASH-FLASHER UNIT	AMP MNL	2	560900	560898				
C49	LAVATORY NIGHT LITS	AMP MNL	2	560900	560898				
C50	RH CONSOLE-PAS. TEMP. CTRL.	BUNDY	6	561030	56103				
C51	RH CONSOLE SW-A/C & HEAT	SWF	8	561072	56107				
C52	ENGINE COMPT.-COMPRESSOR OSG	AMP MNL	2	561566	561890				
C53	ENGINE COMPT.-COMPRESSOR OSG	AMP MNL	2	561566	561890				
C54	ENGINE COMPT.-COMPRESSOR OSG	AMP MNL	2	560900	560997				
C61	ENGINE COMPT.-FUEL FILTER	AMP MNL	2	561566	561890				
C67	LH UNDER DASH-AMPLIF. RH SPK. BLAUPUNKT	AMP MNL	2	561898	56189				
C68	LH UNDER DASH-AMPLIF. RH SPK. BLAUPUNKT	AMP MNL	2	561898	56189				
C73	LH SW PANEL-MULTIFUNC. LEV. AMP FF	AMP MNL	8	56198	56106				
C74	LH SW PANEL-MULTIFUNC. LEV. AMP FF	AMP MNL	8	56198	56106				
C78	LUIGAGE COMPT.-DOOR LOCK 4 LH AMP MNL	AMP MNL	4	560851	560852				
C79	LUIGAGE COMPT.-DOOR LOCK 4 RH AMP MNL	AMP MNL	4	560851	560852				
C80	FR JCT PANEL-LUG. DOOR LOCK	AMP MNL	6	561552	56155				
C81	LUIGAGE COMPT.-DOOR LOCK 1 LH AMP MNL	AMP MNL	4	560851	560852				
C82	LUIGAGE COMPT.-DOOR LOCK 1 RH AMP MNL	AMP MNL	4	560851	560852				
C84	UNDER DASH-A/C SYSTEM	TC	10	561072	56110				
C85	LUIGAGE COMPT.-DOOR LOCK 3 RH AMP MNL	AMP MNL	4	560851	560852				
C86	LUIGAGE COMPT.-DOOR LOCK 3 LH AMP MNL	AMP MNL	4	560851	560852				
C88	RR END ROOF-CLEARANCE LITS	AMP MNL	2	560900	560898				
C89	RR ROOF AUX. A/C THERMOST. BUNDY	AMP MNL	6	561030	56103				
C91	RR ROOF AUX. A/C TWP. SENSOR	BUNDY	6	561030	56104				
C92	RR ROOF AUX. A/C FAN RH	AMP MNL	2	561030	560997				
C93	RR ROOF AUX. A/C FAN LH	AMP MNL	2	561030	560997				
C94	RR ROOF AUX. A/C FAN RES LH	AMP MNL	2	560900	560898				
C95	RR ROOF AUX. A/C FAN RES RH	AMP MNL	2	560900	560898				
C96	RR ROOF AUX. A/C LUG. SOL. VAL. TC	AMP MNL	2	561030	560997				
C97	RR ROOF AUX. A/C SHUT. SOL. VAL. AMPHENOL	AMP MNL	2	561030	560997				
C105	UNDER DASH RH-DRV. LUG. SOL. VAL. TC	AMP MNL	2	561030	560997				
C106	UNDER DASH RH-DRV. HTR. VALVE	AMP MNL	2	561030	560997				
C107	UNDER DASH RH-DRV. HTR. RH FAN	AMP MNL	2	561030	560997				
C108	UNDER DASH RH-DRV. HTR. LH FAN	AMP MNL	2	561030	560997				
C111	LH CONSOLE SW-DRIVER LITS	SWF	8	561072	56107				

CONNECTORS CODE (C)					CONNECTORS CODE (C)				
No.	LOCATION	TYPE	CAVITY	HOUSING	No.	LOCATION	TYPE	CAVITY	HOUSING
C112	LH CONSOLE SW-GENERAL LITS	SWF	8	561072	56107				
C114	ENGINE DOCC-SPED SIGNAL	AMP MNL	2	561566	561890				
C116	DRIVE AILE COMPT.-AIR DRYER	AMP MNL	40	562251	562251				
C118	ENGINE COMPT.-LH LOWER LAMP	AMP MNL	6	561666	56167				
C120	ENGINE COMPT.-LH LOWER LAMP	AMP MNL	6	561666	56167				
C122	HAT RACK-BALLAST RH	AMP MNL	6	561552	56155				
C123	HAT RACK-BALLAST RH	AMP MNL	6	561552	56155				
C124	HAT RACK-FLUORESCENT	AMP MNL	4	561551	561668				
C125	HAT RACK-FLUORESCENT	AMP MNL	4	561551	561668				
C126	HAT RACK-READING LITS	AMP MNL	2	560900	560898				
C130	LH CONSOLE SW-READING LITS	SWF	8	561072	56107				
C131	LH CONSOLE SW-LUG. DOOR LOCK	SWF	8	561072	56107				
C132	LH CONSOLE SW-PAS. & HOS. CHM. SWF	SWF	8	561072	56107				
C133	LH CONSOLE SW-JACOBI OR. RET.	SWF	8	561072	56107				
C134	LH CONSOLE SW-GALLEY	SWF	8	561072	56107				
C135	RH SW PANEL-LEVER	SWF	8	561072	56107				
C136	LH CONSOLE SW-MIRROR HTR	SWF	8	561072	56107				
C137	RH SW PANEL-HEAD LAMP	SWF	8	561072	56107				
C138	RH SW PANEL-SPARE	SWF	8	561072	56107				
C139	RH SW PANEL-YOG LAMP	SWF	8	561072	56107				
C40	FR JCT PANEL-BAT. HOLD	AMP MNL	2	560900	560898				
C41	ENGINE COMPT.-B/UP ALARM	AMP MNL	2	561566	561890				
C42	FR SERVICE OPT-LH MARKER LITS	ITT SS	3	561111	561080				
C43	RR LH HAT RACK-FEEDING	AMP MNL	9	561661	561662				
C44	RR LH HAT RACK-FEEDING	AMP MNL	9	561661	561662				
C45	RH HAT RACK-BALLAST	AMP MNL	4	560851	560852				
C46	FR SERVICE OPT-RH MARKER LITS	ITT SS	3	561111	561080				
C47	RR ROOF LH-EMERGENCY EXT. LITS	AMP MNL	2	560900	560898				
C48	RR ROOF RH-EMERGENCY EXT. LITS	AMP MNL	2	560900	560898				
C49	LH HAT RACK-BALLAST	AMP MNL	4	560851	560852				
C50	RR LH HAT RACK-10V FLUOR	AMP MNL	2	561248	561247				
C51	RR LH HAT RACK-10V FLUOR	AMP MNL	2	561248	561247				
C52	LH HAT RACK-GENERAL LITS	AMP MNL	3	561667	561550				
C53	RH HAT RACK-GENERAL LITS	AMP MNL	3	561667	561550				
C54	RH SW PANEL-HEAD LAMP	SWF	8	561072	56107				
C55	LH SW PANEL-FAST OLE	SWF	8	561072	56107				
C56	LH SW PANEL-ESP. ENG. FEED	SWF	8	561072	56107				
C58	RR ROOF AUX. A/C FEEDING	AMP MNL	3	561667	561550				
C60	FR SERVICE OPT-INTERFACE	AMP CPC	37	561644	561646				
C61	ENGINE DOCC. H/COM	AMP MNL	30	561030	56103				
C62	ENGINE DOCC. H-ACCESSORIES	AMP MNL	2	561030	56103				
C63	ENGINE OPT-COOLANT PROBE	AMP MNL	2	561030	56103				
C64	FR SERVICE JCT BOX	AMP CPC	22	561709	56170				
C65	FR SERVICE JCT BOX	AMP CPC	16	561639	561640				
C66	UNDER INSTRUMENT PANEL	AMP CPC	16	561639	561640				
C67	FR SERVICE OPT-EL. FOOT PEDAL	AMP MNL	3	561781	561782				
C68	FR SERVICE OPT-DOOR	AMP CPC	6	562360	56236				
C69	FR SERVICE OPT-WORLD TR. V.W. AMP CPC	AMP CPC	16	561638	561640				
C70	ENGINE COMPT.-WATER TANK HEAT PED	AMP MNL	2	561566	561890				
C71	LAV. POTABLE-WATER TANK HEAT	AMP MNL	2	560900	560898				
C72	UNDER INSTRUMENT PANEL	AMP MNL	16	561639	561640				
C73	UNDER INSTRUMENT PANEL	AMP MNL	16	561639	561640				
C74	DRIVE AILE OPT-ABS LH SENSOR	WABCO	2	641132	64113				
C240	DRIVE AILE OPT-ABS LH SENSOR	WABCO	2	641132	64113				
C241	DRIVE AILE OPT-ABS LH SENSOR	WABCO	2	561638	561640				
C242	DRIVE AILE OPT-ABS LH SENSOR	WABCO	3	561638	561640				
C243	DRIVE AILE OPT-ABS RH SENSOR	WABCO	3	561638	561640				
C244	DRIVE AILE OPT-ABS RH SENSOR	WABCO	3	561638	561640				
C245	DRIVE AILE OPT-ABS RH SENSOR	WABCO	3	561638	561640				
C246	DRIVE AILE OPT-ABS RH SENSOR	WABCO	3	561638	561640				
C247	FR AXLE-KNEELING PROXIMITY SW	AMP MNL	3	561667	561550				
C248	FR AXLE-KNEELING PROXIMITY SW	AMP MNL	3	561667	561550				
C249	FR SERVICE OPT-ABS/DOCC	AMP MNL	2	561566	561890				
C250	RH SW PANEL-B/UP CANCEL	SWF	8	561072	56107				

CONNECTORS CODE (C)					CONNECTORS CODE (C)				
No.	LOCATION	TYPE	CAVITY	HOUSING	No.	LOCATION	TYPE	CAVITY	HOUSING
C251	RH SW PANEL-SEAT HTR	SWF	8	561072	56107				
C252	LH SW PANEL-SWITCH LT	SWF	2	561072	56107				
C254	FR SERVICE JCT BOX-ABS	AMP CPC	16	561638	561640				
C255	RH CONSOLE SW-MIRROR	AMP MNL	9	561670	561669				
C257	ENGINE COMPT.-WATER HEATER	AMP FF	6	56198	56106				
C258	DRIVER GUARD WATER HTR TIMER	AMP FF	8	561898	562363				
C259	ENGINE COMPT.-WATER HEATER	AMP FF	2	561566	561890				
C260	ENGINE COMPT.-WATER HEATER	AMP FF	2	561566	561890				
C261	ENGINE COMPT.-WATER HEATER	AMP FF	2	561566	561890				
C267	LUIGAGE COMPT. LITS - 1	AMP MNL	2	561248	561247				
C268	LUIGAGE COMPT. LITS - 2	AMP MNL	2	561248	561247				
C269	LUIGAGE COMPT. LITS - 3 RH	AMP MNL	2	561248	561247				
C270	LUIGAGE COMPT. LITS - 3 LH	AMP MNL	2	561248	561247				
C271	LUIGAGE COMPT. LITS - 4	AMP MNL	2	561248	561247				
C272	FR SERVICE OPT LITS	AMP MNL	2	561248	561247				
C274	FR JCT PANEL-DOORS	AMP MNL	10	561987	561988				
C276	FR JCT PANEL-ALARM BUZZER	BOSCH	5	561987	561983				
C281	LH CONSOLE-FR. DEST. SIGN.	SWF	2	561072	56107				
C282	FR ROOF-DEST. SIGN.	AMP CPC	9	561636	561637				
C290	LUIGAGE OPT-DOOR LOCK	AMP MNL	4	560851	560852				
C291	LUIGAGE OPT-DOOR LOCK	AMP MNL	4	560851	560852				
C292	LUIGAGE OPT-DOOR LOCK	AMP MNL	4	560851	560852				
C293	WIPER MOTOR	AMP MNL	6	561666	561667				
C294	UNDER DASH-WIPER SYST. FEED	AMP MNL	6	561552	56155				
C295	UNDER DASH-WIPER FULS. SEN.	AMP MNL	6	561552	56155				
C296	FR SERVICE OPT-HEAD LITS	ITT SS	3	561111	561080				
C298	FR LH HAT RACK-AMPLIF.	MOLEX	6	561987	561988				
C299	FR LH HAT RACK-AMPLIF.	MOLEX	10	561987	561988				
C302	UNDER DASH-FLASHER MODULE	AMP MNL	2	560900	560898				
C303	ENGINE DOCC. H/COM SIGNAL	AMP MNL	3	561781	561782				
C310	ENGINE DOCC. H-OUTPUT	AMP MNL	4	562398	56239				
C313	ENGINE DOCC. H-OUTPUT	AMP MNL	4	562398	56239				
C314	FR SERVICE OPT-PRESS SW KNEEL PED	AMP MNL	2	561566	561890				
C315	FR SERVICE OPT-KNEEL ALARM	AMP MNL	2	561566	561890				
C316	FR SERVICE OPT-KNEEL ALARM	AMP MNL	2	560900	560898				
C316	ENGINE DOCC. H-MANUAL TR. PED	AMP MNL	4	561630	561631				
C364	FR ROOF-DESTINATION SIGN	AMP MNL	3	561667	561550				
C365	FR ROOF-DESTINATION SIGN	AMP MNL	2	560900	560898				
C368	FR ROOF-DEST. SIGN BALLAST	AMP MNL	3	561667	561550				
C369	FR ROOF-DEST. SIGN POWER SW.	AMP MNL	5	561030	56103				
C370	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898				
C371	FR ROOF-DEST. SIGN FLUOR.	AMP MNL	2	560900	560898				
C372	FR ROOF-DEST. SIGN SPEED SW.	AMP MNL	4	561477	561476				
C382	ENGINE GENERATOR ID. VAC. RELY.	AMP MNL	1	560900	560897				
C383	LH UNDER DASH-MICRO W/O WIRE	AMP MNL	2	561248	561247				
C384	LH UNDER DASH-MICRO W/O WIRE	AMP MNL	3	561550	561661				
C385	EVAPORATOR OPT-WATER PUMP	AMP MNL	2	561566	561567				
C386	EVAPORATOR OPT-BYPASS VALVE	AMP MNL	2	561566	561567				
C387	CONVEYER OPT-FAN PRES. SW.	AMP MNL	2	561566	561567				
C394	LH OVER CONSOLE - B/U MONITOR	AMP MNL	4	560851	560852				
C398	LH OVER CONSOLE - B/U MONITOR	AMP MNL	5	561030	56103				
C396	HAT RACK-FLASHER	MOLEX	4	561781	561782				
C400	ENGINE OPT-BLOCK HEATER	AMP MNL	3	561781	561782				
C426	ENGINE 560 RAD. FAN CLUTCH	AMP MNL	3	561781	561782				
C430	DRIVER GUARD WATER HTR TIMER	AMP FF	8	561898	562363				