

WIRING DIAGRAM PAGES LIST

Information pages		E		M		W	
Multiplex output list	B1	Engine brake and Retarder	12.1	Main Distribution Ignition & Batt.	3.1	Window Ajar &Awning	27.1
Multiplex input list	B2	Engine compt lighting	25.1	Main Distribution Wake-Up	3.3	Wiper & Washer	34.1
Multiplex error messages list	B3	Engine Start	3.2	Marker Lights	26.1,26.2		
Arrangement - Harness	C1	Engine ECM	14.1	Mirror Ramco	31.1		
Can Configuration	C3	Engine Override	14.1	Multiplexing Power	7.1		
Glossary	D	Entrance door	29.1	Multiplexing Network	6.1		
Circuit Number Listing	E	Ether Switch	13.1				
Circuit Breaker code	F	Engine bloc heater	11.1	P			
Connectors code	G			Park Brake Sensor	12.1		
Diode Number Code	H	F		Trailer Brake Sensor	12.1		
Resistors Number Code	J	Fast Idle	14.1	Parking Brake Release Switch	32.1		
Fuses Code	L	Fire Alarm	9.1	Power Distribution FJB	4.1		
Relay Code	K	Flashers	26.1,26.2	Power Distribution RJB	5.1		
		Fog lights	26.3	Power Outlet	30.1		
A		Fuel Sender	10.1	Prime Pump	13.1		
Abs	16.1	Fuel Prime Pump	13.1	Prodriver	11.1		
Abs-Esp	16.2	Fuel water Filter	13.1	Pneumatic Cut-Out Acc sol	9.1		
B		G		R			
Back-up Camera	28.1	Grounds	2.1	Radiator Fan Clutch	13.1		
Back-up lights and alarm	26.3			Rear junction box door fan	11.1		
Battery and Equalizer	1.1	H					
Battery Charger	17.1	Hazard	26.1	S			
Brake Pedal Sensor	12.1	Head Lights	26.1	Service Brake Relay	12.1		
		Horn	9.1	Slide out	23.1		
C		Hvac Defroster	18.1	Slide out (single)	23.2		
Charging System	3.2	Hvac Passenger	18.2	Slide out (double)	23.3		
Clearance lights rear & front	26.1,26.2	Hvac Driver only	18.3	Spare Wires	8.1		
Cluster	10.1			Stop lights	26.2		
Cornering Lights (Optional)	26.3	J		Sun Visor	30.1		
Cruise control	14.1	J1939 Network	6.2	Steering Control ZF	37.1		
Converter interface	36.1			sjmatsyj	38.1		
		K		sfgnsrjh	39.1		
D		Keyless keypad	29.1	Steering Wheel Control	38.1		
Dash Lights	19.1						
Differential lock	37.1	L		T			
Docking Lights	26.3	Level low	32.1	Tag	32.1		
Driver's Light and Backlight	19.1	Luggage compt lighting	25.1	Tail and Licence Lights	26.2		
Driver's Power Window	30.1	Luggage door Lock/Unlock	33.1	Test Switch	9.1		
Driver's seat	35.2	Luggage door switches	24.1	Transmission ECU	15.1-15.2		
				Trailer Package	26.4		
				TPMS	39.1		