


# Ground Distribution

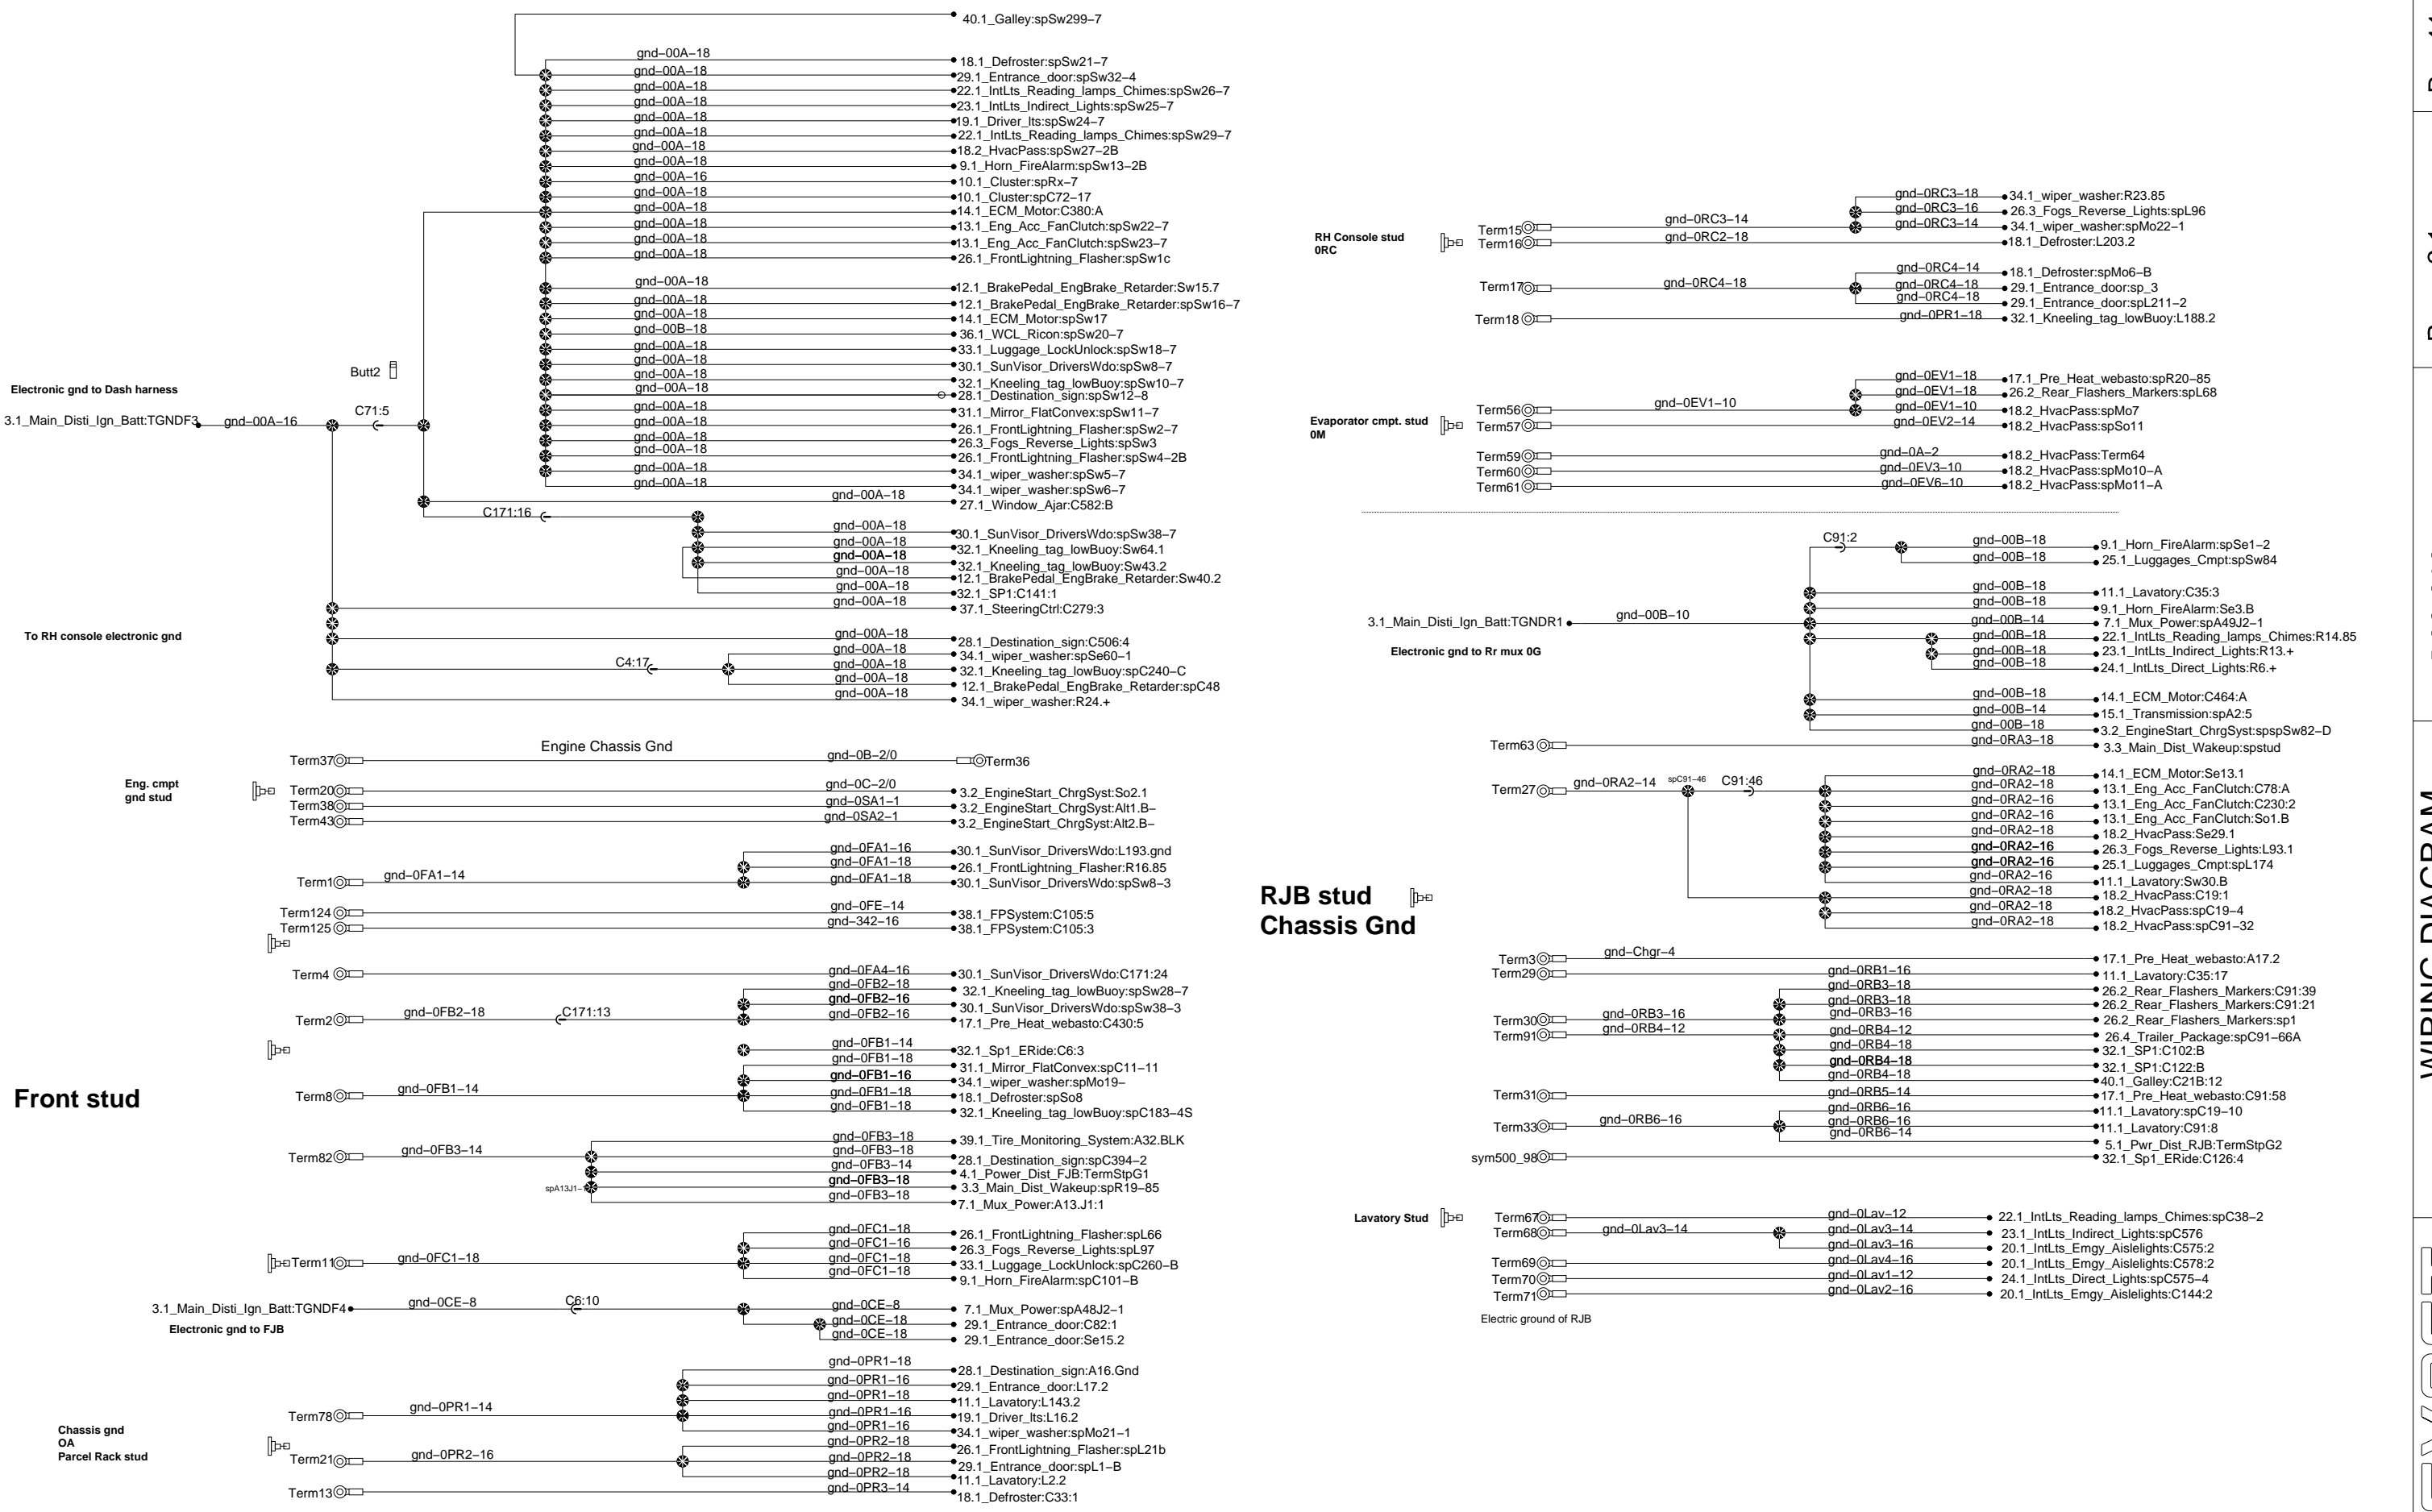

Rev:11

Page:2:1

No:D061020

WIRING DIAGRAM

PREVOST®