

BREAKERS LIST

No	Location	Part #	Function	Rating	Page	No	Location	Part #	Function	Rating	Page
CB1	RJBbreakers	563708	24WupFJB	90amp	3,1	CB135V	RJB_VECR	564342	A54Pwr	30amp	5,1
CB2	RJBbreakers	568113	12VD	70amp	3,1	CB136V	RJB_VECR	564342	A53Pwr	30amp	5,1
CB3	RJBbreakers	563708	EvapFan	90amp	3,1	CB137V	RJB_VECR	563647	Spare	5A	5,1
CB5	RJBbreakers	563708	24WupRJB	90amp	3,1	CB138V	RJB_VECR	563647	Englights	5A	5,1
CB6	RJBbreakers	568113	24VD/WCL	70amp	3,1	CB139V	RJB_VECR	563649	Altern	10amp	5,1
CB8	RJBbreakers	563708	12WupRJB	90amp	3,1	CB13V	FJB_VECF	564340	12VDCust	15amp	4,1
CB9	RJBbreakers	563707	BattChrg/UREA	70amp	3,1	CB140V	RJB_VECR	563649	Spare	10amp	5,1
CB10	RJBbreakers	568114	12WupFJB	150amp	3,1	CB141V	RJB_VECR	564399	Mo7Cond	15amp	5,1
CB11	RJBbreakers	568127	Pwr1PRack	50amp	3,1	CB142V	RJB_VECR	564399	Mo8Cond	15amp	5,1
CB13	RJBbreakers	563707	DC/DC/Conv	70amp	3,1	CB143V	RJB_VECR	564399	Mo28Cond	15amp	5,1
CB15	RJBbreakers	568127	12VUltrapcap	50amp	3,1	CB144V	RJB_VECR	564399	Mo27Cond	15amp	5,1
CB100V	RJB_VECR	563649	EngECU	10amp	5,1	CB145V	RJB_VECR	564341	Spare	15amp	5,1
CB105V	RJB_VECR	564399	Spare	20amp	5,1	CB146V	RJB_VECR	563649	Spare	10amp	5,1
CB106V	RJB_VECR	564342	A50Pwr	30amp	5,1	CB147V	RJB_VECR	564340	24WupCust	15amp	5,1
CB107V	RJB_VECR	564342	A51Pwr	30amp	5,1	CB148V	RJB_VECR	564342	PRack	30amp	5,1
CB108V	RJB_VECR	563647	OBDConPwr	5A	5,1	CB149V	RJB_VECR	564399	Uree	15amp	5,1
CB109V	RJB_VECR	563647	Spare	5A	5,1	CB14V	FJB_VECF	563647	Spare	5amp	4,1
CB10V	FJB_VECF	563647	OBDC&Clust&Haz	5amp	4,1	CB150V	RJB_VECR	563649	Spare	10amp	5,1
CB110V	RJB_VECR	563649	TransPwr	10amp	5,1	CB151V	RJB_VECR	564340	Spare	15amp	5,1
CB112V	RJB_VECR	563647	Spare	30A	5,1	CB152V	RJB_VECR	563649	Spare	10amp	5,1
CB113V	RJB_VECR	563649	L1&L303Pwr	10amp	5,1	CB15V	FJB_VECF	563647	TGW	5amp	4,1
CB114V	RJB_VECR	564340	Spare	15amp	5,1	CB16V	FJB_VECF	564340	12EngRunCu	15amp	4,1
CB115V	RJB_VECR	563649	Mo38	10amp	5,1	CB17V	FJB_VECF	564342	A43Pwr	30amp	4,1
CB116V	RJB_VECR	564340	Spare	15amp	5,1	CB18V	FJB_VECF	564342	A45Pwr	30amp	4,1
CB117V	RJB_VECR	563649	Spare	10amp	5,1	CB19V	FJB_VECF	564342	A46Pwr	30amp	4,1
CB118V	RJB_VECR	564340	Spare	15amp	5,1	CB20V	FJB_VECF	563647	A55/A15Pwr	5amp	4,1
CB119V	RJB_VECR	563649	RrProxSw	10amp	5,1	CB21V	FJB_VECF	564342	A48Pwr	30amp	4,1
CB11V	FJB_VECF	564464	Horn	20amp	4,1	CB22V	FJB_VECF	563647	Spare	5amp	4,1
CB120V	RJB_VECR	564399	ProFuel	20amp	5,1	CB23V	FJB_VECF	564342	ESP	30amp	4,1
CB121V	RJB_VECR	564340	12WUPCust	15amp	5,1	CB24V	FJB_VECF	564340	Se76Pwr	15amp	4,1
CB122V	RJB_VECR	563649	Equalizer	10amp	5,1	CB25V	FJB_VECF	564340	12VICust	15amp	4,1
CB123V	RJB_VECR	564341	spare	25amp	5,1	CB26V	FJB_VECF	564340	Farebox	15amp	4,1
CB124V	RJB_VECR	564341	Spare	25amp	5,1	CB27V	FJB_VECF	564342	INITSSubSyst	30amp	4,1
CB126V	RJB_VECR	563647	R29/So11	5A	5,1	CB295V	Parcel_Rack_VECPR	563647	24VDismIvN/MotorolaAudio	5amp	5,2
CB127V	RJB_VECR	564340	WaterPump	15amp	5,1	CB296V	Parcel_Rack_VECPR	563647	24VDismFareboxRelay	5amp	5,2
CB128V	RJB_VECR	564342	24VDFJB	30amp	5,1	CB297V	Parcel_Rack_VECPR	563647	24VDismMotorolaRelay	5amp	5,2
CB129V	RJB_VECR	564340	OilSep	15amp	5,1	CB299V	Parcel_Rack_VECPR	563647	24WupRelay12VWup	5amp	5,2
CB12V	FJB_VECF	564340	Spare	15amp	4,1	CB29V	FJB_VECF	563649	Shutdown	10amp	4,1
CB130V	RJB_VECR	564340	Tachometer	15amp	5,1	CB300V	Parcel_Rack_VECPR	563647	24VDismBCIS/CardValidator	5amp	5,2
CB131V	RJB_VECR	563647	24VDCust	5A	5,1	CB301V	Parcel_Rack_VECPR	563649	24VDismCamera	10amp	5,2
CB132V	RJB_VECR	563647	A57Pwr	5A	5,1	CB302V	Parcel_Rack_VECPR	563649	24VDismITS	10amp	5,2
CB133V	RJB_VECR	564342	A49Pwr	30amp	5,1	CB303V	Parcel_Rack_VECPR	563647	24VDismWIFI	5amp	5,2
CB134V	RJB_VECR	564342	A52Pwr	30amp	5,1	CB304V	Parcel_Rack_VECPR	563649	24VDismInfotainment	10amp	5,2

BREAKERS LIST

No	Location	Part #	Function	Rating	Page	No	Location	Part #	Function	Rating	Page
CB305V	Parcel_Rack_VECPR	564340	24VDismFarebox	15amp	5,2	CB54V	FJB_VECF	564340	Spare	15amp	4,2
CB306V	Parcel_Rack_VECPR	563647	Spare	5amp	5,2	CB55V	FJB_VECF	563649	Spare	10amp	4,2
CB307V	Parcel_Rack_VECPR	563647	Spare	5amp	5,2	CB56V	FJB_VECF	564340	Spare	15amp	4,2
CB308V	Parcel_Rack_VECPR	563647	Spare	5amp	5,2	CB57V	FJB_VECF	563649	Spare	10amp	4,2
CB30V	FJB_VECF	563647	OBDCon	5amp	4,1	CB58V	FJB_VECF	564340	DestSigns	15amp	4,2
CB310V	Parcel_Rack_VECPR	563647	24VIBCIS/CardValidator	5amp	5,2	CB60V	Rear_Seat	564342	USB	30amp	40,2
CB311V	Parcel_Rack_VECPR	563649	24VICamera/backUp	10amp	5,2	CB61V	Rear_Seat	564342	USB	30amp	40,2
CB312V	Parcel_Rack_VECPR	563649	24VIITS	10amp	5,2	CB62V	Rear_Seat	564342	USB	30amp	40,2
CB313V	Parcel_Rack_VECPR	563647	24VIWIFI	5amp	5,2	CB63V	Rear_Seat	564342	USB	30amp	40,2
CB314V	Parcel_Rack_VECPR	563649	24VIInfotainment	10amp	5,2	CB73V	RJB_VECR	564399	EngECU	20amp	5,1
CB315V	Parcel_Rack_VECPR	564340	24VIDestSigns	15amp	5,2	CB90V	RJB_VECR	564399	UreaSys	20amp	5,1
CB316V	Parcel_Rack_VECPR	563647	Spare	5amp	5,2	CB91V	RJB_VECR	564399	EngECU	20amp	5,1
CB317V	Parcel_Rack_VECPR	563647	Spare	5amp	5,2	CB95V	FJB_VECF	563647	Spare	5amp	4,2
CB320V	Parcel_Rack_VECPR	564340	24WupFarebox	15amp	5,2	CB96V	RJB_VECR	564399	Spare	20amp	5,1
CB321V	Parcel_Rack_VECPR	563647	24WupDestSigns	5amp	5,2	CB99V	RJB_VECR	564342	EngECU	30amp	5,1
CB322V	Parcel_Rack_VECPR	563647	24WupPassCounter	5amp	5,2						
CB323V	Parcel_Rack_VECPR	563647	24WupEthernetSwitch	5amp	5,2						
CB324V	Parcel_Rack_VECPR	563647	Spare	5amp	5,2						
CB325V	Parcel_Rack_VECPR	563647	Spare	5amp	5,2						
CB330V	Parcel_Rack_LH	563647	12VControlHead	5amp	5,2						
CB331V	Parcel_Rack_LH	563647	Spare	5amp	5,2						
CB332V	Parcel_Rack_LH	564341	12VDismRadio12Wup	25amp	5,2						
CB333V	Parcel_Rack_LH	564341	12VDismRadio	25amp	5,2						
CB33V	FJB_VECF	563647	A41Pwr	5amp	4,2						
CB34V	FJB_VECF	563647	A42Pwr	5amp	4,2						
CB35V	FJB_VECF	563647	MCMPwr	5amp	4,2						
CB36V	FJB_VECF	563647	Ign.Sw	5amp	4,2						
CB37V	FJB_VECF	563647	Haz/ExtDoorSw	5amp	4,2						
CB39V	FJB_VECF	564340	24VDCust	15amp	4,2						
CB40V	FJB_VECF	564340	Spare	15amp	4,2						
CB41V	FJB_VECF	563647	Spare	5A	4,2						
CB42V	FJB_VECF	563649	Spare	10amp	4,1						
CB43V	FJB_VECF	564399	Spare	20amp	4,1						
CB44V	FJB_VECF	564342	A44Pwr	30amp	4,2						
CB45V	FJB_VECF	564342	A47Pwr	30amp	4,2						
CB46V	FJB_VECF	563647	Gateway	5amp	4,2						
CB47V	FJB_VECF	563647	MCM	5amp	4,2						
CB48V	FJB_VECF	564399	Wipers	20amp	4,2						
CB4V	FJB_VECF	563647	Spare	5amp	4,2						
CB50V	FJB_VECF	564342	Defrost	30amp	4,2						
CB51V	FJB_VECF	563647	A56Pwr	5amp	4,2						
CB52V	FJB_VECF	563647	Spare	5amp	4,2						
CB53V	FJB_VECF	563649	Spare	10amp	4,2						