

## **Starting and Stopping Procedures** 83

---


<b>STARTING THE ENGINE.....</b>	<b>84</b>
STARTING FROM THE DRIVER'S SEAT.....	84
STARTING FROM THE ENGINE COMPARTMENT.....	85
COLD WEATHER STARTING .....	85
JUMP STARTING.....	85
<b>ENGINE WARM-UP.....</b>	<b>87</b>
<b>ALLISON TRANSMISSION WARM-UP.....</b>	<b>87</b>

## STARTING THE ENGINE

In normal circumstances, the engine should be started from the driver's seat. However, a rear-start panel in the engine compartment permits starting the engine from that location, mainly for maintenance purposes.

### STARTING FROM THE DRIVER'S SEAT

- Make sure the starter selector switch located in the engine compartment is set to the **NORMAL** position and that the battery master switch (master cut-out) located on the rear electrical panel is set to the **ON** position.

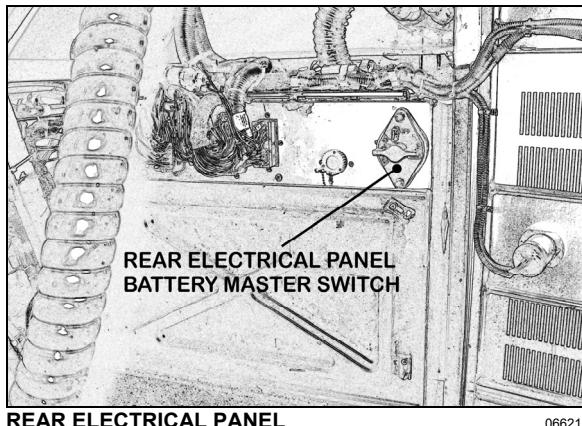

REAR ELECTRICAL PANEL

06621

- Apply the spring-loaded parking brake by pulling the parking brake control button all the way up;
- Place transmission in neutral;
- Turn ignition switch to **START** position (refer to Controls and Instruments chapter), release the key after the engine starts.
- Brake pedal must be applied when selecting Drive (D) otherwise the transmission will stay in neutral (N).



#### CAUTION

Do not engage starter for more than 15 seconds at a time. If engine does not start within 15 seconds, release ignition key and let starter cool for one minute before attempting to restart.



#### CAUTION

Do not press accelerator pedal before starting. This could result in an electronic control unit fault and degrade the fuel system control.



#### CAUTION

Special precautions are necessary with turbocharged engines to avoid possible turbine damage. After starting, run the engine at normal idle for two minutes to allow lubricating oil to reach the turbocharger then run the engine at fast idle. Let oil pressure reach normal operating range before driving.

#### NOTE

*If engine does not start, return key to OFF position before attempting to restart.*

#### NOTE

*If the accelerator pedal is depressed before starting, release and wait 30 seconds before attempting to restart.*

### Stopping the Engine

- Apply parking brake and place transmission in neutral (N);
- Allow engine to idle for at least two minutes before shutting engine **OFF**. This insures that the turbine speed drops and allows time for the engine exhaust gas temperature to drop to about 300°F (150°C);
- Shut off all electrical loads;
- Turn the ignition switch to the **OFF** position.



#### CAUTION

Do not shut **OFF** engine when running above normal idle.



#### CAUTION

Turn the battery master switch (master cut-out) to the **OFF** position after parking and when left unattended for an extended period of time.

### STARTING FROM THE ENGINE COMPARTMENT


Switches to start and stop the engine from inside the engine compartment are mounted on a small panel above the air filter.

**DANGER**

Apply parking brake and place transmission in neutral (N) before starting engine from inside the engine compartment.

Turn the battery master switches (ignition and master cut-out) to the *ON* position;


Flip the starter selector switch to the *REAR START* position;

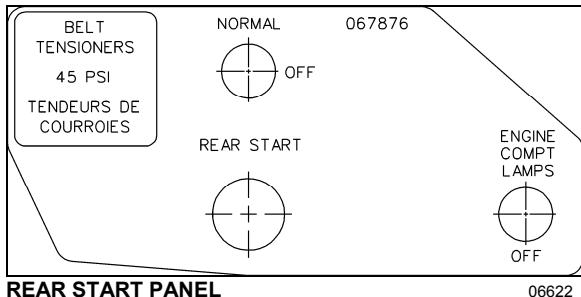

Press the *REAR START* push-button switch, release push-button after the engine starts.

**DANGER**

Do not wear loose clothing when working near engine. Stand clear of rotating components.

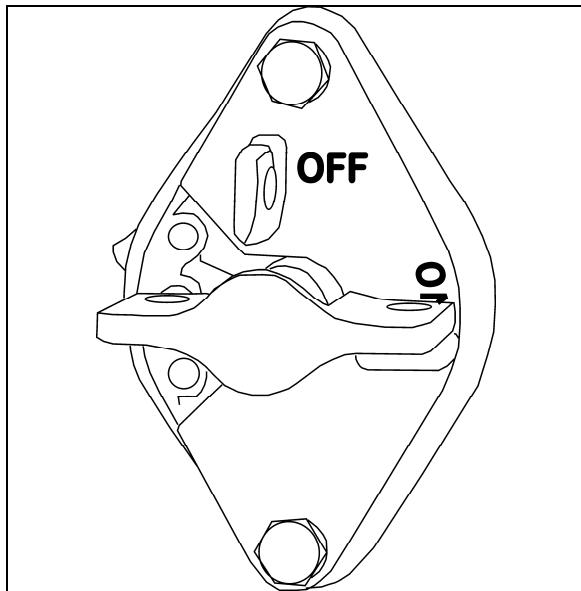**CAUTION**

Refer to cautions in "Starting From The Driver's Seat" in this chapter

**DANGER**

Rotating shafts can be dangerous. You can snag cloths, skin, hair, hands, etc. This can cause a serious injury or death. Do not work on a shaft (with or without a guard) when the engine is running.

**Stopping the Engine**

To stop the engine from the engine compartment, flip the starter selector switch to the *OFF* position.

**CAUTION**

Do not stop engine by any other method.

**COLD WEATHER STARTING**

When starting a cold engine, the intake air should be warmed up by using the intake air preheater. Turn the ignition switch to the *ON* position. The preheater will not engage at coolant temperature above 54°F (12°C). If the coolant temperature is below 54°F (12°C), the preheater will engage and will light the preheater telltale between 0 and 50 seconds, depending on the engine coolant temperature. Wait before the preheater telltale has turned off before starting the engine.

If necessary, once the engine has started, the preheater will reengage (post heating) for the same length of time as the preheat time.

**DANGER**

**Do not** use ether or other combustible starting aid fluid on any engine equipped with an intake air preheater. If the engine is equipped with a preheater, introduction of ether or similar starting aids could cause a fire or explosion resulting in severe property damage, serious personal injury or death.

**JUMP STARTING**

In order to avoid damage to solid-state electrical components, it is important that jumper (booster) cables be used correctly and only in emergencies. To jump start, use another 24 volt DC, negative grounded, power source. Use only jumper cables rated at 500 cranking amperes.

**DANGER**

Injury, explosion, battery acid damage or charging system overload may result if these jump starting procedures are not precisely followed.

**WARNING**

Wear eye protection and remove rings, metal jewelry and watches with metal bands.

**DANGER**

The gases given off by batteries while jump starting are explosive. Do not smoke near batteries.

**DANGER**

The battery could rupture or explode if jump started when the run-down battery fluid is frozen or if the battery fluid level is low. Check condition of run-down battery before attempting to jump start.

**CAUTION**

Do not let the two vehicles touch. Keep a walk-through distance between the two vehicles. Make sure positive (red) and negative (black) jumper cable clamps do not touch.

**CAUTION**

Never connect the jumper cable to the negative terminal post of the run-down battery.

**CAUTION**

Do not jump start if a maintenance-free battery has a yellow test indicator. Have the battery replaced.

**WARNING**

Before attempting to jump start, make sure the parking brake is applied and the transmission is in neutral (N). Turn off all lights, heaters and other electrical accessories.

**CAUTION**


Choose a booster vehicle which produces comparable amperage as your vehicle.

To jump start, proceed as follows:

1. Remove the protective plug from the booster block bulkhead connector located in the R.H. side engine compartment;
2. Connect Whittaker type connector to the bulkhead connector. If the good battery is in another vehicle, that vehicle's engine must be shut OFF before connecting;
3. Disconnect the jumper cables in reverse order;
4. Install protective plug on the booster block terminal.

**NOTE**

Jumper cables must be rated at 500 cranking amperes. If jumper cable length is 20 feet (6 m) or less, use 2/0 (AWG) gauge wires. If cable length is between 20 to 30 feet (6 to 9 m), use 3/0 (AWG) gauge wires.


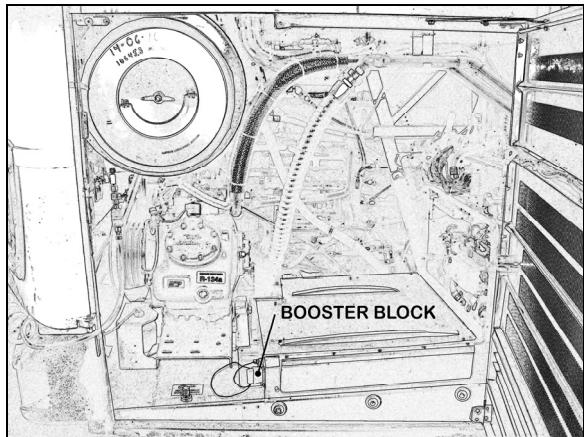


BOOSTER BLOCK LOCATION

06623

## ENGINE WARM-UP

After starting the engine, keep the parking brake applied and let the engine run at normal idle for two minutes to allow lubricating oil to reach the turbocharger. Increase engine speed to fast idle, using the FAST IDLE switch located on the dashboard for five minutes, without loading the engine. Monitor the gauges and indicator lights to make sure all conditions are normal. If an abnormal condition is observed, stop the engine immediately and have the condition corrected.

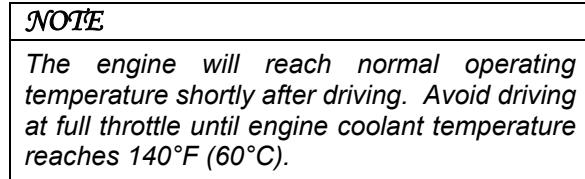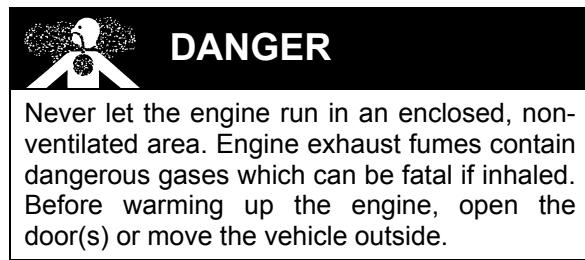

## ALLISON TRANSMISSION WARM-UP

When the transmission temperature falls below -20°F (-29°C), the CHECK TRANS telltale light illuminates after the engine is started, and a reminder tone will sound. In this case, the transmission will be locked in neutral (N) until the transmission temperature rises above -20°F (-29°C) and the CHECK TRANS telltale light goes out. The transmission will only operate in first or reverse gears until it reaches normal operating temperature.