

SECTION 14: STEERING

CONTENTS

| | |
|--|-----------|
| 1. STEERING SYSTEM..... | 3 |
| 1.1 I-BEAM AXLE STEERING SYSTEM DESCRIPTION | 3 |
| 1.2 INDEPENDENT FRONT SUSPENSION STEERING SYSTEM DESCRIPTION | 4 |
| 2. POWER STEERING GEAR | 5 |
| 2.1 DESCRIPTION..... | 5 |
| 2.2 POWER STEERING GEAR REMOVAL | 6 |
| 2.3 POWER STEERING GEAR INSTALLATION | 6 |
| 3. BLEEDING POWER STEERING HYDRAULIC SYSTEM..... | 6 |
| 4. HYDRAULIC PRESSURE TEST..... | 6 |
| 5. TROUBLESHOOTING | 6 |
| 6. POWER STEERING HYDRAULIC PUMP | 6 |
| 6.1 WITH DDC SERIES 60 ENGINE | 6 |
| 6.1.1 <i>Description</i> | 6 |
| 6.1.2 <i>Removal And Installation</i> | 6 |
| 6.1.3 <i>Maintenance</i> | 7 |
| 6.2 WITH VOLVO D13 ENGINE..... | 7 |
| 6.2.1 <i>Description</i> | 7 |
| 6.2.2 <i>Removal And Installation</i> | 7 |
| 7. STEERING COLUMN..... | 8 |
| 7.1 REMOVAL | 8 |
| 8. STEERING WHEEL..... | 8 |
| 8.1 REMOVAL | 8 |
| 8.2 INSTALLATION | 9 |
| 8.3 CLOCKS普RING REPLACEMENT | 9 |
| 9. TURNING ANGLE ADJUSTMENT | 10 |
| 10. STEERING LINKAGE ADJUSTMENT..... | 10 |
| 11. PITMAN ARM | 11 |
| 11.1 REMOVAL | 11 |
| 11.2 INSTALLATION | 11 |
| 11.3 ADJUSTMENT | 11 |
| 11.4 TAG AXLE UNLOADING SWITCH ADJUSTMENT | 12 |
| 12. MAINTENANCE..... | 12 |
| 12.1 POWER STEERING RESERVOIR AND FILTER | 12 |
| 12.1.1 <i>Oil Level Check Procedure</i> | 12 |
| 12.1.2 <i>Filter Replacement</i> | 13 |
| 12.2 STEERING STABILIZER CYLINDER (DAMPER)..... | 13 |
| 12.3 DRAG LINK | 13 |
| 12.4 POWER STEERING HYDRAULIC PUMP..... | 14 |
| 13. DRIVING TIPS | 14 |

Section 14: STEERING

| | |
|---------------------------------------|-----------|
| 14. TORQUE SPECIFICATIONS..... | 15 |
| 15. SPECIFICATIONS | 16 |

ILLUSTRATIONS

| | |
|--|----|
| FIGURE 1: I-BEAM AXLE STEERING SYSTEM SETUP | 3 |
| FIGURE 2: IFS STEERING SYSTEM SETUP | 4 |
| FIGURE 3: POWER STEERING GEAR | 5 |
| FIGURE 4: FRONT SERVICE COMPARTMENT..... | 5 |
| FIGURE 5: FUEL PUMP REMOVAL | 7 |
| FIGURE 6: FUEL PUMP DRIVE AXLE | 7 |
| FIGURE 7: POWER STEERING PUMP REMOVAL..... | 7 |
| FIGURE 8: STEERING COLUMN | 8 |
| FIGURE 9: STEERING COLUMN COVERS | 8 |
| FIGURE 10: REMOVING THE HORN PAD | 9 |
| FIGURE 11: STEERING HARNESS & HORN WIRE | 9 |
| FIGURE 12: LOCKING THE CLOCKSPrING IN PLACE | 9 |
| FIGURE 13: CLOCKSPrING INSTALLATION | 10 |
| FIGURE 14: PROPER CLOCKSPrING POSITION..... | 10 |
| FIGURE 15: PITMAN ARM ADJUSTMENT | 11 |
| FIGURE 16: FIXING NUT PUNCH MARK..... | 11 |
| FIGURE 17: TAG AXLE UNLOADING SWITCH ADJUSTMENT..... | 12 |
| FIGURE 18: HYDRAULIC FLUID RESERVOIR LOCATION | 13 |
| FIGURE 19: POWER STEERING FLUID RESERVOIR | 13 |
| FIGURE 20: STEERING STABILIZER (DAMPER)..... | 14 |
| FIGURE 21: DRAG LINK COMPONENTS | 15 |
| FIGURE 22: TIE ROD END | 15 |
| FIGURE 23: FRONT AXLE COMPONENTS | 15 |

1. STEERING SYSTEM

1.1 I-BEAM AXLE STEERING SYSTEM DESCRIPTION

The steering system consists of the steering wheel and column assembly, a vane-type hydraulic pump, reservoir, filter, interconnecting system lines and hoses, integral power steering gear, linkage and steering damper (Fig. 1). The steering linkage includes the pitman arm, drag link, steering arm, tie rod arms and tie rod.

Hydraulic components are added to transmit, increase and regulate steering control forces.

These elements are:

1. Steering stabilizer (damper);
2. A vane type hydraulic pump; and
3. Hydraulic reservoir and hoses.

The steering stabilizer reduces road shocks and vibrations in the system. The steering gearbox is self powered and provides movement with power assistance to the left wheel.

Steering stability and tire wear are influenced by wheels, hubs, tires, air suspension, brakes, front suspension and front end alignment which are all covered in their respective sections in this manual.

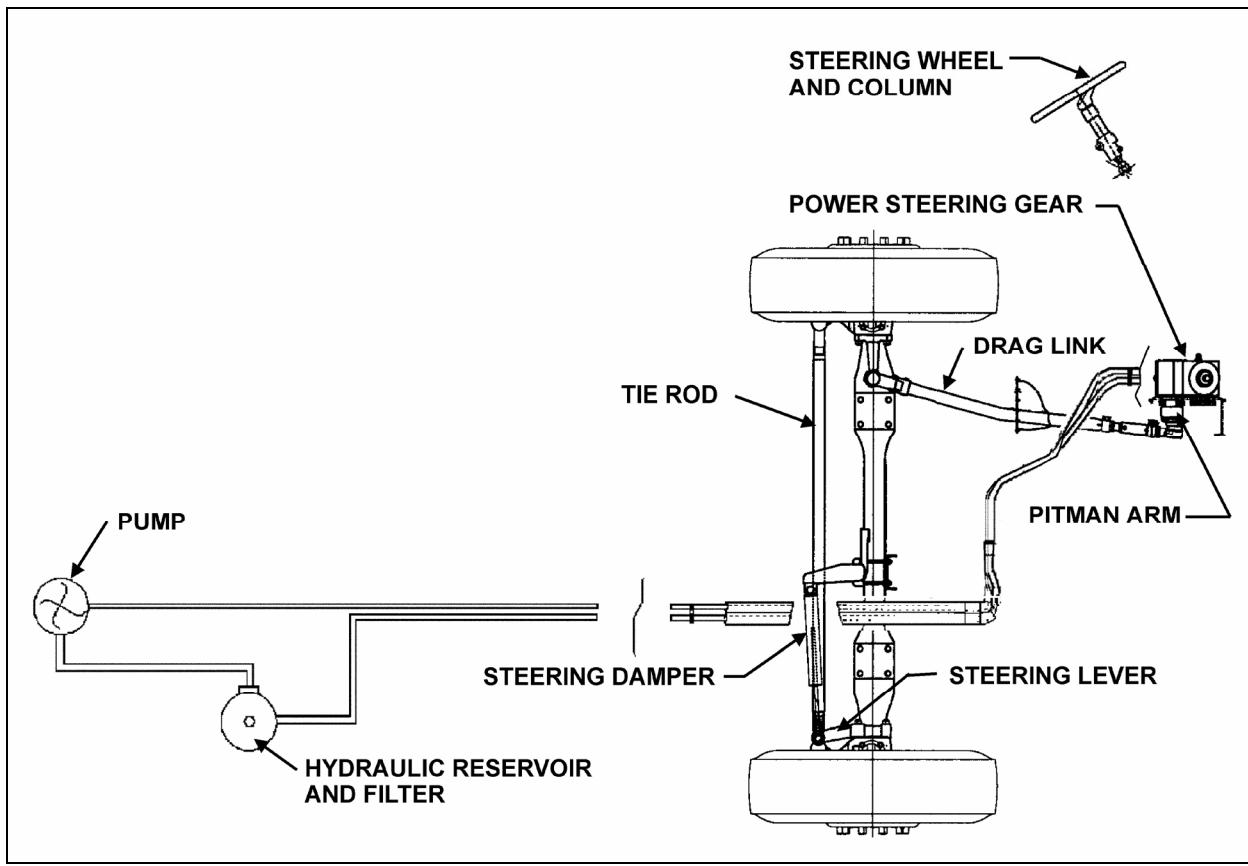


FIGURE 1: I-BEAM AXLE STEERING SYSTEM SETUP

14041

Section 14: STEERING

1.2 INDEPENDENT FRONT SUSPENSION STEERING SYSTEM DESCRIPTION

The steering system consists of the steering wheel and column assembly, a vane-type hydraulic pump, reservoir, filter, interconnecting system lines and hoses, integral power steering gear and linkage (Fig. 2). The steering linkage consists of tie rods connected to the bell crank and the steering arm at the left side of the coach, and to the idler arm and steering arm at the right side of the coach. The bell crank and idler arm are connected by a relay rod. A drag link connected to the bell crank and the pitman arm, which is mounted to the steering gear, transfers the turning motion of the steering wheel to the steering arms.

Hydraulic components are added to transmit, increase and regulate steering control forces.

These elements are:

1. A vane type hydraulic pump; and
2. Hydraulic reservoir and hoses.

The steering gearbox is self powered and provides movement with power assistance to the left wheel.

Steering stability and tire wear are influenced by wheels, hubs, tires, air suspension, brakes, front suspension and front end alignment which are all covered in their respective sections in this manual.

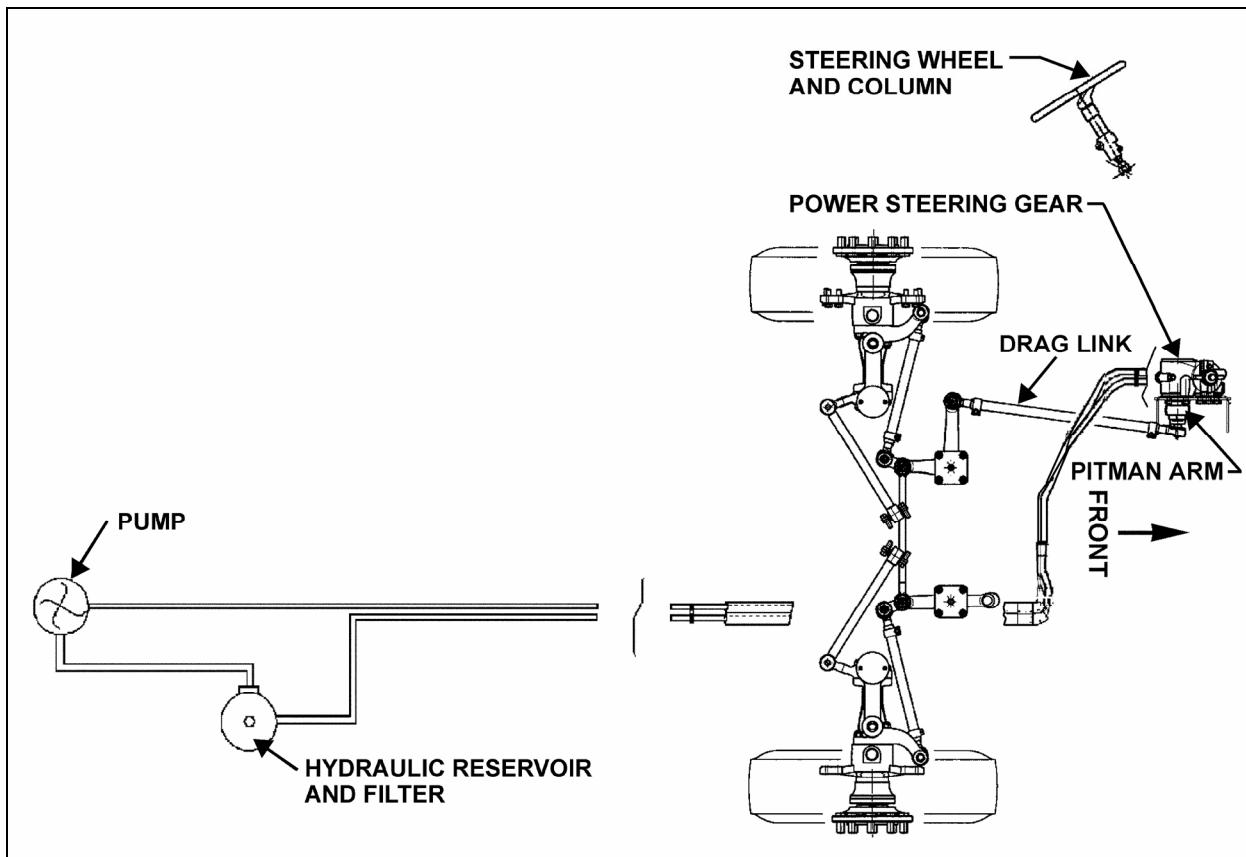


FIGURE 2: IFS STEERING SYSTEM SETUP

14060

2. POWER STEERING GEAR

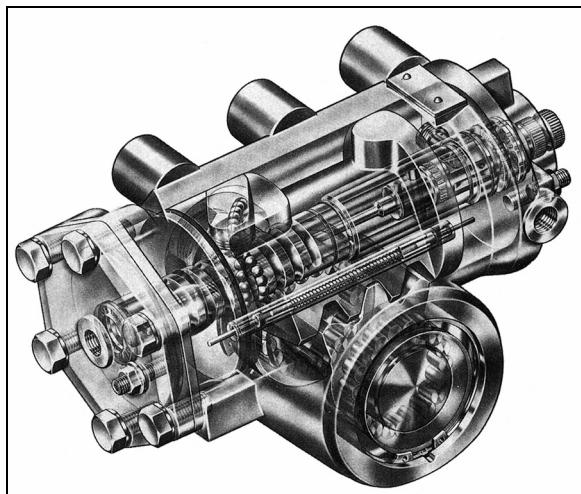


FIGURE 3: POWER STEERING GEAR

14035

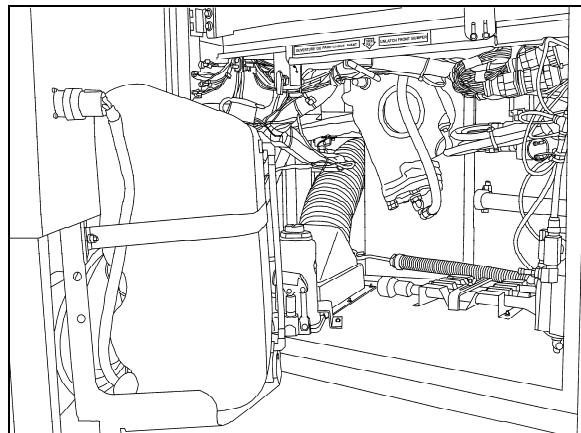


FIGURE 4: FRONT SERVICE COMPARTMENT

18611

2.1 DESCRIPTION

The power steering gear is located in the lower part of front service compartment (Figs. 3 & 4). The housing of the ZF-Servocom contains a control valve, working cylinder and a complete mechanical steering gear. The pressure oil for the steering is delivered by a motor-driven oil pump which is supplied with oil from an oil tank.

The housing is designed as a cylinder for the piston, which converts the rotation of the steering shaft and the worm into an axial movement and transfers this to the steering worm sector shaft. The serration of the sector shaft is straight-cut with a high surface quality in such a way that it is only possible to set a unique setting without play on installation in the straight-ahead driving area by means of the two eccentrically designed lateral housing covers.

The piston and worm are connected via a ball chain. When the worm is turned, the balls are collected by a circulating pipe at one end of the chain and fed in again at the other end, thus producing an endless ball chain.

The control valve consists of the valve slide in a needle bearing in the worm, with six control grooves on the circumference and the control sleeve on the worm, which also has six control grooves. The valve slide, designed with steering shaft connection, turns together with the worm as the steering wheel is turned.

A torsion bar, which is pinned with the valve slide and the worm, keeps the control valve in the neutral position as long as no opposing force is applied to the steering wheel. The steering housing contains a pressure relief valve, which limits the discharge pressure of the oil pump to the maximum value required. A replenishing valve can also be used, through which oil is sucked from the return if steering is not hydraulically boosted.

Compared with constant ratio, steering versions with variable ratio are more directly designed in the center area than outside the center area. The resulting smaller steering corrections benefit steering behavior in straight-ahead driving. At the same time, the indirect transmission means that there is a higher hydraulic torque available at the steering arm in parking movement. If the hydraulic assistance fails, the operating forces on the steering wheel are correspondingly lower in this area. This is achieved through a piston/steering worm sector shaft serration with differing modulus and angle of pressure.

Upon transfer of a torque from the steering shaft to the worm, or vice versa, the torsion bar is deformed in the elastic area so that there is torsion between the valve slide and the control sleeve. When the steering wheel is released, the torsion bar ensures that the valve is returned to the neutral position.

Refer to the "ZF-SERVOCOM Repair Manual" and "ZF-SERVOCOM Operating, Servicing /Maintenance and Inspection Instructions" annexed to this section for the functional aspects and maintenance procedure of the steering gear.

NOTE

Also available is the ZF-Servocomtronic, which provides variable assistance in function of speed.

Section 14: STEERING

2.2 POWER STEERING GEAR REMOVAL



WARNING

The steering gearbox weighs approximately 100 lbs (45 kg) dry. Exercise caution when handling.

1. Put a container into place, then disconnect both the inlet and outlet hoses from the power steering gear. Cover fittings to prevent fluid contamination.
2. Mark both the pitman arm and sector shaft with a line, then remove pitman arm. Refer to "11.1 Pitman Arm Removal" procedure.
3. Mark both the steering shaft universal joint yoke and steering gear input shaft with a line, then disconnect universal joint.
4. Unscrew and remove the power steering gear.

2.3 POWER STEERING GEAR INSTALLATION

Reverse "Power Steering Gear Removal" procedure paying particular attention to the following:

1. Tighten fasteners as recommended under paragraph 14: "Torque Specifications".
2. Bleed air from the system as per step 3, next.

3. BLEEDING POWER STEERING HYDRAULIC SYSTEM

To bleed the power steering hydraulic system, refer to the "ZF-SERVOCOM Repair Manual" annexed to this section, under heading "Setting And Functional Test".

4. HYDRAULIC PRESSURE TEST

Perform a pressure test as outlined in the "ZF-SERVOCOM Repair Manual" annexed to this section under heading "Setting And Functional Test".

5. TROUBLESHOOTING

Perform troubleshooting of the steering gear as outlined in the "ZF-SERVOCOM Repair Manual", the "ZF-SERVOCOM Operating, Servicing /Maintenance and Inspection Instructions" and the "TRW - Power Steering Pump Service Manual".

NOTE

For vehicles equipped with ZF-SERVOCOMTRONIC unit, refer to the supplement to the repair manual ZF-SERVOCOM.

6. POWER STEERING HYDRAULIC PUMP

6.1 WITH DDC SERIES 60 ENGINE

6.1.1 Description

The TRW PS Series power steering pump is a vane type, gear driven, hydraulic unit which supplies hydraulic pressure for the operation of the steering gear. The pump is mounted on the engine, on the crankshaft pulley's R.H. side.

6.1.2 Removal And Installation

The pump is accessible through the engine compartment rear door.

To remove the pump, proceed as follows:

1. Put an empty container directly below pump, then disconnect both the inlet and outlet hoses from the pump. Block fitting cavities to prevent fluid contamination.
2. Remove the two (2) mounting screws, then slowly pry out the pump.
3. Remove and discard gasket.



CAUTION

Inspect the drive coupling thoroughly, and replace if necessary (the drive coupling is a fiber component located between the engine and the pump).

For pump installation, reverse the removal procedure paying particular attention to the following:



CAUTION

Ensure that drive coupling is correctly positioned before reinstalling the pump.

1. Install a new gasket (Prévost P/N 510488).
2. Bleed air from the system as per step 3, "Bleeding Power Steering Hydraulic System".

6.1.3 Maintenance

Refer to the "ZF-SERVOCOM Repair Manual" and the "TRW - Power Steering Pump Service Manual" annexed to this section.

6.2 WITH VOLVO D13 ENGINE

6.2.1 Description

The power steering pump is a gear driven hydraulic unit which supplies hydraulic pressure for the operation of the steering gear. The pump is mounted on the engine, at the flywheel end and is also used for driving the fuel pump.

6.2.2 Removal And Installation

The pump is accessible through the engine compartment R.H. access door.

To remove the pump, proceed as follows:

- You must first remove the fuel feed pump.
- Clean around the fuel pump and fuel lines. Position a container to catch any fuel that might drain from the pump or lines.
- Remove the fuel pump.

NOTE

Only unfasten the bolts marked with arrows.

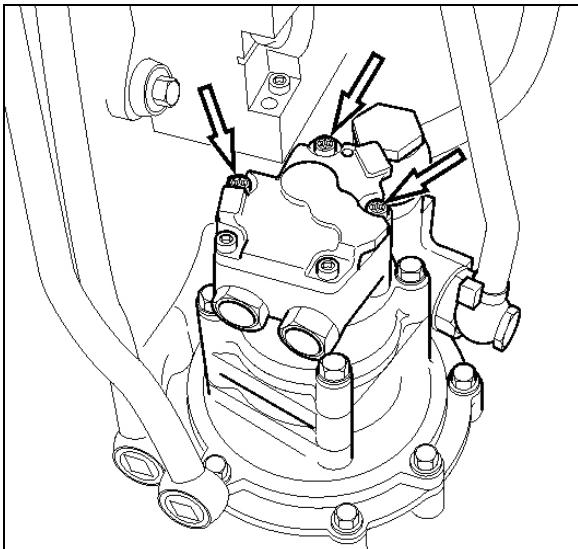


FIGURE 5: FUEL PUMP REMOVAL



CAUTION

Ensure to clean around the head of the bolts. Debris will prevent the tool from fitting properly and cause damage to the fasteners.

- Check that the adapter and fuel pump drive axle are not damaged.

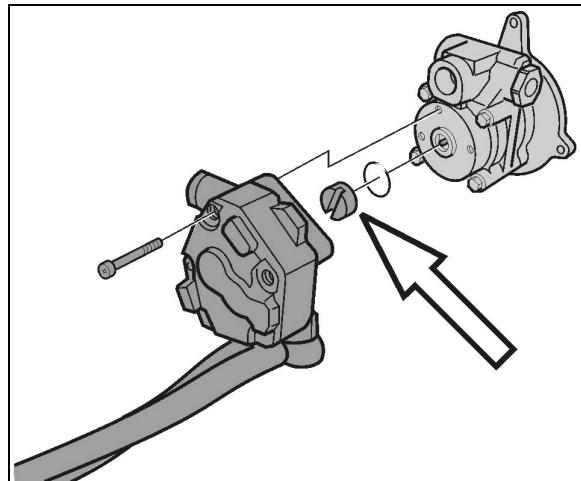


FIGURE 6: FUEL PUMP DRIVE AXLE

- Set the fuel pump aside.
- Clean around the power steering pump and loosen the steering lines. Position a container to catch any hydraulic fluid that might drain from the pump or lines.
- Unfasten the power steering pump bolts.

NOTE

Only unfasten the bolts marked with arrows.

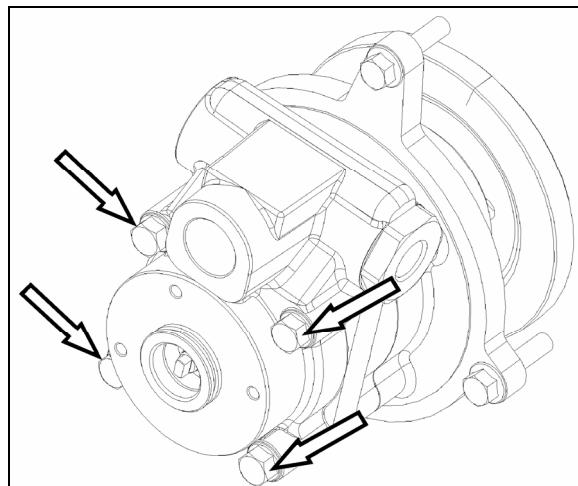


FIGURE 7: POWER STEERING PUMP REMOVAL

- Install the new power steering pump. Torque-tighten bolts to specification.

NOTE

Use a new gasket.

Section 14: STEERING

- Connect the hydraulic lines to the power steering pump.
- Install the fuel pump. Torque-tighten bolts to specification.

NOTE

Use a new sealing ring. Check that the fuel pump drive axle sits correctly in the power steering pump.

- Start the engine and let run for 5 minutes. Make sure that there are no leaks.

7. STEERING COLUMN

7.1 REMOVAL

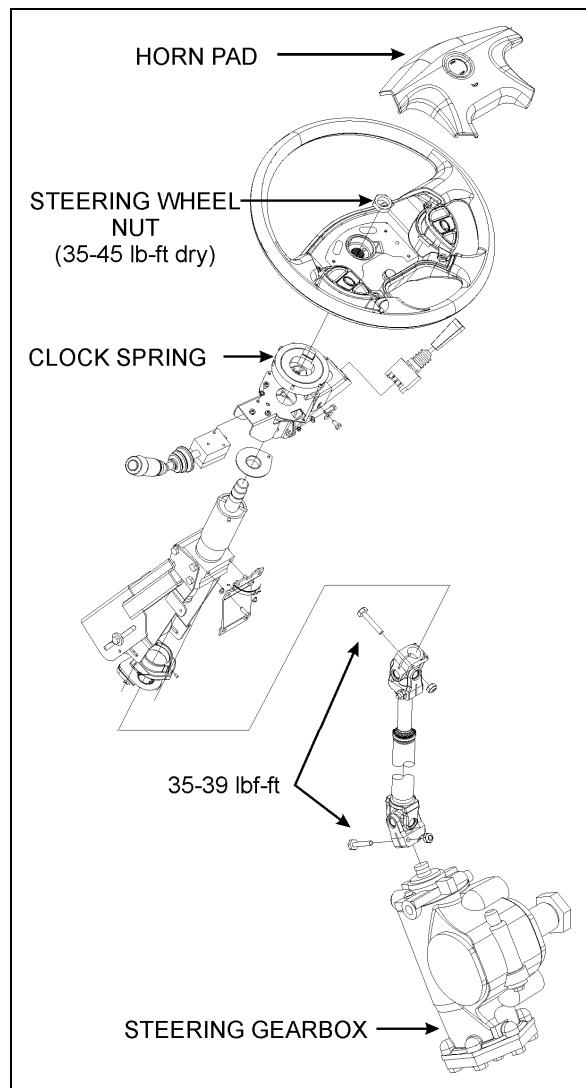


FIGURE 8: STEERING COLUMN

To disassemble the steering column from system, refer to figure 8 & 9. The steering column has no lubrication points. The lower steering column U-joint is easily accessible through the front service compartment. The upper steering column U-joint and the steering slip joint are accessible from the front driver's area. To access these joints, proceed as follows:

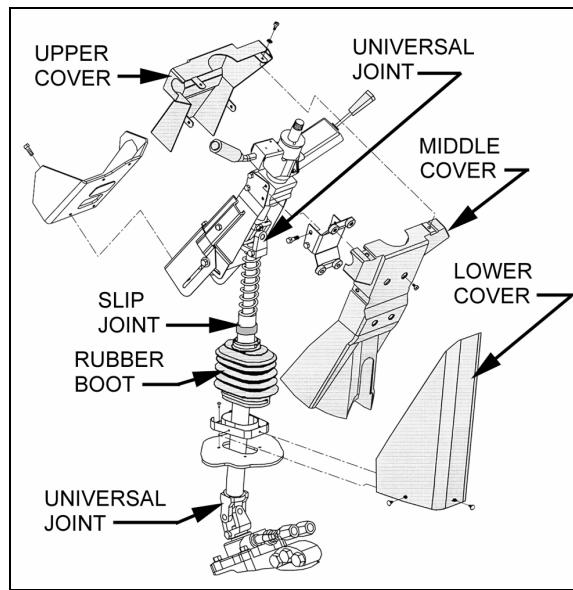


FIGURE 9: STEERING COLUMN COVERS

14040

1. From the front driver's compartment area, remove the three plastic fasteners on steering column lower cover. Remove the lower cover (Fig. 9).
2. Unscrew the four retaining screws on steering column middle cover.
3. Unscrew the four retaining screws fixing steering column upper cover to middle cover. Remove the steering column middle and upper covers.
4. Position the steering wheel in order to gain access to the joints.

8. STEERING WHEEL

8.1 REMOVAL

NOTE

Before undertaking the steering wheel removal, assure that the front wheels are pointing straight ahead, aligned with the vehicle.

- Set the battery master switch located in the rear electrical compartment to the "OFF" position.
- Pull the horn pad straight up gently to detach it from the steering wheel (Fig. 10).
- Disconnect the horn wire (white) connected to the horn pad and the steering wheel harness 4-pin connector.


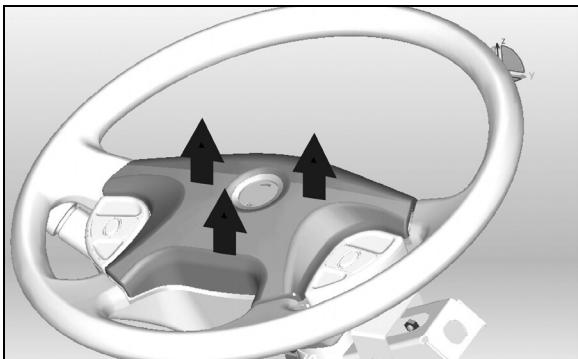


FIGURE 10: REMOVING THE HORN PAD

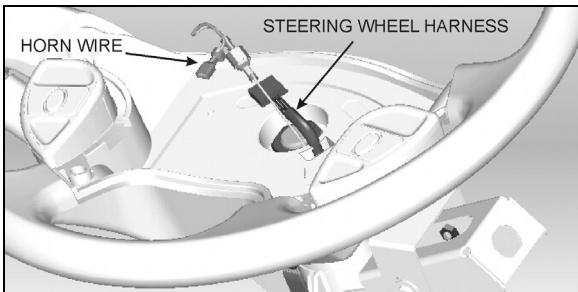

- Unscrew the steering wheel nut. To simplify installation and ensure steering wheel alignment, mark the relationship of the spline shaft to the steering wheel hub (if marks don't already exist or don't line up).
- Using an appropriate puller, separate the steering wheel from the spline shaft.
- From behind the steering wheel, pull gently on the electrical wires passing through the rectangular opening in the steering wheel to finish removal of the steering wheel.
- Once the steering wheel is removed, it is important to block any rotating movement of the clockspring in order to prevent it from losing its neutral position. Use two pieces of masking tape to lock it in place (Fig. 12).

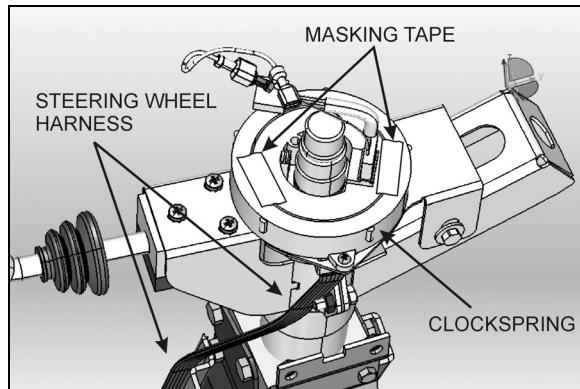


FIGURE 12: LOCKING THE CLOCKSPrING IN PLACE

NOTE

The clockspring mechanism permits a certain number of turns in each direction. At the moment of reinstalling the steering wheel, if the clockspring is not at its neutral position, the number of available turns will be reduced. That may damage the clockspring if the steering wheel is turned to its maximum amplitude.

8.2 INSTALLATION

- Route the white horn wire and the 4-pin connector through the opening on the steering wheel.
- Align the mark on the steering wheel hub with the mark on the spline shaft and slide the wheel onto the shaft.
- Tighten wheel retaining nut to a torque of 35-45 lbf·ft.
- Plug the 4-pin connector and connect the white horn wire to the center pad.
- Reinstall the center pad and test for proper horn functioning.

8.3 CLOCKSPrING REPLACEMENT

- Remove the steering wheel.
- Remove the 2 clockspring mounting screws and then remove the clockspring. You will have to disconnect the clockspring harness connector located lower along the steering wheel column. If necessary, remove the steering column covers (Fig. 9).
- Route the new clockspring harness through the opening in the clockspring support (Fig. 13). Plug the connector at the base of the

Section 14: STEERING

steering wheel column and fix harness along the steering wheel column.

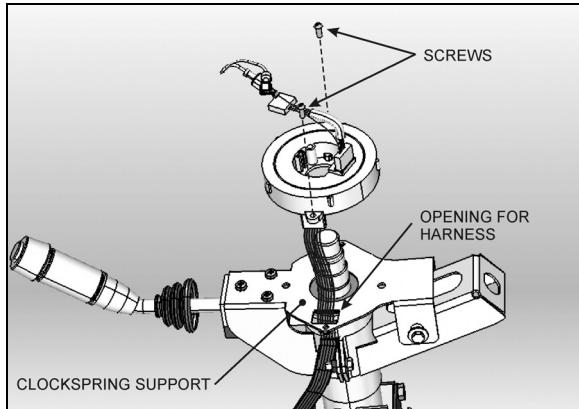


FIGURE 13: CLOCKSPrING INSTALLATION

4. Mount the clockspring in place with 2 screws.
5. Break the paper seal and rotate the center part of the clockspring about 50° clockwise (Fig. 14). This step is necessary for the installation of the steering wheel.

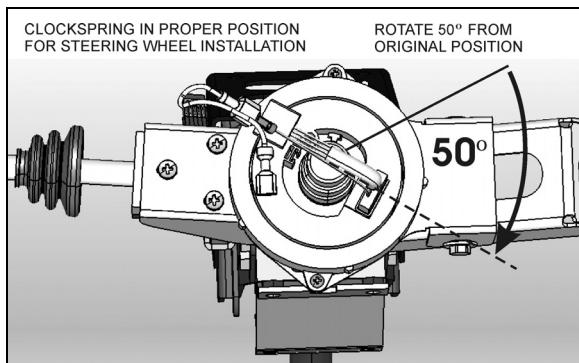


FIGURE 14: PROPER CLOCKSPrING POSITION

6. Reinstall the steering wheel.

9. TURNING ANGLE ADJUSTMENT

The maximum turning angle is set through two (2) steering stop screws installed on the axle center. Steering stop screws are factory adjusted to accommodate the chassis design, and therefore, do not require adjustment on new vehicles. However, these should be checked and adjusted if necessary, any time a steering system component is repaired, disassembled or adjusted. Refer to section 10 "Front Axle" under heading "6.4 "Turning Angle Adjustment".



CAUTION

To prevent the steering damper from interfering with the adjustment of turning angles, make sure its fixing bracket is at correct location on the axle (refer to "12.2 Steering Stabilizer Cylinder (Damper)").

Hydraulic Stop



CAUTION

Reduce or shut off the power steering hydraulic pressure before the boss on the axle touches the stop screw. If not, the components of the front axle will be damaged (refer to "ZF-SERVOCOM Repair Manual" and "ZF-SERVOCOM Operating, Servicing /Maintenance and Inspection Instructions" annexed to this section, under heading "Setting The Steering Limiter").



CAUTION

Never maintain the relief pressure for more than 5 seconds, since damage to the power steering pump may occur.

10. STEERING LINKAGE ADJUSTMENT

The steering linkage includes the pitman arm, drag link, steering arm, tie rod arms and tie rod.

Perform lubrication according to "DANA SPICER NDS Axles Lubrication and Maintenance" annexed to section 10 "Front Axle".

Drag link ends are provided with grease fittings. Under normal conditions, these should be serviced every 6,250 miles (10 000 km). Refer to section 24 "Lubrication".

Steering linkage pivot points should be checked each time they are lubricated. Looseness can be visually detected while rotating the steering wheel in both directions. Replace defective parts.



CAUTION

Front wheel alignment should be checked and adjusted if necessary, any time a component of the steering system is repaired, disassembled or adjusted. Refer to section 10 "Front Axle" under heading 6. "Front Wheel Alignment".

11. PITMAN ARM

11.1 REMOVAL

1. Remove cotter pin, nut and washers from drag link ball stud at pitman arm.
2. Disconnect drag link from pitman arm, using jaw style pullers (pressure screw type).



WARNING

Always wear approved eye protection when operating pullers.



CAUTION

Do not drive (hammer in) pitman arm on or off pitman shaft as this can damage the steering gear.



CAUTION

Heating of components to aid in disassembly is not allowed because it has a detrimental effect on axle components and steering linkages.

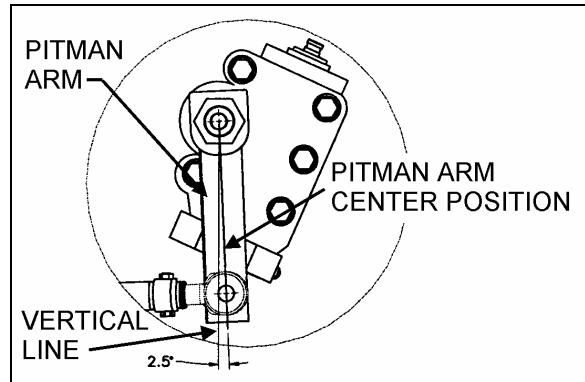


FIGURE 15: PITMAN ARM ADJUSTMENT

14037

3. Using a cold chisel, undo punch mark that locks fixing nut to the pitman arm.
4. Remove pitman arm fixing nut.
5. Check the radial position of the pitman arm in relation to the sector shaft prior to removal of pitman arm.
6. Add reference marks to the arm and shaft if necessary to ensure correct alignment at reassembly.
7. You must use a puller to remove pitman arm.

11.2 INSTALLATION

1. Position pitman arm on sector gear shaft with reference marks aligned.
2. Install fixing nut (Prévost #661050). Tighten nut to 470-570 lbf-ft (637-773 Nm).

NOTE

Use a new nut if the previously removed nut was punched.

3. Lock nut with sector shaft using a punch mark into the groove (Refer to figure 16).

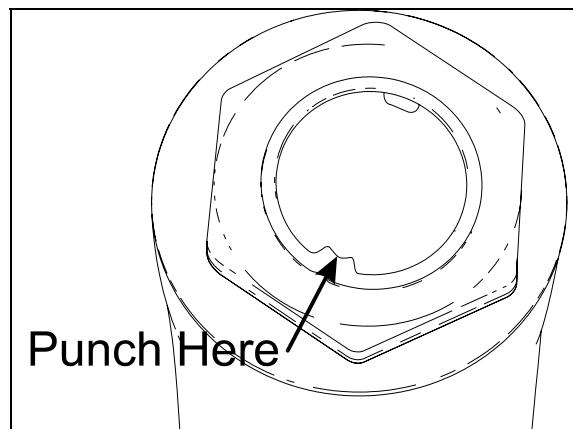


FIGURE 16: FIXING NUT PUNCH MARK

16098

4. Connect drag link to pitman arm while ensuring that rubber stabilizer is in place on the rod end. Install washers. Tighten nut to 160-215 lbf-ft (220-290 Nm). Afterwards, install a new cotter pin.



CAUTION

Input shaft marks must be aligned before adjusting pitman arm.

11.3 ADJUSTMENT

1. Disconnect the drag link from pitman arm. Center steering wheel by dividing the total number of steering wheel turns in two. Scribe a reference mark on steering gearbox at the center previously determined.
2. Using a protractor, check the angle of the pitman arm (refer to Fig. 15 for details).
3. The pitman arm should be adjusted to an angle of 2.5° in relation with the vertical axis (towards front of vehicle). If not, unscrew and remove fixing nut. Remove the pitman arm according to the procedure outlined under

Section 14: STEERING

previous heading "Pitman arm removal". Adjust to the proper angle.

4. When adjustment is achieved, replace fixing nut and torque to 400-450 lbf-ft (545-610 Nm).

11.4 TAG AXLE UNLOADING SWITCH ADJUSTMENT

1. Make sure vehicle wheels are straight and facing forward.
2. Line up switch lever with reference to the bracket center (Refer to figure 17).

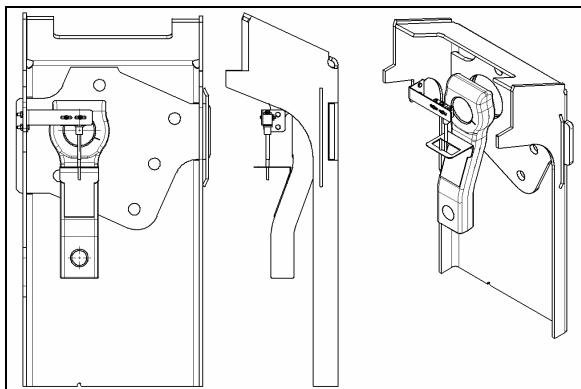


FIGURE 17: TAG AXLE UNLOADING SWITCH
ADJUSTMENT

14061

12. MAINTENANCE

The power steering system requires little maintenance. However, the system should be kept clean to ensure maximum operating performance and troublefree service. Periodic inspections should also be made to check for leakage and all parts for damage or distortion. Insure all fasteners are tight (see "14. Specifications" for recommended tightening torques).

When the slightest evidence of dirt, sludge or water is discovered in the system, disconnect fluid lines at the power steering gear to drain the system. Drain and refill the system with "Dexron-IIIE or Dexron-III" automatic transmission oil.

Air in the hydraulic system will cause spongy action and noisy operation. When a hose has been disconnected or when fluid has been lost for any reason, the system must be bled. Bleed system as outlined under heading 3: "Bleeding Power Steering Hydraulic System".



CAUTION

Do not operate the pump without fluid in the power steering fluid reservoir.

If the steering linkage between the steering gear and the two front wheels is not properly adjusted, or if it is bent, twisted or worn, the steering of the vehicle will be seriously impaired. Whenever a steering linkage part is repaired, replaced or adjusted, steering geometry and front wheel alignment must be checked and necessary corrections made. Refer to section 10 "Front Axle" under heading 6: "Front Wheel Alignment".

At regular lubrication intervals, the steering linkage should be thoroughly inspected for worn or loose components.

After the vehicle has been operated continually and high mileage figures have been reached, overhaul of the various steering units will be required. General overhaul procedure normally requires removal of the entire assembly, cleaning and inspection of all parts and final assembly. Careful inspection of all parts during overhaul is very important and must not be neglected.

Lubrication fittings must all be cleaned before applying lubricant. Moreover, always be sure the equipment used in applying lubricant is clean. Every precaution should be taken to prevent entry of dirt, grit, lint or other foreign matter into lubricant containers. Replace fittings that have become broken or damaged. Lubrication intervals, as well as the recommended lubricants for the steering components, are given in the "Lubrication And Servicing Schedule" in Section 24 of this manual. The intervals given in the schedule are recommended for normal service. More frequent intervals may be required under severe operating conditions.

12.1 POWER STEERING RESERVOIR AND FILTER

The power steering reservoir is located on R.H. side of engine compartment and accessible through the engine compartment doors. (Fig. 18).

12.1.1 Oil Level Check Procedure

1. Stop engine. Open engine compartment doors.
2. Unscrew and remove the dipstick located on top of reservoir and wipe with a clean rag.

3. Insert dipstick in reservoir. Remove it again to check fluid level (Fig. 19).
4. Adjust level to "FULL" mark using proper dipstick side depending on fluid temperature, use "Dexron-IIIE or Dexron-III" automatic transmission oil.
5. Reinsert and tighten the dipstick.

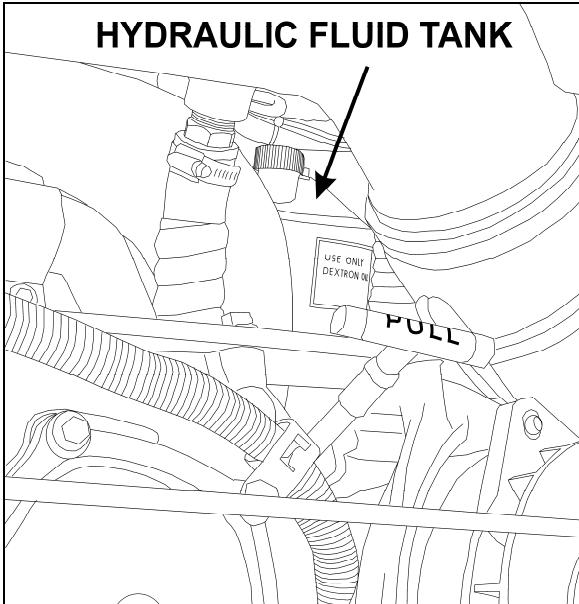


FIGURE 18: HYDRAULIC FLUID RESERVOIR LOCATION
14059

At regular intervals, fluid level should be checked in the reservoir and filter assembly. Furthermore, the oil filter cartridge element in the power steering reservoir should be replaced every 50,000 miles (80 000 km) or once a year, whichever comes first.

12.1.2 Filter Replacement

1. Unscrew and remove the cover nut located on top of the power steering reservoir.
2. Remove the reservoir cover and the gasket.
3. Remove the retaining spring and finally the filter cartridge element.

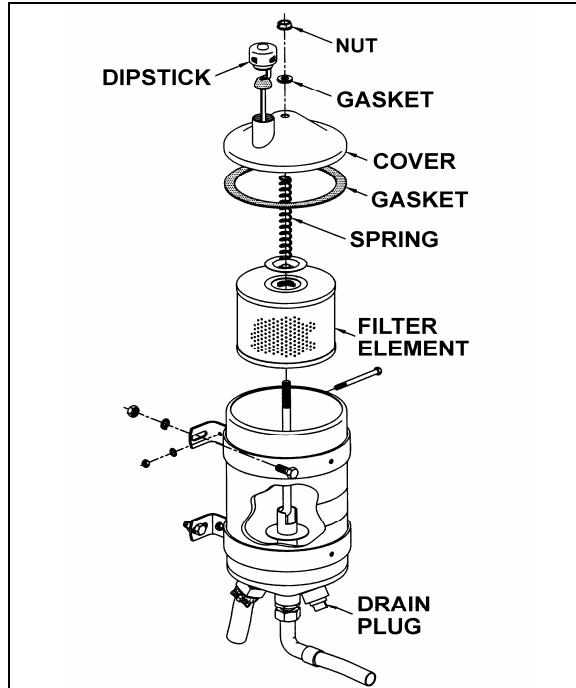


FIGURE 19: POWER STEERING FLUID RESERVOIR
14018A

12.2 STEERING STABILIZER CYLINDER (DAMPER)

The steering damper is located on R.H. side, at back of front axle (Fig. 20).

The cylinder is nonadjustable and non-repairable. Check for oil leaks or lack of resistance. Disconnect the cylinder from axle, then carefully attempt to extend and collapse it manually.

The rod end (ball joint) is provided with a grease fitting. Under normal conditions, it should be serviced every 6,250 miles (10 000 km) or twice a year, whichever comes first. Good quality lithium-base grease NLGI No. 1 and 2 are recommended (refer to section 24 "Lubrication"). Check the ball joint for wear, and replace if necessary.

12.3 DRAG LINK

Lubricate the fittings every 6,250 miles (10 000 km) or twice a year, whichever comes first. Good quality lithium-base grease NLGI No. 1 and 2 are recommended (refer to section 24 "Lubrication").

Section 14: STEERING

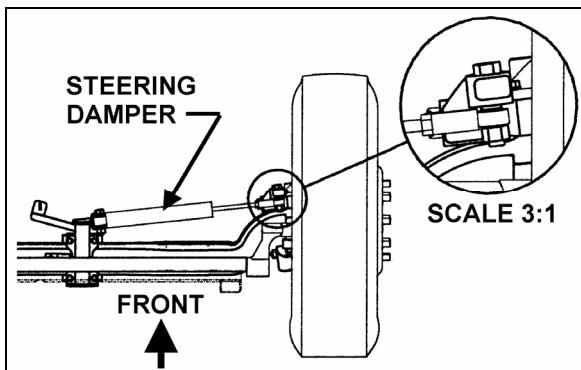


FIGURE 20: STEERING STABILIZER (DAMPER) 14042

12.4 POWER STEERING HYDRAULIC PUMP

- **With DDC Series 60 Engine**

For maintenance of the power steering hydraulic pump, refer to the "*TRW - Power Steering Pump Service Manual*" annexed to this section.

13. DRIVING TIPS

In order to maximize power steering pump service life, do not attempt to turn the steering wheel when the vehicle is stationary, and especially when service brakes are applied (wheel locking will oppose the effect of steering geometry which tends to make the front wheels rotate in opposite directions).

Persisting in turning, or maintaining the steering wheel with an extra effort, could make the hydraulic system work at the relief pressure, and consequently, cause the hydraulic fluid to become overheated.



CAUTION

Never maintain the hydraulic system at the relief pressure for longer than 5/10 seconds to avoid damaging the power steering pump.

NOTE

Unequal or low tire pressure, oversize tires, and vehicle overloading are some of the causes that may increase steering effort.

14. TORQUE SPECIFICATIONS

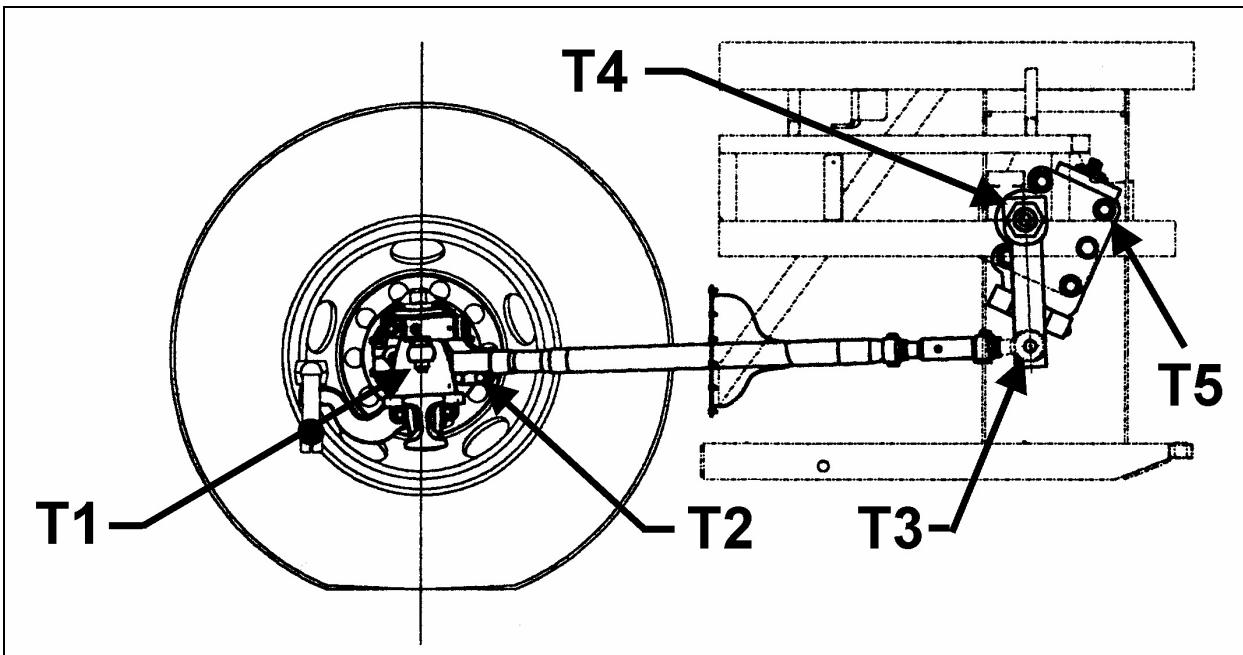


FIGURE 21: DRAG LINK COMPONENTS

14038

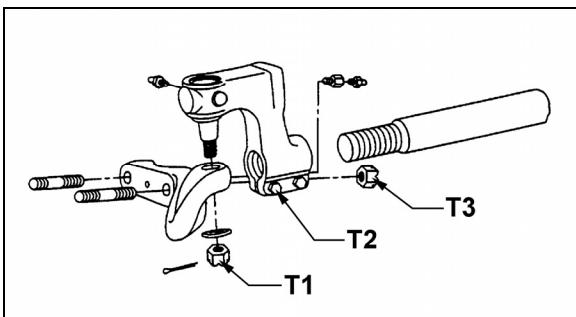


FIGURE 22: TIE ROD END

14036

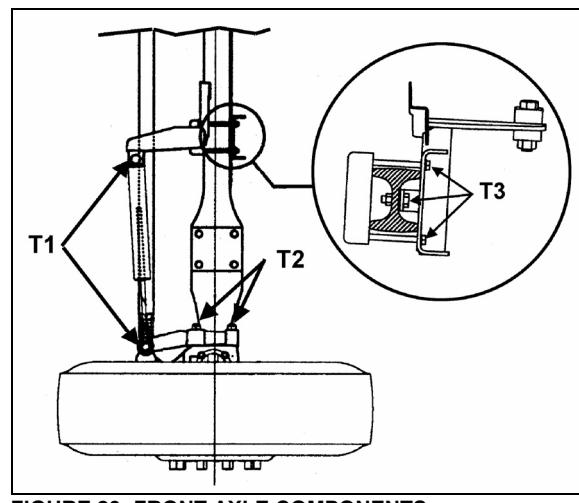


FIGURE 23: FRONT AXLE COMPONENTS

14045

Section 14: STEERING

| DRY TORQUES | | | |
|--|-------------|---------|---------|
| Description | Reference | Lbf-ft | Nm |
| Drag Link End Stud Nut (on steering arm) | Fig. 21, T1 | 160-300 | 220-410 |
| Drag Link End Pinch Bolt Nuts | Fig. 21, T2 | 40-60 | 55-80 |
| Drag Link End Stud Nut (on pitman arm) | Fig. 21, T3 | 150-200 | 203-271 |
| Pitman Arm Fixing Nut | Fig. 21, T4 | 470-570 | 637-773 |
| Steering Gear Fixing Bolts (5) | Fig. 21, T5 | 365-405 | 495-550 |
| Tie Rod End Screw Pin Nut | Fig. 22, T1 | 100-175 | 135-240 |
| Tie Rod End Pinch bolt Nuts | Fig. 22 T2 | 65-75 | 90-100 |
| Lower Lever Stud Nuts | Fig. 22, T3 | 190-275 | 260-375 |
| Steering Stabilizer (damper) Fixing Nuts | Fig. 23, T1 | 100-120 | 135-165 |
| Steering Top Lever Nuts | Fig. 23, T2 | 150-200 | 205-275 |
| Steering Damper Mounting Support Nuts | Fig. 23, T3 | 65-70 | 90-95 |

15. SPECIFICATIONS

Power Steering Gear

| | |
|---|-----------------------|
| Make | ZF-SERVOCOMTRONIC |
| Model | 8098 |
| Supplier number | 8098-988-571 |
| Prevost number | 661044 |
| F.E.W. | 16,600 lbs (7 545 kg) |
| Pressure rating | 2,175 psi (150 Bar) |
| Gear ratio (center) | 22.2 : 1 |
| Gear ratio (extremities)..... | 26.2 : 1 |
| Minimum pump flow for 1.5 hwt/sec | 4.22 gpm (16 lpm) |

Power Steering Gear

| | |
|---|-----------------------|
| Make | ZF-SERVOCOM |
| Model | 8098 |
| Supplier number | 8098-988-570 |
| Prevost number | 661045 |
| F.E.W. | 16,600 lbs (7 545 kg) |
| Pressure rating | 2,175 psi (150 Bar) |
| Gear ratio (center) | 22.2 : 1 |
| Gear ratio (extremities)..... | 26.2 : 1 |
| Minimum pump flow for 1.5 hwt/sec | 4.22 gpm (16 lpm) |

Power Steering Pump (with Detroit Diesel Series 60 Engine)

| | |
|--------------------------------|---|
| Make | TRW |
| Type | PS Series |
| Relief valve setting | 2,175 psi (14 990 kPa) |
| Controlled flow rate | 4.23 gpm (16 lpm) |
| Inlet port | 1 1/4 NPT |
| Outlet port | 3/4-16 straight thread SAE O' ring boss conn. |
| Supplier number | PS251615L10200 |
| Prevost number | 661009 |
| Gasket - Supplier number | 23516100 |
| Gasket - Prevost number | 510488 |

Power Steering Reservoir

| | |
|--|-----------------------|
| Make | Nelson Muffler |
| Oil capacity | 4 US qts (3.7 liters) |
| Supplier number | 91410A |
| Prevost number | 660982 |
| Make | Nelson Muffler |
| Element filter - Supplier number | 83804 E |
| Element filter - Prevost number | 660987 |

Steering Stabilizer Cylinder (Damper)

| | |
|---------------------------------|-------------|
| Make | Arvin |
| Extended length..... | 32.73±0.12" |
| Collapsed length..... | 20.26±0.12" |
| Stroke..... | 12.47±0.12" |
| Supplier number | 651535 |
| Prevost number | 660979 |
| Dust cap - Prevost number | 660980 |