

PREVOST®

OPERATOR'S MANUAL X3-45 COMMUTER



PA1633 rev.1
March 2019

PA1633

Featuring: New aerodynamic redesign X3 models (OPP2)

| REV | EFFECTIVE | DESCRIPTION | DATE |
|-----|---------------|----------------------|----------|
| 0 | First Release | | Mar 2018 |
| 1 | J-6317 | Revision of pictures | Mar 2019 |



WARNING

Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to www.P65warnings.ca.gov/diesel

CRITICAL EMISSION-RELATED MAINTENANCE

Source of parts and repair:

A repair shop or person of the owner's choosing must maintain, replace, or repair emission control devices and systems per manufacturer's recommendations.

Replacement of tires that are GHG certified:

The original equipment tires installed on this vehicle at the factory were certified to the U.S. EPA Greenhouse Gas (GHG) and **National Highway Traffic Safety Administration (NHTSA)** Fuel Efficiency regulations. Replacement of these tires should be with a tire of equal or lower rolling resistance levels (TRRL or Crr). Please consult your tire supplier(s) for appropriate replacement tires.

Maintaining a GHG certified tire:

In order to maintain the certified rolling resistance of the tires which optimize fuel economy, the maintenance procedures provide by the tire manufacturer must be followed.

TELEMATICS DEVICE

Your vehicle is equipped with one or more recording devices (“Telematics Device”), associated with Prevost’s Connected Vehicle Services (the “Telematics Services”). These services, which are described in greater detail at www.prevostcar.com (the “Website”), allow you to manage vehicle maintenance and repair in a cost-effective manner by providing: proactive diagnostic and repair planning assistance with detailed analysis of diagnostic trouble codes; streamlined service procedures with parts-on-hand confirmation before a vehicle arrives for service; and live repair and customer communication. The service eliminates or reduces diagnostics time, enhances repair efficiency, expedites decision process, improves communications and maximizes uptime. To access the Telematics Services, you must enter into a Telematics Subscription Agreement with Prevost, via the sales agreement pertaining to your vehicle.

The Telematics Device collects stores and/or transmits information about your vehicle. Such information may include direction and rate of speed, fuel consumption, engine performance, gearing, rpm, altitude, geo-location (including a history of where the vehicle travels), safety information related to the use and operation of the vehicle, vehicle performance, diagnostic data and error codes. The Telematics Device has the capacity to store historical data about the use and performance of your vehicle. The Telematics Device has the ability to transmit information to a central communications system. The information contained in your Telematics Device may be periodically transmitted to or accessed by Prevost and others authorized by Prevost, along with your vehicle’s VIN number or other identifying information. Prevost does not collect any driver information. Prevost retains and uses this information to understand the operational use of your vehicle, to remotely tune your vehicle, and to help facilitate maintenance and vehicle improvements. To the extent allowed by law, Prevost reserves the right to access, use and control this information.

Declining to enter into a Telematics Subscription Agreement with Prevost, or canceling a Telematics Subscription Agreement, will not end the transmission of data from your Telematics Device or the collection of information by Prevost. Prevost may access Telematics Data, to the extent it is available, and use it in connection with providing services and vehicle improvements to you and your vehicle. Prevost will regularly purge from its systems all data collected from your Telematics Device, at time intervals determined by Prevost at its sole discretion.

iv FOREWORD

This *Operator's Manual* for the PREVOST vehicles has been prepared to thoroughly acquaint you, the driver, with the equipment and features of the coach in order for you to fully appreciate and safely enjoy this vehicle. Prevost Car Incorporated is committed to the continuous improvement of coach quality, reliability, durability and safety. With innovative features, the H3 series coach was designed with passenger and driver safety and comfort in mind.

This manual contains information available at the time of publication. Because standard and optional equipment is covered in this manual, some of the optional equipment described may not apply to your coach. If in doubt, refer to the technical documentation package provided with the coach.

Driver's controls and instruments incorporate advanced technology for enhanced driving ease and security. This manual describes the main features, instruments and controls, and servicing requirements for both standard and optional equipment. Read this manual carefully to take advantage of the coach's advanced features and to ensure optimum safety and passenger comfort.

Keep this manual in the coach at all times. Make sure this manual is kept with the coach when ownership is transferred. Please use the appropriate card at the end of this manual to promptly notify Prevost Car of any change of address or transfer of ownership. This will ensure we provide fast and reliable coach service to all coach operators.

NOTE

Illustrations in this manual are used for reference only and may differ slightly from the actual vehicle; however, key components addressed in the manual are represented as accurately as possible.

Warnings, cautions and notes are used throughout this manual to emphasize important points when necessary:



WARNING

Directs the operator's attention to unsafe practices which could result in serious personal injury or severe damage to the vehicle.



CAUTION

Directs the operator's attention to unsafe practices where personal injury is not likely but damage to vehicle components could occur.

NOTE

Indicates supplementary information essential to the proper operation of the vehicle.

The service life of the coach depends on the kind of attention it receives. Pay close attention to the warnings, cautions and notes. Read the various notices and instructions posted throughout the coach and attached to equipment.

Since continuous improvement is a primary focus at Prevost Car, we reserve the right to make changes anytime, without notice, and without incurring any obligation.

Before reproducing or copying this manual, in whole or in part, written consent must be obtained from Prevost Car Incorporated.

SECTION 1 SAFETY PRECAUTIONS.....1-1

SECTION 2 COACH EXTERIOR.....2-1

SECTION 3 COACH INTERIOR.....3-1

SECTION 4 CONTROLS AND INSTRUMENTS.....4-1

SECTION 5 OTHER FEATURES.....5-1

SECTION 6 STARTING AND STOPPING PROCEDURE.....6-1

SECTION 7 SAFETY FEATURES AND EQUIPMENT.....7-1

SECTION 8 CARE AND MAINTENANCE.....8-1

SECTION 9 TECHNICAL INFORMATION.....9-1

SECTION 10 ABBREVIATIONS.....10-1

SECTION 11 APPENDIX A – SERVICE LITERATURE11-1

SECTION 12 APPENDIX B – ALLISON TRANSMISSION’S OTHER FEAT.....12-1

SECTION 1 SAFETY PRECAUTIONS

SAFE OPERATING PRACTICES 2

DEFENSIVE DRIVING PRACTICES..... 2

OTHER PRECAUTIONS 3

1-2 SAFETY PRECAUTIONS

SAFE OPERATING PRACTICES

To ensure safe and reliable operations, heed the following safety precautions.

- Operation and maintenance of the vehicle must be performed only by qualified personnel.
- Before driving, conduct a walk around inspection and check that all baggage compartment doors and equipment access doors are securely shut.
- Make sure good visibility is maintained at all times. Keep windshields clean and free of obstructions.
- Adjust the driver's seat so that all controls can be reached easily.
- Always wear your safety belt when driving.
- Check the instrument panel frequently. Do not operate the vehicle when dials or indicators do not indicate normal operating conditions.
- Always pay attention to pedestrians passing in front and behind the vehicle. Always yield to pedestrians at pedestrian walkways.
- Do not drive over obstacles on the road. Empty boxes, piles of leaves, and snowdrifts could conceal hidden dangers that could damage the vehicle suspension and underbody.
- When turning or changing lanes, signal your intention well in advance.
- When approaching to make a right turn, reduce the space between the vehicle and the curb to make sure another vehicle cannot pass on the right. Since the vehicle does wide turns, allow enough space to make safe turns.
- Switch from high beams to low beams when meeting or following other vehicles within 500 feet (150 meters).
- Never leave the vehicle unattended with the engine running or with the key in the ignition. Turn off the engine, remove keys and apply the parking brake before leaving the vehicle.
- Shut-off the engine before refueling, adding oil, performing maintenance or servicing tasks, unless stated otherwise.
- Fuel is highly flammable and explosive. Do not smoke when refueling. Keep away from open flames or sparks.

- Do not run the engine or HVAC system with access doors left open. Close compartment doors before operating any equipment.
- Do not remove the surge tank filler cap or the cooling system pressure cap when the engine is hot. Let the engine cool down before removing filler caps.
- Do not attempt to push or pull-start the vehicle.
- The service life of the vehicle depends on the kind of maintenance it receives. Always record any problems and report them immediately to maintenance personnel.

DEFENSIVE DRIVING PRACTICES

- For city driving, allow a four to six second travel interval between your vehicle and the vehicle ahead. Increase this travel interval to six to eight seconds for highway driving. Increase time interval for driving at night or in foul weather.
- Be prepared to stop when approaching an intersection. The stopping distance of the vehicle increases with the weight and speed.
- Establish eye-to-eye contact with other drivers and with pedestrians. Use, high beam and low beam headlights, turn signals and horn as needed.
- On highway, don't stare at the road ahead. Keep your eyes moving. Check mirrors and dashboard instruments frequently.
- To keep the vehicle from drifting across lanes during highway driving, always look over the horizon on the road ahead.
- Adjust your speed to road conditions, traffic and visibility. Never exceed the posted speed limits.
- If another vehicle is following close behind, reduce your speed to let the vehicle pass.
- For additional information about safe operation and defensive driving practices, contact the local department of motor vehicles authority.

OTHER PRECAUTIONS

**WARNING**

This vehicle is not designed to carry standing passengers.

**DANGER**

Make sure that electrical current or air pressure is removed before performing any work. A part may be energized even if the ignition switch is OFF. A part may be under pressure even if all tanks are empty. Before performing any work on the vehicle, refer to wiring diagrams and/or air schematics to thoroughly understand the system.

NOTE

When the ignition switch is set to the OFF position, the electrical components are not energized except for the MCM (Master Chassis Module), the battery equalizer, the preheater system and some electronic modules; which are energized for 15 minutes after the ignition has been set to the OFF position. Prior to working on one of these electrical components, set the battery master switch in the main power compartment to the OFF position. If the vehicle will not be operated for a long period (more than 2 weeks), it is recommended, in order to prevent the batteries from discharging, to trip the main circuit breakers located in the main power compartment to stop the small current drawn by the MCM memory and the instrument cluster clock. Note that the instrument cluster clock will have to be reset.

**WARNING**

CALIFORNIA PROPOSITION 65:

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

Battery posts, terminals and other related accessories contain lead and lead compounds, chemical known to the State of California to cause cancer and other reproductive harm.

Batteries also contain other chemicals known to the State of California to cause cancer.

Wash hands after handling.

**CAUTION**

Disconnect all electronic control modules before welding. If modules (MCM, ECM, TCM, ECU, and ABS) are not disconnected before welding is done, there is a high risk of damaging the electronic components (EPROM, Chip). Refer to the procedure described in Maintenance Manual.


1-4 SAFETY PRECAUTIONS

SECTION 2 COACH EXTERIOR

| | |
|---|----|
| X3-45 COMMUTER EXTERIOR VIEWS | 2 |
| ENGINE COMPARTMENT OVERVIEW | 3 |
| ENGINE COMPARTMENT CURBSIDE DOOR | 4 |
| ENGINE COMPARTMENT REAR DOOR..... | 4 |
| EXHAUST AFTERTREATMENT SYSTEM ACCESS DOOR..... | 5 |
| ENGINE RADIATOR DOOR | 6 |
| SCR CONVERTER ACCESS DOOR | 6 |
| CONDENSER COMPARTMENT (A/C)..... | 7 |
| EVAPORATOR COMPARTMENT..... | 8 |
| COOLANT HEATER COMPARTMENT | 9 |
| REAR FENDERS..... | 9 |
| FRONT ELECTRICAL AND SERVICE COMPARTMENT | 10 |
| BAGGAGE COMPARTMENTS | 10 |
| FUEL AND DIESEL EXHAUST FLUID (DEF) FILLER DOOR | 11 |
| BI-FOLD ENTRANCE DOOR | 11 |
| <i>Opening door</i> | 11 |
| <i>Closing door</i> | 12 |
| WHEELCHAIR LIFT ACCESS DOORS | 12 |
| REAR VIEW MIRRORS..... | 12 |
| HUBODOMETER..... | 13 |

2-2 COACH EXTERIOR


X3-45 COMMUTER EXTERIOR VIEWS

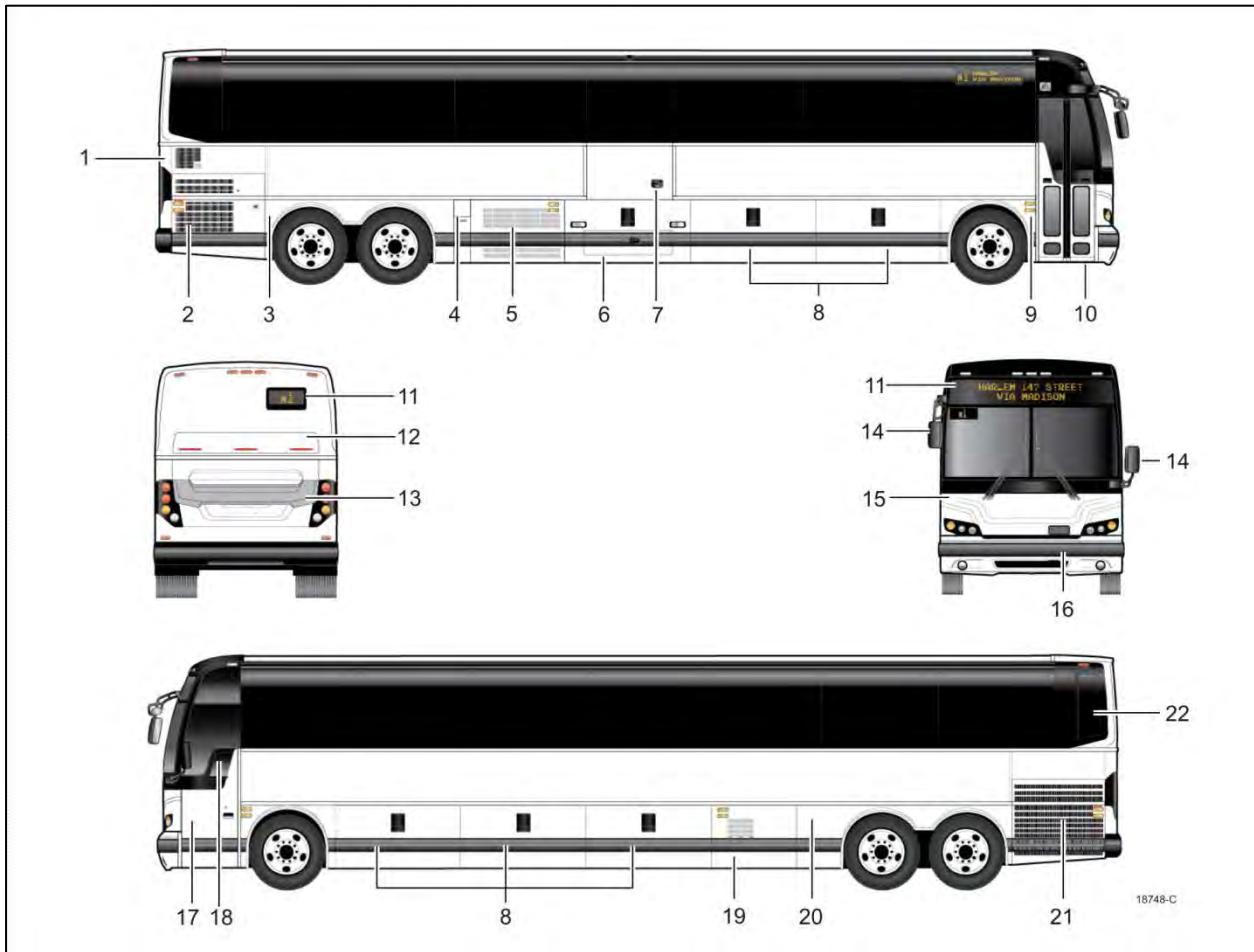

X3-45 EXTERIOR VIEW (TYPICAL)

- | | |
|---|---|
| 1. Engine air intake | 12. Exhaust aftertreatment system access door |
| 2. Engine compartment curbside door | 13. Engine compartment rear door |
| 3. Hinged rear fenders | 14. Rear-view mirrors |
| 4. Fuel filler neck & DEF filler neck door | 15. Transmission retarder off indicator light |
| 5. Condenser compartment | 16. Front towing air supply connector access door |
| 6. Lift mechanism access door | 17. Front electrical and service compartment |
| 7. Wheelchair access door | 18. Driver's power window |
| 8. Baggage compartment | 19. Evaporator compartment |
| 9. Entrance door control switch | 20. Air dryer compartment |
| 10. Bi-fold entrance door | 21. Radiator door |
| 11. Electronic destination sign or route number | 22. SCR converter access door |

ENGINE COMPARTMENT OVERVIEW

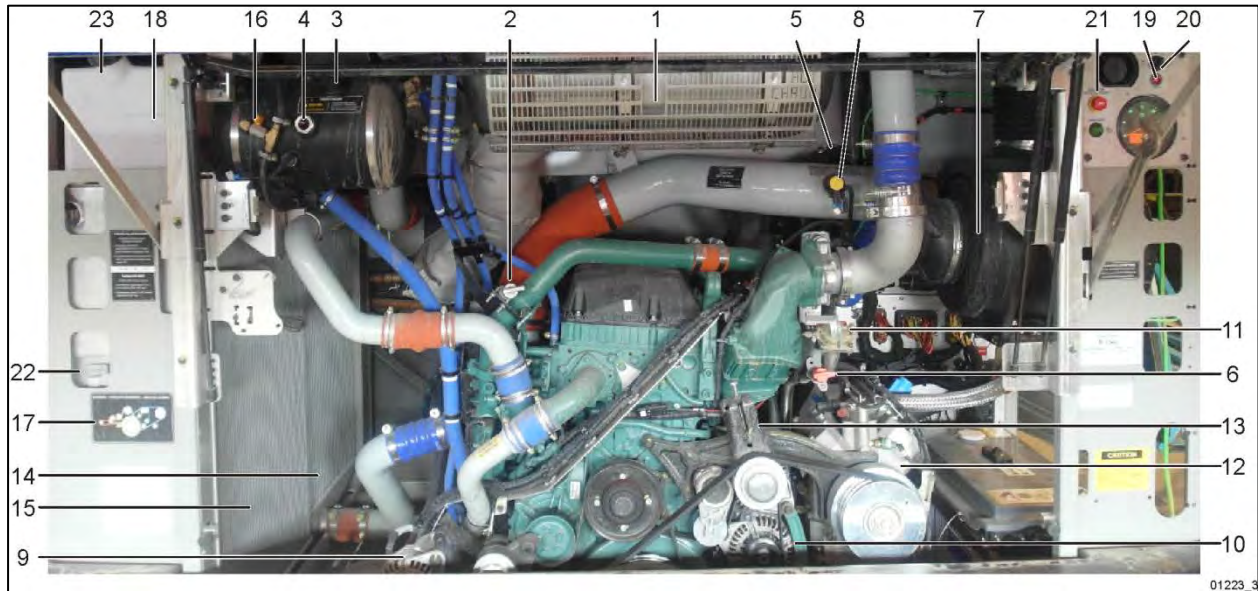

ENGINE COMPARTMENT FEATURING VOLVO D13 ENGINE


1. Diesel Oxidation Catalyst (DOC) & Diesel Particulate Filter (DPF) Assembly;
2. Allison Transmission fluid dipstick;
3. Coolant fluid surge tank filler cap;
4. Coolant fluid surge tank sight glass;
5. Power steering fluid reservoir;
6. Engine oil dipstick;
7. Air filter;
8. Air filter restriction sensor;
9. Alternator, Road side
10. Alternators, Curb side;
11. Engine oil filler tube;
12. Central A/C compressor;
13. Compressor belt tensioner;
14. Charge air cooler;
15. Radiator;
16. Coolant fluid pressure relief valve;
17. Belt routing tag;
18. Coolant recovery tank;
19. Air filter restriction indicator;
20. Engine compartment light switch;
21. Engine emergency stop button;
22. Radiator door opening lever;
23. Coolant recovery filler neck;

2-4 COACH EXTERIOR

ENGINE COMPARTMENT CURBSIDE DOOR


The engine compartment curbside door provides access to the following (if equipped):

- Engine compartment rear door release handle;
- Booster terminals;
- Main power compartment (rear junction box);
- Battery bank;
- Fuel filter/water separator;
- Air circuit fill valve;
- Battery charger 110-120-volt connector;
- Engine block heater 120-volt connector;

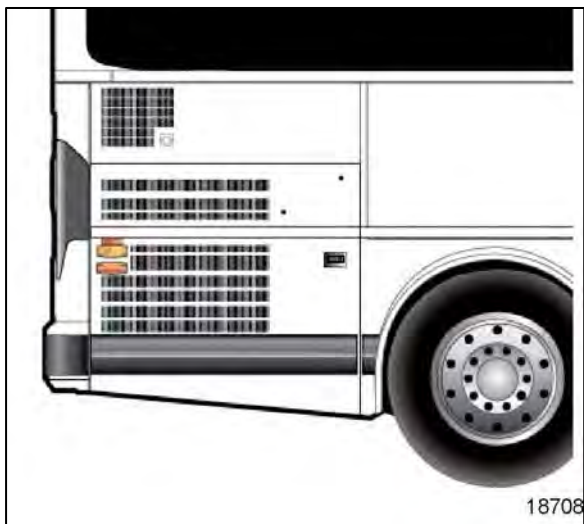

ENGINE COMPARTMENT CURBSIDE DOOR

This door can be locked or unlocked using the square drive T-key.

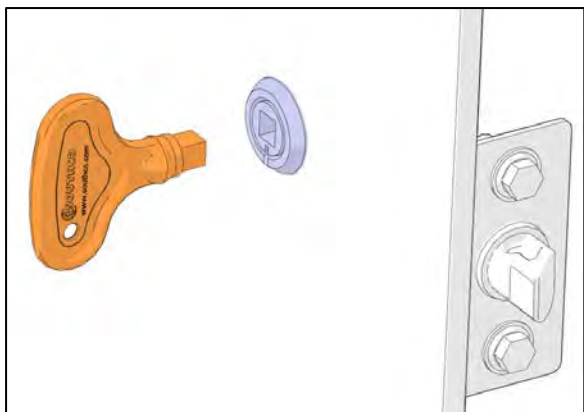


ENGINE COMPARTMENT R.H. SIDE 18607_1

A telltale light illuminates when one or more compartments are unlocked.

ENGINE COMPARTMENT REAR DOOR

To open the engine compartment rear door, open the engine compartment curb side door and pull the yellow handle located on the rear door, grab the side of the door in the middle, pull and lift the door.

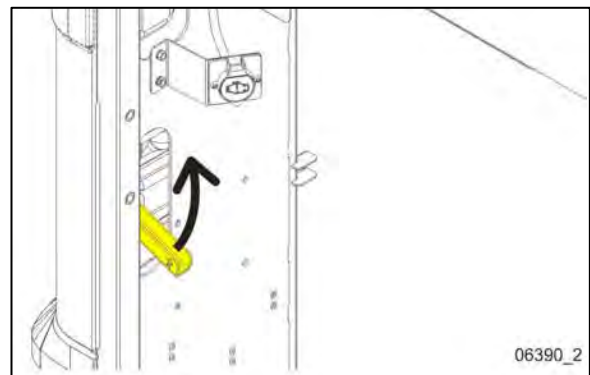

OPENING ENGINE COMPARTMENT REAR DOOR



WARNING

Unless otherwise stated, do not run the engine when the engine compartment is open.


The door swings out to provide access to the following:

- Engine;
- Alternator(s);
- A/C Compressor;
- Belt tension control valve (refer to chapter, Care and Maintenance);
- Engine starting selector (refer to chapter, Starting and Stopping Procedures);
- Coolant line shutoff valves;
- Certification plates;
- Engine coolant surge tank and filler cap;
- Air filter restriction indicator;
- Engine oil dipstick and filler tube;
- Power steering fluid reserve tank;
- Allison transmission fluid dipstick;



REAR DOOR SAFETY CATCH

EXHAUST AFTERTREATMENT SYSTEM ACCESS DOOR

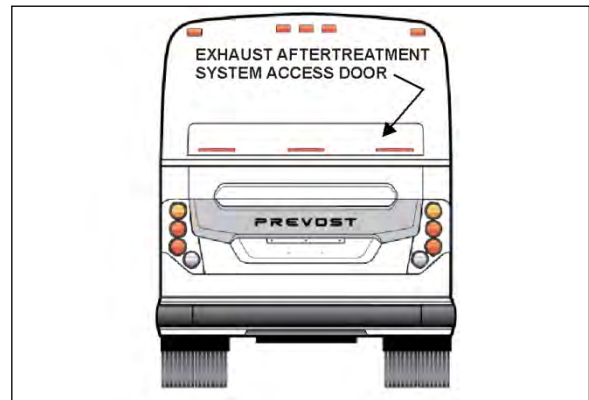

The engine door must be opened before opening the exhaust aftertreatment system access door. To open the access door, lower the latch release lever, using a flat tip screwdriver.



To close the door, lower the door and push against the release lever spring to latch the door shut.

NOTE

The engine compartment lights will turn on automatically when the engine door is opened. Check the engine compartment lamps switch on the right top corner if no light.



A catch engages to maintain the door in the full open position. To close the door, slightly lift up the door and release the catch before firmly shutting down the door.

ENGINE RADIATOR DOOR

The engine radiator door gives access to the radiator electrical fans and power distribution box.



RADIATOR DOOR


Open the engine compartment rear door to access the engine radiator door release handle

Radiator door release handle is located inside the left pillar (Arrow).



RADIATOR DOOR HANDLE LOCATION

Pull handle towards you to release radiator door.

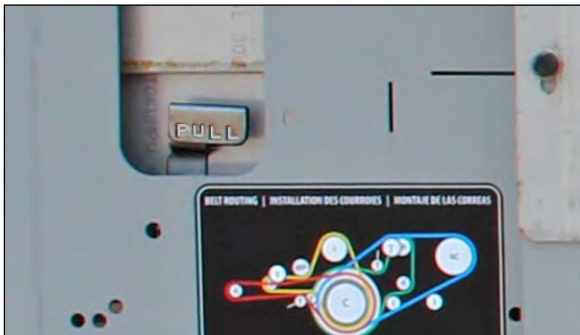

RADIATOR DOOR RELEASE HANDLE



RADIATOR DOOR OPENED



WARNING

WHEN THE ENGINE IS RUNNING...

Cooling fans may activate at any moment.

Keep hands away from cooling fans or keep the radiator door closed.



WARNING

Cooling fans may be running when the engine is shut down in the following conditions:

- If a High Exhaust Temperature condition exists (e.g. following regeneration). The CAC fans will keep running for a maximum of 15 minutes.
- During the electric **Motor Test Sequence**, the cooling fans will start running briefly.

SCR CONVERTER ACCESS DOOR

To gain access to the SCR converter, open the radiator door first. At the top of the radiator compartment, pull the catch connecting rod to unlock the catalytic converter access door and lift the door open.

Hold the door open by inserting the support rod free end into the receptacle located on the left side of the DPF.




UNLOCKING SCR CONVERTER ACCESS DOOR



WARNING

After inserting the support rod into the receptacle, make sure the rod supports the door securely from falling down on to your head or body.

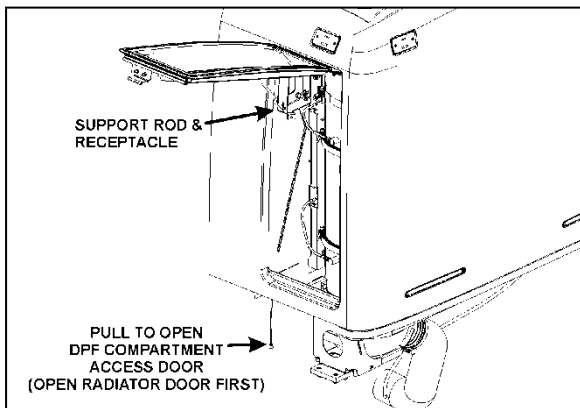

ACCESS TO THE SCR CONVERTER 04023




WARNING

External and internal temperatures remain hot long after the engine has been shut down. Allow the Exhaust Aftertreatment System to cool before handling. Wear protective clothing and gloves while servicing.

CONDENSER COMPARTMENT (A/C)


Open the fuel filler neck access hatch and push the lever down to unlatch the condenser compartment door.

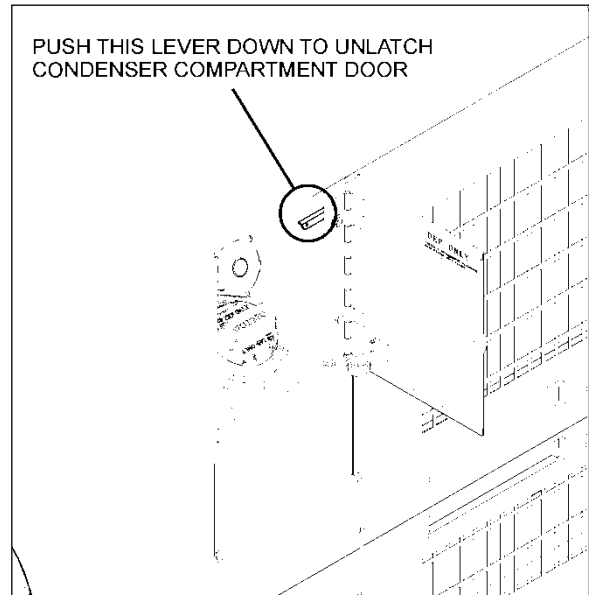

OPENING CONDENSER DOOR

The condenser compartment provides access to the following:

- Diesel Exhaust Fluid (DEF) Tank
- Condenser;
- Condenser fans and motors;
- Filter dryer and moisture indicator;
- Receiver tank;

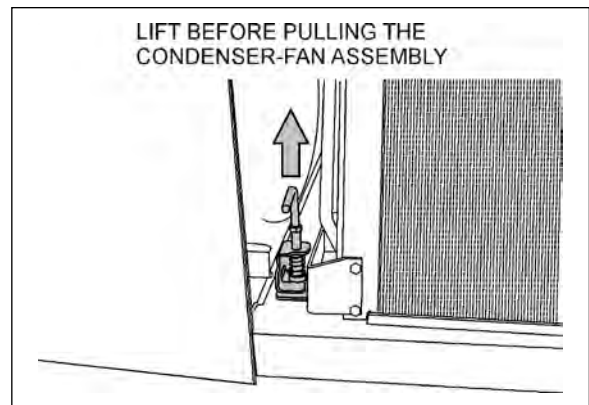

PULLING THE CONDENSER-FAN ASSEMBLY




CAUTION

Only the strap should be used to pull the condenser-fan assembly open. Damage to condenser could result if pulling by other means.

2-8 COACH EXTERIOR



CONDENSER COMPARTMENT STRAP

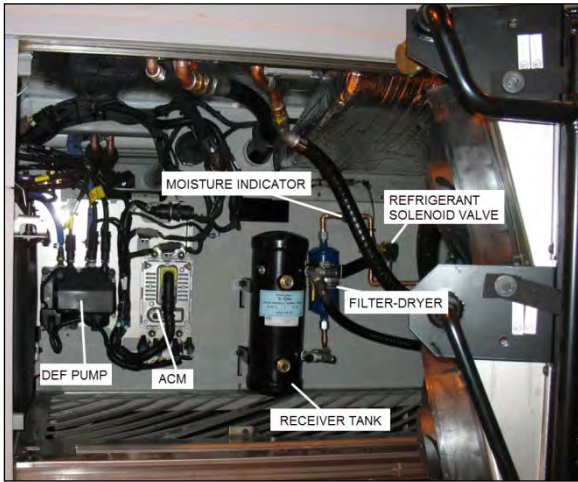


CONDENSER COMPARTMENT (A/C)

22299

EVAPORATOR COMPARTMENT


The evaporator compartment door release latch is located in the baggage compartment located to its left. Pull the release latch then slide your hand in the opening to depress the evaporator compartment door secondary lock and swing open.

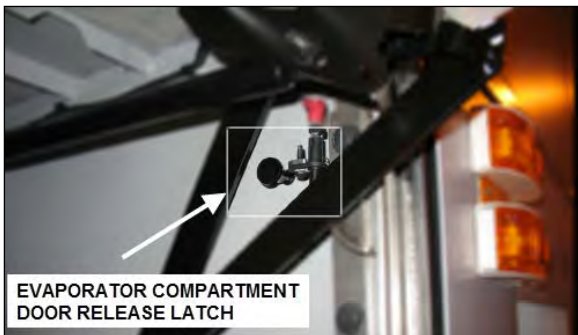

OPENING THE EVAPORATOR COMPARTMENT DOOR




EVAPORATOR COMPARTMENT DOOR SECONDARY LOCK LEVER

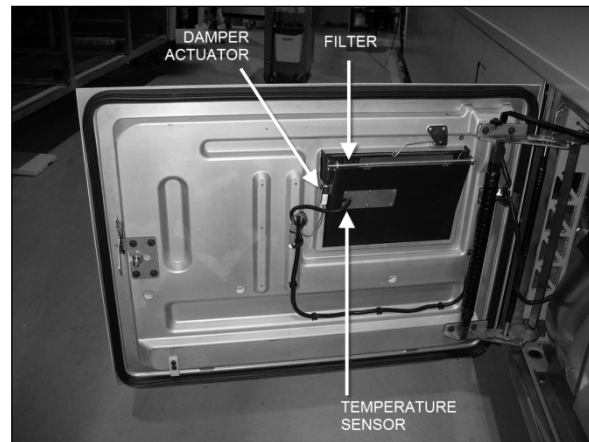


EVAPORATOR COMPARTMENT DOOR

The door features a recirculation damper actuator, a temperature sensor and a disposable filter.

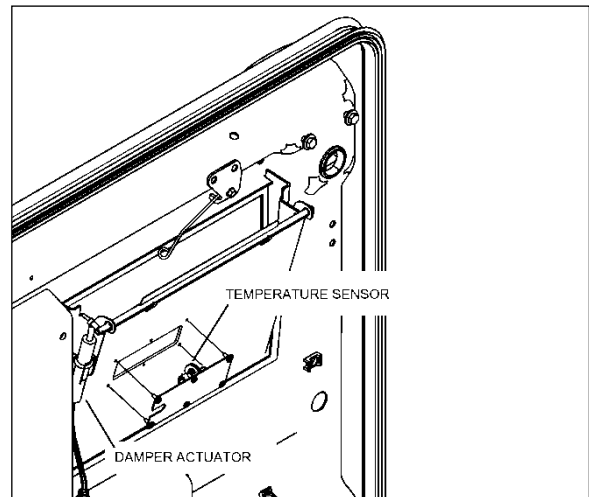

RECIRCULATION DAMPER AND TEMP. SENSOR 22302_A

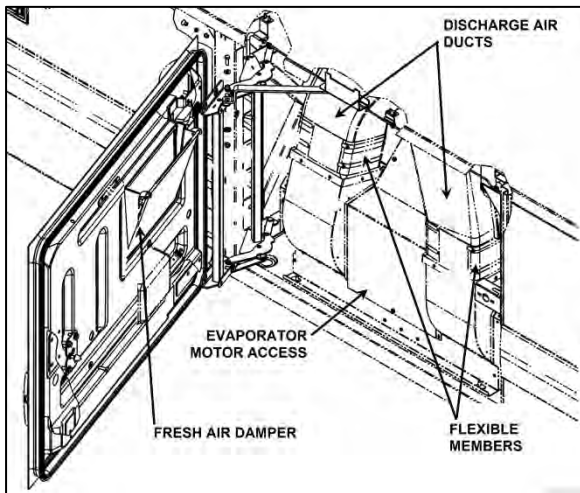

EVAPORATOR COMPARTMENT DOOR

COOLANT HEATER COMPARTMENT

The air dryer is found inside this compartment located aft of the evaporator compartment. To gain access, lift the rear fender.




COOLANT HEATER COMPARTMENT

REAR FENDERS

Rear fenders are hinged for maintenance on brakes and suspension. Each rear fender panel has two mechanical springs loaded holding devices fixing it to the vehicle's structure.


Step 1: Push rod "A" sideway to disengage the lock.

Step 2: Push rod "B" sideway to disengage the lock.

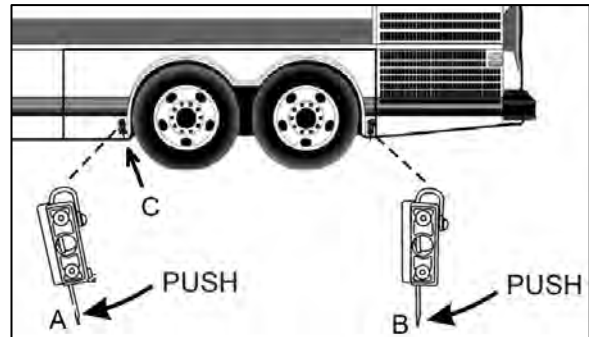

UNLOCK REAR FENDERS

Step 3: Pull the handle "C" on the left side to disengage the third lock.

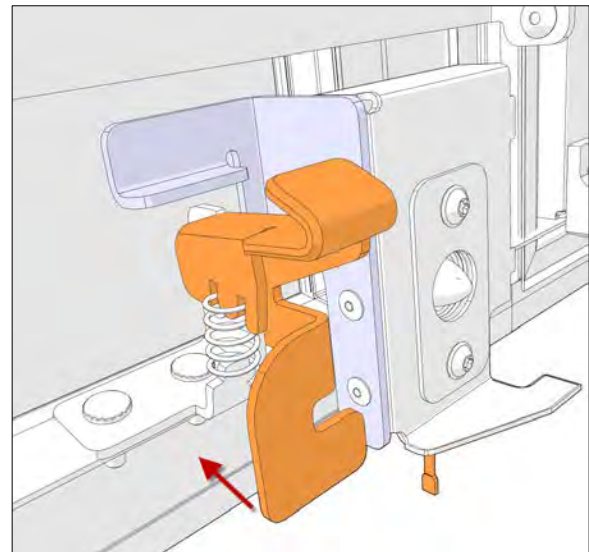


UNLOCK REAR FENDERS

2-10 COACH EXTERIOR

FRONT ELECTRICAL AND SERVICE COMPARTMENT


Use the exterior compartment door key to open the front electrical and service compartment door from outside the coach. The front electrical and service compartment provides access to the following:

- Front terminal block;
- VECU;
- Vehicle Electrical Center Front (VECF), MCM and Multiplex Modules;
- C226 connector (MCM) type DB9 for laptop diagnostic tool;
- Relays and fuses;
- Tag axle control valve;
- ABS Electronic Control Unit (ECU);
- Emergency door unlatch valve;
- Master Interlock cancel switch;
- Windshield washer reservoir;
- Accessories system fill valve;
- Accessories air tank pressure relief cock;

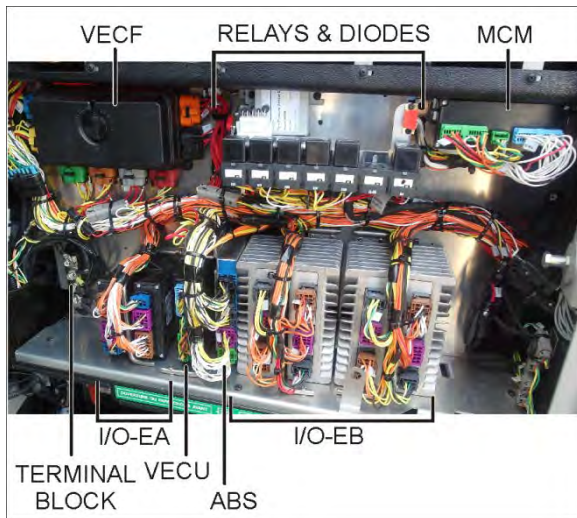

FRONT SERVICE COMPARTMENT ELECTRICAL PANEL

The light in the front electrical and service compartment turns *ON* automatically when the door is opened.

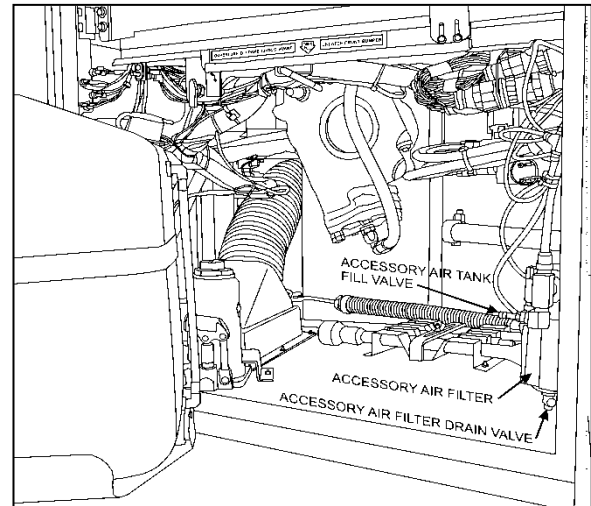

FRONT SERVICE COMPARTMENT


18611

BAGGAGE COMPARTMENTS

The compartments can be locked or unlocked by using the provided key. The baggage compartments may also be locked using a seal on the operating handle.

Note that the two front compartments are only accessible from the curb side while the third rear is accessible from both sides.

Lift up operating handle to release the latch, and then pull the door open by the handle rod. Pressurized cylinders assist the opening and closing of the baggage compartment doors and hold the doors open.

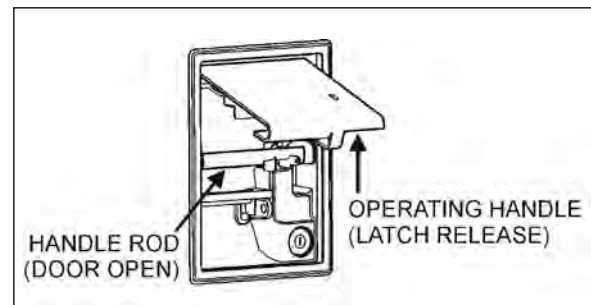

BAGGAGE DOOR LOCK AND LEVER

18693

To close, pull down the door by the handle rod. Complete the closing of the door by returning the operating handle to its initial position.



CAUTION

Do not slam shut the baggage compartment doors. Damage to the door weather-stripping or locking mechanism could result.

Lights in the baggage compartments turn *ON* automatically when the door is opened.



BAGGAGE DOOR CATCH 18612

NOTE

For added safety, open the door until the catch assist in holding the door in the open position.




WARNING

To avoid injury, keep hands clear of baggage compartment door edge and door frame when closing.

FUEL AND DIESEL EXHAUST FLUID (DEF) FILLER DOOR

The fuel and Diesel Exhaust Fluid (DEF) filler door is located on the R.H. side of the coach providing easy filling. A spring keeps the door either open or shut. The vehicle is equipped with Emco Wheaton POSI/LOCK 105 Automatic DRY-BREAK Fueling System; the POSI/LOCK Filler Neck Assembly is installed on the fuel tank and requires the use of POSI/LOCK Refueling Nozzle for proper operation.

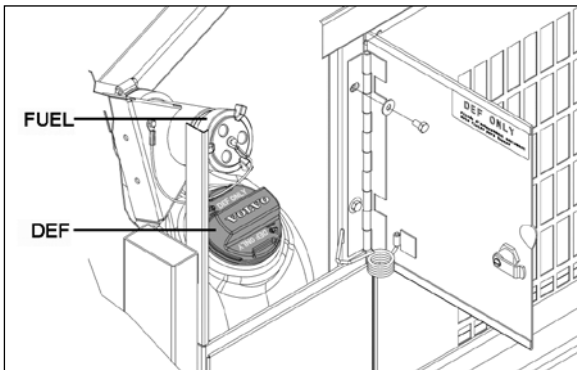

FUEL & DEF FILLER DOOR 03046

NOTE

Provided the vehicle is parked on level ground, an automatic nozzle will automatically shut off when the fuel tank is approximately 95% full.



CAUTION

Diesel exhaust fluid DEF will begin to crystallize and freeze at 12°F (-11°C) and expand by 7% when frozen. To allow expansion without damaging the DEF tank, do not fill the tank with more than 15.9 gallons (60 liters).



CAUTION

Do not fill to more than 95% of the fuel tank capacity. Do not "top off" the tank, doing so may result in fuel spillage when the fuel expands.

BI-FOLD ENTRANCE DOOR

Lock or unlock the bi-fold entrance door from outside the vehicle by turning the key in the door lock (counterclockwise to lock, clockwise to unlock). The entrance door can be unlocked from the inside using the small lever located on the door.



ENTRANCE DOOR 18001

Opening door

Opening the door requires only one push on exterior or interior door operating buttons. The door will open to full open position.


Closing door

To close the door, **push and hold** the exterior or interior door operating buttons. The door can be closed to any position by releasing the operating button when the desired position is attained. However, the door is not locked in any position other than fully closed. The door can therefore be closed further or opened by pushing or pulling on the door by hand.

NOTE

The **interior and exterior door operating buttons** are disabled when the ignition is set to the OFF position for more than 15 minutes. To reactivate, press and hold the exterior button in the open position.

The **exterior door operating button** is disabled when the ignition is set to the ON position.

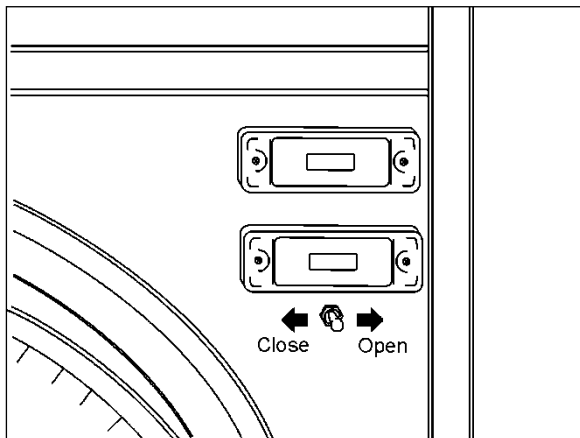

ENTRANCE DOOR EXTERIOR SWITCH 18599

Door Operation Logic

Once the door is fully open or closed, the system holds pressure in the door cylinder, holding the door in that position.

The interior door opening button flashes when the vehicle speed is below 3 mph to indicate that the driver is allowed to open the door.

Emergency Entrance Door Opening


Refer to "Safety Features and Equipment" section.

WHEELCHAIR LIFT ACCESS DOORS

Refer to "Other Features" for more information on operating the wheelchair lift.

REAR-VIEW MIRRORS

The vehicle is equipped with flat-type and convex-type rear-view mirrors. Convex mirrors give a wide-angle view. Objects viewed in convex-type rear-view mirrors appear smaller and are actually closer than they appear.

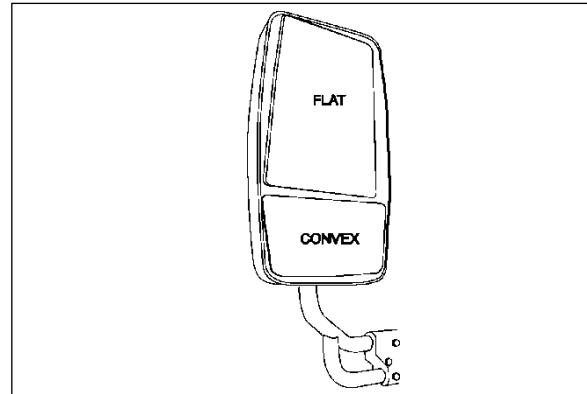

REAR-VIEW MIRRORS (R.H. SHOWN)

L.H. and R.H. side mirrors are basically the same except that the R.H. side mirror support arm is also equipped with a round convex type mirror to provide better visibility in front of the vehicle R.H. side corner.



CAUTION

Round convex type mirror is not adjustable.


The mirrors are adjusted using the controls located on the L.H. control panel. Refer to "Controls & Instruments" section. Manual adjustment is also possible.

HUBODOMETER

An odometer is installed on the curbside drive axle wheel hub. The odometer calculates the total distance traveled by the coach since manufacture, including factory road testing.

NOTE

It is normal for the hubodometer, the engine ECM and the vehicle odometer to disagree on the total mileage.

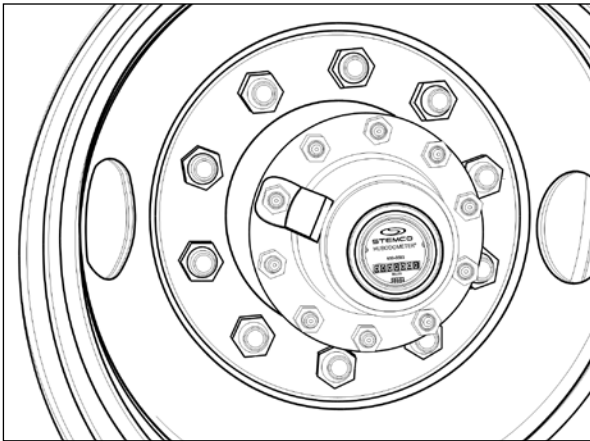**HUBODOMETER**

13012


SECTION 3 COACH INTERIOR

| | |
|--|----------|
| STEERING WHEEL ADJUSTMENT | 2 |
| AISLE MIRROR | 2 |
| ADJUSTABLE HVAC REGISTERS | 2 |
| DRIVER’S SEAT – RECARO | 2 |
| ADJUSTMENT | 2 |
| SAFETY BELTS | 3 |
| PASSENGER SEATS | 4 |
| PASSENGER SEAT BELTS..... | 4 |
| <i>ELR/ALR Retractor Lock Mode</i> | 4 |
| OVERHEAD CONSOLE | 5 |
| ADJUSTABLE AIR REGISTERS | 5 |
| STOP REQUEST | 6 |
| READING LIGHTS..... | 6 |
| WINDOWS | 6 |
| PANORAMIC WINDOWS..... | 6 |
| <i>Fixed Windows</i> | 6 |
| <i>Emergency Windows</i> | 6 |
| DRIVER’S POWER WINDOW | 6 |
| <i>Driver’s window shades</i> | 6 |
| WINDSHIELD | 6 |
| VENTILATION HATCH | 7 |
| OVERHEAD COMPARTMENTS | 7 |

3-2 COACH INTERIOR

STEERING WHEEL ADJUSTMENT

Push on the valve button located in the foot-operated control housing to unlock the steering wheel for tilt and telescopic adjustment (refer to “Controls and Instruments” section).

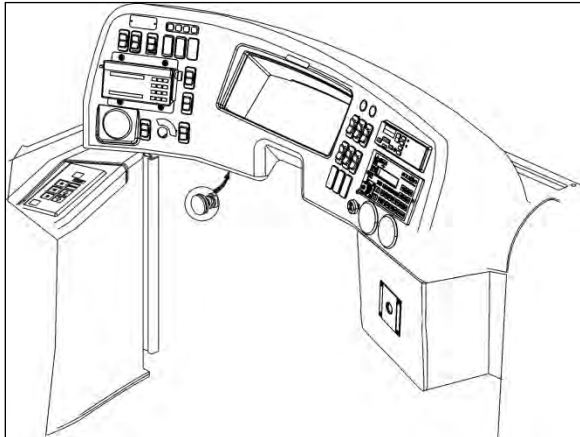

TILT AND TELESCOPIC ADJUSTMENT

18670_1



DANGER

Do not adjust the steering wheel while driving. Loss of control could result. Park the vehicle safely and apply parking brakes before adjusting the steering wheel.


AISLE MIRROR

A central mirror allows the driver to see in the aisle. Adjust mirror manually.

ADJUSTABLE HVAC REGISTERS

The HVAC system has adjustable registers to control airflow around the driver's area. Three are located on the dashboard; two on the R.H. side and one on the L.H. (refer to Controls & Instruments section). Another one is located close to the door, below the modesty panel wall for step de-icing. The direction and volume of air flow are adjustable manually.

Use the HVAC control panel to set air temperature.

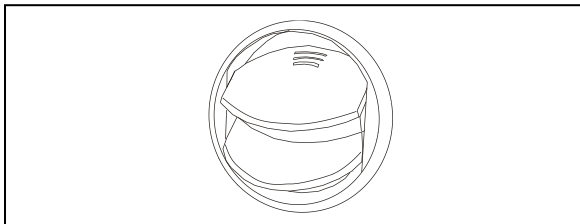

AIR REGISTER

22249

DRIVER'S SEAT – RECARO

The vehicle is equipped with a Recaro Ergo MS seat.



DANGER

The driver's seat must be adjusted to allow the driver easy access to the coach controls. Never adjust seat while driving a vehicle as this could result in loss of vehicle control.




DANGER


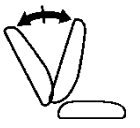
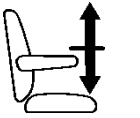


Make sure that seat is adjusted and that safety belt is buckled up before diving vehicle.

ADJUSTMENT

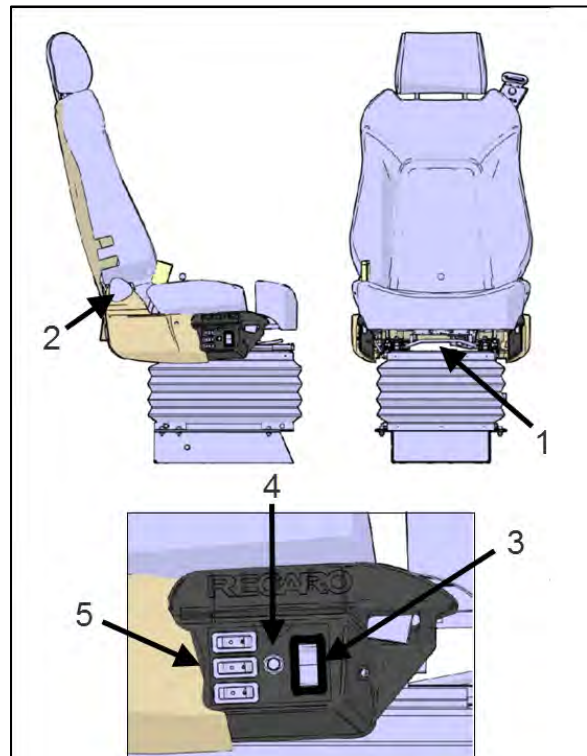Seat can be adjusted to the desired driving position by following the instructions listed below.



DRIVER'S SEAT ADJUSTMENT (RECARO)


| ITEM | DESCRIPTION |
|------|--|
| 1 |  <p>Fore and Aft</p> <p>To adjust distance between driver and dashboard, pull handle (1) up and slide the seat forward or backward. Release handle to lock the seat in position.</p> |
| 2 |  <p>Backrest</p> <p>Turn hand wheel recline (2) to adjust backrest to the desired angle.</p> |
| 3 |  <p>Up and Down</p> <p>Toggle up/down switch (3) to adjust the height of the seat.</p> |
| 4 |  <p>Fore and Aft Auto Actuator</p> <p>To adjust distance between driver and dashboard, push auto actuator (4) and slide the seat forward or backward. Release button to lock the seat in position.</p> |
| 5 |  <p>Lumbar Support</p> <p>Use the 3-cell lumbar switches (5) to adjust lumbar support.</p> |

SAFETY BELTS

The driver's seat is equipped with a 3-point retractable orange safety belt.

To fasten, pull the seat belt out of the retractor and insert the latch plate into the buckle until it clicks.

No special adjustment is required since the reel device is self-adjusting. If seat belt operation becomes defective, report to maintenance personnel immediately.

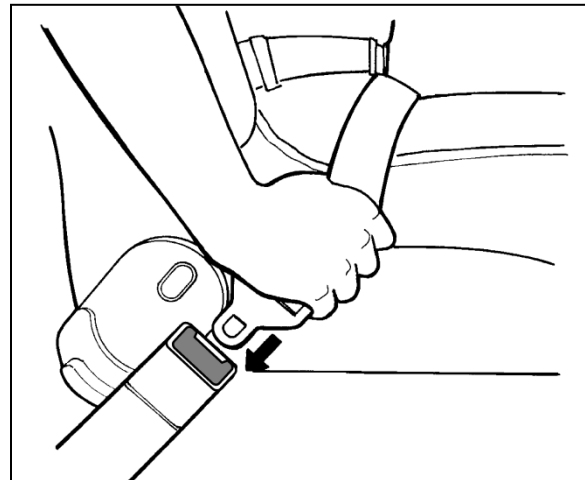

FASTENING SEATBELT

18028

NOTE

The safety belt must be pulled out slowly and continuously, otherwise it will lock the reel before the latch plate reaches the buckle. If this happens, allow the belt to retract completely and repeat the procedure correctly.

WARNING

A snug fit with the lap belt positioned low on the hips is necessary to maximize driver safety. The belt should not be worn twisted. Avoid pinching belt and/or belt hardware in seat mechanism. Do not wear belt over rigid or breakable objects, such as eyeglasses, pens or keys as these may cause injuries.

To unfasten belt, press the red button in the center of buckle and allow belt to retract. If the belt does not fully retract, pull it out and check for kinks or twists. Make sure that it remains untwisted as it retracts.


WARNING

Most State and Provincial laws require that safety belts be worn when they are supplied with the seat.

NOTE

The vehicle is equipped with a belt detection system; a warning alarm will be heard if the vehicle is moving above 3 mph (5 km/h) with the safety belt unfastened.

3-4 COACH INTERIOR

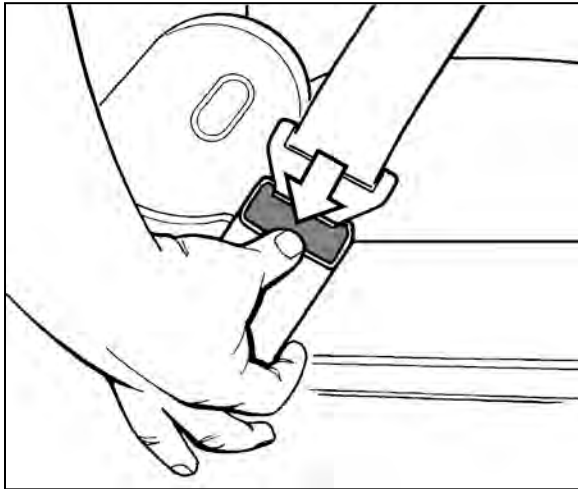

UNFASTENING SEATBELT

18029



CAUTION

Never bleach or dry clean safety belt.

PASSENGER SEATS

The seat layout accommodates 57 seated passengers.


It features twenty (20) two-passenger fixed seats, six (6) two-passenger reconfigurable seats and five (5) fixed rear cross single seats.



PASSENGER SEAT

18729

Passenger seats may be equipped with optional grip handles, newspaper holders, USB port, trays, cup holders, audio control modules, electrical outlets and footrests.

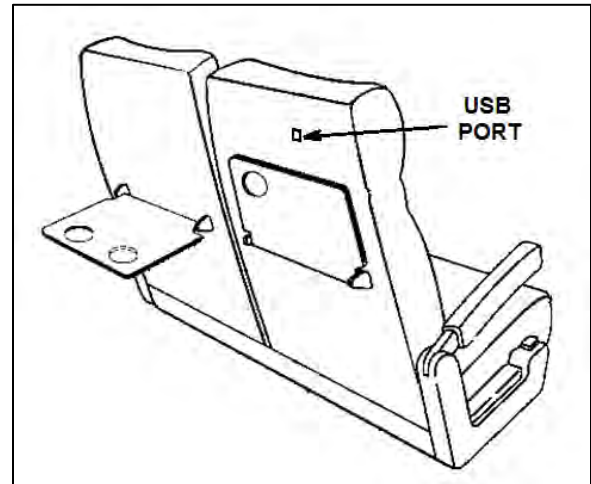

OPTIONAL PASSENGER SEAT EQUIPMENT

18121A

All seats are track-mounted so that the seating configuration can be changed. Each set is mounted on rectangular aluminum bases to make cleaning between the base and side wall easier.

Passenger seat backrests can be reclined by lifting the handle located under the belt receptacle.

Fold-up armrests are installed on the seat.

PASSENGER SEAT BELTS

Passengers are strongly advised to wear seat belts at all times. Children can use a passenger seat belt as long as they are large enough to properly wear the seat belt. The shoulder belt must be correctly positioned over the child's shoulder and it must not touch the neck or lie below the shoulder.


To fasten, pull the seat belt out of the retractor and insert the latch plate into the buckle until it clicks. No special adjustment is required since the retractor device is self-adjusting. If the seat belt operation becomes defective, report to maintenance personnel immediately.

ELR/ALR Retractor Lock Mode

Amaya passenger seat belts are equipped with switchable ELR/ALR retractor lock mode:

- **Emergency Locking Retractor (ELR) mode:** Allows the seat belt to extend and retract to allow passengers some freedom of movement in the seat. Locks only when the vehicle or occupant slows quickly/abruptly or stops suddenly. **Will not secure a child safety seat.**

- **Automatic Locking Retractor (ALR) mode:** Locks and maintains a fixed seat belt (lap belt) length during use. The belt cannot be extended further. **For use with a child safety seat.**


CHILD RESTRAINT SYSTEMS

Occupants under 40" height must use
Child Seat / Booster Seat

The seat belts are equipped with switchable ELR/ALR retractor lock mode.

Activate the ALR retractor lock mode to hold a child restraint system by pulling the shoulder belt all the way out. Allow it to retract to desired length. Check that the belt straps are fully tightened and the retractor / webbing is locked.

Note: Unbuckling the belt and allowing it to retract fully deactivates the ALR retractor


Failure to use the ALR lock mode will result in the child safety seat not being properly secured.

When using a **booster seat**, do not pull the shoulder belt all the way out. Doing so would engage the ALR lock mode which is not recommended with a booster seat.

Install the child seat/booster according to the manufacturer's instructions.

OVERHEAD CONSOLE

One airplane type overhead console is installed above each row of twin seats. It provides such amenities as reading lights, air registers and stop request service.

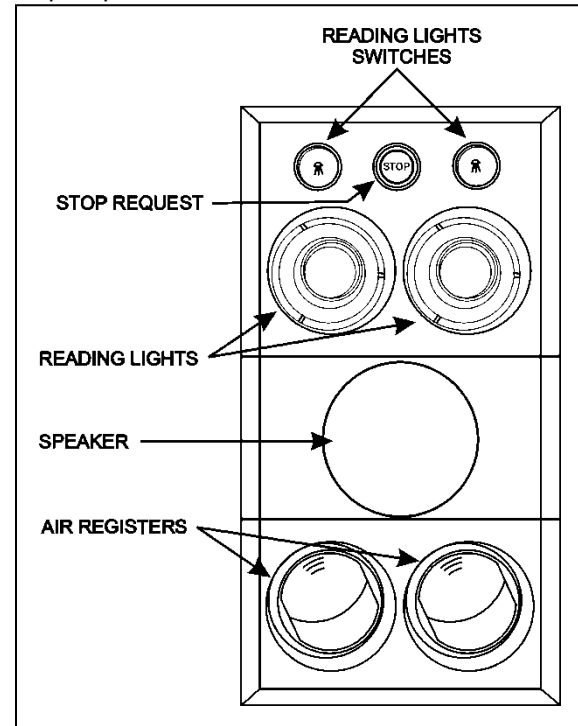

OVERHEAD CONSOLE

23137

For passengers with a wheelchair, a tape switch is available at the bottom of the window for a stop request.



ADJUSTABLE AIR REGISTERS

Manually adjustable registers located on the overhead console provide air flow to the passengers. Airflow can be directed, passengers can orient individual registers by rotating the nozzle. To adjust airflow, passengers must open or close the flaps. Activation of the fans is done by depressing a rocker switch on the dashboard. Refer to Controls & Instruments section.

3-6 COACH INTERIOR

STOP REQUEST

Passengers can request a stop for disembarking by pressing the “STOP” request button on the overhead console by touching the tape switch. This will illuminate the button and activate a warning sound in the driver area, this will also light-up a warning signal on the dashboard. Press the “STOP” request button a second time to cancel the stop request.

A “STOP” request button is provided for the wheelchair occupant on the window sill of the coach, within easy reach. Pressing this “STOP” request button will sound two gongs to identify the wheelchair occupant.

READING LIGHTS

Reading lights are mounted underneath the overhead storage compartments. Depressing a rocker switch located on the dashboard (refer to Controls & Instruments section) will activate the reading light circuit and allow passenger control of reading lights.

WINDOWS

The vehicle is equipped with frameless flush-mounted “Galaxsee” windows all around and a split-window windshield for maximum visibility.

PANORAMIC WINDOWS

Panoramic side windows come in single pane glass. Some of these windows are of the fixed type; they are bonded to the structure and cannot be opened. Others can be easily opened to serve as emergency exits.

Fixed Windows


These windows are bonded to the structure and form an integral part of the body of the vehicle, helping reduce vibration and noise. Fixed windows cannot be opened.

Emergency Windows

These windows can be opened from inside the vehicle as emergency exits. A riveted tag on window sills indicates the location of the emergency windows. To open an emergency window, lift the window release bar (sill) and push the window open from the bottom.

To close, lift the release bar and pull the window into position. Push down on release bar to lock the window shut.

For more information on emergency features, refer to “Safety Features and Equipment” section.

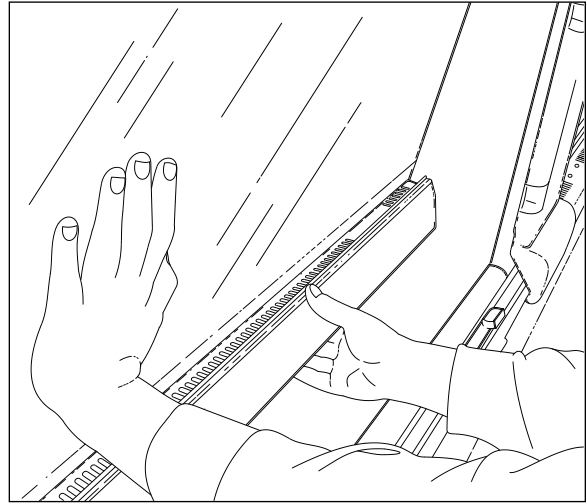

EMERGENCY WINDOW OPENING

18391

DRIVER'S POWER WINDOW

The driver has a power window on the left side of the coach. The windows are controlled by a rocker switch located on the driver's control panel. Refer to “Controls and Instruments” section.

Driver's window shades

This vehicle is provided with a sunshade on the driver's left side window. To operate, pull down the shade using the button in the middle. Use the same button and pull up to raise the sunshade.

WINDSHIELD

Two manually operated shades are installed behind the windshield. To operate, pull down the shade by its button in the middle to the appropriate position. It will remain in position. To retract, pull up the shade by its button in the middle.



SPRING RELEASE SUNSHADE

23019

NOTE

The overhead storage compartments have a minimum amount of separators installed to facilitate inspection for left behind items.




OVERHEAD STORAGE COMPARTMENTS

18603

VENTILATION HATCH

A ventilation hatch is installed in the ceiling at the rear of the coach and at the front of the coach. To open the hatch, push up with both hands and pull down to close. The ventilation hatch can be completely open for emergency egress. Refer to “Safety Features and Equipment” section.

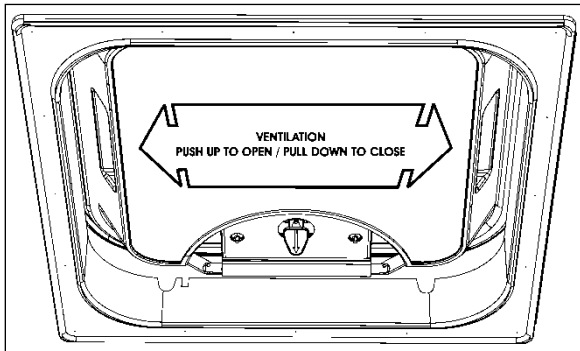

VENTILATION HATCH



WARNING

Be aware of coach overhead clearance when traveling under overpasses with the ventilation hatches open. Check for maximum clearance height.

OVERHEAD COMPARTMENTS

Passenger carry on baggage is stored in overhead compartments on each side of the coach. A first-aid kit is located in the second front curb side overhead storage compartment.

To open the closed overhead storage compartments, push the handle in to release the latch, then let go. A pressurized cylinder opens the door.

SECTION 4 CONTROLS AND INSTRUMENTS

| | |
|--|-----------|
| KEYS..... | 3 |
| ENTRANCE DOOR AND EXTERIOR COMPARTMENT DOORS KEY | 3 |
| IGNITION SWITCH | 3 |
| T-KEY..... | 3 |
| LATERAL CONTROL PANEL | 5 |
| TRANSMISSION CONTROL PAD (1) | 5 |
| CONTROL SWITCHES (2)..... | 5 |
| <i>Back-Up Alarm Cancel Switch</i> | 5 |
| <i>Kneeling</i> | 5 |
| <i>Power Window Switch</i> | 5 |
| <i>Entrance Door Interlock Cancel Switch</i> | 6 |
| MIRROR CONTROLS (3)..... | 6 |
| PARKING BRAKES CONTROL VALVE (4)..... | 6 |
| EMERGENCY/PARKING BRAKES OVERRULE CONTROL VALVE (BRAKE RELEASE) (5)..... | 6 |
| OBD DIAGNOSTIC TOOL RECEPTACLE | 6 |
| DASHBOARD..... | 7 |
| CONTROL SWITCHES | 8 |
| L. H. DASHBOARD PANEL | 8 |
| R. H. DASHBOARD PANEL | 11 |
| DRIVER'S HVAC CONTROL UNIT | 13 |
| <i>Passenger's section temperature setting</i> | 14 |
| AIR VENTS..... | 15 |
| ELECTRONIC DESTINATION SIGN..... | 15 |
| INSTRUMENT CLUSTER..... | 16 |
| ANALOG INDICATORS..... | 17 |
| TELLTALE LIGHTS | 20 |
| STOP, CHECK AND INFORMATION TELLTALE LIGHTS | 23 |
| <i>STOP Telltale Light</i> | 23 |
| <i>CHECK Telltale Light</i> | 23 |
| ACKNOWLEDGING MESSAGES | 23 |
| DRIVER INFORMATION DISPLAY | 23 |
| <i>Selecting a menu</i> | 24 |
| <i>To change settings</i> | 24 |
| PICTOGRAMS DISPLAYED ON THE DRIVER INFORMATION DISPLAY (DID)..... | 25 |
| <i>Warning pictograms, pop-up message pictograms, verifications and information pictograms</i> | 25 |
| <i>Status Line Pictograms</i> | 29 |
| HORN..... | 30 |
| FOOT-OPERATED CONTROLS..... | 30 |
| HEADLIGHT BEAM TOGGLE SWITCH | 30 |
| LEFT TURN SIGNAL SWITCH | 30 |
| RIGHT TURN SIGNAL SWITCH..... | 30 |
| ELECTRIC HORN | 30 |
| BRAKE PEDAL | 30 |
| ACCELERATOR PEDAL | 31 |
| ALLISON AUTOMATIC TRANSMISSION | 31 |


4-2 CONTROLS AND INSTRUMENTS

| | |
|---|----|
| OPERATION | 31 |
| PUSHBUTTON SHIFT SELECTOR | 31 |
| PRIMARY AND SECONDARY SHIFT MODES | 31 |
| DESCRIPTION OF AVAILABLE RANGES | 32 |
| <i>R (Reverse)</i> | 32 |
| <i>N (Neutral)</i> | 32 |
| <i>D (Drive)</i> | 32 |

KEYS


ENTRANCE DOOR AND EXTERIOR COMPARTMENT DOORS KEY

Use this key to lock or unlock the entrance door, the baggage compartment doors and the driver's overhead compartment.

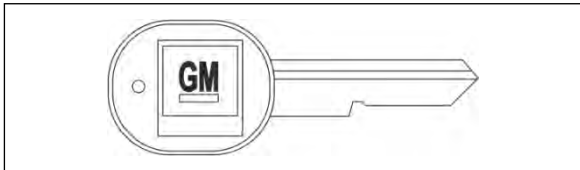

IGNITION SWITCH

Vehicles are equipped with an ignition lever instead of an ignition key. Use the ignition lever to activate the electrical circuit by turning it to the ON position.

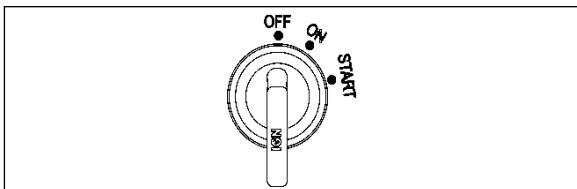

IGNITION SWITCH POSITIONS

06354


For further details, refer to STARTING AND STOPPING PROCEDURES section in this manual.

T-KEY

Use this key to lock or unlock the engine RH compartment door and to have access to the handle that opens the engine compartment door. Also, this key locks and unlocks the electrical and service compartment door and the inverter access hatch at the rear end wall of the vehicle.



4-4 CONTROLS AND INSTRUMENTS

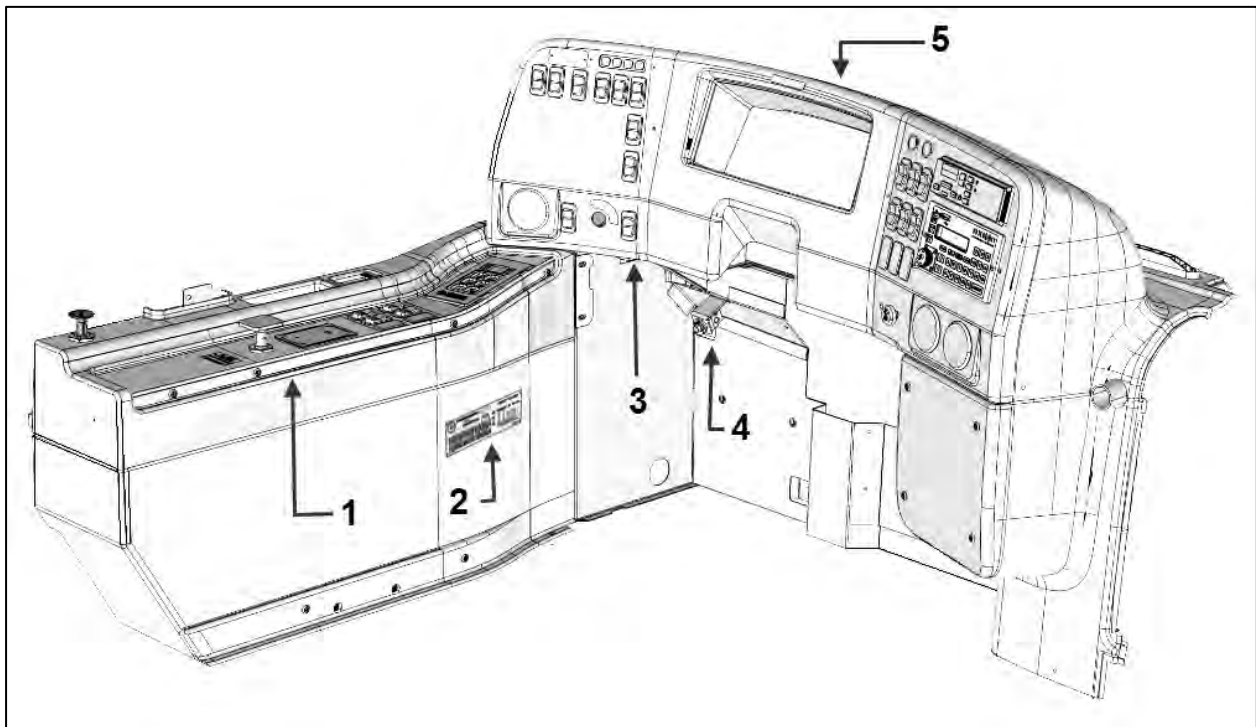


DRIVER'S SECTION

18671_3

1. Lateral control panel
2. DOT certification plate
3. Diagnostic tool receptacle (OBD)
4. Foot operated steering wheel adjustment unlock air valve
5. Dashboard

LATERAL CONTROL PANEL

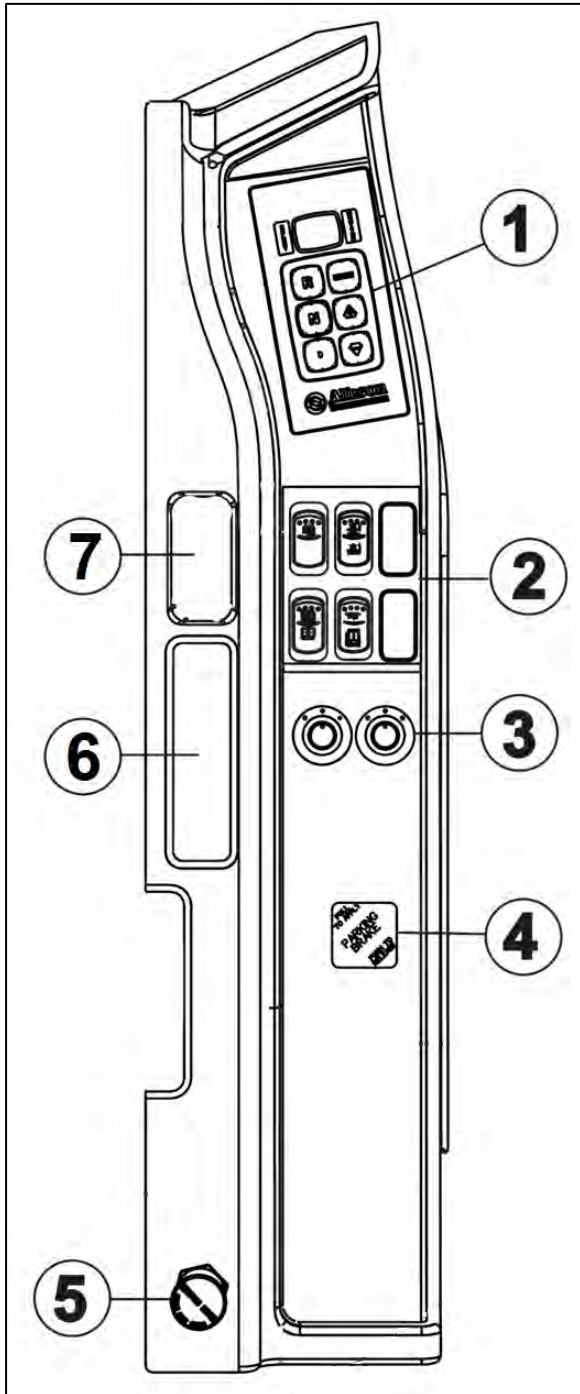

LATERAL CONTROL PANEL

06704_2

- 1. Transmission control pad
- 2. Control switches
- 3. Mirrors controls
- 4. Parking brakes control valve
- 5. Emergency Parking Brakes Overrule


- 6. Utility Compartment
- 7. Utility Compartment

TRANSMISSION CONTROL PAD (1)

The Allison transmission control pad is located on the lateral control panel. Refer to "Automatic Transmission" in this section for operating instructions and more information.

CONTROL SWITCHES (2)


Back-Up Alarm Cancel Switch

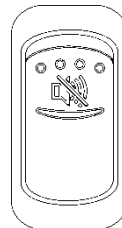

Use this rocker switch to cancel the back-up alarm.

NOTE: Normal operation resumes after leaving reverse gear.

Kneeling

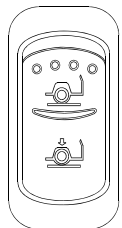


Momentarily press the rocker switch downwards to lower the front end of the vehicle. Momentarily press the rocker switch upwards to raise the vehicle to the normal driving height. Refer to OTHER FEATURES section for more information.

NOTE

This vehicle is equipped with an interlock system which automatically applies the parking brake when the kneeling system is activated.

Power Window Switch

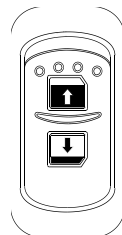


Use this rocker switch to open or close the driver's power window.

CAUTION

Close power window when parked or leaving the vehicle unattended.

4-6 CONTROLS AND INSTRUMENTS

Entrance Door Interlock Cancel Switch



06266


This switch enables moving the vehicle while the entrance door is open for maintenance purposes or in case of emergency.



DANGER

Unless absolutely necessary, always apply parking brakes before canceling entrance door interlock

MIRROR CONTROLS (3)

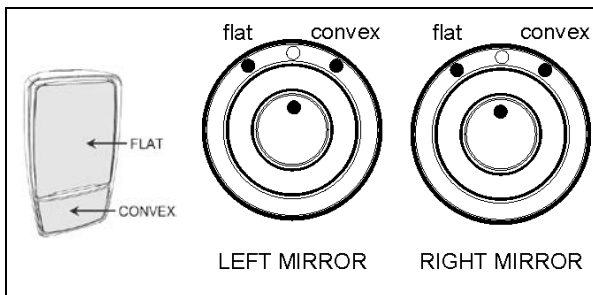

MIRROR CONTROLS

06374

Turn left pointer knob counterclockwise for flat mirror adjustments and to the right for convex mirror adjustments, then use the joystick control to adjust the selected mirror's viewing angles. Adjust the right outside mirror similarly but by using the right side control.

PARKING BRAKES CONTROL VALVE (4)

Spring-applied parking brakes are applied by pulling up the control valve knob. Push down to release brakes. Refer to SAFETY FEATURES AND EQUIPMENT section.



PARKING BRAKE CONTROL VALVE

12129_3

EMERGENCY/PARKING BRAKES OVERRULE CONTROL VALVE (BRAKE RELEASE) (5)

The coach may be equipped with the optional parking brake overrule system, which allows the vehicle to be moved to the nearest safe parking area if the spring-applied emergency brake has automatically applied to the drive axle wheels. To actuate the parking brakes overrule system, push and hold down the control valve located on the lateral control panel.


OBD DIAGNOSTIC TOOL RECEPTACLE

To ease troubleshooting, you can connect a diagnostic tool through the OBD receptacle to access recorded data. The OBD receptacle is located under the dashboard, on the left side.

AUTOMATIC FIRE DETECTION AND SUPPRESSION SYSTEM (AFSS)

Refer to SAFETY FEATURES AND EQUIPMENT for more information on *Kidde Dual Spectrum* Automatic Fire detection and Suppression System (AFSS).

DASHBOARD

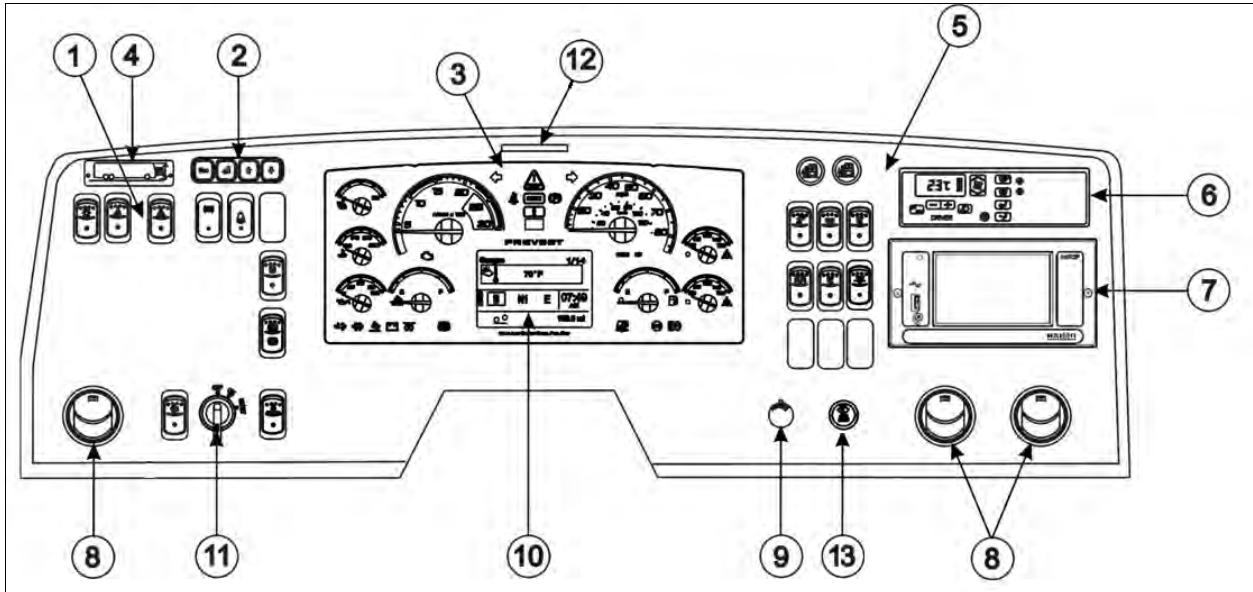

DASHBOARD

06761_1


1. L. H. Dashboard Panel
2. Driver Information Display (DID) Keyboard
3. Instrument Cluster
4. Vehicle Clearance Information
5. R. H. Dashboard Panel
6. HVAC Control Unit
7. Electronic Destination Sign Central Control Unit
8. Air Vents
9. Brightness Control
10. DID (Driver Information Display)
11. Ignition Switch (Lever)
12. Minimum Operating Air Pressure Warning Tag
13. Wipers

4-8 CONTROLS AND INSTRUMENTS

CONTROL SWITCHES

Many switches are equipped with a LED indicator to inform the driver at a glance which features are active. Switches are described in the order they appear, from left to right, top to bottom.


L. H. DASHBOARD PANEL

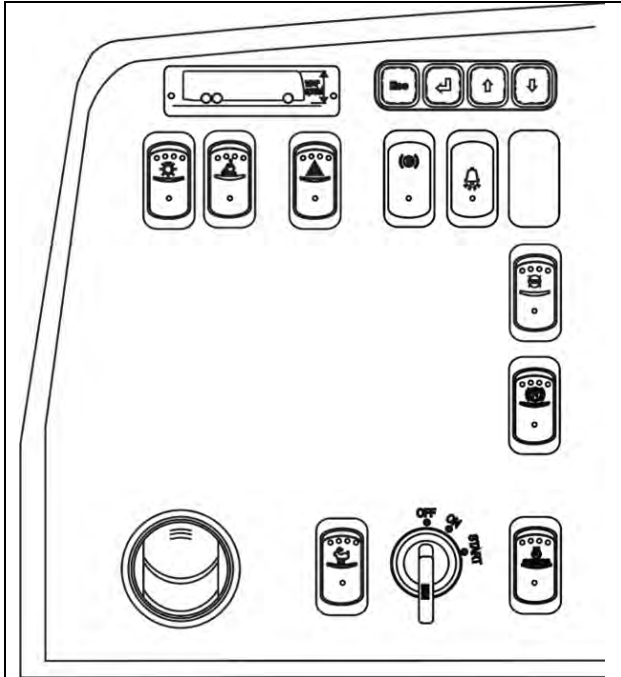

L. H. DASHBOARD PANEL

06762_1

The L.H. dashboard panel includes controls for the operation of the vehicle; it also includes the ignition switch, radio control and an adjustable air vent.

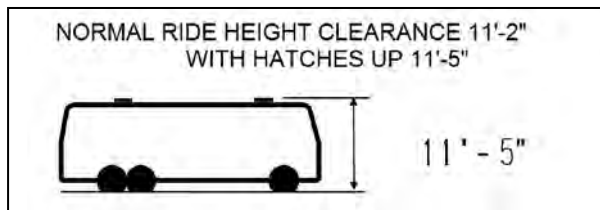


Vehicle height information with hatches up and down.



WARNING


Vehicle clearance is higher when the ventilation hatch is open or if additional equipment is installed on the roof.

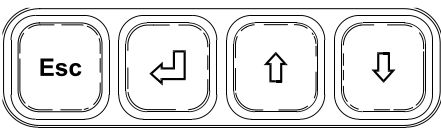

06399

Driver Information Display (DID)

This standard feature gathers stores and displays important information about the vehicle's operation on a display screen on the lower center portion of the cluster. Refer to "Driver Information Display" in OTHER FEATURES section for a description of how to set up and operate the Driver Information Display.



06254

Headlights and Exterior Lighting

Off position – Daytime running lights only


Press this rocker switch to turn on the following lights:

First position – Front parking lights, clearance lights, tail lights, license plate lights and marker lights.

Second position - Push down fully to turn *ON* the headlights, the controls and instrument lights and all lights from first position.

NOTE


Daytime running lights will be automatically canceled when the exterior lighting switch is fully depressed (second position).



06268

Wheelchair Lift Power Switch

Activate the optional wheelchair lift by pressing down on the rocker switch. Refer to OTHER FEATURES section and to wheelchair lift system’s Operator’s Manual for operating instructions.



06256

Hazard Warning Flashers

Press the rocker switch to make all turn signal lights flash at once. The dashboard telltale lights will flash when the hazard warning flashers are *ON*.



CAUTION

Do not use the hazard flashers for an extended period of time unless necessary because the electrical circuits are activated when the hazard switch is depressed.



06774

Stop Light Indicator


This indicator light will illuminate simultaneously with the vehicle rear brake lights.



06771


Stop Request Warning Light

This warning light will illuminate and an audible warning sound will be heard when one of passenger pushes the stop request button on the overhead console to request a stop for disembarking.



Bike rack Warning Light (Optional)

This warning light will illuminate when the bike rack is folded down.



06758

Traction Control System Mud/Snow Mode

On certain road conditions, it may be useful to retard the intervention of the traction control system TCS during vehicle acceleration. The Mud/Snow function allows greater engine power and more wheel spin during TCS operation. This function may be helpful to set the vehicle in motion on iced roads, for example.

Press the Mud/Snow switch to turn on this function. The TCS/ESC telltale blinks slowly when the TCS Mud/Snow mode is active. Always remember to turn the Mud/Snow feature off when driving on a firm road surface.

A new ignition cycle or a second pressing of the Mud/Snow switch will turn this function off.



Transmission Retarder


Press this rocker switch to activate the transmission retarder. Refer also to "Transmission Retarder" in OTHER FEATURES section.

| NOTE |
|---|
| <i>Deactivating the transmission retarder will turn on the indicator light located at the front of the vehicle.</i> |

Secondary use - Regeneration Inhibit Override

Flip this rocker switch 4 times (4 transitions from OFF to ON) within 2 seconds to override the regeneration inhibit function through geofencing and allow parked regeneration.

Maintenant dans la RJB à valider



Fast Idle

For extended idling periods, run the engine at fast idle. Press down the rocker switch to engage fast idle. This increases the engine speed to approximately 1,000 rpm. Return to normal idle before driving or when stopping the engine.

CAUTION

Reduce the engine to normal idle before shutting the engine off.

NOTE

If the parking brake is released and/or the transmission is engaged with the engine running at fast idle, the engine will return to normal idle and remain there as long as the parking brake is not applied and/or transmission is not placed in neutral (N).

The engine will return to fast idle once the parking brake is applied or neutral (N) selected.



06265


Engine Stop Override (with Automatic Fire Detection and Suppression System)

Press the Engine Stop Override switch on the dashboard or the Delay Engine Stop switch on the AFSS protection panel to delay the engine shutdown and extinguisher discharge by an additional 15 seconds.

CAUTION

Use this function if you are not prepared to bring the vehicle to a safe stop (i.e. on a railroad track, in the intersection).

R. H. DASHBOARD PANEL

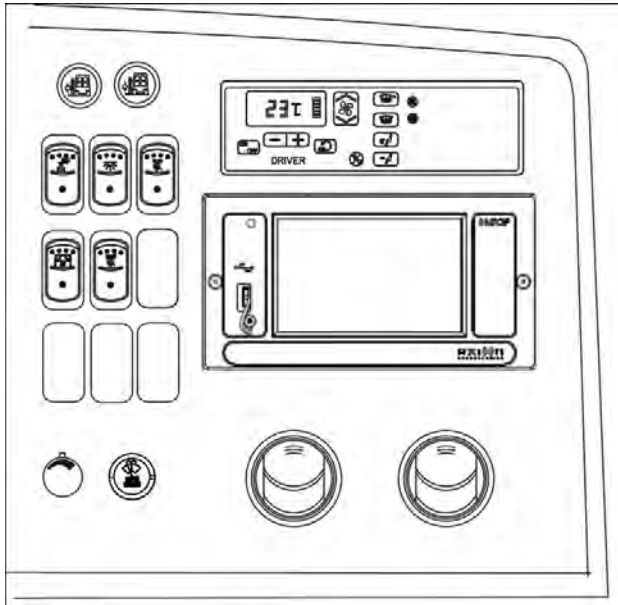

R. H. DASHBOARD PANEL

06724_1

The HVAC control module, electronic destination sign control unit as well as the cluster dimmer switch, interior lighting control switches, entrance door operating buttons, miscellaneous control switches and air vents are located on the R.H. dashboard panel.



CLOSE



OPEN

Entrance Door Operating Buttons

Press the red (R.H. button) button to open the door. The door will open to full open position.


06464

Press and hold the green (L.H. button) button to close the door.



WARNING


The door mechanism has no automatic safety protection to avoid injury to bystanders. The driver is responsible for the safe operation of the door.

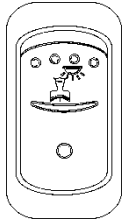

06244

Driver's Area Lighting

Press the rocker switch to illuminate the ceiling lights in the driver's area as needed.

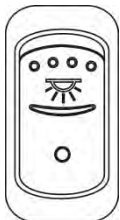

06239

Interior Lighting

Press this rocker switch to the first position to illuminate the aisle fluorescent lighting. Press down the second position to gradually illuminate the in-station reading lights to 80% of their intensity regardless if they were turned off individually by passengers. Lights will also turn OFF gradually.



CAUTION

To avoid running down the batteries when the engine is off, turn off the lights or connect the optional battery charger to a 110-120-volt AC power supply.



06240


Reading Lights

This switch powers the reading light circuit enabling passengers to operate their personal reading lights. Refer to VEHICLE INTERIOR section.



CAUTION


To avoid running down the batteries when the engine is OFF, turn off the lights or connect the optional battery charger to a 110-120-volt ac power supply.

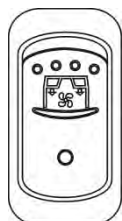

06245

Passenger Overhead Air Registers


Press the switch to start the air register fans. The fans are connected to a sensor and their speed will increase automatically if the outside temperature reach 60 deg. F or if the inside temperature rises above the set point.

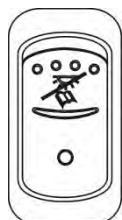

06240_1

First Row Reading Lights Cancel Switch

This switch is used to cancel the first row reading lights. This function is useful to minimize glare in the windshield during night driving.



Windshield Upper Section De-icing (option)

The coach may be equipped with a defrosting system in the upper windshield section. Press the rocker switch to activate the blower in order to clear fog, frost or thin ice from either side of the upper windshield.

06259

The upper windshield defrosting is automatically activated when the outside temperature is lower than 39°F (4°C), the driver's side HVAC control unit is turned on and fan speed is higher than zero. After automatic activation of the upper windshield defrosting, the upper defroster unit can be turned off by cycling this switch to the ON position and then to the OFF position.



Brightness Control

Adjusts the brightness of the dashboard instruments and switches.

06249



Wiper/Washer Control

Push the control to activate the windshield washer. Turn the button to activate the wipers. The first position activates the wipers intermittently. The second position is the slow speed and the third position is for high speed wiping.

06249

DRIVER'S HVAC CONTROL UNIT



22296

The vehicle is divided into two areas:

- 1 - Driver's area (driver's HVAC unit)
- 2 - Passengers' area (central HVAC unit)

Fresh air is fed in each area and has a separate return air and discharge air duct.

The driver's HVAC control unit is used to control heating, ventilation, air conditioning and defroster in the driver's area. The passenger's area HVAC unit (central unit) has a preset temperature of 68°F (20°) and is fully automatic. It turns on at starting of the engine. No inputs are required from the driver to control the passenger's HVAC unit.

NOTE

It is recommended to run engine at fast idle to operate the air conditioning system when the vehicle is stationary.

This will improve A/C compressor performance and provide adequate electrical power to the multiple A/C system fans.

When the system is running, keep roof ventilation hatch and door closed to prevent cooling loss.

To prevent battery run-down, the central HVAC unit will not operate if the charging system is not working properly.

When the HVAC system is in operation, park at least 4 feet from other vehicles or buildings to allow sufficient air flow through the condenser core.

The driver's HVAC unit may be turned ON by pressing the ON/OFF button.

Also, the driver's HVAC unit turns on automatically at starting of the engine and uses the settings kept in memory before turning off of the system.

The HVAC control unit performs a self-test every time it is turned on. Codes are shown on displays or flashed on control buttons. Refer to the Maintenance Manual for more information on the diagnostic codes.

4-14 CONTROLS AND INSTRUMENTS

In cold weather, the A/C compressor starts automatically when the two following conditions are satisfied:

1. The outside temperature is above 32°F.
2. The increasing passenger's area temperature has reached 7°F under the set point. At this moment, enough heat is available from the engine to warm up the area while the air conditioning will remove moisture in air and prevent fogging up of the windows.

NOTE

Upon starting if the outside temperature is above 32°F (0°C) and then drops below 32°F (0°C), the compressor will keep running up to a temperature of 15°F (-9°C) to prevent fogging up of the windows.

Heating Mode Indicator



22131

This red LED illuminates when the system is heating.

Cooling Mode Indicator



22134

This green LED illuminates when the system is cooling (when the compressor clutch is engaged).

Fan Speed



22135

The driver's fan has six speeds. Increase speed by pressing on the upper portion of the button, decrease by pressing on the lower portion.

Recirculate



22138

Closes or opens the driver's and passenger's unit fresh air damper.

A red LED in the top right corner of the button illuminates when air is recirculated.

This feature is automatically canceled when defogging is activated.

Driver's area temperature setting



22303

The temperature displayed on the driver's HVAC control unit is the temperature set point.

To increase the temperature set point, press on the "+" sign, to decrease the temperature set point, press on the "-" sign. Temperature range is between 60°F and 82°F (16°C to 28°C). Setting for a temperature set point above 82°F (28°C) will keep the coolant valve open and "FULL" will be displayed.



22132


In case of interior temperature sender unit failure, the coolant valve will remain open and three lines "---" will be displayed.



WARNING

Warm temperatures may cause drowsiness and affect alertness while driving. Keep the temperature comfortable but not too high.

Passenger section temperature setting



22304

The temperature displayed on the passenger's side HVAC control unit is the actual temperature in the passenger's area.

To increase or decrease the temperature set point in the passenger's area, press on the "+" or the "-" sign. Pressing these buttons will flash the displayed set point and the word "SET" will highlight. Temperature range is between 60°F and 82°F (16°C to 28°C).



22132

In case of interior temperature sender unit failure, the coolant valve will remain open and two dashes "--" will be displayed. The driver can nevertheless control the temperature by adjusting the temperature set point above 72°F (22°C) to heat and below 72°F (22°C) to cool.

Windshield Defogger

Upon pressing this button, the dashboard damper sends air only to the lower windshield. The fan is turned on to maximum speed, the fresh air damper opens completely (REC off) and the driver set point is increased to 4°F (2°C) over the passenger's section set point.



22305



22139

The dashboard damper sends air only to the lower windshield when activated. The footwell damper is also closed but the fan speed can be reduced or increased.

NOTE

Upon starting of the vehicle, when the ambient temperature is very cold in and out of the vehicle, the HVAC control unit will permit a temperature overshoot up to 3° over the passenger's area set point to help warming up of the area because some parts of the vehicle like the seats and the overhead compartments accumulate cold.


Panel and Footwell



22137

The dashboard damper sends air to the panel vents and footwell.

Panel



22136

Air is sent to panel registers. The footwell damper is closed.

Temperature Degree Selector



22133

Toggles temperature units between Fahrenheit and Celsius. The HVAC control unit must be on. Also toggles the outside temperature units displayed on the telltale panel.

AIR VENTS



Three adjustable driver air vents in the dashboard and one near the door feed air to the driver's compartment. Use the HVAC control panel to set air temperature and fan speed.

ELECTRONIC DESTINATION SIGN

The electronic Destination Sign System (DSS) is automatically activated when the ignition switch is turned to the ON position.

The controller provides a single control interface to multiple systems on the vehicle. System information such as message listings for destination signs, updated route or public service information for the INFOtransit system can be downloaded via USB, Wireless or other on board systems.




Destination Sign Controller

Refer to [Technical Publications web site](#) and [Supplier Publications section](#) for reference guide how to set the controller.

Distress Signal (Emergency Mode)

The electronic destination sign is equipped with a distress signal function activated using a foot switch located on the floor, just in front of the driver seat.

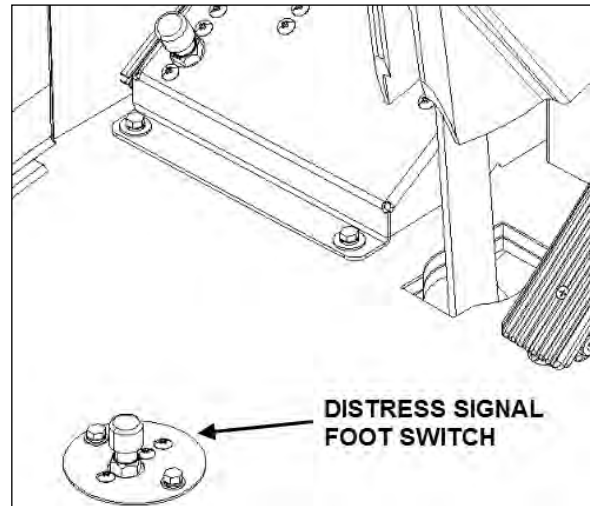

Distress Signal Foot Switch


When activated, a warning message will be displayed on all exterior destination signs to prompt a passer-by to call for help on behalf of the operator and allow emergency services to easily identify the vehicle needing assistance.

To deactivate the message, press the foot switch a second time and if necessary enter a code from the main default screen.

NOTE

Several other functions are available through the touch-screen menu. Refer to Destination Sign User manuals included with the vehicle documentation for additional information about programming, downloading, troubleshooting and other menu options.

INSTRUMENT CLUSTER

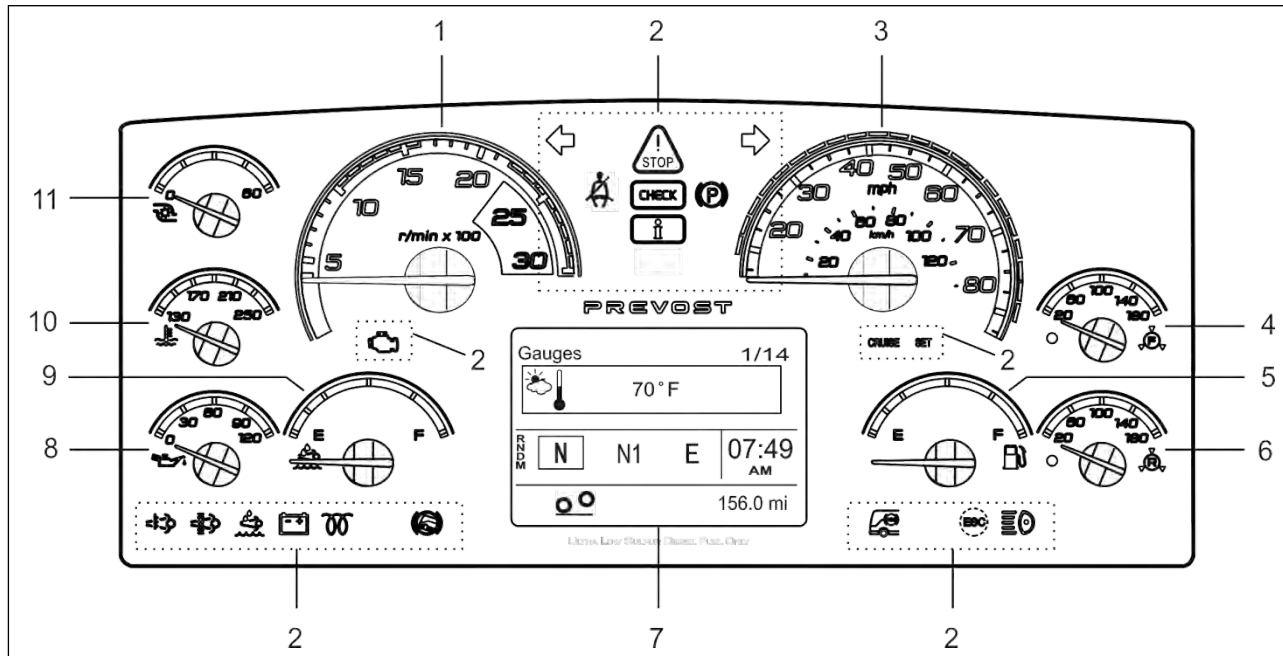

06727_e

- | | |
|---|---|
| <ol style="list-style-type: none"> 1. Tachometer 2. Telltale lights 3. Speedometer 4. Front brake air pressure (secondary) 5. Fuel level 6. Rear brake air pressure (primary) | <ol style="list-style-type: none"> 7. Driver Information Display (DID) 8. Oil pressure indicator 9. DEF level (Diesel Exhaust Fluid) indicator 10. Engine coolant temperature 11. Turbo boost pressure |
|---|---|

The instrument cluster includes the analog instruments. It also presents two devices to communicate information to the driver, the telltale lights and the Driver Information Display (DID).

Indications and warnings are presented according to three levels of attention required:

1. The Telltale Lights

The highest level of attention. The telltale lights are temporary and exceptional; they present information critical to safety or vehicle integrity.

2. The Pop-Up Messages


The second level of attention. The pop-up messages appear in the Driver Information Display DID without the driver's intervention and

acknowledgement. Pop-up messages present supplemental information to the driver.

3. The Status Line

The lowest level of attention. The status line monitors certain systems and gives feedback to the driver concerning current actions and functions.

ANALOG INDICATORS

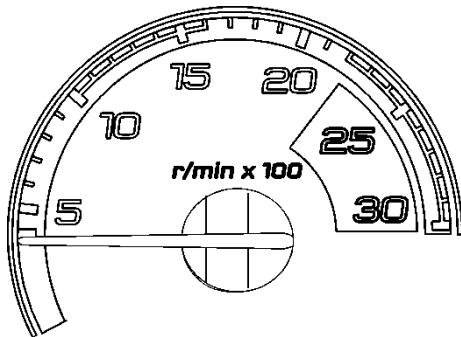

Tachometer (rpm x 100)


Indicates the operating speed of the engine in hundreds of revolutions per minute. The tachometer serves as a guide for gear shifting and helps to prevent engine over-speeding when driving downhill with the engine brake operating. Use the green range for normal driving (1000 to 1600 rpm).

06728




CAUTION

Never allow the engine to go into the red range. This could lead to severe engine damage.

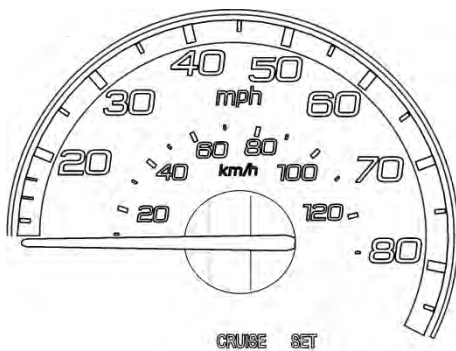

Speedometer (mph, km/h)


06729_1

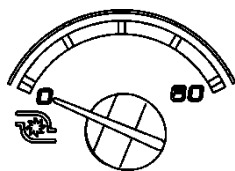

06730

Turbo boost pressure (psi)

Indicates the turbo boost pressure in psi. This pressure should be the same at a given engine temperature, speed, and load. An unusual reading could indicate an engine failure.

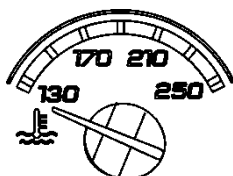

06731

Engine coolant temperature (°F)


Indicates the operating temperature of the engine coolant in °f. The normal reading should be between 170°f and 222°f (80°c to 106°c).

The temperature limit is dependent on the electronic program for the engine model. When coolant temperature is excessive, the stop telltale light turns on, an audible alarm sounds and a pop-up message appears on the DID. The engine protection system will automatically derate and stop the engine in 30 seconds. Stop at the first safe place where the problem can be checked.

If the temperature remains below or exceeds the normal temperature range, the cooling system should be checked for problems.



Stop telltale light

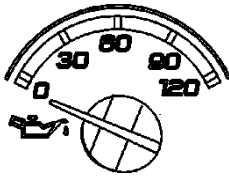

06732

Engine Oil Pressure (Psi)

Indicates the engine oil pressure in psi. When the oil pressure is too low, the stop telltale light turns on, an audible alarm sounds and a message appears on the DID. The engine protection system will automatically derate and stop the engine in 30 seconds. Bring the vehicle to a safe stop where the problem can be checked.




STOP telltale light



OIL PRESSURE pictogram

| |
|---|
| <b style="font-size: 1.2em; margin-left: 10px;">WARNING |
| <p>Failure to take necessary action when the stop telltale light is on can ultimately result in automatic engine derate and shutdown.</p> |

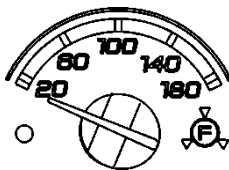

06737

Front Brake Air Pressure Gage (Secondary System)

Indicates the front brake air system pressure in psi. The normal operating pressure is from 122 to 140 psi.

The **low air pressure** indicator LED on the gage and the **STOP** telltale light illuminate when the front brake air system (secondary) pressure drops below 85 psi. An audible alarm will sound.




STOP telltale light

| |
|---|
| <b style="font-size: 1.2em; margin-left: 10px;">WARNING |
| <p>The driver is responsible for monitoring the pressure as part of a regular sweep of the instruments.</p> <p>If the pressure drops in the secondary system but remains normal in the primary system, the front axle service brakes will not function but the drive and tag axle service brakes will operate normally, although if there is a leak in any pneumatic system (Sec/Pri/Park/Acc), the primary system might eventually lose its air pressure as well, depending on the nature and size of the leak. In the event of any air pressure</p> |

loss in any system, the driver should pull to the side of the road as soon as can be safely done and investigate the situation.

Do not drive the coach when the brake air pressure is low.

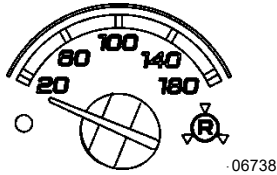

Rear Brake Air Pressure Gage (Primary System)

Indicates the rear brake air system pressure in psi. The normal operating pressure is from 122 to 140 psi.

The **low air pressure** indicator LED on the gage and the **STOP** telltale light illuminate when the rear brake air system pressure drops below 85 psi. An audible alarm will sound.



STOP telltale light



WARNING


The driver is responsible for monitoring the pressure as part of a regular sweep of the instruments.

In the event of a pressure loss in the primary brake system, the drive and tag axle service brakes will not function normally. It is critical to bring the coach to a safe stop as quickly as possible.

If there is sufficient pressure in the secondary brake system, modulated spring brake pressure (using the park brake chambers) will be used to apply the drive axle brakes, proportional to the braking pressure on the front axle. It must be noted this is an emergency situation and a significant amount of secondary air pressure is lost with each apply/release cycle. The spring brake modulation will only function two or three times, depending on the amount of secondary air pressure that was on hand when the primary brake pressure was lost.

Once the secondary air pressure drops below 60 psig, the park spring brakes are fully applied and cannot be released until pressure is restored.

Do not drive the coach when the brake air pressure is low.

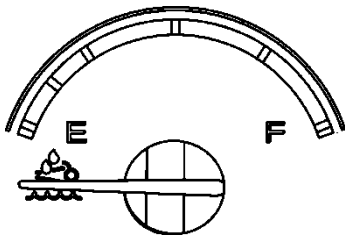

06735

DEF level

Indicates the amount of DEF (diesel exhaust fluid) remaining in the DEF tank. The DEF tank is considered as being full when it contains 16 gallons (60 liters) of DEF. DEF consumption will be approximately 2% of the diesel fuel consumed.




CAUTION

DEF will begin to crystallize and freeze at 12°F (-11°C). DEF expands by approximately 7% when frozen. In order to permit DEF expansion without causing damages to the DEF tank, do not fill the DEF tank with more than ¾ capacity.

Fuel Level

Indicates the amount of fuel remaining in the fuel tank. At the beginning of the red area, there is approximately 48 gallons (182 liters) left in the tank.

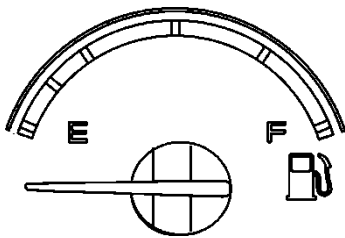

06736








NOTE









A pop-up message will appear in the DID informing that there is only 24 gallons (92 liters) left in the fuel tank.

TELLTALE LIGHTS

The telltale lights illuminate for 5 seconds at the start of every ignition cycle as a light bulb check.

| | |
|--|---|
| | <p>Stop</p> <p>Indicates that a serious problem has been detected. Immediately park the vehicle in a safe place and stop the engine. This telltale light may be accompanied with a message in the DID and a diagnostic troubleshooting code will be stored to ease identification of the problem. WARNING: Failure to take necessary action when the STOP telltale light is on can ultimately result in automatic engine derate and shutdown.</p> |
| | <p>Check</p> <p>Indicates that a problem has been detected and must be checked at the next stop. This telltale light may be accompanied with a message in the DID and a diagnostic troubleshooting code will be stored to ease identification of the problem.</p> |
| | <p>Information</p> <p>This information telltale is not activated in this vehicle but will be visible during a few seconds when the vehicle ignition key is turned ON.</p> |

| | |
|---|--|
|  | <p>Turn Signal Indicators</p> <p>Flashes when the right or left turn signals are activated. Signal right and left turns by operating the foot control switches. See “Foot Operated Controls” in this section.</p> <p>NOTE</p> <p><i>The turn signals are automatically activated when the vehicle is backing up or when the wheelchair lift is in function.</i></p> |
|  | <p>Driver seat belt reminder light and warning buzzer</p> <p>When equipped with a seat belt buckle switch, warns the driver to fasten his/her seat belt.</p> |
|  | <p>Parking Brake Or Emergency Brake Applied</p> <p>Illuminates when the emergency/parking brake is applied. The control valve is located on the L.H. control panel.</p> <p>This telltale also will flash and an audible alert will be heard if ignition is set to off and the parking brake is not engaged or if no brakes (service or parking) are applied while the vehicle is in neutral below 3 mph (5 km/h).</p> |
|  | <p>Aftertreatment System Malfunction (Malfunction Indicator Lamp)</p> <p>Indicates a failure of an emission control device. May illuminate at the same time as the CHECK amber warning light. The lamp will go out after 3 completed <i>ignition on-ride-ignition off</i> cycles. Vehicle can be driven to end of shift. Call for service.</p> |
|  | <p>High Exhaust System Temperature (HEST)</p> <p>Illuminates to notify the driver that the DPF is in active regenerative mode and that exhaust gas temperature at the exhaust system diffuser are potentially hazardous.</p> <div style="border: 1px solid black; padding: 5px;"> <p> WARNING</p> <p>During regeneration, exhaust temperature may reach up to 1200°f (650°c) at the particulate filter. When parking the vehicle, if this telltale light is illuminating, make sure that the exhaust system diffuser is away from people or any flammable materials, vapors or structures.</p> </div> |
|  | <p>DPF Regeneration Request</p> <p>Illuminates to notify the driver that a manual stationary regeneration will be required soon. The flashing state indicates a more severe condition requiring regeneration. Refer to “Exhaust Aftertreatment System” paragraph in OTHER FEATURES section.</p> |

| | |
|---|--|
|  | <p>Low DEF Level</p> <p>Illuminates when there is between 1.6 and 0.8 gallons (6 and 3 liters) of DEF left in the tank.</p> <div style="border: 1px solid black; padding: 5px;"> <p> CAUTION</p> <p>This telltale light starts flashing when there is less than 0.8 gallons (3 liters) left in the tank. It may flash in conjunction with the check engine and / or stop engine lights.</p> <p>If the vehicle is kept in operation with an empty DEF tank, and engine derate will eventually occur, limiting the speed to 5 mph.</p> </div> |
|  | <p>Alternators</p> <p>This telltale indicates that neither alternator is charging.</p> <div style="border: 1px solid black; padding: 5px;"> <p>NOTE</p> <p><i>“Charging System Malfunction” message will also appear in the DID</i></p> </div> <p>This telltale also will flash and an audible signal will be heard if the battery charger is plugged to an outside source and the parking brake is removed.</p> |
|  | <p>Intake Air Preheater ON – Wait Before Starting</p> <p>Illuminates when the intake air preheater element is in function. Wait until this telltale light has turned off before starting the engine. For more information on this feature, refer to paragraph “Cold Weather Starting” in STARTING AND STOPPING PROCEDURES section.</p> |
|  | <p>Hill Start Assist</p> <p>This function is not activated in this vehicle.</p> |
|  | <p>Illuminates when the ABS is not available or when the ABS is malfunctioning. After startup, since the ABS system does not operate at less than 4 mph (7 km/h), the indicator will remain illuminated until the vehicle reaches that speed. Refer to OTHER FEATURES section.</p> |
|  | <p>Electronic Stability Control (ESC)</p> <p>Quickly flashes every time the electronic stability intervenes. Will also flash when Mud/Snow mode is turned on using the Mud/Snow switch.</p> |
|  | <p>High Beam</p> <p>Illuminates when the high beams are selected. High and low beams are selected with the foot-operated controls. Refer to “Foot Operated Controls” paragraph in this section.</p> |

STOP, CHECK AND INFORMATION TELLTALE LIGHTS

STOP and CHECK telltale lights illuminate automatically to draw the attention of the driver and their associated messages are displayed in the DID. More than one message (see “Acknowledging Messages” below) can be active at the same time. A displayed message can be replaced by a new message provided the new message has a higher priority. Only fault codes that have a direct impact on vehicle operation are displayed. All fault codes are stored in the appropriate ECU for access by service technicians.

STOP Telltale Light

In the event of a serious fault, the red STOP telltale light comes on and an audible alarm will sound if the engine is running. An illuminated stop message light indicates a serious problem has been detected, and the driver must respond immediately to the problem.



When illuminating, this telltale light means the vehicle must be safely pulled off the road and stopped. In some instances, the engine must be switched off immediately.

| | |
|--|----------------|
| | WARNING |
| Failure to stop and take necessary action when the stop telltale light is on can result in automatic engine derate and shutdown. | |

In some cases preventive action may be taken by the engine ECU to protect the engine. For further details, refer to “Engine Protection System” in STARTING AND STOPPING PROCEDURES section.

CHECK Telltale Light

This telltale light means that a fault or an abnormal operating condition has been detected. The vehicle must be checked at the next stop.




If the CHECK telltale light illuminates, an associated message is displayed in the DID. Always pay attention to the associated messages (see “Acknowledging Messages” below).

ACKNOWLEDGING MESSAGES

A fault message associated to a STOP or CHECK telltale light must be acknowledged by pressing the ESCAPE or ENTER button after which the display returns to the same status that existed before the fault occurred. All messages can be acknowledged. Acknowledged but inactive messages are displayed again when the ignition key is turned to the START position or they can be read in the DID menu. Refer to OTHER FEATURES for more information on the DID menus.



DRIVER INFORMATION DISPLAY

The DID (Driver Information Display) is located in the center of the instrument cluster. It displays digital gages, main menus and submenus that provide necessary and important information to the driver. The information available to the driver depends on vehicle configuration, and whether the vehicle is in operation or parked. For the list of the available menus and submenus, refer to “Driver Information Display Menu” in OTHER FEATURES section.

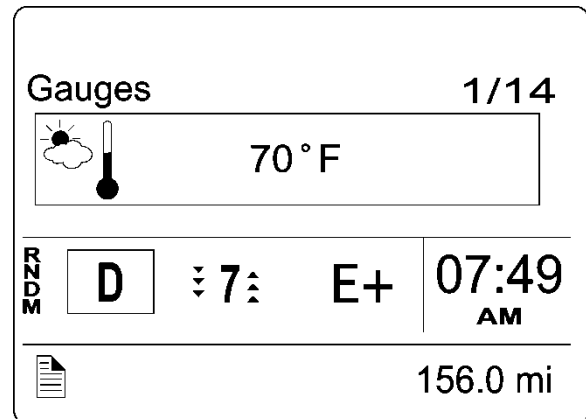

06746


The outside air temperature, fuel flow and the odometer (Allison transmission) are part of the default display. You can replace the default display by your selection of favorite gages using the Driver Information Display submenu Favorite Display Setting. Refer to *Other Features* section for more information.

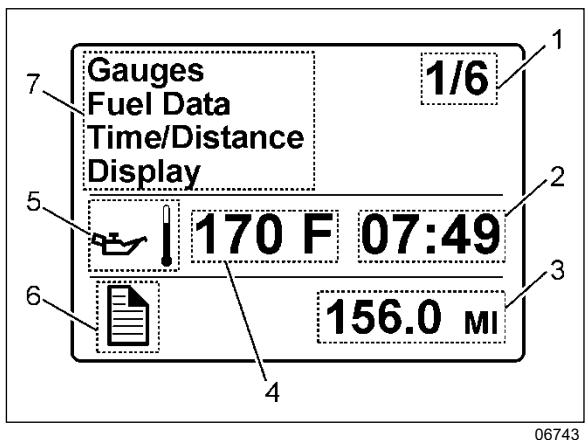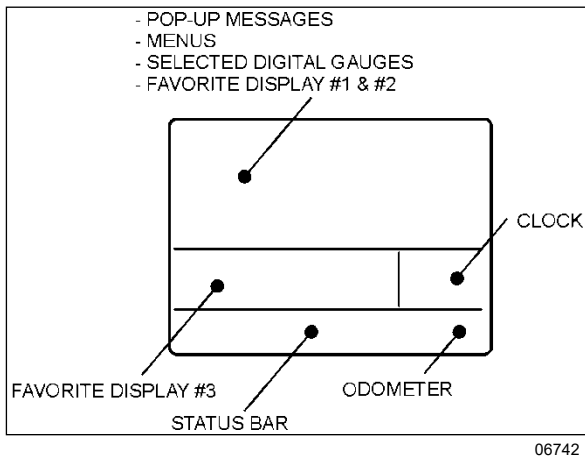

1. Indicates first of six available menus (varies by menu)
2. Clock
3. Odometer
4. Value or data (in this example, the engine oil temperature)
5. Pictogram relevant to the displayed value or data
6. Status bar active pictogram
7. Messages or available menus

Selecting a menu

Menus are placed in a cascade arrangement. Use the Driver Information Display (DID) keyboard to scroll through them.

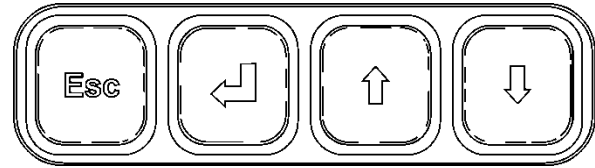


To select a menu:

1. Press the or **ESC** button to display the list of available menus.
2. Use the / button to scroll up or down through the menus.
3. Use the button to open a menu.
4. Use the **ESC** button to return to the previous menu or display or to cancel a setting or operation.

To change settings

To change a setting, like the clock, for example:



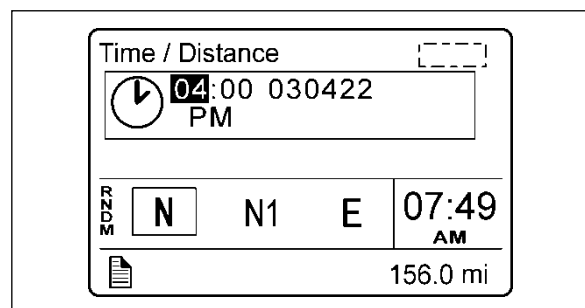






5. Use the / button to increase or decrease the numerical value of the selected field.
6. Use the button to confirm your choice and to move to the next field.
7. Press the **ESC** button to return to the previous field or to cancel a setting or operation.





















PICTOGRAMS AVAILABLE ON THE DRIVER INFORMATION DISPLAY (DID)




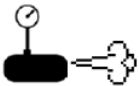
NOTE
In certain situations, the pictogram displayed represents a system or a function of the vehicle. A particular pictogram may be displayed with different messages. In that situation, it is very important to pay attention to the message displayed with the pictogram.








Warning pictograms, pop-up message pictograms, verifications and information pictograms

| DRIVER INFORMATION DISPLAY GAGE MENU PICTOGRAMS | |
|---|---|
| Pictogram | Description |
|  | Date and time |
|  | Outside air temperature |
|  | Icing condition If the exterior temperature is between 32 and 35°f, the outside air temperature pictogram described above is replaced by this popup |
|  | Engine temperature |
|  | Transmission oil temperature |
|  | Accessories air pressure Normal pressure should be between 122 and 140 psi. |
|  | A/C compressor pressure This pictogram is displayed with a/c compressor suction pressure value (low side) and discharge pressure value (high side). |
|  | Battery voltage This pictogram is displayed with both the 12-volt and 24-volt electrical system current voltage value. When the engine is running, the 24-volt electrical system voltage value should be between 26,5 and 28,0 volts. |
|  | Battery state of charge |

| POP-UP MESSAGES | |
|---|---|
| Pictogram | Description |
|  | High coolant temperature |
|  | High engine oil temperature |
| CHECK ENGINE COOLANT LEVEL AT NEXT STOP | Low engine coolant level Warns the driver that the engine coolant level has reached the recovery tank low level switch. Add coolant whenever possible. |
| ENGINE COOLANT LEVEL CRITICALLY LOW | Critically low coolant level Warns the driver that the engine coolant level has reached the surge tank low level switch. Stop and add coolant. |
|  | Low Engine oil pressure |
|  | Low accessories air pressure Low air in interlock brake system. Normal pressure should be between 122 and 144 psi. |
|  | A/C Fail |
|  | Wait to start This pictogram illuminates at any instance of starter lockout. |
|  | Low brake or ABS air pressure This pictogram indicates that the air pressure value measured by the gages of the front and/or rear brakes is low. |
|  | Engine door ajar This pictogram indicates that the engine compartment door is ajar. |
|  | Upper WCL door open This pictogram indicates that the upper wheelchair lift is open or unlocked. |
|  | Lower or small WCL door open This pictogram indicates that the lower or small wheelchair lift is open or unlocked. |


| | |
|--|--|
|  | <p>Wheelchair lift</p> <p>This pictogram indicates that the wheelchair lift system is enabled and the wheelchair access door or the lift compartment door is open. It is necessary to stow the wheelchair lift, close the doors and set the wheelchair lift system enable switch to the off position to permit release of the parking brake or kneel the vehicle.</p> |
|  | <p>Parking brake applied</p> |
|  | <p>Remove parking brake</p> <p>These two pictograms are displayed if the driver tries to move or accelerate the vehicle with the parking brake applied.</p> |
|  | <p>Tag axle lifted with vehicle speed > 12 mph</p> <p>This pictogram appears if the vehicle speed exceeds 12 mph (20 km/h) while the tag axle is raised.</p> |
|  | <p>Suspension Level Low With Vehicle Speed > 12 mph</p> <p>This pictogram and message appear if the vehicle speed exceeds 12 mph (20 km/h) while the front suspension of the vehicle (kneeling) is lowered.</p> |
|  | <p>Cooling fans low voltage</p> <p>This pictogram indicates that battery voltage is too low for a proper fan operation.</p> |
|  | <p>TCS Status Icon</p> <p>This pictogram indicates that the traction control system is active. It is displayed in conjunction with the ESC telltale.</p> |
|  | <p>Soot level critically high</p> <p>This pictogram indicates that the soot level in the diesel particulate filter is critically high or unidentifiable.</p> |
| <p>ENGINE COOLANT LEVEL CRITICALLY LOW</p> | <p>Critically low coolant level</p> |
| <p>DOOR POWER FAILURE</p> | <p>Door power failure</p> <p>This popup indicates that there is no power at the door control module or at one of the door solenoids</p> |
| <p>CHARGING SYSTEM MALFUNCTION</p> | <p>Charging system</p> <p>This popup appears in conjunction with the battery telltale if neither alternator is charging</p> |
| <p>REDUCE SPEED TO OPEN DOOR</p> | <p>Speed Switch</p> <p>This message will appear if the driver pushes door open button and vehicle speed is greater than 2 mph. It is a message to the driver to slow down in order to open the door.</p> |
| <p>DOOR INTERLOCK FAILED TO DISABLE THE ACCELERATOR PEDAL (THROTTLE)</p> | <p>Throttle malfunction</p> <p>This popup indicates that the door interlock failed to disable the accelerator pedal</p> |

| | |
|---|--|
|  | <p>Fire in engine compartment</p> <p>This pictogram appears if a fire is detected in the engine compartment while the vehicle is on the road. A distinctive alarm informs the driver when a fire is detected. In case of fire detection when parked (parking brake applied, engine running or not), the electric horn is activated to alert the driver. Refer to <i>Safety Features And Equipment</i> section.</p> <div style="border: 1px solid black; background-color: #cccccc; padding: 5px; margin: 10px 0;">  <p>WARNING</p> </div> <p>In case of a fire, stop the vehicle immediately, stop the engine and evacuate the vehicle.</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>NOTE</p> <p><i>It is possible to cancel an alarm while on the road. To do so, stop the vehicle. Cycle the ignition between the ON and OFF position and then start the vehicle normally. This can be done on a temporary basis when a false alarm is activated by a defective fire detector. The driver can go on without being annoyed by the alarm.</i></p> </div> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>NOTE</p> <p><i>To stop the electric horn alarm when parked, cycle the ignition between the ON and OFF position twice within 3 seconds.</i></p> </div> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>NOTE</p> <p><i>For extinguisher's location, refer to SAFETY FEATURES AND EQUIPMENT section.</i></p> </div> |
|  | <p>Compressor/air dryer fault</p> <p>This pictogram indicates that a risk of water in the pneumatic system has been detected due to a compressor or air dryer related problem. Possible causes are:</p> <ul style="list-style-type: none"> • Compressor is used at an unusual (high) rate. <p>A fault with the air system has been detected.</p> |
|  | <p>Air leakage</p> <p>This pictogram indicates that an air leak has been detected in the pneumatic system.</p> |

| Status Line Pictograms | |
|---|---|
| Pictogram | Description |
|  | Raised tag axle |
|  | DPF Regeneration inhibited Confirms that IVN regeneration inhibit function is active because the vehicle is inside of a geofence. When flashing, this pictogram indicates an IVN issue inhibiting regeneration as well. |
| TEST | Test mode Indicate that the vehicle test mode has been initiated manually. |
|  | Entrance door interlock Confirms that the entrance door interlock is enabled. |
|  | Entrance door interlock disabled Indicates that the entrance door interlock is disabled through the use of the entrance door interlock cancel switch or the master interlock switch. |
|  | Kneeling/front suspension active Indicates that the front suspension is lowered (kneeling). |
|  | Allison transmission retarder Confirms that the Allison transmission retarder is OFF. |
|  | Allison transmission retarder – braking level 0, 1, 2, 3, 4, 5, 6 Indicate the retarder level. Refer to “Transmission Retarder” heading in this section. |

HORN

The electric horn is operated from the steering wheel center pad or from the foot-operated switch.

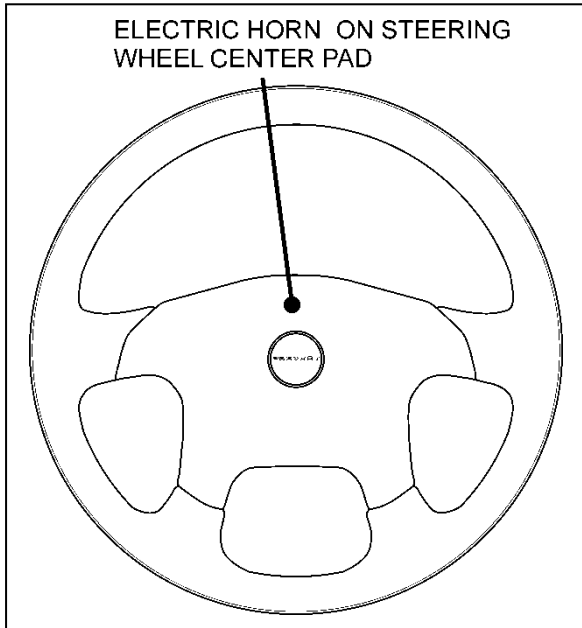

STEERING WHEEL

NOTE

When the vehicle is stationary, the electric horn will sound to inform the driver that a fire is detected in the engine compartment.

LEFT TURN SIGNAL SWITCH

Press the foot-operated switch to signal a left turn. Pressing and quickly releasing the button will cause the turn signal to cycle ten times by itself.

RIGHT TURN SIGNAL SWITCH

Press the foot-operated switch to signal a right turn. Pressing and quickly releasing the button will cause the turn signal to cycle ten times by itself.

NOTE

A quick single push and release on the turn signal switches makes the signal to flash and stop automatically after 10 seconds.

ELECTRIC HORN


Press the foot-operated switch to activate the electric horn (city horn).

BRAKE PEDAL

The vehicle is equipped with a dual braking system. The front brakes operate from a different air pressure source from the drive and tag axle brakes.

Service brakes are applied by depressing the brake pedal. Braking increases with the amount of pressure applied to the foot pedal.

FOOT-OPERATED CONTROLS

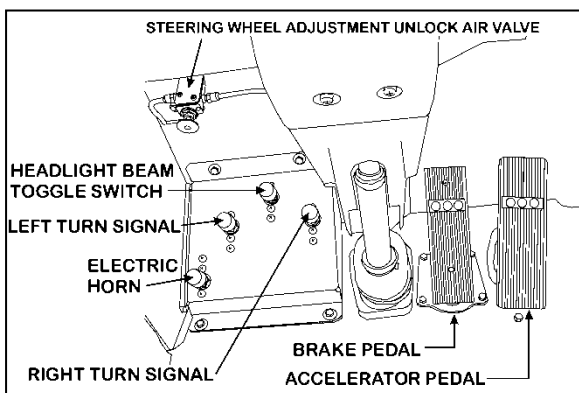

FOOT-OPERATED CONTROLS

00023A

HEADLIGHT BEAM TOGGLE SWITCH

Toggle between high and low beams by pressing the foot-operated switch.


A warning LED and an audible alert will sound when the air pressure in either the primary or secondary circuit drops. If this occurs, stop the vehicle; determine the cause of the pressure loss before proceeding.

The brake pedal can be used in conjunction with the transmission retarder.

DANGER

Immediately report any brake system problem to your company or directly to the nearest Prevost or Prevost-approved service center.

Do not "fan" or "pump" the brake pedal. This practice does not increase brake system effectiveness but rather reduces system air pressure thereby causing reduced braking effectiveness.

 **CAUTION**

"Riding" the brake by resting one's foot on the brake pedal when not braking can cause abnormally high brake temperature, can damage and cause premature wear of brake components and reduce brake effectiveness.

ACCELERATOR PEDAL

Controls engine RPM as needed.

NOTE

The accelerator pedal will not operate when the entrance door is open.

ALLISON AUTOMATIC TRANSMISSION

The transmission is fully automatic: Proper ranges should be automatically selected according to driving speeds to improve vehicle performance and control. The speed ratio of the power converter changes automatically as vehicle speed increases and direct-drive goes in and out as necessary. The speed ratio is modulated by vehicle speed and accelerator pedal position. You will find the complete transmission operation instructions and driving tips in the **Allison 5th Generation Bus Series Operator's Manual** included in your vehicle's publication box.


OPERATION

When a button is depressed on the transmission control pad, the corresponding letter or number is displayed indicating the transmission is ready to operate in the selected range. If the transmission control module (TCM) detects a serious problem in the transmission, the CHECK telltale lights on the dashboard.





PUSHBUTTON SHIFT SELECTOR

The pushbutton shift selector has the following elements:

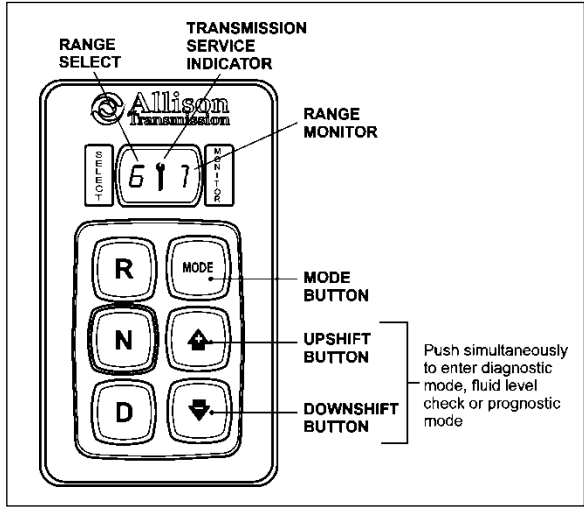- R:** Press to select Reverse gear.
- N:** Press to select Neutral.
- D:** Press to select Drive. The highest forward range available will appear in the digital display window under SELECT. The transmission will start out in the lowest available forward range, displayed under MONITOR, and advance automatically to the highest range.



ALLISON PUSHBUTTON SHIFT SELECTOR 07142

  : Press respectively the  (Upshift) or  (Downshift) arrow button when in DRIVE to request the next higher or lower range. One press changes gears by one range. If the button is held down, the selection will scroll up or down until the button is released or until the highest or lowest possible range is selected. Protection mechanisms inhibit selecting ranges that are not appropriate for the current speed or which may damage driveline components.

MODE: Pressing the MODE button allows the driver to select the secondary shift mode that has been programed into the TCM unit.

NOTE

*When the diagnostic display mode has been entered, the MODE button is used to view and toggle through diagnostic code information. Refer to appendix B for more details about **diagnostic code display procedure** and **fluid level check** using the push button shift selector.*

PRIMARY AND SECONDARY SHIFT MODES

In the **primary shift mode** which is the default mode at starting of the engine, the transmission controller automatically selects between ECONOMY and SUPER ECONOMY shift schedules, based on the vehicle's actual payload and the grade on which it is operating. This is called Load Based Shift Scheduling (LBSS).

In the **secondary shift mode**, only the SUPER ECONOMY shift schedule (SESS) is available.

4-32 CONTROLS AND INSTRUMENTS

No switching is done between shift schedules. The secondary shift mode is available only if selected by the driver, using the MODE button. When the secondary mode is activated, "MODE" illuminates on the display.

DESCRIPTION OF AVAILABLE RANGES

R (Reverse)

Press the «R» button to select reverse. Completely stop the vehicle and let the engine return to idle before shifting from forward range «D» to reverse «R» or from reverse to forward range. The reverse warning signal will be activated when this range is selected.

N (Neutral)

Use this position to start the engine. Select «N» (Neutral) when checking vehicle accessories and for extended periods of engine idle operation; parking brake must then be applied. *The push button shift selector automatically selects «N» (Neutral) when the ignition switch is turned ON.*

NOTE

The automatic transmission does not have a park «P» position. Select «N» (Neutral) and apply parking brake when the vehicle is left unattended. An audible alert will sound if the engine is stopped and the parking brake is not applied.



WARNING

Before leaving the driver seat, always put the transmission in NEUTRAL and apply parking brake.



WARNING

The vehicle service brake or park brake must be applied whenever NEUTRAL is selected to prevent unexpected vehicle movement.



CAUTION

Diesel engines should not be idled for extended periods at "slow" idle. For extended idling, engine should run to "fast" idle.



CAUTION

Do not allow your vehicle to "coast" in neutral «N». This practice can result in transmission damage. Also, no engine braking is available in neutral.

D (Drive)

Use this position for all normal driving conditions. After touching this pad, the vehicle will start in first or second range and will automatically upshift to a higher range as output speed increases. As the vehicle slows down, output speed decreases, the transmission automatically downshifts to the correct range. If a locked brake or a slick surface condition should occur, the TCM (Transmission Control Module) will command converter operation (disconnect lockup) and inhibit downshifts for a period of time or until normal wheel speed has been restored.

IMPORTANT NOTE

Brake pedal must be applied when selecting «D» (Drive) otherwise the transmission will stay in «N» (Neutral).

NOTE

The transmission should normally be allowed to shift by itself, but manual shifting can be done as described below.

1 (First range)

Select this range when pulling through mud and snow, when speed control is needed for driving up or down steep grades or when maneuvering in tight spaces. This range also provides maximum driving torque and engine braking power or retarder braking effect. In the lower ranges (1, 2, 3 and 4), the transmission will not upshift above the highest gear selected unless engine overspeed is detected.

2 (Second range)

Select this range when operating in heavy and congested traffic. The transmission will start in first and automatically upshift to second. When slowing, the transmission will automatically downshift to first range. Low ranges provide progressively greater engine and retarder braking power (the lower the range, the greater the engine and retarder braking effect).

3, 4 (Third and fourth ranges)

Select these ranges when driving on moderate grades or when load and traffic conditions limit speed.

**WARNING**

Service brake should not be used to control the speed of vehicle on long, steep descents. Instead, lower transmission ranges should be used (in conjunction with output retarder. Refer to "Engine Brake" and "Transmission Retarder" headings in Section 5 *Other Features* for details regarding both systems. This procedure keeps service brake cool and ready for emergency stopping.

**CAUTION**

When descending in lower ranges, care must be taken that engine speed does not exceed 2,450 rpm.

SECTION 5 OTHER FEATURES

| | |
|--|-----------|
| EXHAUST AFTERTREATMENT SYSTEM | 3 |
| FILTRATION AND REGENERATION UNIT | 3 |
| <i>Passive regeneration</i> | 3 |
| <i>Stationary (parked) regeneration</i> | 3 |
| <i>Diesel particulate filter clogging sequence – Instrument cluster telltale light</i> | 4 |
| <i>Initiating a Stationary (Parked) Regeneration</i> | 5 |
| <i>Voluntary Interruption of a Stationary Regeneration</i> | 5 |
| SELECTIVE CATALYTIC REDUCTION UNIT..... | 5 |
| <i>Diesel exhaust fluid DEF</i> | 6 |
| <i>Diesel Exhaust Fluid (DEF) Consumption</i> | 6 |
| SELECTIVE CATALYTIC REDUCTION – DRIVER WARNINGS AND INDUCEMENTS | 6 |
| DRIVER INFORMATION DISPLAY (DID) MENUS | 9 |
| GAUGES..... | 10 |
| FUEL DATA | 11 |
| TIME/DISTANCE..... | 12 |
| VEHICLE MESSAGES | 13 |
| RESET TRIP DATA | 13 |
| DISPLAY SETTINGS | 13 |
| DIAGNOSTICS | 15 |
| PRE-TRIP ASSISTANT (OPTION)..... | 17 |
| DATA LOG..... | 18 |
| AFTERTREATMENT..... | 19 |
| PASSWORD | 20 |
| BRAKE LINING REMAINING | 20 |
| PREVOST LIAISON (OPTION)..... | 21 |
| REAR GAUGE - ENGINE COMPARTMENT..... | 22 |
| START-UP MODE | 22 |
| IGNITION MODE | 22 |
| SELF-DIAGNOSTIC MODE..... | 22 |
| MESSAGE CENTER DISPLAY | 22 |
| <i>Drive Mode Screen</i> | 22 |
| <i>Priority Messages</i> | 23 |
| <i>Settings and Diagnostic Screens</i> | 24 |
| INTELLIGENT SLEEP MODE (ISM) | 27 |
| TRANSMISSION OUTPUT RETARDER | 27 |
| ANTILOCK BRAKING SYSTEM (ABS)..... | 28 |
| KNEELING SYSTEM | 28 |
| UNLOADING TAG AXLE (OPTIONAL)..... | 29 |
| RETRACTABLE TAG AXLE..... | 29 |
| WHEELCHAIR LIFT SYSTEM..... | 30 |
| INTRODUCTION | 30 |
| OVERVIEW..... | 30 |
| <i>Major lift components</i> | 30 |

5-2 OTHER FEATURES

| | |
|--|-----------|
| GENERAL SAFETY PRECAUTIONS..... | 31 |
| OPERATING INSTRUCTIONS..... | 32 |
| <i>Safety Precaution</i> | 32 |
| <i>Hand-Held Control Pendant and Motion</i> | 33 |
| <i>Normal Lift Operation – To Enter Vehicle</i> | 34 |
| <i>Normal Lift Operation – To Exit Vehicle</i> | 35 |
| MANUAL LIFT OPERATION..... | 36 |
| <i>Preparation</i> | 36 |
| <i>Manual lift controls</i> | 36 |
| <i>To Manually Deploy the Platform</i> | 36 |
| <i>To Manually Raise the Platform</i> | 37 |
| <i>To Manually Lower the Platform</i> | 38 |
| <i>To manually stow the platform</i> | 39 |
| SEATS RECONFIGURATION | 41 |
| WHEELCHAIR RESTRAINT SYSTEMS..... | 41 |
| 4-POINT SECUREMENT WITH FLOOR ANCHORAGE | 41 |
| <i>Wheelchair Occupant Restraint</i> | 42 |
| 4-POINT SECUREMENT WITH ANCHORAGE TO PASSENGERS SEAT PEDESTALS..... | 42 |
| <i>Wheelchair Occupant Restraint</i> | 43 |
| WHEELCHAIR LIFT SYSTEM - THRESHOLD WARNING SYSTEM (TWS) ADJUSTMENT..... | 43 |
| ADJUST AIMING OF ACOUSTIC SENSOR BEAM | 43 |
| TEST AIM OF ACOUSTIC SENSOR BEAM | 44 |
| ADJUST ACOUSTIC SENSOR TIMING | 44 |
| WHEELCHAIR LIFT REMOVAL FOR STORING OR MAINTENANCE PURPOSES | 44 |
| WHEELCHAIR LIFT INSTALLATION | 45 |
| FRONT BUMPER BIKE RACK OPERATION (OPTIONNAL) | 45 |
| LOADING BIKES..... | 46 |
| UNLOADING BIKES..... | 46 |

EXHAUST AFTERTREATMENT SYSTEM

The exhaust aftertreatment system consists of two units, the filtration/regeneration unit and the selective catalytic reduction SCR unit.

FILTRATION AND REGENERATION UNIT

The aftertreatment system primary function is to capture and oxidize (regenerate) the particulate matter (soot) in the engine exhaust gases and to reduce NOx. To achieve this goal, the exhaust aftertreatment system is split into two main sections: the exhaust gases first enter the **Diesel Oxidation Catalyst (DOC)** and **Diesel Particulate Filter (DPF)** assembly to capture and regenerate the soot on a regular or passive basis, then the exhaust gases flow through the **catalytic converter** to reduce NOx to minimum level. Through constant monitoring of the exhaust gas temperature and the system back pressure, EMS is able to manage regeneration.

Passive regeneration

Passive regeneration is the process by which the particulate matter is oxidized due to the heat generated by the engine internal combustion process. During normal highway operation, exhaust temperatures alone are usually high

enough to oxidize accumulating soot. In low ambient temperatures, however, or in some stop-and-go applications, the system needs a little help to regenerate, or clean itself, a stationary regeneration is then required.








Stationary (parked) regeneration

In a small number of specific engine duty cycles, engine control module may not be capable of completing a passive regeneration. In these situations, the operator will be notified that a parked regeneration may be required. A DPF telltale light will illuminate indicating the need for user interaction. The lamp gives the operator a grace period to allow this process to take place at a time when most convenient for the operator. This process requires the vehicle to be parked while a driver or maintenance technician initiates the regeneration process using the DID menus. Once initiated, the stationary regeneration process will be complete in about 45 minutes.

The driver will be notified of the need for a stationary regeneration (parked) by illumination of the DPF REGENERATION telltale light.


5-4 OTHER FEATURES


Diesel particulate filter clogging sequence – Instrument cluster telltale light


| | | |
|-----------------------|--|---|
| <p>LEVEL 1</p> |  steady | <p>REGENERATION NEEDED</p> <p><i>Diesel particulate filter is becoming full</i></p> <p><i>The DPF REGENERATION telltale light illuminates to notify the driver that a stationary regeneration (parked) will be required soon. When this lamp is lit, initiate stationary regeneration process at an appropriate time of day. THERE IS NO URGENCY AT THIS LEVEL.</i></p> |
| <p>LEVEL 2</p> |  flashing | <p>REGENERATION REQUIRED</p> <p><i>Diesel particulate filter full</i></p> <p><i>If no DPF regeneration occurs after the initial DPF REGENERATION telltale light illumination, the lamp will begin blinking and a stationary regeneration should be initiated as soon as possible in order to prevent from entering into Level 3.</i></p> |
| <p>LEVEL 3</p> |  flashing +  | <p>ATD SERVICE REQUIRED</p> <p>ENGINE DERATE ACTIVE</p> <p><i>Diesel particulate filter overfull</i></p> <p><i>If the flashing DPF REGENERATION telltale light is still ignored, the CHECK telltale light will illuminate. In that situation, engine performance is limited. Perform a parked regeneration IMMEDIATELY to avoid further derate and prevent from entering into Level 4.</i></p> |
| <p>LEVEL 4</p> |  flashing +  +  | <p>ATD SERVICE REQUIRED</p> <p>ENGINE SHUTDOWN ACTIVE</p> <p><i>A serious engine problem has occurred. The DPF may be over its maximum capacity.</i></p> <p><i>If a stationary regeneration is still not initiated, a standard Engine Protection Shutdown sequence will occur. All of the following dashboard lamps will be present:</i></p> <p><i>Blinking DPF REGENERATION telltale light;</i> <i>Solid CHECK telltale light;</i> <i>Solid STOP telltale light.</i></p> <p><i>Once engine derate and/or shutdown sequence is completed, a stationary regeneration must occur to continue vehicle operation. If the driver continues to operate the vehicle without regeneration, additional measures will be taken to protect the engine and ATD from damage, up to and including engine shutdown. Parked regeneration might no longer be possible.</i></p> <p><i>If engine protection has been initiated and forces the engine to shut down, you CAN immediately restart the engine and perform the necessary steps in order to initiate a stationary regeneration.</i></p> |

Initiating a Stationary (Parked) Regeneration

NOTE
 At starting of the engine, if a stationary regeneration is required, the engine coolant temperature must reach 140°F (60°C) before any stationary regeneration may be initiated and completed. Permit the engine to idle for a short while or drive the vehicle until engine temperature increases sufficiently.

 **WARNING**
 Do not initiate a stationary regeneration in a closed area like a garage. Stationary regeneration must be undertaken outdoors only.

 **WARNING**
 During stationary regeneration, exhaust temperature may reach up to 842°F (450°C) at the particulate filter, it will go down to 788°F (420°C) after the catalytic converter and then will be further reduced to 554°F (290°C) at the diffuser outlet. Before initiating stationary regeneration, make sure that the exhaust outlet diffuser is clear of objects and that no one is working close to the exhaust outlet diffuser.

 **WARNING**
 Hot surfaces. Keep yourself clear of all hot Aftertreatment Device components, particularly during and after active or stationary regeneration. Hot surfaces can cause serious burns.

NOTE
STATIONARY REGENERATION
 This process requires the vehicle to be parked while the driver or a maintenance technician initiates the regeneration process.

The DPF REGENERATION telltale light illuminates to notify the driver of the need and urgency of a manual stationary regeneration.



DPF REGENERATION telltale light

If stationary regeneration is not performed, this telltale light will blink, indicating that a stationary

regeneration is required immediately. If stationary regeneration is still not performed, “engine power derate and shutdown” sequence may occur as per level 1 to level 4 sequence.


To initiate a stationary regeneration:

- Park the vehicle in a clear area, vehicle speed must be 0 mph (0 km/h);
- The engine must be on normal idle and fully warmed up (coolant temperature above 140°F/60°C);
- Apply parking brakes and set the transmission to neutral (N).
- Press the DID ENTER button and then get to the DID Aftertreatment menu. Select submenu Request Parked REGEN and press ENTER button to confirm and initiate regeneration.

The regeneration will begin. Turn off the air conditioning to reduce engine load. The engine idling speed will increase to 1200 rpm. Once the regeneration is completed, the engine speed will return to normal idle.

Voluntary Interruption of a Stationary Regeneration

It is possible to interrupt a stationary regeneration at all time. To do so, get to the DID’s Aftertreatment menu, select Cancel REGEN and press ENTER button to confirm. You can stop regeneration simply by releasing the parking brake. Use this procedure in order to move the vehicle in a safe area.

 **CAUTION**
 To avoid damages to the system components, do not set the ignition key to the OFF position to interrupt a stationary regeneration.

If regeneration is interrupted, it is very important to reinitiate the regeneration as soon as possible.

SELECTIVE CATALYTIC REDUCTION UNIT

Selective Catalytic Reduction (SCR) is a technology that uses Diesel Exhaust Fluid (DEF) and a catalytic converter to reduce nitrogen oxides (NOx) emissions.

SCR is an exhaust aftertreatment system that injects small amount of DEF into the exhaust gas between the DPF and the selective reduction catalytic converter. DEF turns to ammonia and carbon dioxide when heated. The

5-6 OTHER FEATURES

exhaust stream then passes over a catalyst, the ammonia reacts with the NO_x to form nitrogen and water vapor.

The basic elements of the SCR system consist of a 15.9 gallons (60 liters) DEF tank complete with pump, lines and heating system, a dosing injector, a catalytic converter and the control and monitoring system.

Diesel exhaust fluid DEF

When handling DEF solution, it is important that electrical connectors to be connected or well encapsulated, otherwise there is a risk that the DEF will cause oxidation that cannot be removed. Water or compressed air will not help, since DEF quickly oxidizes certain metals. If a disconnected connector comes into contact with the DEF solution, it must be replaced immediately to prevent the DEF solution from creeping further into the copper wiring, which takes place at a speed of about 2.4 in (60 mm) per hour.



CAUTION

Diesel Exhaust Fluid (DEF) is a nontoxic aqueous solution of urea (32.5%) and ultra-pure water (67.5%). Urea is a compound of nitrogen that turns to ammonia when heated. The fluid is non-flammable, and is not dangerous when handled as recommended. However, it is highly corrosive to certain metals, especially copper and brass.

When detaching hoses and components, do not spill DEF on disconnected or unsealed connectors. If DEF is spilled on a disconnected or unsealed connector, the connector must be removed immediately and replaced.

Things to know about spilt diesel exhaust fluid (DEF):

- If urea solution comes into contact with the skin, rinse with plenty of water and remove contaminated clothing.
- If urea solution comes into contact with the eyes rinse for several minutes and call for medical help if necessary.
- If inhaled breathe fresh air and call for medical help if necessary.
- Do not allow the DEF solution to come into contact with other chemicals.

- The DEF solution is not flammable. If the DEF solution is exposed to high temperatures, it breaks down into ammonia and carbon dioxide.
- The DEF solution is highly corrosive to certain metals, including copper and aluminum.
- If the DEF solution is spilled onto the vehicle, wipe off the excess and rinse with water. Spilled DEF solution can form concentrated white crystals on the vehicle. Rinse off these crystals with water.



WARNING

DEF spilt onto hot components will quickly vaporize. Turn your face away!



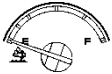


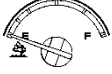


Diesel Exhaust Fluid (DEF) Consumption









DEF consumption is related to fuel consumption. In order to meet EPA requirements, DEF tanks are sized so one refill will be necessary every two refills of the fuel tank.

SELECTIVE CATALYTIC REDUCTION – DRIVER WARNINGS AND INDUCEMENTS



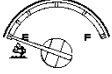





SCR system components must not be removed, altered or modified in any way. In order to protect the SCR system from tampering, inducement measures will occur if the following states are detected:

- Disconnection of DEF tank level sensor
- Blocked DEF line or dosing valve
- Disconnection of DEF dosing valve
- Disconnection of DEF pump
- Disconnection of SCR wiring harness
- Disconnection of NO_x sensor
- Disconnected exhaust temperature sensor
- Disconnected DEF temperature sensor
- Disconnected DEF quality sensor

| DEF TANK LEVEL DRIVER WARNINGS AND INDUCEMENTS | | | | |
|--|--|---|--|--|
| Conditions / Triggers | | DEF Tank LOW LEVEL Indicator, DID Message and audible warning | | Inducement |
| 1 | Normal DEF tank level sensor reads between 100% and 10% | None | | None |
| 3 | DEF tank near empty DEF tank level sensor reads less than 5%  |  blinking | None | Engine torque reduction of 25% |
| 4 | DEF tank empty and one (1) hour of operation in the engine derate mode  |  blinking | (3/4) DEF TANK EMPTY ENGINE IN DERATE 5 MPH LIMIT IF THE VEHICLE NOT MOVING FOR 20 MIN  3 cycles of 2 beeps | Engine torque reduction of 40% |
| 5 | DEF tank empty 1. Diesel fuel refueling done with a fuel level sensor reading increase of 15%, or more 2. Vehicle stationary (speed=0) for 20 minutes with the engine off or at idle  |  blinking | (4/4) REFILL DEF TANK VEHICLE SPEED LIMITED TO 5 MPH (8 KM/H)  continuous cycle of 2 beeps | Vehicle road speed limited (RSL) to 5 mph (8 km/h) |

| DEF QUALITY DRIVER WARNINGS AND INDUCEMENTS | | | | |
|---|---|--|---|--|
| Conditions / Triggers | | Amber Warning Light & Did Message And Audible Warning | | Inducement |
| 1 | Good DEF quality | None | | None |
| 2 | Poor DEF quality detected |  solid | (1/4) DEF QUALITY OK TO CONTINUE DRIVING  3 cycles of 2 beeps | Engine will derate 25% in < 60 min |
| 3 | Poor DEF quality detected and one (1) hour of operation with active diagnostic troubleshooting code |  solid | (2/4) DEF QUALITY OK TO CONTINUE DRIVING  3 cycles of 2 beeps | Poor def quality detected Engine derated 25% engine will derate 40% in <240 min |
| 4 | Poor DEF quality detected and four (4) hours of operation with active diagnostic troubleshooting code |  solid | (3/4) SERVICE DEF 5 MPH LIMIT IF VEHICLE NOT MOVING FOR 20 MIN  3 cycles of 2 beeps | Engine derated 40% 5 mph (8 km/h) limit after next 20 min vehicle stop |
| 5 | Poor DEF quality detected Diesel fuel refueling done with a fuel level sensor increase of 15% or more or Vehicle stationary (speed=0) for 20 minutes with the engine off or at idle or Key cycle trigger. |  solid | (4/4) POOR DEF QUALITY 5 MPH LIMIT SERVICE DEF SYSTEM  continuous cycle of 2 beeps | Service DEF 5 mph (8 km/h) limit |

5-8 OTHER FEATURES

| SCR SYSTEM TAMPERING DRIVER WARNINGS AND INDUCEMENTS | | | |
|--|--|--|---|
| Conditions / Triggers | Amber Warning Light, Did Message And Audible Warning | | Inducement |
| 1 Normal No diagnostic troubleshooting code active | None | | None |
| 3 An SCR fault has been detected Continue driving |  solid | (1/4) SRC SYSTEM OK TO CONTINUE DRIVING  3 cycles of 2 beeps | 25% Engine torque reduction in 60 minutes |
| 4 An SCR fault has been detected Continue driving |  solid | (2/4) SRC SYSTEM OK TO CONTINUE DRIVING  3 cycles of 2 beeps | Engine torque derated 25% 40% Engine torque reduction in 240 minutes |
| 5 An SCR fault has been detected |  solid | (3/4) SCR SYSTEM 5 MPH LIMIT IF THE VEHICLE NOT MOVING FOR 20 MIN  3 cycles of 2 beeps | Engine torque derated 40% Vehicle speed limited to 5 mph (8 km/h) if vehicle is immobilized for more than 20 min |
| 6 An SCR fault has been detected Diesel fuel refueling done with a fuel level sensor increase of 15% or more or Vehicle stationary (speed=0) for 20 minutes with the engine off or at idle or Key cycle trigger. |  solid | (4/4) SCR SYSTEM 5 MPH LIMIT SERVICE SYSTEM  continuous cycle of 2 beeps | Vehicle speed limited to 5 mph (8 km/h) |

DRIVER INFORMATION DISPLAY (DID) MENUS

There are Driving and Non-Driving menus. Several submenus are password-protected while the vehicle is parked. The Non-Driving menu is accessible only when the vehicle is parked.


Refer to “Driver Information Display” in CONTROLS AND INSTRUMENTS section for details on how to scroll through DID menus or select an item whose setting is to be changed.

| DRIVING MODE MENUS | NON-DRIVING/STATIONARY MODE MENUS |
|---|--|
| Gages <ol style="list-style-type: none"> 1. Current Gear Position (I-Shift only) 2. Outside Temperature 3. Engine Oil Temperature 4. Transmission Fluid Temperature 5. Prevost Liaison Compass 6. Accessories Air Pressure 7. A/C Compressor Pressure 8. Battery Voltage 9. Allison Transmission Oil Life 10. Battery State Of Charge 11. Electric Cooling Fan Status | Display Settings <ol style="list-style-type: none"> 1. Language 2. Units 3. Time/Date 4. Favorite Display Setting 5. Display Light 6. Change Password |
| Fuel Data <ol style="list-style-type: none"> 1. Fuel Flow 2. Fuel Flow / ECO % 3. Trip Fuel Used 4. Distance to Empty | Diagnostics <ol style="list-style-type: none"> 1. View Active Faults 2. View Inactive Faults 3. Cluster Selftest 4. Part Number 5. Reset Inactive Faults 6. Vehicle Tests |
| Time-Distance <ol style="list-style-type: none"> 1. Time and Date 2. Alarm Clock 3. Trip Odometer 1 and 2 4. Average Trip Speed 5. Estimated Time of Arrival (ETA) | Pre-Trip Assistance <ol style="list-style-type: none"> 1. Exterior Light Inspection 2. Air Leakage Monitor |
| Vehicle Messages | Datalog <ol style="list-style-type: none"> 1. Vehicle ID 2. Total Data 3. Trip Data 4. Reset Trip Data |
| Reset Trip Data | Aftertreatment <ol style="list-style-type: none"> 1. Request Parked REGEN 2. ATS Status 3. Cancel REGEN |
| | Password <ol style="list-style-type: none"> 1. Enter Password |
| | Brake Lining Remaining |
| | Prevost Liaison <ol style="list-style-type: none"> 1. Read Message 2. Send Message 3. Other Info |

5-10 OTHER FEATURES

GAGES

There are several gages in this menu. The gages are used to view current status of important functions in the vehicle.

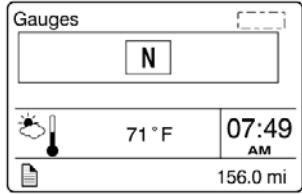

Current Gear Position (I-Shift transmission only)


Indicates the current gear position selected on the I-Shift transmission.

D= drive


N= neutral

R= reverse

M= manual

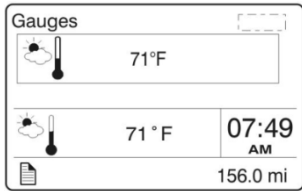


1. Outside Temperature

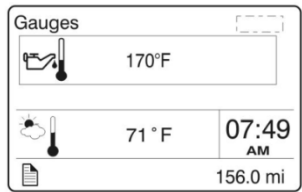


2. Engine Oil Temperature


Selecting this gage will display the engine oil temperature.

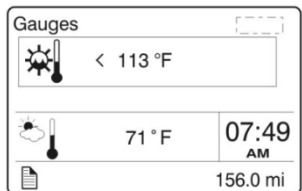


3. Transmission Fluid Temperature

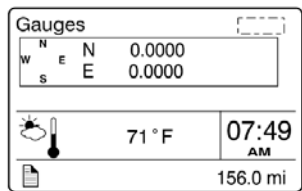

4. Prevost Liaison Compass

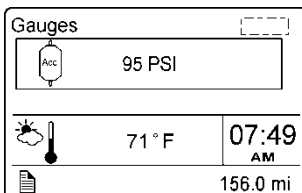


5. Accessories Air Pressure

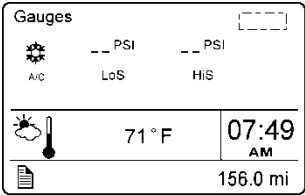


6. A/C Compressor Pressure

Displays the A/C compressor suction pressure value (LoS=low side) and discharge pressure value (HiS=high side).

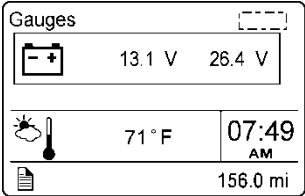


7. Battery Voltage

Displays current 12 volts and 24-volt system voltage.

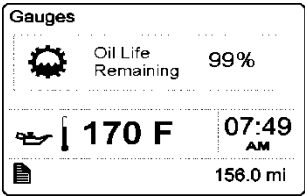


8. Allison Transmission Oil Life

Displays the percentage of the calculated remaining life of the transmission oil. New oil is displayed as 99%. Refer to Appendix C for more details.

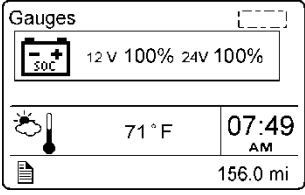

9. Battery State Of Charge

Displays the state of charge of the 12-volt and 24-volt systems, expressed in percentage.

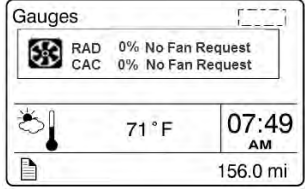


10. Electric Cooling Fan Status

Displays the speed and the state of both Charge Air Cooler and radiator cooling fans, expressed in percentage from 0 to 100%.


FUEL DATA

The Fuel Data menu provides information on the fuel consumption of the vehicle in various situations. For example, how much fuel has been used, how much fuel is remaining before refueling the vehicle.

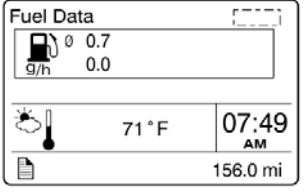

1. Fuel Flow

The lower numerical value (0.0) indicates the instantaneous fuel consumption. In this menu, you can reset the upper numerical value which is the average fuel consumption (0.7). To reset, hold ENTER button for 1 second.

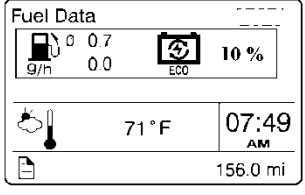


2. Fuel Flow / ECO%

The lower numerical value (0.0) indicates the instantaneous fuel consumption. In this menu, you can reset the upper numerical value which is the average fuel consumption (0.7). To reset, hold ENTER button for 1 second.

This menu also displays the percentage of trip made on regenerated electricity (10%).

5-12 OTHER FEATURES

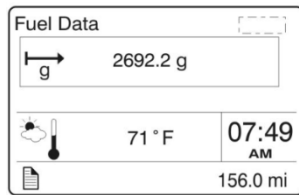


3/4 Trip Fuel Used

Indicates the total fuel consumption (gallons/liters) since the last reset.

Note: You should use Reset function before each new trip.

You can reset the fuel consumption value in this menu. To reset, hold ENTER button for 1 second.

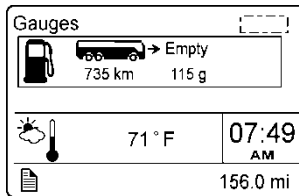


4/4 Distance to Empty

The left numerical value indicates the distance that can be traveled with the quantity of fuel that remains in the tank as indicated by the right numerical value.


TIME/DISTANCE

The time and date can be set in the Time/Distance menu. The alarm clock can also be set from this menu. Following the alarm clock menu is the Trip Odometer 1 and 2 selection, which allows the operator to see the distance traveled since the last reset. Average trip speed is also shown. By specifying the distance to your destination, the vehicle can calculate the estimated time of arrival (ETA).

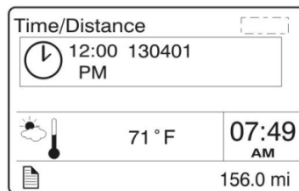


1. Time And Date

Adjust time and date with this menu. The instrument cluster has its own internal battery, so the date and date setting is kept in memory even if the vehicle's battery is disconnected.

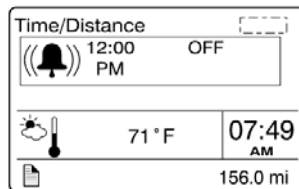


2. Alarm Clock

Use this function to program and activate an alarm on the instrument cluster clock. When the alarm clock goes off, a warning signal is sounded. The alarm shuts off after 60 seconds or if the ESCAPE button is depressed.

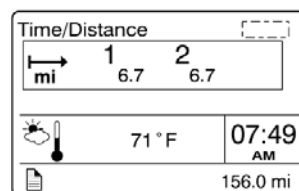


3. Trip Odometer 1 and 2

Allows the operator to see the distance traveled since the last reset. You can reset the trip odometer 1 or 2 in this menu. To reset, depress ENTER button, use UP/DOWN button to select between odometer 1 or 2 and then hold ENTER button for 1 second.

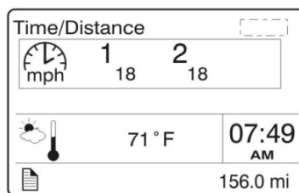

4. Average Trip Speed

This function displays the average speed for the current travel. The average trip speed is calculated as the distance traveled divided by the time the engine has been running (since the last reset). Two average trip speeds can be measured, corresponding to leg 1 and leg 2. Use Reset function before each new travel to start new measurements.

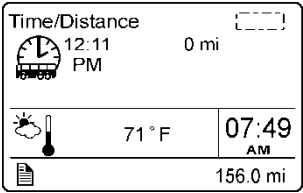


5. Estimated Time of Arrival (ETA)

This function will display the estimated time of arrival if the distance to be traveled is entered first, in this menu. To set distance to be traveled, press ENTER and enter the distance left to drive in mile or km using ENTER and UP/DOWN buttons.

VEHICLE MESSAGES

Use this function to consult the vehicle active messages that were previously displayed as pop-up messages and then acknowledged. When consulting a message, the corresponding STOP, CHECK or INFORMATION warning light will illuminate. Scroll through the messages using the up/down button. Press ESC button to return to the main menu.

RESET TRIP DATA

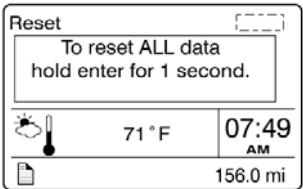


When the Reset Trip Data menu is open, pressing and holding down the ENTER button for more than 1 second resets the functions listed below. This function will permit to the system to calculate new value from the point of resetting.


- Trip Fuel Used
- Average Trip Speed

DISPLAY SETTINGS

The Display Settings menu is used to change languages and units. The password, time and date can also be changed. The backlight and contrast of the display screen can be adjusted.

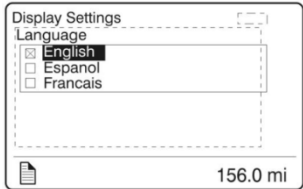


1. Language




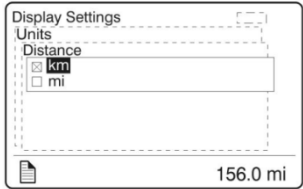


2. Units

Use this function to select desired unit formats for:

- Distance (miles or km)
- Fuel consumption (km/l, l/100 km, mpg US or IMP)
- Temperature: °C or °F
- Brake lining: 1/32 inch, mm, %.

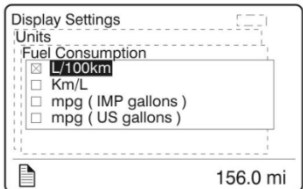

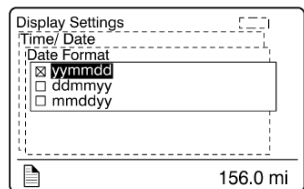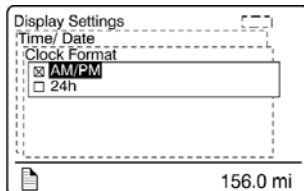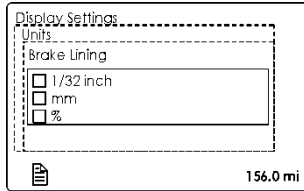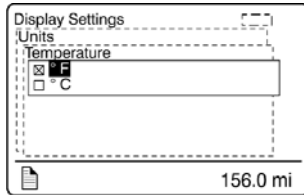

3. Time/Date

Select the clock format and date format using this function.

- AM, PM, 24h
- yymmdd, ddmmyy, mmddy




4. Favorite Display Setting

Use this menu to select your favorite display gages 1, 2 and 3 and replace the default gages. On vehicles provided with the I-Shift transmission, Favorite Display Gage 3 cannot be edited as it is kept for display of the transmission status.

Example: You wish to display the engine oil temperature at the Gage 1 position.

- Use UP/DOWN button until Gage 1 position is selected.
- Press ENTER button to confirm.




Use UP/DOWN button to scroll through the available gages. When the engine oil temperature gage is displayed, press ENTER button to confirm (repeat steps 1-3 to change Gage 2 and Gage 3 if needed).

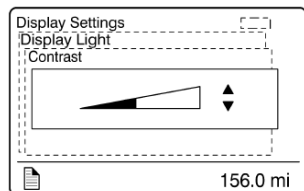

5. Display Light

The Display Light menu has three submenus:

- Contrast: Adjust the contrast with the UP/DOWN button and press ENTER button to confirm.
- Backlight: In this menu, the display lighting can be adjusted relative to other instrument lighting with the UP/DOWN button.
- Night/Day: Use the Night/Day menu to choose a dark background with light text and images or a light background with dark text and images. Press ENTER button to toggle between Night and Day.

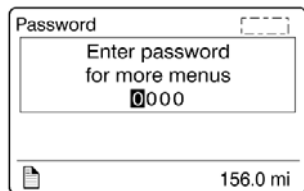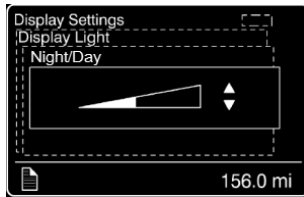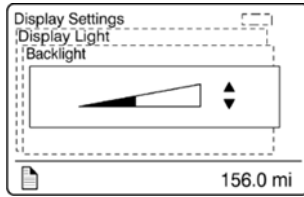


6. Change Password

Use this menu to change the current password. This menu is only accessible if the correct password is entered. The default password is 0000.

- Mark which password is to be changed with the display UP/DOWN button.
- Confirm with ENTER button.
- Set the first digit with the UP/DOWN button.
- Step to the next digit using ENTER button.
- Step backwards with ESC button.

DIAGNOSTICS

The Diagnostics menu enables fault tracing on the control units in the vehicle to check for faults. Instrument tests are available to check the telltales, gages, display and speaker. The part number of a control unit can be identified in the part number menu.

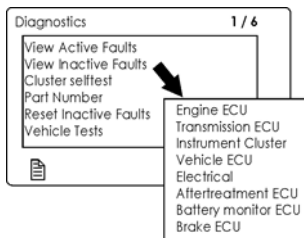

1. View Active Faults

A list of the control units on the vehicle is displayed. Use this function to check for active faults on specific control units.

2. View Inactive Faults

Use this function to check for inactive faults on specific control units.

3. Cluster Selftest

Use this menu to check proper functioning of the following components:

- Telltale lights
- Analog gages
- Display
- Speakers

The following table describes the available tests. To cancel a test, press the ESC button).


| | |
|----------------------|--|
| Telltale lights test | Telltale lights illuminate for approximately five seconds. Press the Esc button to cancel the test. |
| Analog gages | The indicators move forwards and backwards between the end positions. They do not show any particular value. This is just a check to confirm that the indicators move, and to make sure the operators are working. Press the Esc button to cancel the test. |
| Display test | The entire display lights up until the Esc button is pressed. |
| Speaker Test | A sound is emitted through the speakers. Press the Esc button to cancel the test. |

4. Part Number

A list of the control units on the vehicle with their part numbers is displayed in the Part Number menu.

5. Reset Inactive Faults

Use this menu to delete an inactive fault for a particular control unit. Note: it is not possible to delete inactive faults of the Engine ECU.

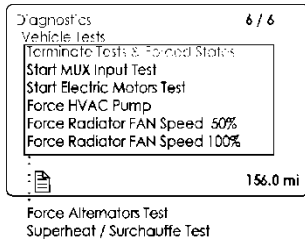

6. Vehicle Tests

Use this menu to perform tests on several components and systems:

- dashboard switches (Mux Input Test)
- electric motors, valve and pump contactors (Electric Motors Test)


In case of overheating of the engine due to a malfunction of the radiator fan you can force activation of the fan using ACTIVATE RADIATOR FAN SPEED 50% or 100%.

The DID status line will show TEST to confirm that one of the test modes is active. To cancel an active test, turn the ignition switch to the OFF position or press ESCAPE button, select TERMINATE TESTS & FORCED STATES submenu and then press ENTER button twice. "TEST" will disappear from the DID status line.

For further information concerning these functions, refer to section 06: Electrical, under "Available Test Modes" and "Limp-home Modes" paragraph of the Maintenance Manual.



PRE-TRIP ASSISTANT (OPTION)

The Pre-Trip Assistance option is a tool to assist the driver in completing the pre-trip inspection of the vehicle. This option is not a substitute for a complete pre-trip inspection. If any system of the vehicle does not pass inspection, the error must be corrected before operating the vehicle. The available pre-trip tests include the Exterior Light Inspection check, and the Air Leakage check.

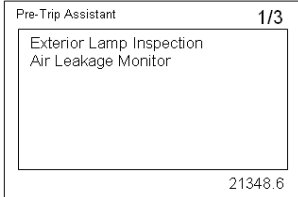

1. Exterior Light Inspection

The Exterior Light Inspection function turns on all the exterior lights simultaneously. This allows the operator to start the test, exit the vehicle and do a visual check that all exterior lights function properly. Press ESCAPE button to end the test and turn off all the exterior lights.

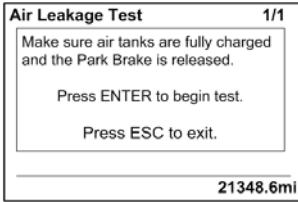
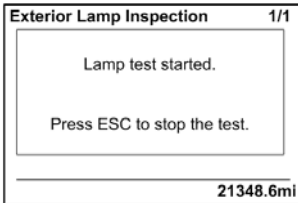


2. Air leakage Monitor


The Air Leakage check allows the driver to accurately measure the amount of air pressure drop in the front and rear brake air systems. After selecting this test from the DID, you are prompted to apply the service brake for 60 seconds. After applying and holding the service brake for 60 seconds, the DID will display the amount of pressure drop in the brake system.

Before starting the test through the DID, complete the following:

- a. Chock the wheels to prevent the vehicle from rolling.
- b. Start the engine and check that the brake systems air pressure is greater than 100 psi.
- c. Turn engine off.
- d. Release the parking and service brakes and allow the system to settle (air gage needle stops moving).
- e. Press the ENTER button to start the test.
- f. If the air tanks pressure is too low to perform the test (pressure must be greater than 100 psi), the following messages will appear.



5-18 OTHER FEATURES

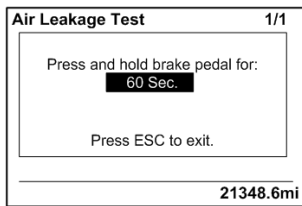

Pressure Leak Test Results




| Tank | Before | After | Drop |
|------|--------|-------|------|
| F | 127 | 127 | 0 |
| R | 129 | 129 | 0 |

(1)VEC 2044.6mi

g. You must press and hold brake pedal for 60 seconds, as instructed.

h. Once the brake pressure test is completed the pressure leak test results are displayed.

DATA LOG

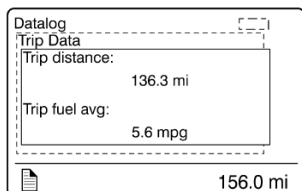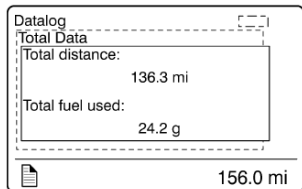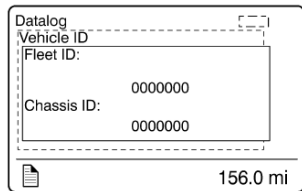

1. Vehicle ID

2. Total Data

Total Data menu indicates the accumulated engine values that have been logged during the lifetime of the engine ECU.

Available information:

- Total distance traveled
- Total fuel used
- Total engine hours
- Total idle time
- Total PTO hours
- Total engine revolutions


3. Trip Data

This menu displays the trip information listed below. This function must be reset before each measurement (before each new trip or leg) using the Reset Trip Data menu.

Available information for the trip or leg is:

- Trip distance (miles or km)
- Trip fuel average (mpg, liter/100 km; km/liter)
- Trip fuel used (gallons or liters)
- Trip duration on cruise control (hours)
- Trip duration with engine rpm greater than economy rpm (hours)

- Trip duration while engine rpm is greater than the desire maximum rpm RPM Limit set in Fleet Limits submenu (hours)
- Trip fuel used with engine rpm greater than the economy rpm (gallons/liters)
- Trip average speed (mph, km/h)
- Trip duration with speed greater than the maximum desired speed as set in Fleet Limits submenu (hours)
- Trip engine hours
- Trip duration on engine idle (hours)
- Trip fuel used while in engine idle (gallons, liters)

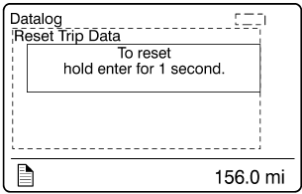


4. Reset Trip Data

This menu can only be accessed if the correct password has been entered. Use this function to reset measurements of the Trip Data menu before each new trip or leg.


AFTERTREATMENT

This menu permits to the driver to initiate a stationary regeneration, to check the status of the aftertreatment system and to interrupt regeneration.

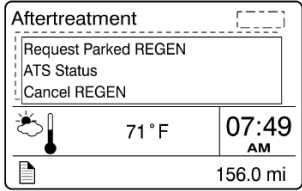



1. Request Parked REGEN

Use this function to initiate a stationary (parked) regeneration.



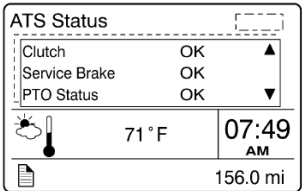


2. ATS Status

The Aftertreatment status submenus provide information about the conditions required for performing regeneration. The status can be OK (regeneration allowed), CHECK (regeneration not allowed) or N/A (not applicable). When ATS Status is selected, the following sub-menus are available.

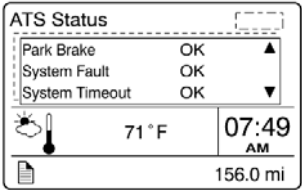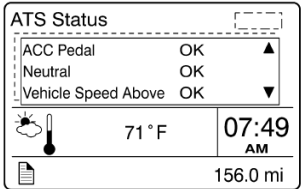

5-20 OTHER FEATURES

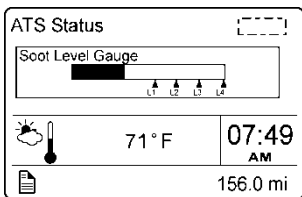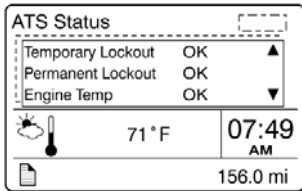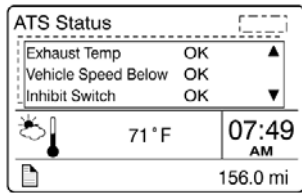

Soot Level Gage

From the ATS Status submenu, you can view the soot level for the Aftertreatment system. When the soot level is high, regeneration is necessary. L1, L2, L3 and L4 under the scale correspond to Level 1 up to Level 4 (see Diesel particulate filter clogging sequence – Engine indicator lamp).



3. Cancel REGEN

From the Aftertreatment main menu, you can cancel a REGEN cycle.

PASSWORD


Certain functions are password-protected. These passwords give the user access to all password-protected functions. The default password is 0000.

1/1 Password

The following menus are password-protected and marked with a key symbol in the menus:

- Change Password
- Fleet ID
- Reset Trip Data
- Fault Diagnostics
- Inactive Faults


BRAKE LINING REMAINING

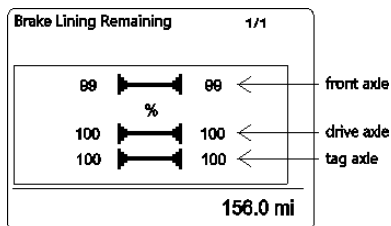

The numerical values indicate the brake lining remaining in 1/32 inch, mm or in term of percentage (%), depending on the unit selected in Display Settings menu (new brake pads are displayed as 100% if the unit selected is %).

PREVOST LIAISON (OPTION)

The Prevost Liaison system provides cellular communication between the driver and the fleet operator. The driver can send and receive short text messages, which are visible through the Driver Information Display.

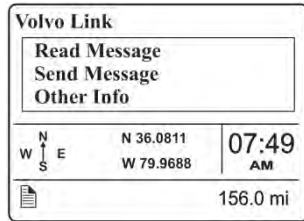

The following menus are available:

1. Read Message

- Quick Response (only available if there is a message available)

2. Send Message

- Driver & Equipment
- Dispatch Messages
- Free Text


3. Other Info

- Comm Liaison Info
- Mailbox Info
- GPS Info
- INI Info
- Configuration Info

5-22 OTHER FEATURES

REAR GAGE - ENGINE COMPARTMENT

The vehicle rear control panel is equipped with a combination tachometer / message display center intended to help the technician with the control and verification of the engine, transmission, UDS system (ACM) parameters among others.

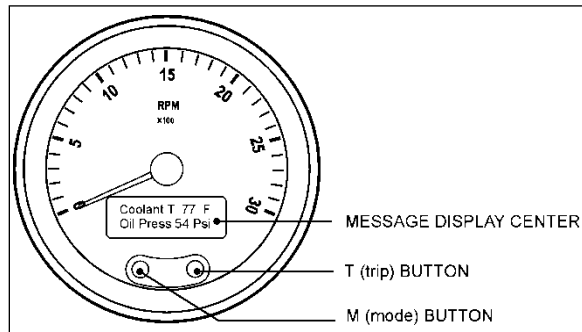

ENGINE COMPARTMENT REAR GAGE ON REAR START CONTROL PANEL

START-UP MODE


Gage pointer will drive to zero position. The pointers will then drive up scale, pausing at half scale, before completing the sweep to full scale.

MESSAGE CENTER DISPLAY

The message display is a graphical, backlit, LCD that displays information to the technician. In addition to basic odometer functions, a variety of customer-defined options will be displayed. Fault codes will also be displayed as they are received. Instrumentation diagnostics can be viewed on the LCD as well.


Drive Mode Screen

At startup the default drive mode screen is coolant temperature and oil pressure. When the display of engine hours is enabled, then engine hours and oil pressure is displayed on startup.



LCD Display Selection

Pressing **M** and **T** together toggles units between English and Metric. Pressing the **T** button changes the LCD display parameters.

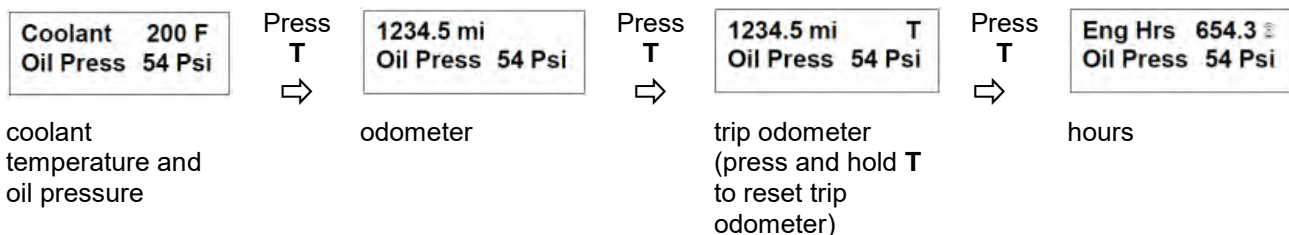

The pointers will then return to zero position before moving to the commanded position.

During the upscale sweep of the pointer, the LCD will turn all its segments off for one second and then display the opening message. The opening message is the Prevost logo.

IGNITION MODE

The ignition mode is active as long as the ignition switch is set to the ON position. The ignition is the normal operational mode of the system.

SELF-DIAGNOSTIC MODE

The self-diagnostic mode is entered through a menu selection using the LCD.

The self-diagnostic includes the following tests:

- Gages
- LCD
- Binary Inputs
- Analog Inputs
- Communications
- Error codes on Engine, Transmission or UDS

Priority Messages

No Priority Message will be displayed during the first 10 seconds after ignition ON.

Priority messages can be generated by the engine, transmission or UDS controllers (ACM) or binary inputs.

Priority messages will interrupt the bottom line of the LCD in order to provide the technician with priority information.

A priority message is removed from the display only if its source expires or if the trip button acknowledges it. Some messages can be acknowledged. If acknowledged, it remains removed from the display and will only reappear if the source expires and reoccurs. If the ignition is turned off and then back on and a priority message is still active, it will display again.

If more than one priority message is active, each message will be displayed one after the other for three seconds each.


| Assignment | Exact Text | Acknowledge | Recur? | Turns off if |
|-------------------------------|--------------------|-------------|--------|---|
| Engine Comm. Failure | ENG. COMM. ERROR | Yes | No | Communication is re-established |
| Trans Comm. Failure | TRANS. COM. ERROR | Yes | No | Communication is re-established |
| ABS Comm. Failure | ABS. COMM. ERROR | Yes | No | Communication is re-established |
| Inst Panel Comm Failure | IPANEL.COMM.ERROR | Yes | No | Communication is re-established |
| High Coolant Temp Alert | CHECK COOL TEMP | Yes | No | DM1 Clears |
| Low Coolant Level | LOW COOLANT LEVEL | Yes | No | message clears after 30 sec |
| | LOW COOLANT LEVEL | Yes | No | Flag Clears |
| Check Coolant SNS | CHECK COOLANT SNS | Yes | No | Flag Clears |
| Low Oil Pressure Alert | LOW OIL PRESSURE | Yes | No | DM1 clears |
| High Trans Temp Alert | CHECK TRANS TEMP | Yes | No | DM1 clears |
| Wait to Start | WAIT TO START | Yes | No | Msg clears |
| Water in Fuel | WATER IN FUEL | Yes | No | Msg clears |
| Engine Maintenance | ENG. MAINTENANCE | Yes | No | DM1 clears |
| + Stop Engine | STOP ENGINE !! | No | No | Msg clears |
| Check Engine | CHECK ENGINE ! | Yes | No | Msg clears |
| Transmission Maintenance | TRANSMAINTENANCE | Yes | No | DM1 clears |
| Network Fail | NETWORK FAILURE | Yes | No | Input clears |
| Check Transmission | CHECK TRANSMIS. | Yes | No | Msg clears |
| Stop Transmission | STOP TRANSMIS.!! | No | No | DM1 clears |
| Fire Alarm Detect | FIRE ALARM | No | No | Input Clears |
| ABS Maintenance | ABS.MAINTENANCE | Yes | No | DM1 clears |
| Check ABS | CHECK ABS! | Yes | No | Msg clears |
| Alternator charging failure | CHARGING FAILURE | Yes | No | Binary input or flag turn off |
| Low Battery | LOW BATTERY VOLT. | Yes | No | 12V voltage > 12V for 30sec or 24V voltage > 24V for 30sec |
| High Battery | HIGH BATTERY VOLT | Yes | No | 12V voltage < 17V for 30sec or 24V voltage < 30V for 30sec |
| Check Diesel Particle Filter | DIESEL.PART.FILT.. | Yes | No | Message clears |
| Change Diesel Particle Filter | DIESEL.PART.FILT. | Yes | No | Message clears |
| Low Primary Air Pressure | LOW.PRIMARY AIR | No | No | Air pressure ≥ 75 psi |
| Low Secondary Air Pressure | LOW.SECONDARY.AIR | No | No | Air pressure ≥ 75 psi |

5-24 OTHER FEATURES

Settings and Diagnostic Screens

The Settings and Diagnostic screens can be accessed when the drive mode screen is displayed and the **M** button is pressed for longer than 5 seconds or if no CAN messages are seen then holding the **M** button will enter the menu.


Once in the Settings and Diagnostics menu, pressing the **M** or **T** buttons separately moves the reverse video highlight up or down through the list, as indicated by the arrows. The highlighted item is selected when both **M** and **T** buttons are pressed at the same time. If no button is pressed for 5 seconds, the LCD will go back to the standard Drive Screen. The items available in the menu are:

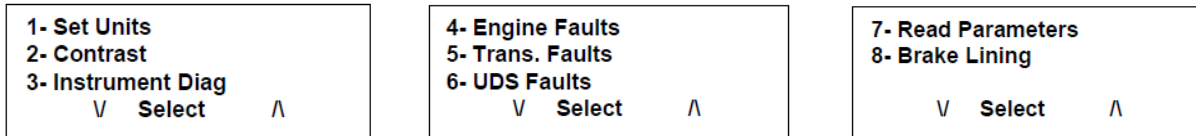

This menu exits to the drive mode screen when there has been inactivity for 5 seconds.


1 - Set Units

Selecting menu item 1 brings up the following screen that is used to select if values are to be displayed in metric units or English units. Pressing **M** or waiting 5 seconds exits to Settings and Diagnostics menu.

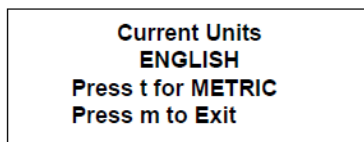


2 – Contrast

Selecting menu item 2 displays a screen to allow setting the LCD contrast. Pressing the **M** (+) button will increase contrast while pressing the **T** (-) button will decrease contrast. After inactivity for 5 seconds this menu exits to the Settings and Diagnostics menu.

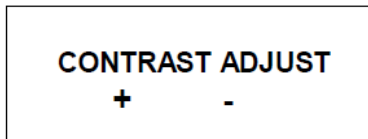


3 – Instrument Diag

Selecting menu item 3 in the Settings and Diagnostic menu will display the instrument diagnostic menu. There are 3 items in this menu and are navigated the same as the previous menu. This menu exits to the Settings and Diagnostics screen when there has been inactivity for 5 seconds.

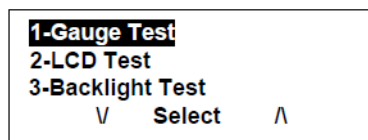

Gage Test

Item 1 – The gage pointer will be driven through three positions pausing at each position as shown in the LCD as a percentage of scale. This test will proceed and return to the Instrument Diagnostic menu. Pressing the **M** button will end the test and return to the Instrument Diagnostic menu.

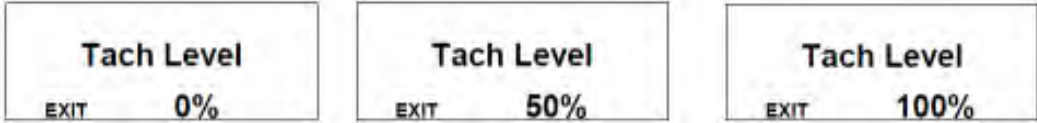

LCD Test

Item 2 –Displays the Prevost in normal then reverse video three times and then returns to the

Backlighting Test

Item 3 – Cycles the gage and LCD backlight through 3 brightness levels twice displaying the corresponding intensity on the LCD. Pressing M during the test or allowing the test to complete returns the gage to the Instrument Diagnostics menu.



4 – Engine Faults

For all ECU, an array is defined containing DTC, SPN & Specific FMI. If the SPN is not known, the value is displayed in decimal. For active faults, the array is filled with information obtained from DM1.


This screen displays DTC, SPN & associated FMI, otherwise, the Suspect Parameter Number (SPN) and Failure mode Identifier (FMI) as received from the engine for active faults via J1939.



5 – Trans. Faults

For all ECU, an array is defined containing DTC, SPN & Specific FMI. If the SPN is not known, the value is displayed in decimal. For active faults, the array is filled with information obtained from DM1.

This screen displays DTC, SPN & associated FMI, otherwise, the Suspect Parameter Number (SPN) and Failure mode Identifier (FMI) as received from the transmission for active faults via J1939.

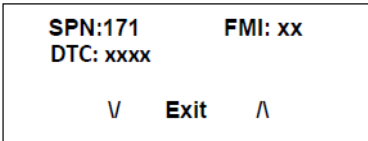

6 - UDS Faults (ACM, Aftertreatment System ECU)

For all ECU, an array is defined containing DTC, SPN & Specific FMI. If the SPN is not known, the value is displayed in decimal. For active faults, the array is filled with information obtained from DM1.

This screen displays DTC, SPN & associated FMI, otherwise the Suspect Parameter Number (SPN) and Failure mode Identifier (FMI) as received from the UDS (ACM) for active faults via J1939.

5-26 OTHER FEATURES

| | |
|-----------|---------|
| SPN:241 | FMI: xx |
| DTC: xxxx | |
| V | Exit |
| | Λ |

7 – Read Parameters

Selecting menu item 7 displays various parameters received by the rear gage (engine RPM, boost pressure, engine load, transmission oil temp, engine coolant temp, engine oil pressure, primary air system pressure, secondary air system pressure, accessory air system pressure, fuel level, instantaneous fuel economy, average fuel economy, total engine hours, wheel-based vehicle speed, gear engaged, 24V system voltage, 12V system voltage). The main use for these screens is in troubleshooting the system.

| | |
|----------|---------|
| Eng RPM | 775 RPM |
| Boost Pr | 5 Psi |
| Eng Load | 23 % |
| V | Exit |
| | Λ |

| | |
|-----------|--------|
| Trans T | 195 °F |
| Coolant T | 180 °F |
| Oil Press | 40 Psi |
| V | Exit |
| | Λ |

| | |
|-----------|--------|
| Prim.Air | 115Psi |
| SecondAir | 115Psi |
| Acc Air | 115Psi |
| V | Exit |
| | Λ |

| | |
|------------|----------|
| Fuel Level | 74 % |
| Inst Fuel | 15.4 mpg |
| Avg Fuel | 12.6 mpg |
| V | Exit |
| | Λ |

| | |
|-------|------------|
| Hrs | 123.45 hrs |
| Speed | 31.1 mph |
| Gear | Neutral |
| V | Exit |
| | Λ |

| | |
|-----------|---------|
| 24V Batt. | 23.1V |
| 12V Batt. | 13.2V |
| Eng RPM | 775 RPM |
| V | Exit |
| | Λ |

8 – Brake Lining (state)

Item 15 - A submenu is displayed to choose between 3 types of displaying:

- In 1/32 of inches
- In millimeters
- In %

| |
|---------------------------|
| Brake Lining in 1/32 inch |
| Brake Lining in mm |
| Brake Lining in % |

The displaying in 1/32 of inches and millimeters requires two parameters:

- Corresponding value in 1/10 of millimeters for 100%
- Offset value in 1/10 of millimeters for 0%

The hardcoded value for these two parameters are:

| Parameters | Default value (1/10 mm) |
|------------|-------------------------|
| 100% value | 150 |
| 0% value | 50 |

The following message is displayed on the screen for showing the Brake Lining State, for a % displaying:

The front wheels are displayed on the left side of the screen, right side on the top. The value is expressed in % for each brake lining.

| | | |
|----|----|----|
| FR | DR | TR |
| FL | DL | TL |

| | | |
|-----------------------------|----|----|
| Brake Lining % | | |
| 100 | 53 | 43 |
| 98 | 55 | 42 |
| <- FL Wheel Press m to Exit | | |

INTELLIGENT SLEEP MODE (ISM)

The ISM is a battery-saving feature designed to monitor the battery State Of Charge (SOC). The ISM will automatically change the vehicle electrical system from normal functional state to sleep mode if the battery SOC falls below 65%.

Once the vehicle has entered into sleep mode, the only actions needed to put the vehicle back into its normal functional state are:

- To cycle the ignition lever from OFF to ON; or
- To open the entrance door; or
- To turn on the hazard lights.

The ISM forces the vehicle to go into sleep mode if all the following conditions are met:

1. The engine is not running;
2. The parking brake is applied
3. The ignition switch is at the ON, ACC positions or at the OFF position but the 15 minutes “wake up” period after engine shutdown is not expired.
4. The battery state of charge of 12V or 24V system falls below 65%.

The red ALTERNATOR telltale will illuminate 30 seconds before activation of the sleep mode.



TRANSMISSION OUTPUT RETARDER

The transmission output retarder is a device that helps to reduce the speed of a vehicle. It improves vehicle control, increases driving safety and permits more economical operation. The retarder provides slowing power when it is most needed, such as when descending mountain roads, in stop-and-go traffic and on crowded freeways.

The transmission output retarder is a vehicle-slowng device, not a vehicle-stopping device. It is not a substitute for the service braking system. The service brake must be used to bring the vehicle to a complete stop.

NOTE

Extended use of transmission output retarder will raise the temperature of the transmission fluid.

A disable switch is located in the RJB close to the master brake interlock.

NOTE

Deactivating the transmission retarder will turn the indicator light located at the front of the coach ON.

Three levels of retarding power are available with the output retarder enabled: 1/3 of total retarding power is applied as soon as the brake pedal is pressed. If more force is applied to the brake pedal, 1/3 of retarding power is added. Finally, with full force applied to the brake pedal, an additional 1/3 of retarding power is added for a total of 100% of the available output retarding power.

5-28 OTHER FEATURES

| Action | Retarding Power |
|--|-------------------------------|
| Initial pressure on the brake pedal | 33% of total retarding power |
| Additional pressure on service brake pedal | 66% of total retarding power |
| Full force on the brake pedal | 100% of total retarding power |

NOTE

The stoplights automatically illuminate when the vehicle is slowing down after the application of the transmission retarder.

NOTE

As the wheels start to lock up on slippery roads, the output retarder automatically deactivates until the wheels roll freely.

ANTILOCK BRAKING SYSTEM (ABS)

The purpose of the Antilock Braking System (ABS) is to maintain vehicle stability and control during braking and to minimize the stopping distance in any road condition.

On slippery roads and more generally in emergency situations, over-braking frequently induces wheel locking. Wheel locking greatly increases braking distance on any road surface. Locked wheels also impede directional control and cause severe tire abrasion. An antilock braking system provides maximum braking performance while maintaining adequate control on slippery roads.

The basis of ABS is constant monitoring of wheel parameters during braking. Sensors on each wheel of the front and drive axles constantly measure wheel speed during braking. This information is transmitted to a four-channel electronic processor which senses when any wheel is about to lock. Modulating valves quickly adjust brake pressure (up to 5 times every second) to prevent wheel lock. Each wheel is therefore controlled according to the available grip.

In this way, the vehicle is brought to a stop in the shortest possible time while remaining stable and under the driver's control.



WARNING

Vehicles following ABS-equipped vehicles may not be able to brake as fast on slippery roads.

KNEELING SYSTEM

This system lowers the front end, enabling passengers to get on and off the coach without any difficulty.

NOTE

This coach is equipped with an interlock system which automatically applies the parking brake when the kneeling system is activated.

To operate, stop the coach, set the transmission to neutral (N), then push down the rocker switch located on the dashboard. (Refer to "Controls & Instruments" section). The parking brake will be applied

automatically and a status line pictogram will appear on the DID to indicate that the front of the coach is being lowered.

To raise the front of the coach to its normal height, push up the rocker switch. The front end will rapidly rise up. The system will release the parking brake and shift the transmission to the previously selected range.

**CAUTION**

Avoid parking the coach too close to the sidewalk or to other obstacles which could damage the coach during kneeling.

NOTE

Kneeling is disabled when the entrance door is open.

NOTE

The kneeling system does not operate when the coach is traveling over 5 mph (8 km/h). Consequently, the driver cannot inadvertently operate the kneeling system at higher speeds.

UNLOADING TAG AXLE (OPTIONAL)

To reduce the turning radius, the air springs pressure will be automatically reduced by 75% when the coach is moving at speed lower than 5 mph (8 km/h) and with more than 1½ turn from the steering.

RETRACTABLE TAG AXLE

The standard tag axle retraction system is controlled by a valve located in the front service compartment. The valve can be switched to either the WHEELS UP or WHEELS DOWN position. The axle will be raised or lowered by air pressure according to the valve position.

The tag axle service brakes operate only when the tag axle is in the WHEELS DOWN position. Never lower the tag axle while the coach is moving. When the tag axle is in the WHEELS UP position, the corresponding status line pictogram will appear in the DID. An audible alarm will sound to warn the driver if the vehicle speed exceeds 12 mph (20 km/h) with tag axle raised. The tag axle can be raised in tight maneuvering areas like in a parking lot or to make it easier to turn a short corner. The tag axle shortens the wheelbase and allows tighter turning. Raising the tag axle transfers extra weight and additional traction to the drive wheels providing improved control on slippery roads.

**CAUTION**

Do not use tag axle in raised position for an extended period. Raising tag axle increases load on the drive axle, suspension and tires.

Do not drive a vehicle with the tag axle raised when speed is exceeding 12 mph (20 km/h).

In order to prevent damage to the suspension, always raise the tag axle before lifting the coach.

WHEELCHAIR LIFT SYSTEM

It is important to passenger safety that the lift operator be familiar with the operating instructions. Read and understand the RICON Mirage F9TF F9TH Wheelchair lift Operator Manual before attempting to use the wheelchair lift. The instructions below are a quick reference only and not a replacement to the information provided by RICON.

Watch the **Prevost Wheelchair Lift Instruction video** on Prevost's YouTube channel. To do so, type "Prevost Coach – YouTube" on your web browser and then select the proper link. Once on Prevost channel, select "Video" tab and then look for the video entitled "Prevost Wheelchair Instruction".

INTRODUCTION

Safe and easy access to the coach is provided by the Ricon Mirage F9TF and F9TH Public Use wheelchair lifts. The Mirage F9TF or F9TH is a dedicated entry model, which is intended for installation in a vehicle baggage compartment.

An electric-motor driven hydraulic pump provides a maximum platform lifting capacity of 660 pounds (300 kilograms) for Mirage Model F9TF and 800 pounds (363 kilograms) for Mirage Model F9TH.

A trained attendant or the vehicle operator operates the lift. For a boarding passenger, the operator uses control switches to withdraw the platform from the vehicle (deploy) and lower it to ground level. The passenger is placed on the platform and then lifted to floor height. After the passenger enters the vehicle, the operator lowers the platform and retracts it back into the vehicle (stow). For an exiting passenger, the operator withdraws the platform from the vehicle (deploy) and raises it to floor height. The passenger is placed on the platform and then lowered to the ground. The passenger departs, and the operator returns the platform to the stowed position in the vehicle.


One individual can manually operate the lift when normal power is not present. A manual release mechanism is provided to ease the task of pulling the platform out of its enclosure. The hydraulic pump assembly includes a manually operated back-up pump to raise the platform, and a pressure release valve to lower it. The front platform roll stop, normally power operated, has a manual override knob for back-up use.

OVERVIEW

Major lift components

| | |
|--------------------------|--|
| Left, Right, Front, Rear | Reference points from outside vehicle looking inward at lift. |
| Bridgeplate | Plate bridges gap between platform and vehicle floor when platform is at floor level. Acts as a barrier during up and down platform motions to prevent wheelchair from rolling off rear of platform. |
| Carriage | Part of traveling frame that is mounted on rollers; moves on rails located inside the enclosure. Supports lifting frame and platform. |
| Controller | Receives electrical input signals from pendant and lift sensors and sends control signals to lift electrical and hydraulic components. |
| Control pendant | Hand-held device used to control platform motions. |
| Cycle counter | Located on the rear frame of the carriage. Visible when platform is fully deployed. It records number of times platform has moved from the floor to ground and back to floor. |
| Deployment system | Located within the carriage. Employs an electric gear motor to propel platform out of the enclosure, or pull it back into the enclosure. |
| Enclosure | Traveling frame housing that is rigidly attached to vehicle chassis. |
| Fluid reservoir | Container holds hydraulic fluid that is used by the hydraulic system. |
| Folding handrail | (left and right) Provides a handhold for standing passenger (standee). |
| Front roll stop | Front barrier prevents wheelchair from inadvertently rolling off platform during platform movement. |
| The handrail release | (left and right) Locks handrail in vertical position. Must be pushed inward to release the |

| | |
|-------------------------|--|
| button | handrail. |
| Hydraulic cylinder | Located within carriage and connected to lifting frame. Receives pressurized fluid from hydraulic pump to lift the platform. |
| Hydraulic pump assembly | Electro-hydraulic unit provides hydraulic pressure used to raise the platform. Also mounts components for manual operation. |
| Lifting frame | Assembly is hinged to front of the carriage and to center of the platform; raised by single hydraulic cylinder attached to the carriage. |
| Manual pump handle | Used to manually operate hydraulic backup pump and pressure release valve when electrical power is not available. Also used to rotate platform release shafts. |
| Platform | Curbed area where passenger resides while being raised to the vehicle or lowered to ground. |
| Platform release shaft | (left and right) Used during manual operation of lift. Disengages platform from enclosure to facilitate manual deployment. Engage and rotate either shaft with manual pump handle. |
| Pull box | Houses electrical termination points to lift, and a hydraulic line disconnect point. Also accepts input harness from the control pendant. |
| Rollstop control knob | Provides manual control of the roll stop if electrical power is not available. |
| Safety belt | Safety restraint belt that spans between handrails to help confine passenger to the platform area. |
| Stow Lock | Safety lock retains platform when in stowed position (retracted); releases when stow lock lever is raised. |
| Traveling frame | (not shown as a unit) Assembly comprised of carriage, lifting frame, and platform. |

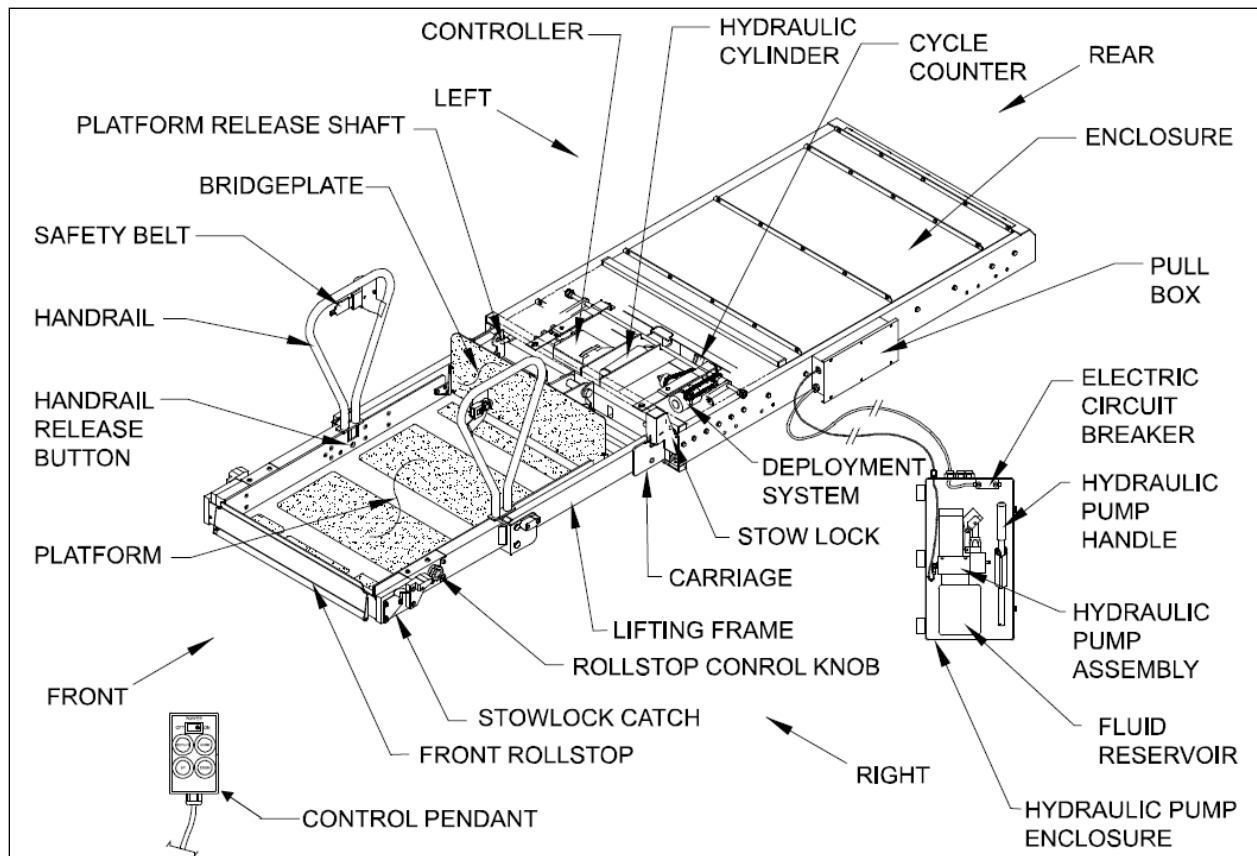

GENERAL SAFETY PRECAUTIONS

- To avoid injury, always exercise caution when operating and be certain that hands, feet, legs, and clothing are not in the path of product movement.

5-32 OTHER FEATURES

- Read and thoroughly understand the operating instructions before attempting to operate the wheelchair ramp.
- Inspect product before each use. If unsafe conditions, unusual noises or movements, do not operate lift until the problem is corrected.
- Stand clear of doors and platform and keep others clear during the operation.

OPERATING INSTRUCTIONS

Safety Precaution

- To operate the wheelchair lift, the coach must be parked on a flat and level surface, with the parking brake applied.
- Inspect the lift before each use as described in the RICON Operator Manual **32DF9T15** under paragraph "Pre-Operation Lift Inspection". If any unsafe condition exists, or if unusual noises or movements are noticed, DO NOT use and contact an authorized RICON dealer for repair.
- Read and comply with all warning labels and symbols affixed to the wheelchair lift.
- Wheelchair occupant should face outward when entering or exiting the vehicle.
- Do not back onto the platform when exiting the vehicle. FACE OUTWARD, and verify that platform is at the same height as floor. Check that front rolls top is up and locked.
- The front rolls top is intended to prevent slow, unintentional, rolling off of the platform.
- The front rolls top is not intended to stop a quick moving wheelchair. A quick moving wheelchair could tip if the small front wheels collide with the roll stop. Also, the large rear wheels of a quick-moving wheelchair could roll over the roll stop. Possible injury to the occupant might occur in either case.
- Verify that wheelchair fits safely on the platform; it must not extend beyond edges or interfere with the operation of the roll stop.
- Do not operate with a load in excess of 660 lbs (300 kg) for Mirage Model F9TF and 800 pounds (363 kilograms) for Mirage Model F9TH.
- Keep arms, legs, and clothing away from moving lift parts.
- The lift is intended for one wheelchair and its occupant, or one standee. Do not overload lift.
- Keep other clear while operating lift.
- Do not allow an untrained person to operate lift.
- Do not allow anyone to stand on the bridge plate. A bent bridge plate can interfere with the platform as it raises and lowers.
- Lock wheelchair brakes before raising or lowering the platform (power chair users should turn off power and set brake).
- Use great care in wet conditions; the wheelchair brakes are less effective if its tires or the platform are wet.
- Do not leave deployed platform unattended. Return to stowed position after use.

Hand-Held Control Pendant and Motion

The lift is operated with a hand-held, hard-wired remote-control pendant. Turn on the POWER ENABLE switch and then control each lift motion by pressing an appropriate button.

The POWER ENABLE switch provides power to the pendant and thereby enables the lift. When turned on, the power switch and each button illuminate.


Pressing the DEPLOY/OUT button extends the platform from the lift storage compartment, and pressing the STOW button retracts the platform back into the storage compartment. Pressing the DOWN button lowers the platform towards the ground, and pressing the UP button raises the platform towards the vehicle floor.

A button must be held depressed until the motion is completed. Movement of the platform can be halted at any time by releasing the button.



HAND-HELD CONTROL PENDANT

| MOTION | | DESCRIPTION |
|--------|---------------------|--|
| | DEPLOY / OUT | Platform extends out of the vehicle, or deploys. |
| | DOWN | Platform lowers from present height towards ground; front rolls top lowers when platform contacts ground. |
| | UP | Platform rises from the present height towards the vehicle floor; rolls top rises before platform leaves ground. |
| | STOW / IN | Platform retracts into the vehicle, or stows. |

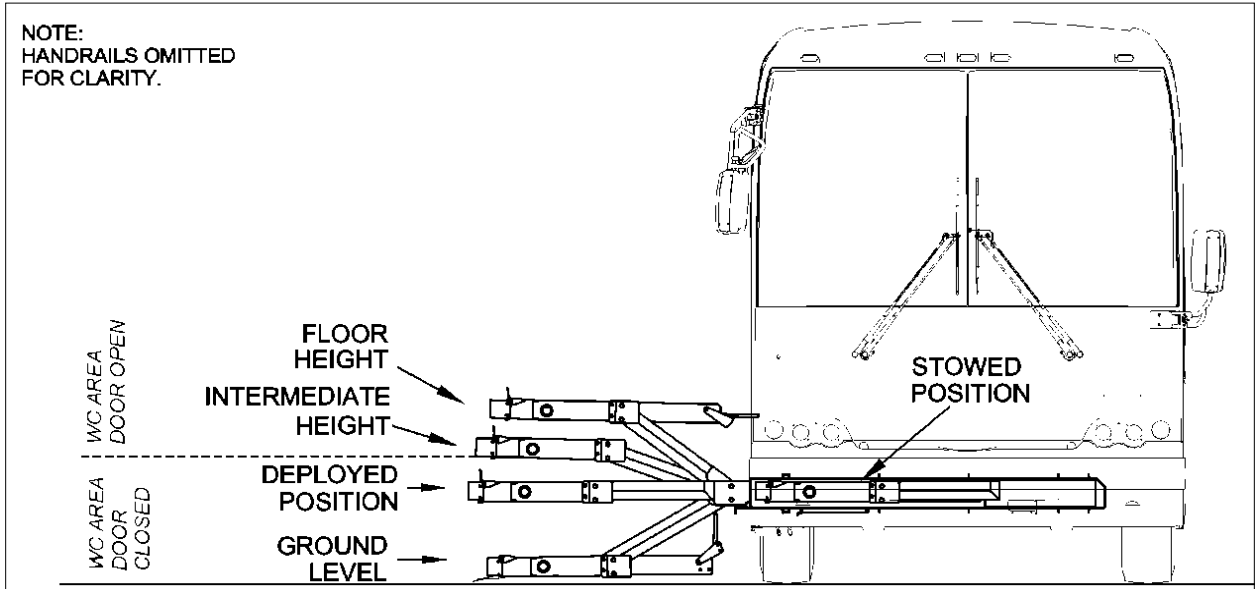


PLATFORM POSITION WITH INTERMEDIATE HEIGHT (OPTIONAL FEATURE)

5-34 OTHER FEATURES


Normal Lift Operation – To Enter Vehicle

- Before operating lift, be certain vehicle is safely parked on a level area away from traffic. Provide at least 10 feet (3 meters) space for lift operation and passenger boarding.
- The lift operator must take special care to ensure that area is clear before deploying platform. Be certain there are no obstacles beneath the platform.
- Open lift compartment door completely.

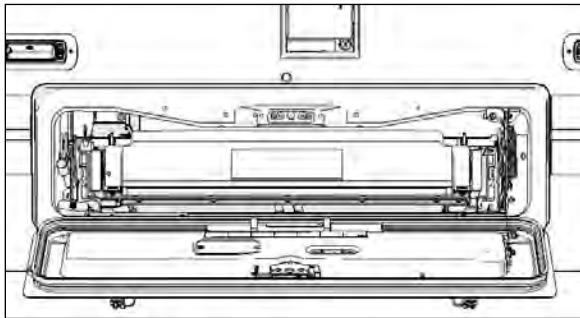

X3 SERIES SHOWN

- Open sliding door directly above lift compartment. This does not apply to models that stop upward platform movement prior to reaching floor level. The sliding door on these models is open after the platform reaches **intermediate height** (refer to Figure 3).
- The vehicle and lift are equipped with a safety interlock system (i.e. transmission into neutral, parking brake applied). Be certain that it is in the proper mode before attempting to operate lift. The lift will not operate until this feature has been properly engaged.
- Supply power to the wheelchair lift system first by depressing the wheelchair lift activation switch located on the dashboard.



WHEELCHAIR LIFT ACTIVATION SWITCH

NOTE

Whenever the wheelchair lift activation switch is in the ON position, an interlock system prevents releasing of the parking brake and a transmission inhibit feature prevents gear selection when either the lift compartment door or the sliding door is open.

- Enable lift control pendant by turning on POWER switch located on the pendant.
 - A person that uses the wheelchair lift while standing (does not require mobility aid equipment) is referred to in this manual as a Standee.
1. **ACTIVATE INTERLOCK:** Make sure parking brake is set and transmission is in neutral.
 2. **DEPLOY PLATFORM:** Press and hold DEPLOY/OUT button until platform is fully deployed. NOTE: Platform cannot be moved up or down unless platform is fully extended.
 3. **RAISE HANDRAILS:** Lift right handrail to the vertical and push firmly down into its socket. Repeat for left handrail. Verify that both handrails are latched in place by attempting to pull upward on them.
 4. **BUCKLE SAFETY BELT** (to enable lift controller): Insert belt tongue into buckle and listen for audible “click” then tug belt to confirm belt is securely fastened.

NOTE

The safety belt acts as a safety device and it prevents raising or lowering the lift when not buckled.

5. **LOWER PLATFORM:** Press and hold DOWN button until platform stops at ground level and roll stop opens completely.
6. **BUCKLE SAFETY BELT.**
7. **BOARD PLATFORM:** Position wheelchair in the center of the platform, facing outward and advise occupant to lock wheelchair brakes. Power must be turned off on electric-powered wheelchairs.

NOTE: Standee must stand near the center of the platform, facing in the direction of travel (into vehicle), and firmly grasp handrails. Do not stand on the bridge plate.

8. **BUCKLE SAFETY BELT** (to enable lift controller): Insert belt tongue into buckle and

listen for audible “click” then tug belt to confirm belt is securely fastened.

NOTE: *The next two steps apply only to F9TF/F9TH models that stop upward platform movement at an intermediate level. Other models continue at step 11.*

9. PARTIALLY RAISE PLATFORM: Press and hold UP button until platform stops at intermediate height.
10. OPEN SLIDING DOOR: Fully open vehicle sliding door located above lift. The lift operator, or attendant should do this.
11. RAISE PLATFORM: Press and hold UP button until platform stops at floor height and bridge plate lowers onto the vehicle floor.



WARNING

Verify that rear edge of the bridge plate lies flat on the floor along its entire edge and does not create a tripping hazard.

12. EXIT PLATFORM: Advise passenger to carefully enter the vehicle.
 13. BUCKLE SAFETY BELT.
 14. LOWER HANDRAILS: Press release button at the base of the handrail and lift the left handrail upward out of its socket. Lower handrail to the platform. Repeat for the right handrail.
 15. STOW PLATFORM: Press and hold STOW/IN button. Close sliding door at the intermediate height. Press and hold STOW/IN button until platform reaches STOW height and then fully retracts into the vehicle.
- NOTE:** *Do not use DOWN button to lower platform partway prior to stowing, and then complete the stowing process by using IN button. This method may not properly stow platform.*

16. CLOSE DOOR. Close the lift compartment door.

Normal Lift Operation – To Exit Vehicle

1. ACTIVATE INTERLOCK: Make sure parking brake is set and transmission is in neutral.
2. DEPLOY PLATFORM: Press and hold DEPLOY/OUT button until platform is fully deployed.

3. RAISE HANDRAILS: Lift right handrail to the vertical and push firmly down into its socket. Repeat for left handrail. Verify that both handrails are latched in place by attempting to pull upward on them.

4. BUCKLE SAFETY BELT (to enable lift controller): Insert belt tongue into buckle and listen for audible “click” then tug belt to confirm belt is securely fastened.

NOTE: *The next two steps apply only to F9TF/F9TH models that stop upward platform movement at an intermediate level. Other models continue at step 7.*

5. PARTIALLY RAISE PLATFORM: Press and hold UP button until platform stops at intermediate height.
6. OPEN SLIDING DOOR: Fully open vehicle sliding door located above lift. The lift operator, or attendant should do this.
7. RAISE PLATFORM: Press and hold UP button until platform stops at floor height and bridge plate lowers onto the vehicle floor.



WARNING

Verify that rear edge of the bridge plate lies flat on the floor along its entire edge and does not create a tripping hazard.

8. BOARD PLATFORM: Position wheelchair in the center of the platform, facing outward and advise occupant to lock wheelchair brakes. Power must be turned off on electric-powered wheelchairs.

NOTE: *Standee must stand near the center of the platform, facing in the direction of travel (into vehicle), and firmly grasp handrails. Do not stand on the bridge plate.*

9. LOWER PLATFORM: Press and hold DOWN button until platform stops at ground level and roll stop opens completely.
10. UNBUCKLE SAFETY BELT.
11. EXIT PLATFORM: Carefully assist passenger off of the platform.
12. LOWER HANDRAILS: Press release button at the base of the handrail and lift the left handrail upward out of its socket. Lower handrail to the platform. Repeat for the right handrail.

5-36 OTHER FEATURES


13. STOW PLATFORM: Press and hold IN button until platform reaches STOW height and then fully retracts into the vehicle.

MANUAL LIFT OPERATION

The lift can be operated manually if it loses electrical power. The following sections describe important safety preparations to be followed before using the lift, and operating procedures to deploy, raise, lower, and stow the lift. Ricon recommends that manual operation be used only to exit from the vehicle, not to enter the vehicle.

Manual lift controls


Manual operation components used are a hydraulic backup pump and pump handle, platform release mechanism, and a roll stop control knob.

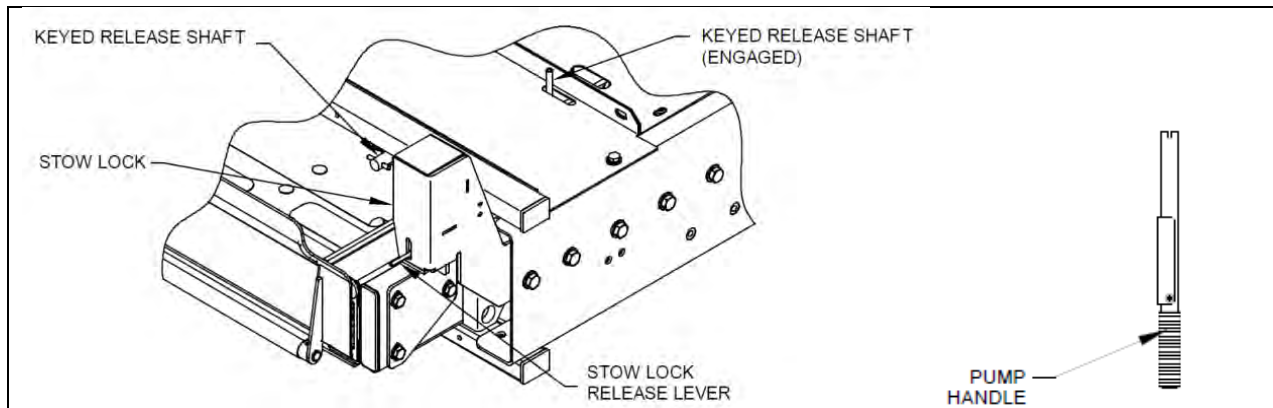

MANUAL LIFT CONTROLS

To Manually Deploy the Platform


1. Fully open sliding door and lift the compartment door. Ensure that there are no obstacles in the path of the lift.
2. Take the manual backup pump handle secured inside the manual pump box (H3 Series) or attached to the inner side of the lift compartment door (X3 Series).

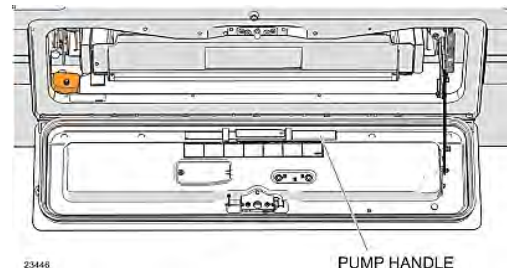


Preparation

- Park vehicle on a level surface, away from traffic. Allow sufficient space for lift operation and passenger boarding.
- The operator must summon assistance to move the vehicle to a safe operating area if a breakdown situation exists and vehicle cannot be moved under its own power.
- Check to be certain obstacles are not in the path of platform movement.
- Open vehicle doors by hand and secure.
- Caution people in vicinity that platform is about to deploy.
- Follow the "Safety Precautions ".


- Engage either keyed release shaft with the pump handle.

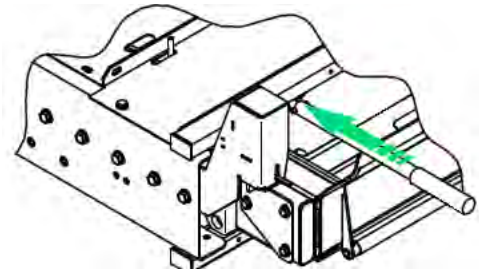


- Rotate the keyed release shaft 1/4-turn (as indicated on the adjacent decal) while lifting stow lock lever simultaneously.




DECAL

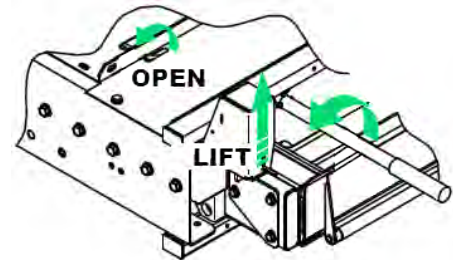

- Grasp the top edge of the front rolls top with two hands and pull firmly. The platform moves smoothly after an initial resistance. Pull platform straight out to the end of its travel.

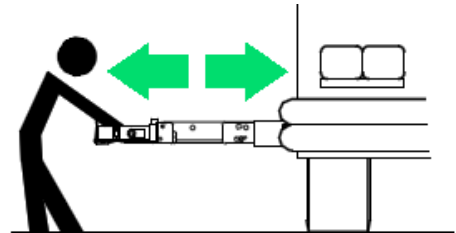



| | |
|---|----------------|
| | CAUTION |
| <p>Ensure that release shaft re-engages and locks when platform is fully extended. If release shaft does not engage, use manual pump handle and turn 1/4-turn (direction opposite to orientation shown on adjacent decal) to re-engage release shaft.</p> | |

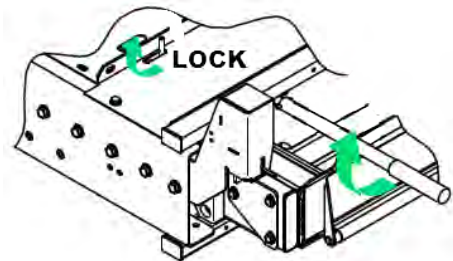

- Lift right handrail to the vertical and push firmly down into its socket. Repeat for left handrail.

To Manually Raise the Platform

- Verify that rolls top is up (closed). Pull roll stop control knob out and rotate fully clockwise if it isn't up.

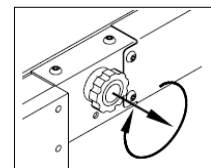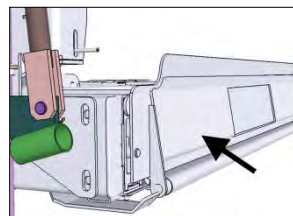


5-38 OTHER FEATURES

2. Close the backup pump release valve by pushing the actuating rod (A) DOWN (release valve should already be closed).

NOTE: pumping the handle raises the platform when the release valve is closed).


3. Insert pump handle into backup pump socket (B), then pump handle to raise the platform to the floor level.
4. Position wheelchair in the center of the platform, facing outward, and advise occupant to lock wheelchair brakes. Power must be turned off on electric-powered wheelchairs.

NOTE: Standee must stand near the center of the platform, facing in the direction of travel (into vehicle), and firmly grasp handrails. Do not stand on the bridge plate.

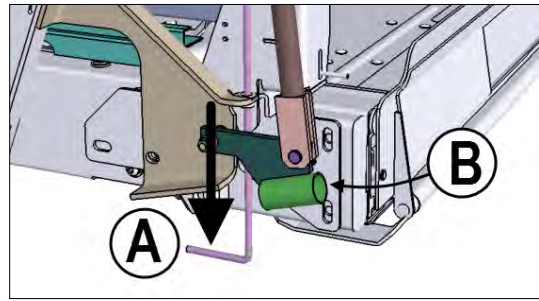


To Manually Lower the Platform


1. Verify that rolls top is up (closed). Pull roll stop control knob out and rotate fully clockwise if it isn't up.

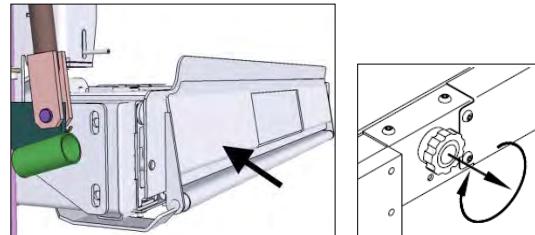

2. Slowly pull the manual backup pump release valve actuating rod (A) UP until the platform begins to lower (opening the release valve lowers the platform).
3. Allow the platform to reach ground level.

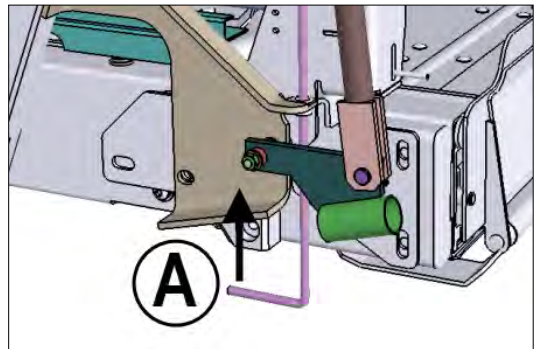


4. Pull roll stop control knob out and rotate fully counterclockwise. Rolls top must lie flat on the ground.

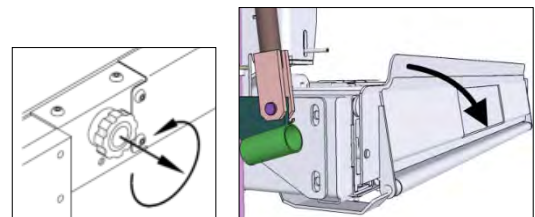


5. Carefully assist passenger off of platform.

6. Push the backup pump release valve actuating rod back DOWN until lightly snug.

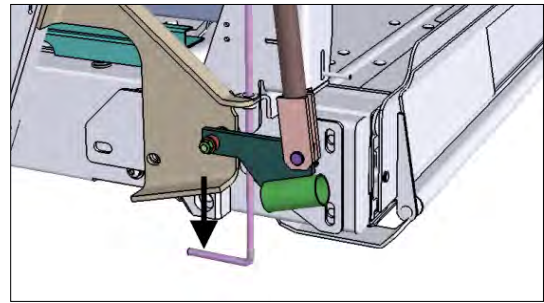


To manually stow the platform

1. Verify that the backup pump release valve is closed (actuating rod (A) pushed DOWN).

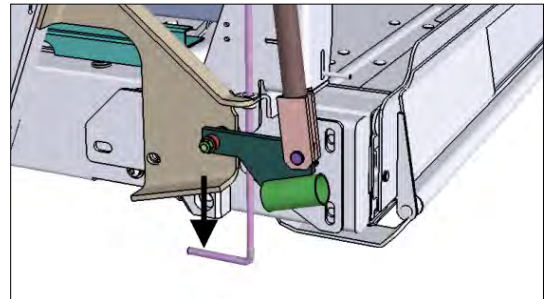


2. Raise the platform to stow height; position the top surface of the platform lifting frame arm at the same height as the top surface of the carriage. If the exact height cannot be obtained, a slightly low platform is preferred to slightly high. This alignment eliminates interference between the platform and enclosure when pushing the platform into the enclosure.

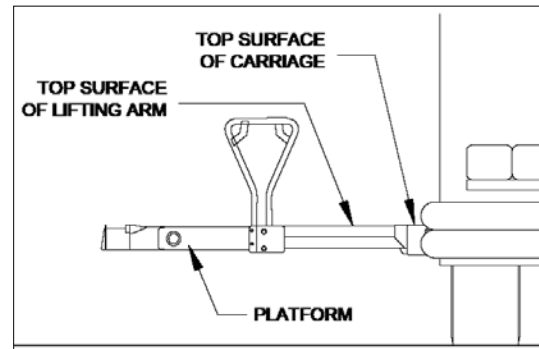


LIFTING ARM AND CARRIAGE AT SAME HEIGHT

3. Verify that rolls top is up (closed). Pull roll stop control knob out and rotate fully clockwise, if it isn't up.


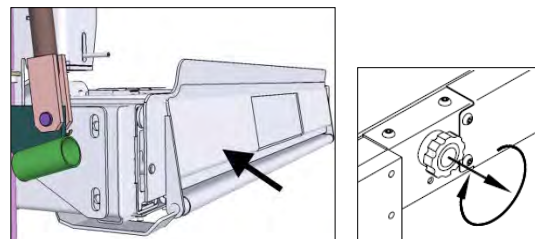


4. Lift the left handrail upward out of its socket. Lower handrail to the platform. Repeat for the right handrail.

| | |
|---|-----------------------|
|  | <p>CAUTION</p> |
| <p>An able-bodied person must stow the platform. Use caution and avoid injury.</p> | |

5-40 OTHER FEATURES

- Engage either keyed release shaft with the pump handle.
- Rotate the shaft $\frac{1}{4}$ -turn (as indicated on the adjacent decal).

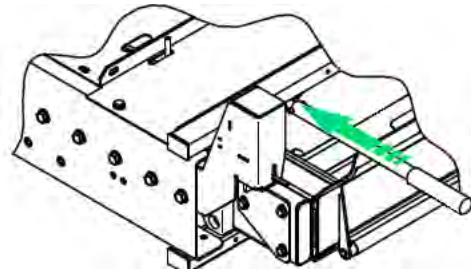


- Grasp the top edge of the rolls top, or the handrails, with two hands and push firmly. The platform moves smoothly after an initial resistance. Push platform in fully.



CAUTION


The platform must lock in place when fully stowed. Check platform retention by attempting to pull platform outward; it must not move.

- If platform does not lock, rotate either platform release shaft $\frac{1}{4}$ -turn (direction opposite to orientation shown on adjacent decal) to re-engage (lock) release shaft. Platform must be fully stowed before rotating shaft.
- Verify that stow lock striker is engaged and platform is securely stowed.

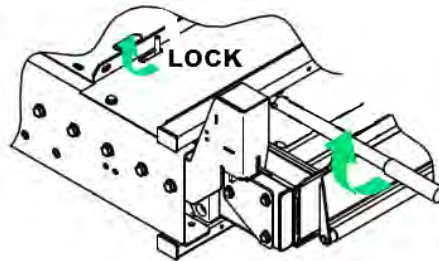

SEATS RECONFIGURATION

To accommodate a wheelchair, one row of seats must be folded and two rows must be folded and slid away. Seats may be folded on both sides of the coach to make room for a second wheelchair.

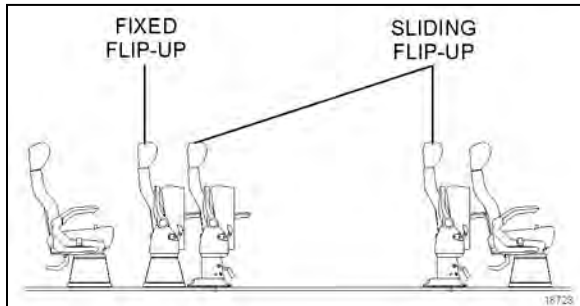

POSSIBLE SEATING ARRANGEMENT

Electrical wheelchair or tri-wheeler may require moving the sliding seats on both sides of the coach to allow enough turnaround space.



FOLDING THE CUSHION OF SLIDING SEATS

To fold the cushion of the seats, push the handle under the seats then lift up the cushion until it locks.



LOCKING LEVER FOR SLIDING SEATS

To slide a row of seats, pull the locking knob and pull up the locking lever. Repeat the operation for both locking levers. Once the sliding seats in place, pull down the locking levers.

WHEELCHAIR RESTRAINT SYSTEMS

Two types of wheelchair restraint systems may be found, depending on the type of seats:

1. 4-point wheelchair and occupant securement with floor anchorage.
2. 4-point wheelchair and occupant securement with anchorage to passengers seat pedestals.

Refer to Q'Straint publications included in the wheelchair restraint plastic pouches for further details.

4-POINT SECUREMENT WITH FLOOR ANCHORAGE

This securement system includes:

- 4 wheelchair tiedown retractors to secure a wheelchair to a vehicle floor.
- Occupant securement: lap and shoulder belts that integrate to the rear wheelchair restraints.
- Floor anchorages; installed on the vehicle floor.

Two complete sets of wheelchair restraints are kept in plastic pouches and stowed in an overhead compartment. To secure each wheelchair, four ties down retractors must be used (at all four corners).




WHEELCHAIR BELT RETRACTOR

Pull up the small lever behind the retractor to allow the belt to extend.

5-42 OTHER FEATURES


Two of the four ties down retractors have attaching pins to secure the occupant's lap belt. They must be placed at the rear of the wheelchair.

To anchor the retractors, lift the floor pocket cover, push in the retractor anchor then slide it until it locks in place. Hook one wheelchair restraint belt to each corner of the wheelchair frame (**not the wheels**) and allow the retractors to tension the belts.

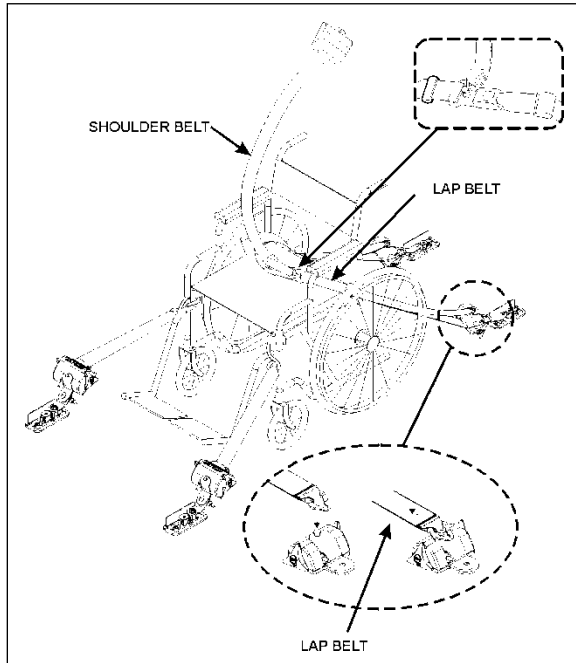

WHEELCHAIR RESTRAINTS AND ACCESSORIES

Use the blue webbing loops whenever the wheelchair restraint belt hook cannot reach a stiff member of the wheelchair chassis.

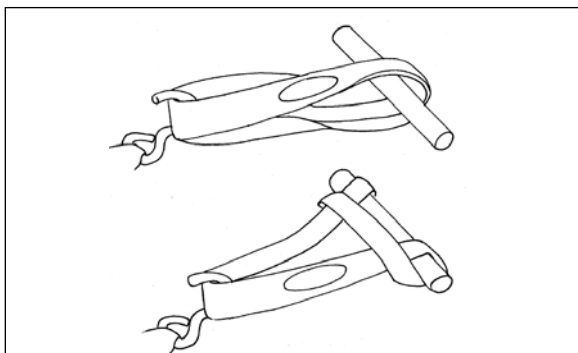

TYPICAL USE OF THE BLUE WEBBING LOOPS

To remove the restraint belts, release tension in the locking mechanism by tightening the belt slightly more with the retractor knob before pushing down the tension release lever found on the retractor. Unhook the wheelchair and allow

the belts to retract. Guide the belts in, making sure they remain untwisted as they retract.

Release the anchor by lifting the lock pin then sliding out and up the anchor from the floor pocket. Close the lid to prevent dirt from entering the pocket cavity.



WARNING

Do not let restraint belts or occupant safety belts rub against sharp edges. Do not bleach or dry clean.

Wheelchair Occupant Restraint

Secure the wheelchair occupant in the following manner:

Fix the lap belt to the pins on the retractors of the rear restraint belts. Adjust the lap belt so it sits snug across the hips. Make sure that you place the lap belt buckle on the center aisle side. Fasten the shoulder belt to the pin on the lap belt buckle. A retractor adjusts shoulder belt length automatically.



WARNING

A snug fit with the lap belt positioned low on the hips is necessary to maximize safety. The belt should not be worn or twisted. Avoid pinching the belt and/or hardware. Do not wear over rigid or breakable objects such as eyeglasses, pens or keys as these may cause injuries.



CAUTION


The safety belt buckle provided with the red release button must always be located on the center aisle side.

To release the belts, unfasten the shoulder belt then press the red release button found on the lap belt buckle.

4-POINT SECUREMENT WITH ANCHORAGE TO PASSENGERS SEAT PEDESTALS

This securement system includes:

- 4 wheelchair restraint belts and retractors with anchorage to passengers seat pedestals.
- Occupant securement: lap and shoulder belt.

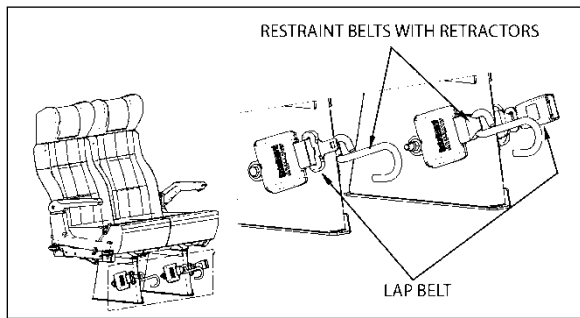

WHEELCHAIR AND OCCUPANT RESTRAINT SYSTEM

To secure the wheelchair, four restraint belts must be used (at all four corners). Hook one wheelchair restraint belt to each corner of the wheelchair frame (**not the wheels**) and allow the retractors to tension the belts.

To remove the restraint belts, push down on the tension release lever found on the retractor. Unhook the wheelchair and allow the belts to retract. Guide the belts in, making sure they remain untwisted as they retract.

Wheelchair Occupant Restraint

Secure the wheelchair occupant in the following manner:

Fasten and adjust the lap belts so it sits snug across the hips. Make sure that you place the lap belt buckle on the center aisle side. Fasten the shoulder belt by inserting the lap belt tab into the shoulder belt buckle. A retractor adjusts shoulder belt length automatically.



WARNING

A snug fit with the lap belt positioned low on the hips is necessary to maximize safety. The belt should not be worn or twisted. Avoid pinching the belt and/or hardware. Do not wear over rigid or breakable objects such as eyeglasses, pens or keys as these may cause injuries.



CAUTION

The safety belt buckle provided with the red release button must always be located on the center aisle side.

To unfasten the belts, press the red release button on the shoulder belt buckle first and then unfasten the lap belt by pressing the red release button on the lap belt buckle.


WHEELCHAIR LIFT SYSTEM - THRESHOLD WARNING SYSTEM (TWS) ADJUSTMENT

There are three verifications to perform; 1) Adjust Aiming of Acoustic Sensor Beam, 2) Test Aim of Acoustic Sensor Beam, and 3) Adjust Acoustic Sensor Timing.

Adjustment of the sensor timing is done at the factory and should not need to be repeated in the field. Readjustment should only be considered if the sensor aiming could not be adjusted to ignore both the wheelchair in the aisle and the platform during its normal movement.

ADJUST AIMING OF ACOUSTIC SENSOR BEAM

1. Place wheelchair with a passenger in the center aisle of coach, pointed at the doorway where Threshold Warning System (TWS) is installed. The TWS should not detect a wheelchair and passenger when they are located this far from the doorway.

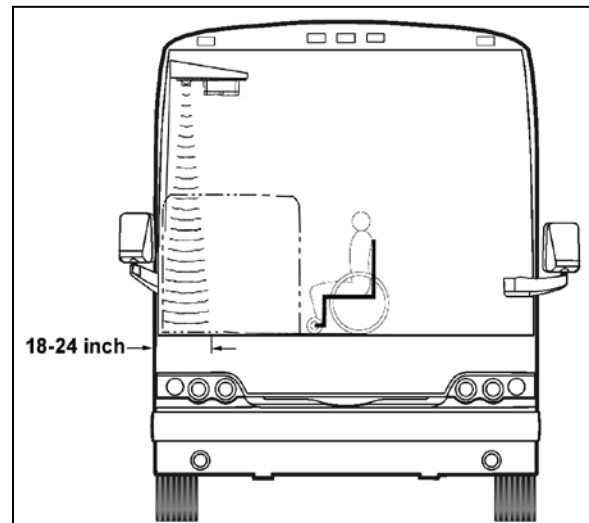

TWS AREA 23371

2. Turn power to lift on (LED on TWS module will light steady) and indicator light on the control device illuminates. If wheelchair and passengers are detected by acoustic sensors the LED will flash, the buzzer will sound and the module red light will flash. If this occurs it is necessary to adjust aiming of sensors.
3. Turn sensor angle adjustment screw clockwise to move direction of beam away from the center aisle and towards the


5-44 OTHER FEATURES

doorway. Stop adjustment when LED ceases to flash.

NOTE

Only in rare instances will adjustment be needed in the counterclockwise direction.

4. Move centerline of small wheels of the wheelchair (with passengers) to within 24 inches of doorway and repeat aiming procedure in previous step.

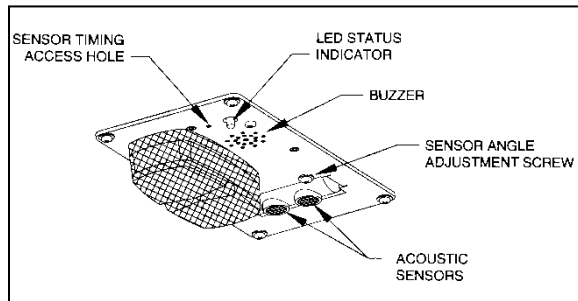

TWS MODULE DETAIL 23368

TEST AIM OF ACOUSTIC SENSOR BEAM

1. Move wheelchair and passenger slowly towards the doorway. TWS should detect wheelchair and passenger (LED will flash, buzzer will sound and the module red light will flash) when centerline of front wheels is between 18 and 24 inches from doorway.
2. Open vehicle access door above lift. Lower platform to ground and place wheelchair and passenger at rear of platform. Rolls top (rear barrier) should be up. Raise platform to floor level. This normal platform motion with wheelchair and passenger aboard should not actuate TWS. If LED does flash (buzzer will also sound and module red light will flash), turn sensor adjustment screw slightly counterclockwise.

NOTE


If an adjustment is made, repeat the previous step where wheelchair is between 18 and 24 inches from the doorway.

ADJUST ACOUSTIC SENSOR TIMING

1. Support a flat sheet of cardboard, or similar material, directly beneath TWS module at a distance of 4½ feet below module. Sheet must be facing sensors.

NOTE

Before proceeding, visually inspect sensors to verify that they are pointing directly at the floor, or nearly, and are not pointing off at an extreme angle.

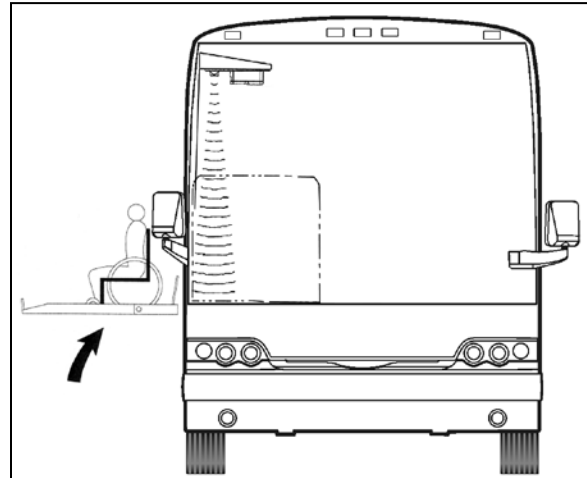

CHECKING NORMAL PLATFORM POSITION 23372

2. Note the sensor timing access hole. This hole provides access to a plunger-actuated switch that sets the sensor timing. Insert a 1/16-inch diameter wire-like object into the access hole and press the plunger inward. The LED will flash momentarily while the module establishes the distance and then remain on steady. Release the plunger when the LED ceases to flash.

NOTE

It is important that objects, such as your body, tools, seats, etc., do not interfere with the beam while the adjustment is being made.


WHEELCHAIR LIFT REMOVAL FOR STORING OR MAINTENANCE PURPOSES

1. Disconnect connector located at compartment ceiling.
2. Remove 4 fixing bolts located inside the compartment, on each side of the platform.
3. Grasp the platform and pull firmly, sustaining a constant pull so that the platform slides onto the rails until the carriage come in contact with the stops.
4. Secure the first two telescopic legs onto the platform.

NOTE

There are two telescopic legs for each platform side. The proper side is indicated onto the telescopic leg.

5. Turn telescopic leg crank to raise the carriage to be able to clear the stops.

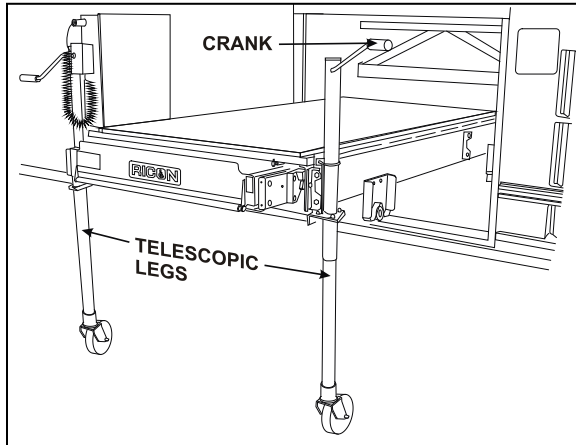

INSTALLATION OF TELESCOPIC LEGS 23333

6. Pull the platform until the rear carriage hit against the stops.
7. Secure the two rear telescopic legs onto the platform then turn telescopic leg crank to be able to clear the stops.
8. Remove platform completely.
9. Lower the platform to a minimum height using the telescopic leg cranks before moving it.



WARNING

For better stability, keep the platform at a minimum height when moving.



WARNING

Never deploy the platform from the enclosure while standing on the telescopic legs.



WARNING

Telescopic legs were designed to support and move the platform only, do not use as a work table.



WARNING

Before moving platform, make sure that floor is level and free of obstacles.

WHEELCHAIR LIFT INSTALLATION

1. Raise the platform to proper level.
2. Insert the platform so that the rear carriage clears the stops.
3. Turn telescopic leg crank until the carriage comes in contact with the rails.
4. Remove the two rear telescopic legs from the platform.
5. Insert the platform until the front carriage clears the stops.
6. Lower the front of the platform.
7. Remove the two front telescopic legs from the platform.
8. Push firmly and make sure that the platform manual release shafts have turned to lock the platform.
9. Secure the 4 fixing bolts located inside the compartment, on each side of platform. **Apply a torque of 60 lbf-ft.**
10. Reconnect connector located at compartment ceiling.



WARNING

When reinserting platform into compartment, make sure that carriage wheels are properly aligned over the L. H. side triangular rail before removing telescopic legs.

FRONT BUMPER BIKE RACK OPERATION (OPTIONNAL)

NOTE

Instruction labels affixed on the bike rack take precedence over this procedure.

The Sportworks Bike-Rack-for-Buses has been designed to make as low an impact as possible on transit operations. All loading and unloading of bicycles can be done by the bicycle rider. Sportworks suggests that loading of children's bicycles be done by an accompanying adult, but the rack can be easily loaded by young children.


5-46 OTHER FEATURES

These are the steps that should be followed when using the rack.

LOADING BIKES

1. Prepare your bike for loading. Remove water bottles, pumps and other loose items that could fall off while the bus is in motion.
2. Inform the bus driver that you will be loading your bike. You must load your bike from the curb or in front of the bus. Do not step into oncoming traffic to load your bike.
3. Squeeze handle up to release latch, then fold down the bike rack. You only need to use one hand to unlatch and pull the bike rack down, so you can hold your bike with your other hand. It is not necessary to lean your bike against the bus.
4. Lift your bike onto the bike rack, fitting wheels into proper wheel slots. Each wheel slot is clearly labeled for the front wheel. The purpose of the directional placement is to make the bike nearest the bus easier to unload.
5. Raise the Support Arm over the front tire. The Support Arm's number one purpose is to add lateral support for the bicycle when the bus is in motion or at rest. Many bikes will sit in the wheel well without the use of the Support Arm, but the rack must not be used without the Support Arm. Bikes with especially thin rims and tires will sway back and forth without its use.

The handle should be placed as close to the front brake and head tube as possible to ensure safety and security of the bike, and in all cases the handle must be closer to the head tube than the highest point of the tire.

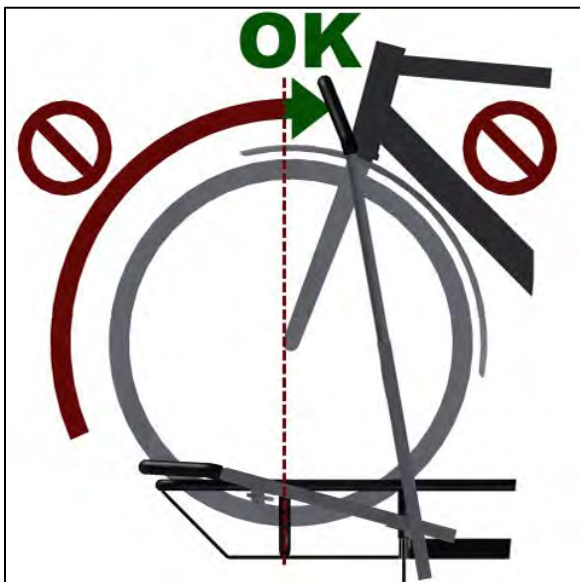

SUPPORT ARM CORRECT POSITION IMAGE: SPORTWORKS

6. Board the bus and enjoy the ride! Choose a seat near the front of the bus to keep an eye on your bike. **DON'T FORGET** you have a bike with you when you get off at your stop. New riders often do!

UNLOADING BIKES

1. Inform the bus driver that you will be unloading your bike as you approach your stop. Use the front door to exit the bus. Unload your bike from in front of the bus or from the curb, not from the street.
2. Raise the Support Arm off the tire. The Support Arm automatically folds down to a secure position.
3. Lift your bike out of the bike rack.
4. Fold up the Bike-Rack-for Buses if there are no bikes on the rack and no one else is waiting to load their bike. The bike rack locks in place.
5. Step away from the bus with your bike.


SECTION 6 STARTING AND STOPPING PROCEDURES

| | |
|--|----------|
| IGNITION SWITCH | 2 |
| STARTING THE ENGINE | 2 |
| STARTING FROM THE DRIVER'S SEAT | 2 |
| <i>Stopping the Engine</i> | 3 |
| STARTING FROM THE ENGINE COMPARTMENT | 4 |
| <i>Stopping the Engine</i> | 4 |
| COLD WEATHER STARTING | 4 |
| JUMP STARTING | 5 |
| ENGINE PROTECTION SYSTEM | 6 |
| AUTOMATIC ENGINE SHUTDOWN | 6 |
| IDLE SHUTDOWN TIMER | 6 |
| ENGINE WARM-UP | 7 |
| ALLISON TRANSMISSION WARM-UP | 7 |

6-2 STARTING AND STOPPING PROCEDURES

IGNITION SWITCH

Vehicles are equipped with an ignition lever instead of an ignition key. Use the ignition lever to activate the electrical circuit by turning it to the ON position.

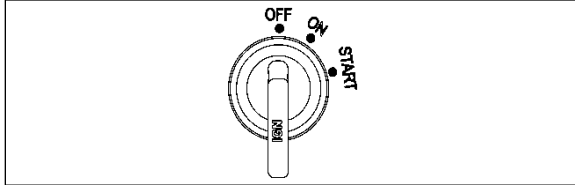

IGNITION SWITCH POSITIONS

06354



CAUTION

When the vehicle is parked overnight or for an extended period of time, the ignition switch should be set to the OFF position.

NOTE

When the battery master switch is set to the OFF position, all electrical supply from the batteries is cut off, with the exception of battery equalizer check module, ECM ignition and power supply, Allison TCM power, entrance door and fire alarm.

The ignition switch doubles as the battery master switch. Any position other than OFF activates the electrical circuits. Electrical circuits are also activated when the hazard switch is depressed. Two auxiliary master switches in series with the ignition switch are installed on the vehicle; one is located on the rear electrical panel and one in the engine compartment on the rear start panel, for maintenance ease.

The ignition switch is located on the lower left side of the dashboard. It has three positions:

Off - In the OFF position, ignition cannot take place.

The electrical circuits are not activated when the switch is in this position. Only the accessories connected directly to the batteries can be activated. Maintain the switch in this position when parked overnight or for an extended period.

On - Turn the lever clockwise to the first position to place the ignition switch to ON. Do not leave the lever in this position unless the engine is running.

Start – Use this position to crank the engine. The ignition switch is equipped with a starter protection which inhibits turning the lever to the START position if the lever has not previously been turned to the OFF position.

STARTING THE ENGINE

In normal circumstances, the engine should be started from the driver's seat. However, a rear-start panel in the engine compartment permits starting the engine from that location, mainly for maintenance purposes.

STARTING FROM THE DRIVER'S SEAT

1. Make sure the rear start selector switch located in the engine compartment is set to the NORMAL position and that the battery master switch (master cut-out) located on the rear electrical panel is set to the ON position.



BATTERY MASTER SWITCH

06850

2. Make sure the parking brake is applied, if not, apply the parking brake by pulling the parking brake control button all the way up.

NOTE

An electronic protection will prevent the engine from starting if the parking brake is not applied.

3. Turn ignition switch to ON and wait a few second;

NOTE

When the ignition is turned to ON, the M32QR ABS Pressure Modulator Valve solenoids are briefly energized. This can be audibly detected by a rapid cycling of the PMVs. If the air system is fully charged and the service brake pedal is depressed when ignition is turned to ON, the modulator valves create a sharp audible “chuff” of air pressure.

4. The transmission pushbutton shift selector automatically selects neutral (N) when the ignition switch is turned to ON;
5. With your foot off the accelerator pedal, turn ignition lever to the “START” position.(refer to Controls and Instruments chapter)
6. Brake pedal must be applied when selecting Drive (D) otherwise the transmission will stay in neutral (N).



CAUTION

Do not engage starter for more than 15 seconds at a time. If the engine does not start within 15 seconds, release engine start lever and let starter cool for one minute before attempting to restart.



CAUTION

Do not press accelerator pedal before starting. This could result in an electronic control unit fault and degrade the fuel system control.



CAUTION

Special precautions are necessary with turbocharged engines to avoid possible turbine damage. After starting, run the engine at normal idle for two minutes to allow lubricating oil to reach the turbocharger then run the engine at fast idle. Let oil pressure reach normal operating range before driving.

NOTE

If the engine does not start, return ignition lever to OFF position before attempting to restart.

NOTE

If the accelerator pedal is depressed before starting, release and wait 30 seconds before attempting to restart.

Stopping the Engine

1. Apply parking brake and place transmission in neutral (N);
2. Allow engine to idle for at least two minutes before shutting the engine OFF. This ensures that the turbine speed drops and allows time for the engine exhaust gas temperature to drop to about 300°F (150°C);
3. Shut off all electrical loads;
4. Turn the ignition switch to the OFF position.



CAUTION

Do not shut OFF engine when running above normal idle.



CAUTION

Turn the battery master switch (master cut-out) to the OFF position after parking and when left unattended for an extended period of time.

6-4 STARTING AND STOPPING PROCEDURES

STARTING FROM THE ENGINE COMPARTMENT

Switches to start and stop the engine from inside the engine compartment are mounted on a small panel above the air filter.


DANGER

Apply parking brake and place transmission in neutral (N) before starting the engine from inside the engine compartment.

1. Turn the battery master switches (ignition and master cut-out) to the ON position;



BATTERY MASTER SWITCH

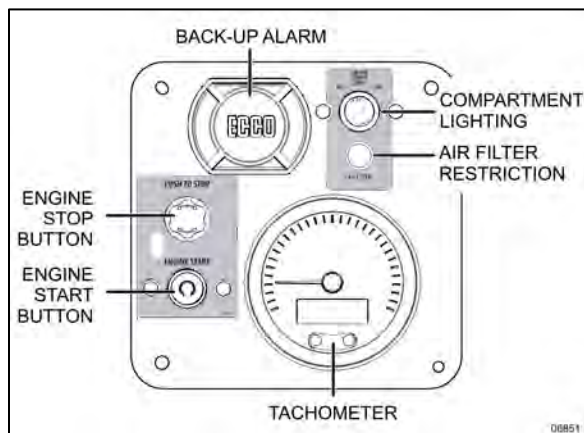

REAR START PANEL

06622_1

2. Press the *REAR START* push-button switch, release after the engine starts.



DANGER

Do not wear loose clothing when working near the engine. Stand clear of rotating components.



CAUTION

Refer to cautions in "Starting From The Driver's Seat" in this section



DANGER

Rotating shafts can be dangerous. You can snag cloths, skin, hair, hands, etc. This can cause a serious injury or death. Do not work on a shaft (with or without a guard) when the engine is running.

Stopping the Engine

To stop the engine from the engine compartment, flip the starter selector switch to the - position.



DANGER

Make sure parking brake is applied and entrance door interlock is not canceled before stopping the engine.




CAUTION

Do not stop the engine by any other method.

COLD WEATHER STARTING

When starting a cold engine, the intake air should be warmed up by using the intake air preheater. Turn the ignition switch to the ON position. The preheater will not engage at coolant temperature above 54°F (12°C). If the coolant temperature is below 54°F (12°C), the preheater will engage and will light the preheater telltale between 0 and 50 seconds, depending on the engine coolant temperature. Wait before the preheater telltale has turned off before starting the engine.


If necessary, once the engine has started, the preheater will re-engage (post heating) for the same length of time as the preheat time.

 **DANGER**


Do not use ether or other combustible starting aid fluid on any engine equipped with an intake air preheater. If the engine is equipped with a preheater, introduction of ether or similar starting aids could cause a fire or explosion resulting in severe property damage, serious personal injury or death.

JUMP STARTING


In order to avoid damage to solid-state electrical components, it is important that jumper (booster) cables are used correctly and only in emergencies. To jump start, use another 24-volt DC, negative grounded, power source. Use only jumper cables rated at 500 cranking amperes.

 **DANGER**


Injury, explosion, battery acid damage or charging system overload may result if these jump starting procedures are not precisely followed.

 **WARNING**


Wear eye protection and remove rings, metal jewelry and watches with metal bands.

 **DANGER**


The gases given off by batteries while jump starting are explosive. Do not smoke near batteries.

 **CAUTION**


Do not let the two vehicles touch. Keep a walk-through distance between the two vehicles. Make sure positive (red) and negative (black) jumper cable clamps do not touch.

 **CAUTION**

Never connect the jumper cable to the negative terminal post of the run-down battery.

 **WARNING**

Before attempting to jump start, make sure the parking brake is applied and the transmission is in neutral (N). Turn off all lights, heaters and other electrical accessories.

 **CAUTION**

Choose a booster vehicle which produces comparable amperage as your vehicle.


To jump start, proceed as follows:

1. Remove the protective plug from the booster block bulkhead connector located in the engine curbside compartment;
2. Connect to the bulkhead connector. If the boosting battery is in another vehicle, that vehicle's engine must be shut OFF before connecting;
3. Disconnect the jumper cable.
4. Install protective plug on the booster block terminal.

NOTE

Jumper cables must be rated at 500 cranking amperes. If jumper cable length is 20 feet (6 m) or less, use 2/0 (AWG) gage wires. If cable length is between 20 and 30 feet (6 to 9 m), use 3/0 (AWG) gage wires.

6-6 STARTING AND STOPPING PROCEDURES

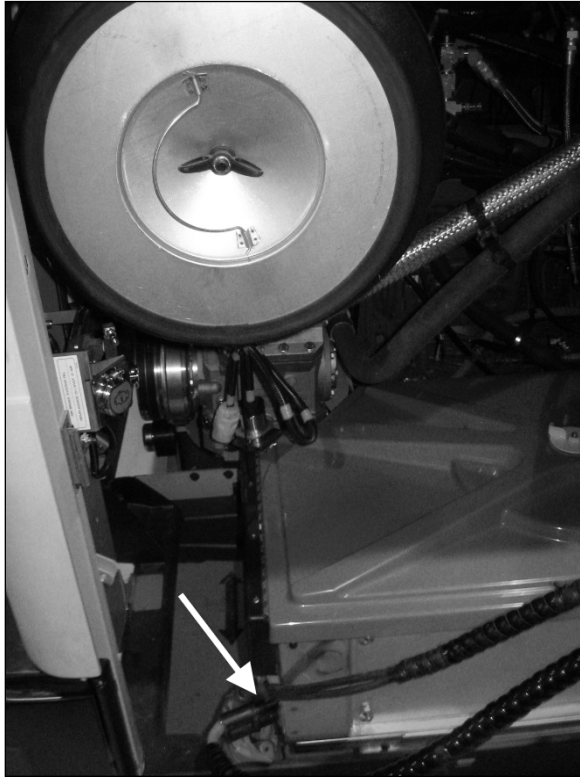

BOOSTER BLOCK LOCATION

ENGINE PROTECTION SYSTEM

The engine protection will automatically derate or stop the engine when certain engine conditions reach a critical stage.

In the event of a serious fault, the red STOP telltale light comes on and an audible alarm will sound if the engine is running.



An illuminated STOP telltale light indicates a serious problem has been detected, and the driver must respond immediately to the problem. The vehicle must be safely pulled off the road and stopped. In some instances, the engine must be switched off immediately.

AUTOMATIC ENGINE SHUTDOWN

Prior to an actual automatic shutdown, the engine will automatically derate, go to idle, and then stop as the vehicle speed gets below 2 mph.

The engine shutdown protection will automatically derate and stop the engine when one or more of the conditions listed below reaches a critical point:

- High engine coolant temperature
- High engine oil temperature
- Low engine oil pressure
- High crankcase pressure (rate of change)

After the automatic engine shutdown sequence, the engine may be restarted. To do so, turn the ignition switch to the OFF position for 7 seconds and then turn it back to ON. However, it will only operate for 30 seconds unless the problem is resolved.

Use this function sparingly and in order to move the vehicle to a safe parking place only. Excessive use may result in severe engine damage.



WARNING

Failure to take necessary action when the STOP telltale light is on can ultimately result in automatic engine derate and shutdown.

IDLE SHUTDOWN TIMER

The idle shutdown timer is programmed to shut down the engine after 15 minutes of engine idling time.


The engine will shut down at the set time under the following conditions:

- Vehicle speed is 0;
- The engine is running at normal or fast idle speed;
- The engine coolant temperature is above 120°F (49°C);
- The temperature inside the vehicle is between 59°F (15°C) and 81°F (27°C);
- The parking brake is applied;
- The transmission is in neutral (N);
- The wheelchair lift system is not in use;

Pressing the fuel pedal will prevent engine shut down and restart countdown.

ENGINE WARM-UP

After starting the engine, keep the parking brake applied and let the engine run at normal idle for two minutes to allow lubricating oil to reach the turbocharger. Increase engine speed to fast idle, using the FAST IDLE switch located on the dashboard for five minutes, without loading the engine. Monitor the gages and indicator lights to make sure all conditions are normal. If an abnormal condition is observed, stop the engine immediately and have the condition corrected.

| | |
|---|---------------|
|  | DANGER |
| Never let the engine run in an enclosed, non-ventilated area. Engine exhaust fumes contain dangerous gases which can be fatal if inhaled. Before warming up the engine, open the door(s) or move the vehicle outside. | |

NOTE

The engine will reach normal operating temperature shortly after driving. Avoid driving at full throttle until engine coolant temperature reaches 140°F (60°C).

ALLISON TRANSMISSION WARM-UP

When the transmission temperature falls below -20°F (-29°C), the CHECK telltale light illuminates after the engine is started, and a reminder tone will sound. In this case, the transmission will be locked in neutral (N) until the transmission temperature rises above -20°F (-29°C) and the CHECK telltale light goes out. The transmission will only operate in first or reverse gears until it reaches normal operating temperature.

6-8 STARTING AND STOPPING PROCEDURES

SECTION 7 SAFETY FEATURES AND EQUIPMENT

| | |
|---|-----------|
| EMERGENCY EXITS | 2 |
| SIDE WINDOWS | 2 |
| ROOF HATCH | 2 |
| EMERGENCY ENTRANCE DOOR OPENING..... | 3 |
| EMERGENCY EQUIPMENT | 3 |
| FIRE SUPPRESSION SYSTEM (AFSS)..... | 3 |
| <i>Starting the Vehicle after Triggering Of a Fire Alarm</i> | 5 |
| TIRE PRESSURE MONITORING SYSTEM (TPMS) | 5 |
| <i>Description</i> | 5 |
| FIRE EXTINGUISHER..... | 6 |
| WARNING REFLECTORS..... | 6 |
| HOISTING, JACKING POINTS & TOWING | 6 |
| LIFTING AND TOWING | 6 |
| <i>Tow eyes as lifting point</i> | 7 |
| <i>Front axle as lifting point</i> | 7 |
| TOWING WITHOUT LIFTING | 8 |
| EMERGENCY AIR-FILL VALVES AND QUICK CONNECTOR FITTINGS | 9 |
| EMERGENCY AND PARKING BRAKES | 9 |
| DAYTIME RUNNING LIGHTS | 10 |
| COMPARTMENT LIGHTING | 10 |
| BACK-UP ALARM | 10 |
| ESSENTIAL FUNCTIONS TO OPERATE THE VEHICLE (BASIC LIMP-HOME FUNCTIONS) | 11 |
| AVAILABLE FUNCTIONS..... | 11 |

7-2 SAFETY FEATURES AND EQUIPMENT

EMERGENCY EXITS


Locate and learn how to use all possible emergency exits. It is good practice to inform passengers of the location of exits and how to use them in case of an emergency.

SIDE WINDOWS

All side windows can be opened from the inside for the emergency exit.

To open a side window emergency exit, tilt up the release bar and push the bottom of the window outwards, as illustrated below. The window is hinged from the top and will not fall out.

To close the window, tilt up the release bar and pull the window back. Push down the release bar to lock shut.

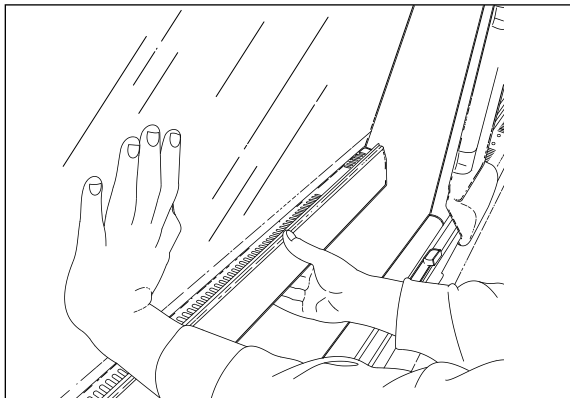


SIDE WINDOW EMERGENCY EXIT


18391

ROOF HATCH


A roof ventilation hatch designed to be open by occupants is installed in the roof at the rear of the vehicle. Another roof hatch is located in the front of the vehicle. The hatches can serve as emergency exits. In case of an emergency, push the ventilation hatch upwards (1). Turn knob ¼ turn (arrow pointing "TO EXIT") and then push knob to release the hatch (2). Push the escape hatch outwards (3). A decal with operating instructions is located on the hatch.

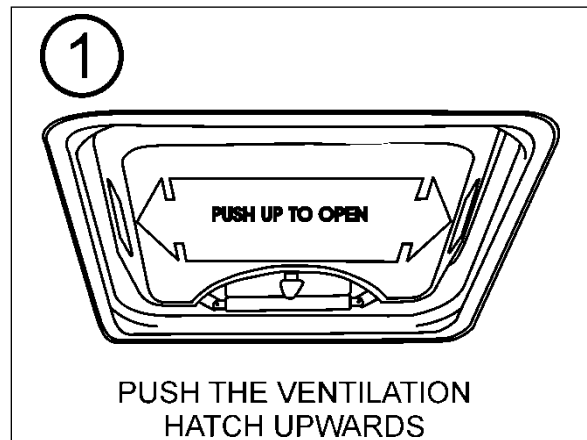

PUSH THE VENTILATION HATCH UPWARDS

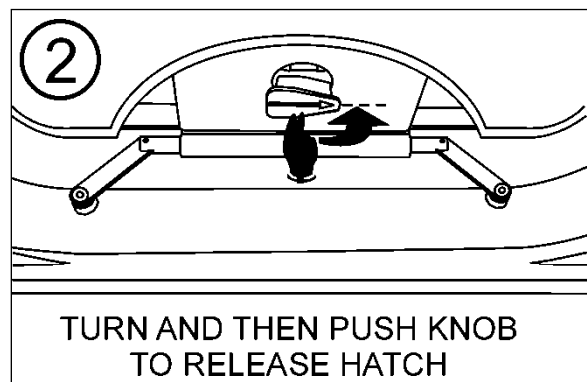

TURN AND THEN PUSH KNOB TO RELEASE HATCH

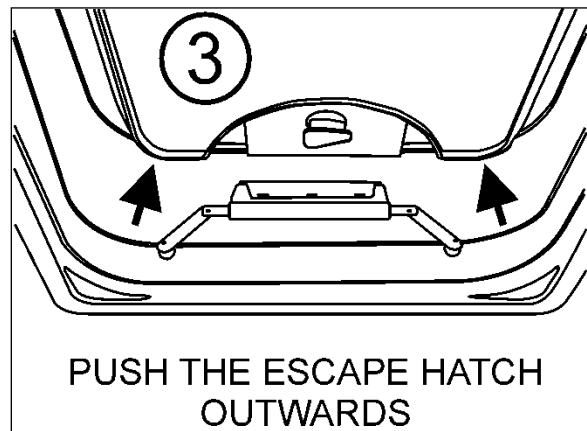

PUSH THE ESCAPE HATCH OUTWARDS

EMERGENCY ROOF ESCAPE OPENING

NOTE


In the event of ventilation blower motor failure, the roof hatch may be used to aid ventilation by pushing the hatch upwards.



CAUTION

Be aware of reduced vehicle overhead clearance when driving under overpasses with the roof hatch open.

To latch escape hatch after use, vent arms must be pushed upright in FULL OPEN VENT position. Insert edge firmly between the two sections of the bracket and then return knob to original position (arrow pointing "LATCHED") to lock the hatch. Finally, pull the hatch into closed position, one side at a time.

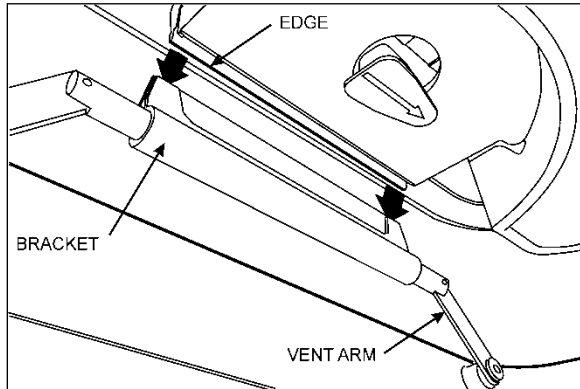


ROOF ESCAPE LATCHING

EMERGENCY ENTRANCE DOOR OPENING

An emergency release air valve located on the dashboard R.H. side near the entrance door allows emergency depletion of the door and latching cylinders. Another unlatch valve is located in the front service compartment and allows opening the door from the outside. To open the door in an emergency situation, first turn the unlatch valve in the direction of the arrows and push (or pull) the door open. To close the door after emergency opening, return the valve to its initial position, open the door using the door cylinder, then close the door normally.



INTERIOR EMERGENCY RELEASE AIR VALVE 12164

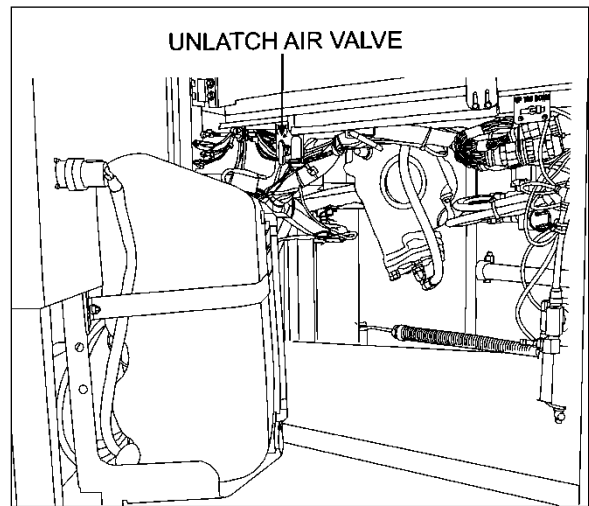

UNLATCH AIR VALVE LOCATION


12209

EMERGENCY EQUIPMENT

FIRE SUPPRESSION SYSTEM (AFSS)

The coach is equipped with the Automatic Fire Detection and Suppression System (AFSS).

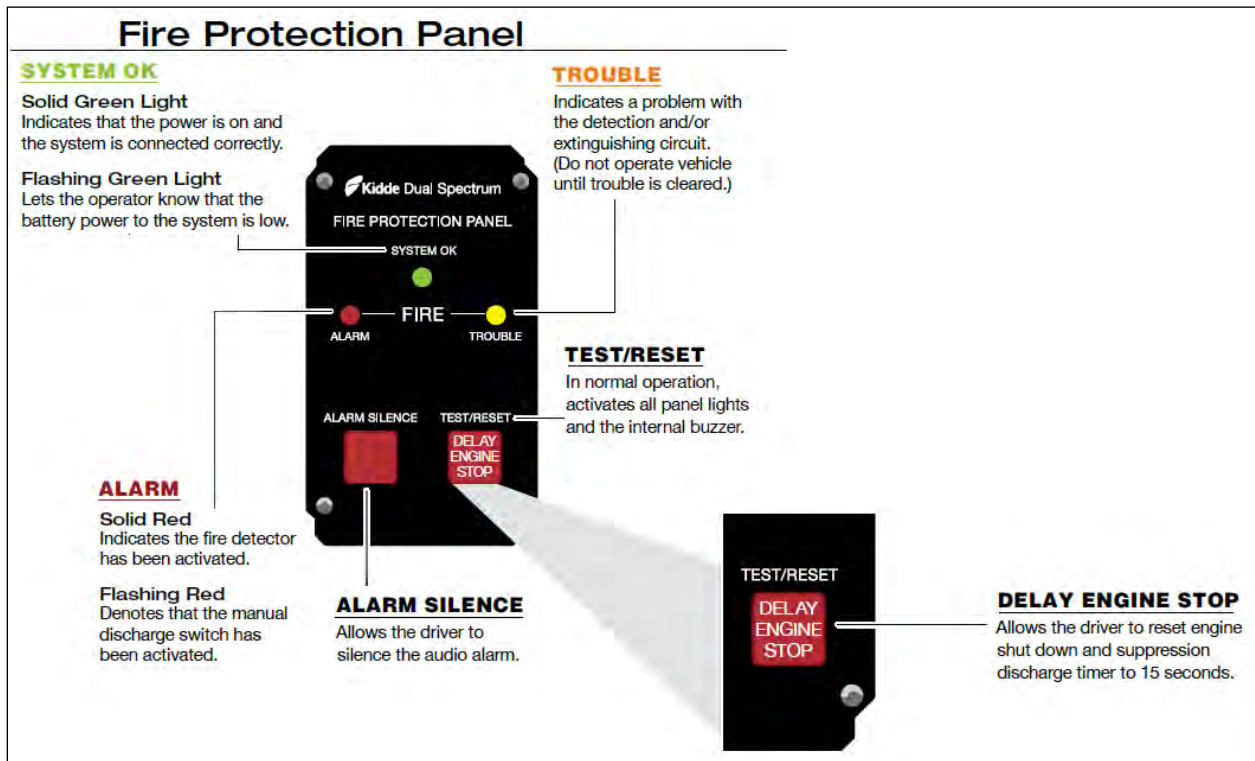


See below, a brief description of the system, the visual information provided and how it should be operated if a fire is detected.





System Operation

The protection panel and manual discharge is located in the operator's area and displays a number of lights which indicate the status of the system.


If a FIRE is detected:

-  ALARM light illuminates
-  The internal buzzer sounds
-  15 second count down begins for engine shut down and suppression discharge

NOTE: If you are not prepared to bring the vehicle to a safe stop you will need to depress the **DELAY ENGINE STOP** button.

-  Upon expiration of timer, engine shuts down
-  Suppression agent will discharge

NOTE: Activation of the manual discharge button will shut down the engine and immediately discharge the suppression system.

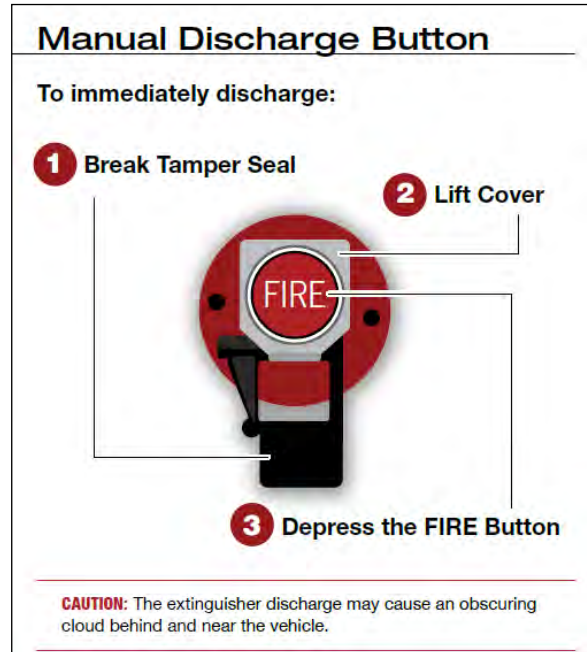


KIDDE IMAGES

Starting the Vehicle after Triggering Of a Fire Alarm

The vehicle may be started after a fire alarm without resetting the system. Refer to ignition switch sequence below. This will not reset the system; rather it will instruct the vehicle's multiplex system to ignore vehicle interface outputs from the protection panel. This feature is intended to be used only in emergency situations that require the vehicle to be restarted and moved a short distance prior to the system reset. It should not be performed if the cause of the fire alarm has not been clearly identified and corrected.

To start the vehicle, perform this ignition switch sequence within 2 seconds:

1. From the ON position, turn to **OFF**
2. Return to ON and **START**.

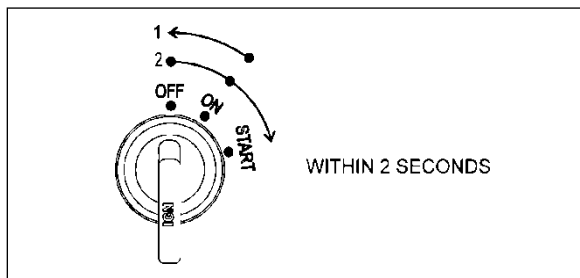

TIRE PRESSURE MONITORING SYSTEM (TPMS)

The coach is equipped with a Tire Pressure Monitoring System (TPMS). The system monitors tire temperature and pressure.

If pressure and/or temperature exceed a certain value for a set number of seconds, a warning buzzer will be heard and a message will appear in the DID. The following paragraphs describe four different situations it might occur.

1) CRITICALLY LOW PRESSURE WARNING



A critically low pressure warning will trigger if a tire pressure falls below 45 psi. An audible warning sound

will be heard and the check pictogram remains illuminated.

2) HIGH TEMPERATURE WARNING



High temperature warning will trigger if a tire temperature rise above 194°F/90°C. An audible

warning sound will be heard and the check pictogram flashes.


3) HIGH TEMPERATURE ALARM



It indicates a critical alert. A high temperature alert will trigger if a tire temperature rise above 212°F/100°C. An

audible warning sound will be heard and the stop pictogram flashes. Stop the vehicle as soon as possible.

4) TPMS MALFUNCTION



In case of system malfunction, the following warning popup message

will show on the DID to warn the driver that the TPMS might be disabled or unreliable.

Description

The system includes the following elements:

- Special tire valves;
- RF sensor inside each tire, fixed to the valve;
- 3 antennas to receive the sensors RF signal (one in the front spare tire compartment, one above the L.H. side rear wheels and one above the R.H. side rear wheels);
- A TPMS receiver connected to the antennas and located in the front electrical compartment, above the CECM;

The section of the special tire valves located inside the tire is dome-shaped to allow fixing the sensor.

Sensors provide continuous tire pressure and temperature reading.

The normal sensor battery lifespan is 5 years. The remaining lifespan is displayed as a percentage in the TPMS display.

NOTE


It is recommended to check the remaining battery lifespan when changing the tires in order to replace the sensors at the same time if they are due for replacement before the next change.

The screw fixing the sensor to the valve can only be used once because the threads are powder-coated to lock the sensor in place and prevent unfastening.

7-6 SAFETY FEATURES AND EQUIPMENT

FIRE EXTINGUISHER

The 5 lbs fire extinguisher is located on the driver's L.H. side. Instructions for use are found on the extinguishers.

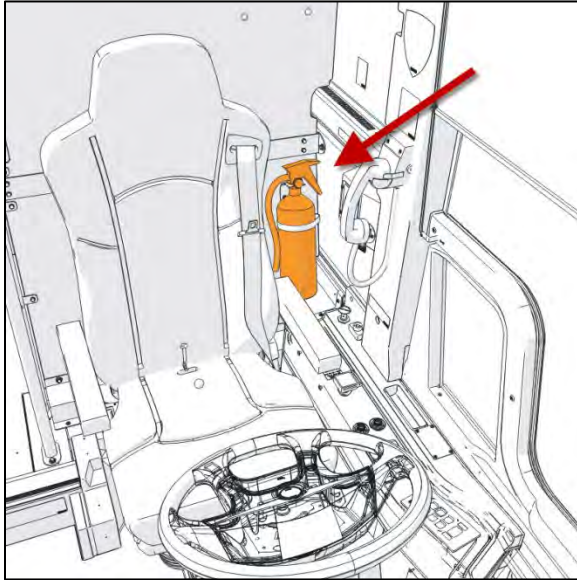


WARNING

Make sure you know how to operate the fire extinguishers in case of an emergency.

WARNING REFLECTORS

A kit containing three triangular reflectors is provided to warn other drivers on the road in case of a breakdown. The kit is located at the ceiling of the first baggage compartment. The reflectors provide visible warning of an emergency situation. The three reflectors should be placed as indicated on the box cover. These reflectors comply with FMVSS 125 (Federal Motor Vehicle Safety Standards).

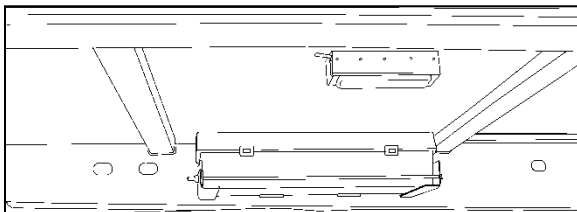

WARNING REFLECTOR LOCATION

23376

HOISTING, JACKING POINTS & TOWING

For details concerning hoisting, jacking and towing points, refer to Maintenance Information MI14-01.

LIFTING AND TOWING

The towed vehicle must be lifted from the front end only. The tow truck must be equipped with the proper lifting equipment to reach under the front axle or the front tow eyes since no other lifting points are recommended. Lifting and towing from any other point are unauthorized as it may cause serious damage to the structure. Do not unload or raise the tag axle when lifting and towing to prevent overloading the drive axle.

1. Remove both drive axle shafts to prevent damage to the transmission. Plug axle tube to prevent oil loss. Refer to Rockwell's "Maintenance manual No. 5" annexed at the end of Section 11: Rear Axle of the maintenance manual.



CAUTION


Transmission lubrication is inadequate when towing. With automatic, semi-automatic or manual transmission, the axle shafts or driveshaft must be disconnected to avoid serious damage to the transmission. Do not attempt to push or pull-start the coach.

2. If required, raise the front of the coach then install wooden blocks underneath front tires to allow lifting equipment to reach under the front axle.



Tow eyes as lifting point

- a) Use the tow eyes fixed to the vehicle frame between the front axle and the front bumper.

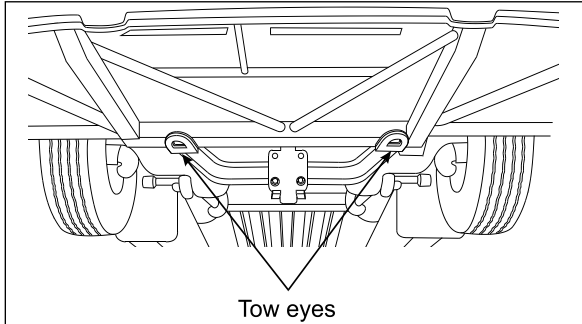

TOW EYES UNDER VEHICLE 18401

- b) Install axle forks onto tow bar, position axle forks around beam and into tow eyes.



ADEQUATELY SECURE THE TOW EYES TO THE TOW TRUCK LIFTING ATTACHMENT WITH CHAINS



AXLE FORK

Front axle as lifting point

- a) Use axle forks and lift the vehicle from under the front axle, and adequately secure the axle onto the tow truck lifting attachment with chains.



LIFTING FROM UNDER THE FRONT AXLE

- 3. Operate the engine when towing to maintain brake system air pressure. If the engine cannot be operated, connect an external air pressure line from the tow truck to the front towing air supply connector (see section 2 for the location). The emergency fill valve in the front service compartment does not supply air pressure to the brake system. The air pressure must be a minimum of 75 psi (520 kPa), and the line should be attached to the airline with a clip-on chuck.
- 4. Observe safety precautions when towing.



CAUTION

Do not tow the vehicle without external air pressure applied to the emergency fill valve if the engine does not operate. Without brake system air pressure, the brakes may apply automatically if system air drops below 40 psi (275 kPa). If failure prevents releasing the parking brakes with air pressure, disengage the parking brakes mechanically.



CAUTION

Make sure a safe distance is kept between the front of the coach and the tow truck. This space ensures that coach does not suffer damages when being towed.

7-8 SAFETY FEATURES AND EQUIPMENT



CAUTION

Make sure axle shafts or driveshaft are installed correctly after towing. Tighten axle shaft and driveshaft nuts to the correct torque settings. Do not invert shafts.

TOWING WITHOUT LIFTING



CAUTION

When towing vehicle without lifting, use only a tow truck with a solid link tow bar and related equipment. All other means of towing are unauthorized. Tow only from the front of the vehicle.

1. Remove both drive axle shafts to prevent damage to the transmission. Plug axle tube to prevent oil loss. Refer to Rockwell's "Maintenance manual No. 5" annexed at the end of Section 11: Rear Axle of the maintenance manual.



CAUTION

Transmission lubrication is inadequate when towing. With automatic, semi-automatic or manual transmission, the axle shafts or driveshaft must be disconnected to avoid serious damage to the transmission. Do not attempt to push or pull-start the coach.

2. Operate the engine when towing to maintain brake system air pressure. If the engine cannot be operated, connect an external air pressure line from the tow truck to the front towing air supply connector (see section 2 for the location). The emergency fill valve in the front service compartment does not supply air pressure to the brake system. The


air pressure must be a minimum of 75 psi (520 kPa), and the line should be attached to the airline with a clip-on chuck.



CAUTION

Do not tow the vehicle without external air pressure applied to the emergency fill valve if the engine does not operate. Without brake system air pressure, the brakes may apply automatically if system air drops below 40 psi (275 kPa). If failure prevents releasing the parking brakes with air pressure, disengage the parking brakes mechanically.

3. Position the tow truck so that the tow bar contacts the front bumper of the vehicle.
4. Attach the tow truck chains only in the tow eyes of the vehicle and take up all the slack.
5. Use a safety chain as applicable.
6. Observe safety precautions when towing.

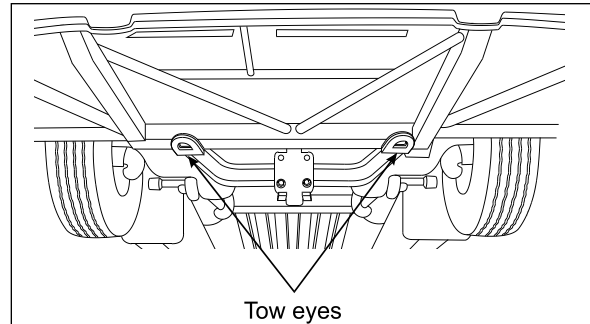

Tow eyes

TOW EYES UNDER VEHICLE

18401



CAUTION

Make sure axle shafts or driveshaft are installed correctly after towing. Tighten axle shaft and driveshaft nuts to the correct torque settings. Do not invert shafts.

EMERGENCY AIR-FILL VALVES AND QUICK CONNECTOR FITTINGS


The vehicle is equipped with three (3) air system emergency air-fill valves to supplement the air system when air pressure is low and the engine cannot be operated.

Air system emergency valves are fitted with either standard tire valve stem or quick connector fitting. The air systems can be filled using any standard external air supply line.


Air-fill valves are as follows:

- 1- One air-fill valve fitted with standard tire valve stem located in the engine compartment supplies air for all systems through the air dryer (brakes, suspension and accessories).
- 2- One air-fill valve fitted with standard tire valve stem located in the front service compartment supplies air for accessories only.
- 3- One quick connect air-fill fitting identified **AIR SUPPLY** located behind the flip down access door on the front bumper supplies air from a tow truck for all systems through the air dryer (brakes, suspension and accessories).

One quick connector fitting identified **BRAKE** located behind the flip down access door on the front bumper supplies air for the operation of the vehicle service brake from the tow truck.

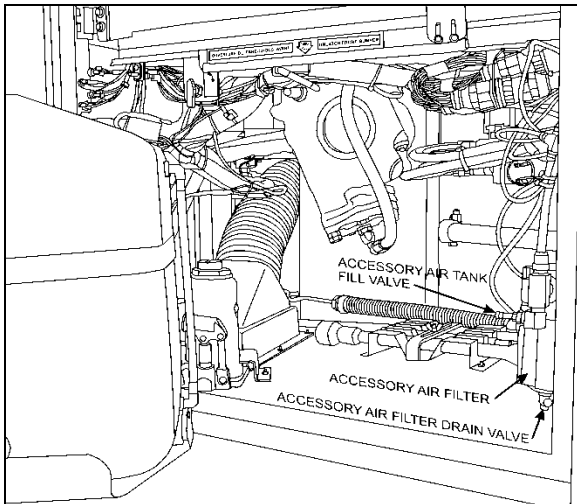

AIR-FILL VALVE IN FRONT SERVICE COMPARTMENT
12210

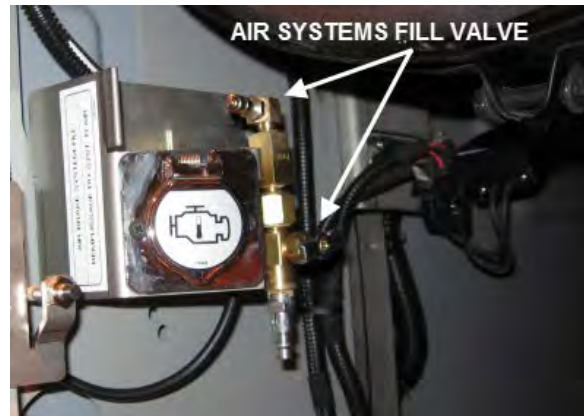

AIR-FILL VALVE IN THE ENGINE COMPARTMENT 12211_1



QUICK CONNECTOR FITTINGS ON FRONT BUMPER



CAUTION

Air filled through the three emergency air-fill valves will pass through the standard air filtering-drying system. Do not exceed 144 psi (993 kPa).

EMERGENCY AND PARKING BRAKES

During normal operation, if air pressure in all brake circuits drops below 60 psi, spring-loaded emergency brake will be immediately applied at full capacity to the drive axle wheels to stop the vehicle.

Spring-loaded parking brake is applied by pulling up the control valve knob located on the L.H. lateral console.

The parking brake is not designed to be used as a service brake. For normal driving conditions, the control valve knob must remain in the down position.

7-10 SAFETY FEATURES AND EQUIPMENT



DANGER

Always apply the parking brake before leaving the driver's seat.

NOTE

Only use the parking brake to supplement the service brake to stop the vehicle in emergency conditions. The stopping distance will be considerably longer than when using normal service brake.

NOTE

Before releasing the parking brake by pushing down the control valve knob, check the pressure gages to make sure that the brake system air pressure is greater than or equal to 95 psi (655 kPa)

NOTE

A beep will sound if the ignition switch has been turned off without applying the parking brake. The same beep will sound if pressure is still applied to the service brake pedal.

NOTE

The stoplights will automatically turn on when the parking brake is applied when the ignition key is turned to the ON position.

DAYTIME RUNNING LIGHTS

The inner lamps which are the high beams illuminate automatically when the engine is started and the parking brake is released to serve as daytime running lights. The daytime running lights provide added safety by making the traveling vehicle more visible to other drivers during the day.

The daytime running lights system turns the headlights on when:

The engine is running;

The parking brake is released;

The exterior lighting switch is set to the OFF position or pressed to the first position.



WARNING

Do not drive with only the daytime running lights at night because the tail and marker lights are not turned on in that situation and the high beams can blind other drivers. For night driving, turn ON the headlights by depressing the exterior lighting rocker switch to the second position.

COMPARTMENT LIGHTING

Baggage compartments and front service compartment lights are automatically turned ON when the corresponding compartment door is open. A pictogram will appear on the status bar of the Driver Information Display (DID) when a baggage compartment door is open.

BACK-UP ALARM

The back-up alarm alerts pedestrians and other drivers when the vehicle is being backed up. Take extra precautions whenever backing-up. If necessary, use a guide to provide directions when backing-up. The alarm is automatically activated when the transmission is put in the reverse (R) range.

ESSENTIAL FUNCTIONS TO OPERATE THE VEHICLE (BASIC LIMP-HOME FUNCTIONS)

Even with a defective MCM (Master Chassis Module) or a CAN network problem, essential base functions are maintained to rear start the vehicle from the engine compartment and drive in a secure manner.

AVAILABLE FUNCTIONS

- Startup: Turn on the ignition in the driver's area and rear start the vehicle from the engine compartment,
- Opening the door: Functions normally,
- Closing the door: Manually pull on the door and it will lock automatically,
- Windshield wipers: Wipers functions at 1st speed only,
- Headlights: Low beams only,
- Directional signals: Rear and front only,
- Stoplights: 2 upper stoplights + high-mounted stoplight are functional,
- HVAC: Functional with set point fixed at 68°F (20°C), evaporator and condenser fixed at speed 1, defroster fixed at speed 4.



CAUTION

The following directives must be followed.

- Never connect a battery charger when the ignition is at the ON position on a vehicle with a CAN defective or certain functions will start up by themselves,
- Disconnect the charger before starting the vehicle, if not the default functions will not activate,
- If the default mode does not activate, try to turn the ignition OFF while ensuring that no charger is connected and then restart the vehicle.

SECTION 8 CARE AND MAINTENANCE

| | |
|---|----------|
| CLEANING..... | 3 |
| SEAT UPHOLSTERY | 3 |
| <i>Removal Of Stains And Marks.....</i> | 3 |
| <i>Beverage Stains.....</i> | 3 |
| <i>Alcoholic Beverage Stains</i> | 3 |
| <i>Burns.....</i> | 3 |
| <i>Cosmetic Stains</i> | 3 |
| <i>Ink Stains</i> | 3 |
| <i>Blood, Urine Or Vomit Stains</i> | 3 |
| <i>Copying Ink - Ball-Point Pen Ink.....</i> | 3 |
| <i>Marking Ink (Felt-tip Pens).....</i> | 4 |
| <i>Oil, Grease And Paint</i> | 4 |
| <i>Rust Stains.....</i> | 4 |
| <i>Tar.....</i> | 4 |
| <i>Chewing Gum</i> | 4 |
| PLASTIC AND VINYL..... | 4 |
| WINDOWS..... | 4 |
| STAINLESS STEEL | 4 |
| FORMICA | 4 |
| CARPET | 4 |
| RUBBER COMPONENTS..... | 4 |
| FLOOR CLEANING..... | 4 |
| EXTERIOR SURFACES..... | 4 |
| <i>Tar Or Oil</i> | 5 |
| <i>Insects.....</i> | 5 |
| <i>Tree Sap</i> | 5 |
| WINDSHIELD | 5 |
| <i>Wiper Blades.....</i> | 5 |
| FLUID LEVEL VERIFICATION..... | 5 |
| ENGINE OIL LEVEL..... | 5 |
| TRANSMISSION OIL LEVEL | 6 |
| <i>Cold Check</i> | 6 |
| <i>Hot Check</i> | 6 |
| POWER STEERING FLUID LEVEL..... | 7 |
| DRIVE AXLE WHEEL HUBS | 7 |
| FRONT AND TAG AXLE WHEEL HUBS | 7 |
| COOLANT FLUID LEVEL..... | 7 |
| <i>Level switches.....</i> | 8 |
| WINDSHIELD WASHER RESERVOIR..... | 8 |
| OTHER VERIFICATIONS..... | 9 |
| AIR TANK PURGE | 9 |
| FIRE EXTINGUISHER | 9 |
| PRIMARY FUEL FILTER..... | 9 |
| A/C COMPRESSOR BELTS | 10 |
| FAN AND ALTERNATOR DRIVE BELTS | 10 |
| ENGINE AIR FILTER RESTRICTION INDICATOR..... | 10 |
| A/C AND HEATING SYSTEM AIR FILTERS | 11 |
| <i>Driver's Area Air Filters.....</i> | 11 |
| <i>Passengers Area Air Filter</i> | 11 |
| <i>Air Filters in the Overhead Compartments</i> | 11 |
| HOSE INSPECTION | 11 |

8-2 CARE AND MAINTENANCE

| | |
|---|-----------|
| <i>Hose Service Life</i> | 12 |
| LUBRICATION | 12 |
| WHEELS AND TIRES | 12 |
| WHEEL BEARINGS | 12 |
| SERVICE BRAKE TEST | 12 |
| PARKING BRAKE TEST | 12 |
| EXTERIOR LIGHTING VERIFICATION..... | 13 |
| <i>Exterior Lighting Test Mode</i> | 13 |
| <i>Prior using the test mode</i> | 13 |
| <i>Activating the test mode</i> | 13 |
| <i>Stopping the test mode</i> | 13 |
| FIRST SERVICE ON NEW VEHICLE | 14 |
| ENGINE OIL | 14 |
| GENERAL RECOMMENDATIONS..... | 14 |
| WALK-AROUND INSPECTION (BEFORE EVERY TRIP) | 18 |

CLEANING

The cleaning information provided in this section is regarded as recommended cleaning practices. Cleaning results may vary depending on the condition of the stain. Always clean stains promptly for best results.

Test an inconspicuous area prior to cleaning and follow the manufacturer's directions.

NOTE

Use only approved cleaning products. Never use stain protection products on new fabrics. To prevent permanent staining of fabrics, clean stains as soon as possible after they occur. Incorrect treatment of stains can worsen them. Get help from a cleaning specialist to remove stubborn stains.



CAUTION

Custom fabrics and materials may require different cleaning and maintenance practices. Consult your supplier.

SEAT UPHOLSTERY

Firmly beat the fabric with a blunt object, such as a wooden paddle, to release dust and dirt. Vacuum the seat fabric in the direction of the stitching using an upholstery nozzle.

NOTE

The abrasive nature of dirt and grit will reduce upholstery life expectancy. Vacuum regularly.

Always begin with lukewarm water and a white cloth for most stain removal before applying any cleaning agent.

Removal Of Stains And Marks

Depending on the nature of the stain, apply one of the two methods explained below to remove stains and marks on wool plush.

Method 1:

1. Apply a nonflammable solvent to stained area with a clean, white absorbent rag;
2. Clean stain by starting at the outer edges of the stain and working in toward the center;
3. Blot affected area frequently with a clean, dry absorbent cloth to prevent stain rings caused by excess solvent.



WARNING

Use solvents in a well-ventilated area. Open all windows and doors.

Method 2

1. Wet the stain with a solution of household detergent and lukewarm water. Do not soak the stain;
2. Rub the stain with a damp cloth;
3. Rinse cloth after each application.



CAUTION

Do not use soap, soap powder, ammonia, soda, bleach or cleaning products containing any of these compounds.

Beverage Stains

Remove beverage stains by following method one. If stain persists, repeat method one using methylated spirits instead of solvent.

Alcoholic Beverage Stains

Remove alcoholic beverage stains by wetting the stain with water, then cleaning following method two.

Burns

Scrape burnt area using a knife or razor blade then clean following method two. Consult an upholstery specialist when dealing with extensive burns.

Cosmetic Stains

Remove stains left by cosmetics by following method one then method two.

Ink Stains

Remove ink stains following method two. If stain persists, apply a warm oxalic acid solution. Rinse with water.

Blood, Urine Or Vomit Stains

Remove such stains by following method two.

Copying Ink - Ball-Point Pen Ink

Treat with methylated spirits, blotting frequently to avoid spreading stain, followed by method two.

8-4 CARE AND MAINTENANCE

Marking Ink (Felt-tip Pens)

Treat with Methyl-Ethyl-Ketone (MEK) followed by method two.

Oil, Grease And Paint

Remove excess using a knife. Treat with method one followed by method two. If stain persists, repeat the procedure.

Rust Stains

Remove rust stains by following method two. Apply a warm oxalic acid solution to stained area. Rinse with water.

Tar

Soften tar with benzene, then treat using method one followed by method two.

Chewing Gum

Soften gum with cyclohexane. Carefully scrape off stains using a sharp knife or razor blade.

PLASTIC AND VINYL

Clean plastic and vinyl trim using a clean damp cloth or sponge. For vinyl trim marks, use a lukewarm all-purpose cleaner or a mild saddle soap. Remove water spots and soap traces using a clean damp cloth or sponge. Dry with a clean soft cloth.

Remove grease, tar or oil stains with a clean cloth or sponge and an all-purpose or solvent-type vinyl cleaner.

Apply a colorless vinyl or leather protective product to maintain the luster and pliability of the plastic or vinyl surface.

WINDOWS

Clean the inside of the windows with a solution of one part vinegar to ten parts water.

STAINLESS STEEL

Use a stainless steel cleaner and follow the manufacturer's instructions. Stainless steel cleaning solution may be ordered from Prevost Car Inc. quoting part number 68-0356.

FORMICA

Remove stains on Formica surfaces with a household detergent, methylated spirits or mineral turps. Clean with a mild abrasive and water solution if stain persists.

CARPET

Vacuum carpets regularly to prolong carpet life.

RUBBER COMPONENTS

Use only pure water or glycerin to clean stains on rubber components.



CAUTION

Never use solvents on rubber components.

FLOOR CLEANING

Clean vinyl floors with a quality nonionic detergent cleaner. Follow the manufacturer's recommendations for cleaning.

Remove any excess detergent solution using a wet/dry vacuum or mop. Rinse floor with a solution of one part Clorox to ten parts warm water.

Polish dry floor using a high-speed buffer and a smooth red 3-M polishing pad.

Mop floor periodically with a solution of 5 per cent Clorox in warm water.

NOTE

For custom or special floor covering materials, consult the manufacturer or your converter for information on how to clean and maintain these types of floors.



CAUTION


Using a water hose to clean the floor is prohibited since it could cause electrical shorts or damage the electrical system.


EXTERIOR SURFACES

Frequent washing and waxing of the vehicle exterior will help protect the finish and luster. The paint finish is attacked by the abrasive effects of airborne particles and corrosive pollutants.

Before washing the exterior of the vehicle, close the fresh air dampers using the "REC" button located on HVAC control panel and on the air intake duct in the evaporator compartment. Install keyhole protectors to prevent water from penetrating. Rinse vehicle with water to remove all loose dirt. Wash vehicle using a quality brand car wash soap. Follow the manufacturer recommendations for cleaning. Rinse well with water.

The vehicle exterior should be cleaned, waxed and buffed when water droplets no longer form on the painted surfaces.

| | |
|---|------------------|
|  | <h2>CAUTION</h2> |
| <p>Hot water can damage paint. Keep water cool or lukewarm.</p> | |

| | |
|---|------------------|
|  | <h2>CAUTION</h2> |
| <ul style="list-style-type: none"> • Make sure cleaning solutions are not harmful to painted surfaces. Read the manufacturer's instructions before using. • Do not spray water jet directly into fresh-air inlet dampers. • Do not aim high pressure water jet at radiator doors. This could damage the radiator fins. | |

To prevent corrosion, remove caked-on dirt and road salt from the vehicle underbody using a high pressure water jet. Clean wheel housings, bumpers, muffler, tailpipe and brackets.

Carry out corrosion prevention cleaning at least twice a year. Spray underneath of the vehicle and let soak before cleaning. Let engine and exhaust system cool down before cleaning.

Tar Or Oil

Remove tar or oil as soon as possible with an approved automotive tar and oil remover or turpentine. Thoroughly clean area with car wash soap and water. Let dry, then wax.

Insects

Remove insect stains as soon as possible with a lukewarm soap and water or insect remover.

Tree Sap

Remove tree sap or bird droppings with lukewarm soap and water. Do not allow to harden.

WINDSHIELD

To prevent windshield wiper streaking, keep silicone sprays away from the windshield. Remove road film and wax build-up from windows with lukewarm soap and water or with an alcohol-based cleaning agent. If a chamois is used to dry and polish glass, use it exclusively for that purpose.

Wiper Blades

To avoid tearing frozen wiper blades, loosen them before removing. Remove and clean wiper blades periodically with an alcohol-based cleaning solution. Clean wiper blades using a sponge or soft cloth.


FLUID LEVEL VERIFICATION

Periodic inspection of oil and fluid levels is the most economical and easiest way to help your vehicle perform at its best. Rigorous oil level inspection and replacement will greatly help minimize expensive and unscheduled repairs.


ENGINE OIL LEVEL

Check engine oil level when the engine is still warm and with the vehicle parked on a level surface. Shut *OFF* engine and wait at least 10 minutes for oil to drain into the oil pan before checking. Check engine oil level daily or before each trip. Add oil as required. Do not overfill. Remove dipstick, wipe clean and fully reinsert to ensure an accurate reading. Remove dipstick and check engine oil level.

Do not let the oil level fall below the marking on the dipstick. **Do not** overfill so the level is above the upper marking on the dipstick. Add oil through the oil filler pipe as required in order to maintain level within the safe range

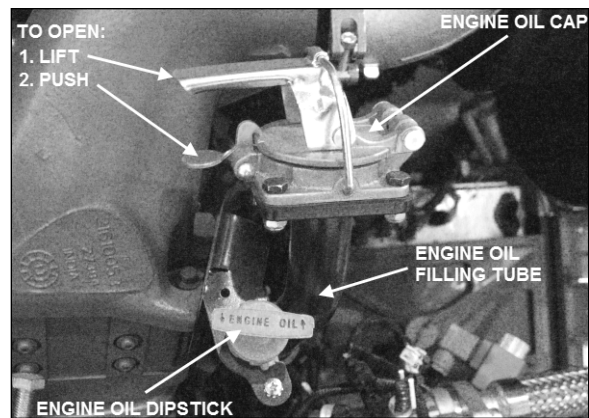


ENGINE OIL DIPSTICK - VOLVO D13 ENGINE 01192

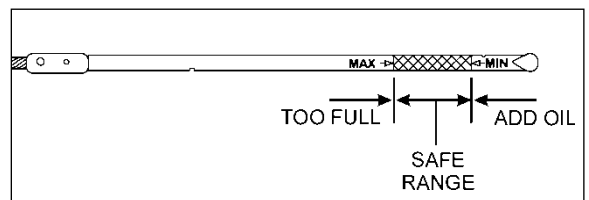


VOLVO D13 ENGINE OIL LEVEL DIPSTICK 01195


TRANSMISSION OIL LEVEL


DANGER

To prevent personal injury, do not service transmission wearing loose clothing. Stand clear of the engine and rotating components while checking the oil level.


CAUTION

Do not mix fluid types or brands because of possible incompatibility.


CAUTION

Use clean fluid and containers when filling transmission. Never use containers that have contained water or antifreeze (Glycol).

Transmission fluid level may be checked using dipstick or transmission control pad display. The oil level sensor (OLS) is standard in your transmission. With the OLS and Allison 5th generation shift selector, you can get a more accurate electronic fluid level check than with a dipstick.

For more information on how to use the shift selector display to check the transmission oil level, refer to Appendix B under "Allison transmission oil level check using the pushbutton shift selector" in this manual.

The transmission fluid level dipstick is accessible through the engine compartment rear door and is located on the left side of the engine.



ENGINE L. H. SIDE

01189_2

To check the transmission fluid level, a "cold check" and a "hot check" must be performed. A

cold check must be made when the transmission fluid is between 60°F and 120°F (16°C and 50°C).


NOTE

Perform the cold check first to verify the transmission fluid level before performing the hot check.


To prevent dirt and foreign matter from entering the transmission, clean the end of the oil fill tube before removing the dipstick. To remove dipstick, unscrew filler cap approximately three turns and pull out the dipstick.

Cold Check

Run the engine until the transmission fluid temperature is between 60°F and 120°F (16°C and 50°C). With the engine idling, make sure the parking brake is applied and the transmission is in neutral (N). Remove and wipe the dipstick with a clean cloth. Check oil level. If the oil level is within the COLD RUN band, the oil level is correct and a hot check can be performed. If the oil level is on or below the lower line of the COLD RUN band, add oil until the level lies within the COLD RUN band. If the oil level is above the COLD RUN band, drain oil until the level is within the band.

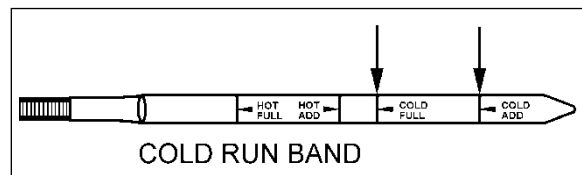

TRANSMISSION FLUID LEVEL DIPSTICK (TYPICAL) 07050



CAUTION

The oil level rises as oil temperature rises. Do not add oil above the "cold run" band before the transmission reaches 180°F to 220°F (82°C to 104°C).

Hot Check


Make sure the transmission fluid temperature is between 180°F and 220°F (82°C and 104°C) before performing the hot check. Run the engine between 1,000 and 1,200 RPM for approximately one minute to purge air from the system. With the engine idling and the parking brake applied, shift transmission from forward (D) to reverse (R) and back into neutral (N) to fill clutch cavities with oil. Remove and clean dipstick, then check oil level. If the oil level is on

or under the lower HOT RUN line, add just enough oil to bring up the level to the middle of the HOT RUN band.

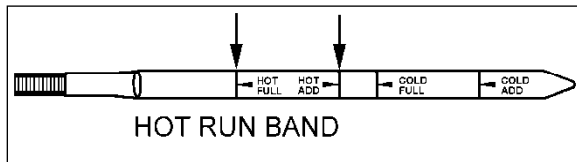


TRANSMISSION FLUID LEVEL DIPSTICK (TYPICAL) 07049

Replace dipstick and tighten the filler tube cap until the rubber seal is correctly seated.

| | |
|--|------------------|
|  | <h2>CAUTION</h2> |
| <p>Do not overfill the transmission fluid reservoir. Severe damage may result.</p> | |

POWER STEERING FLUID LEVEL

The power steering hydraulic fluid tank is located in the engine compartment, close to the engine air filter (refer to “Engine Compartment Overview” image in COACH EXTERIOR section).

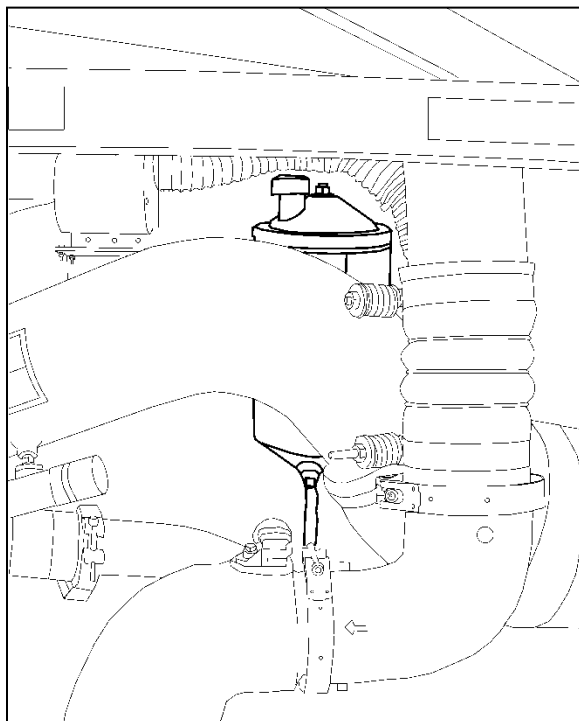

ENGINE COMPARTMENT 14059

Check fluid level as follows:

1. Stop engine, open engine compartment doors and place rear start switch to OFF position;

2. Unscrew and remove the dipstick located on top of the power steering fluid tank and wipe with a clean rag;
3. Replace dipstick in the tank, then remove to check fluid level;
4. Add hydraulic fluid until it reaches the FULL mark on the dipstick;
5. Replace and tighten dipstick;
6. Place engine rear start switch to NORMAL position. Close engine compartment doors.

DRIVE AXLE WHEEL HUBS


The unitized bearings in the axle drive and the wheel ends are pre-lubricated for life and there is no need or facility for re-lubrication. Maintain differential oil at correct level to ensure adequate lubrication of the carrier.

FRONT AND TAG AXLE WHEEL HUBS

The unitized hub bearings used on the NDS range of axles are non-serviceable items. Bearings are pre-adjusted, lubricated and have seals fitted as part of the manufacturing process. The bearings are greased for life and there is no need or facility for re-lubrication.

COOLANT FLUID LEVEL


The coolant system has two tanks; the surge tank (A) and the recovery tank (B).

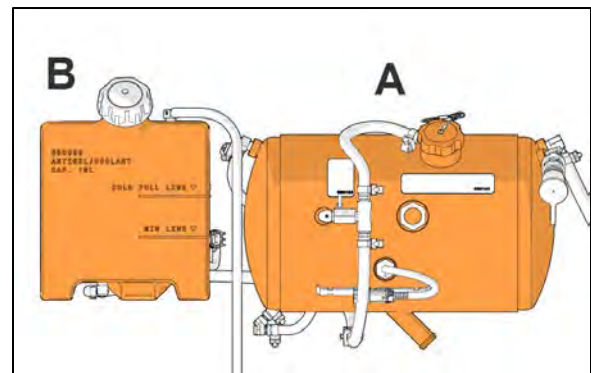

Check the coolant level into the recovery tank (B) when the engine is cold (room or ambient temperature).

- If the coolant level into the recovery tank is lower than the MIN LINE, use the recovery tank filler cap to add coolant until reaching the FULL LINE.

8-8 CARE AND MAINTENANCE

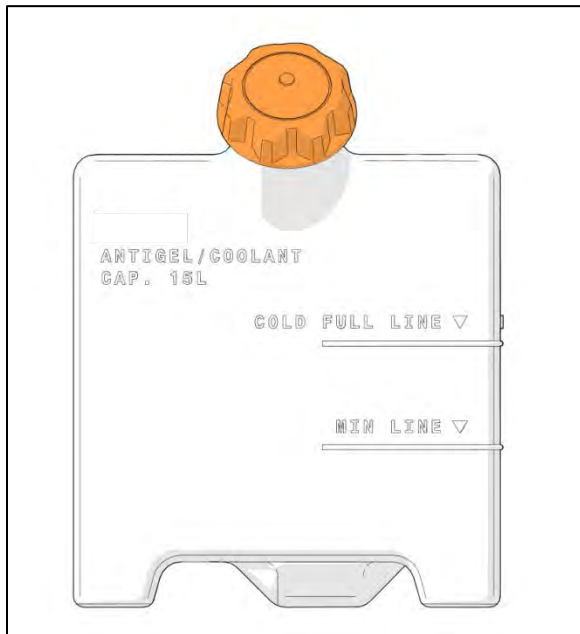

Fill the recovery tank with the same 50/50 water-antifreeze mixture already in the cooling system. **Do not** mix two different types of coolant. Refer to the Maintenance Manual for proper coolant type specifications or see the label affixed near the coolant surge tank on the vehicle.

Level switches

Both tanks are equipped with a level switch. A message (pictogram) will appear on the cluster according to which switch is activated.

The table below shows the pictograms and the description.


| PICTOGRAM | DESCRIPTION |
|---|---|
| CHECK ENGINE COOLANT LEVEL AT NEXT STOP | Low engine coolant level Warns the driver that the engine coolant level has reached the recovery tank low level switch. Add coolant whenever possible. Use recovery tank filler cap. |
| ENGINE COOLANT LEVEL CRITICALLY LOW | Critically low coolant level Warns the driver that the engine coolant level has reached the surge tank low level switch. Stop and add coolant. Use recovery tank filler cap. |

Level from the level switches does not match with the level lines on the recovery tank.



WARNING

Allow engine to cool down before adding coolant. There is no pressure into the recovery tank. If necessary, use the valve attached to the surge tank to release the pressure into the surge tank and the cooling system. Close the valve after releasing the pressure.

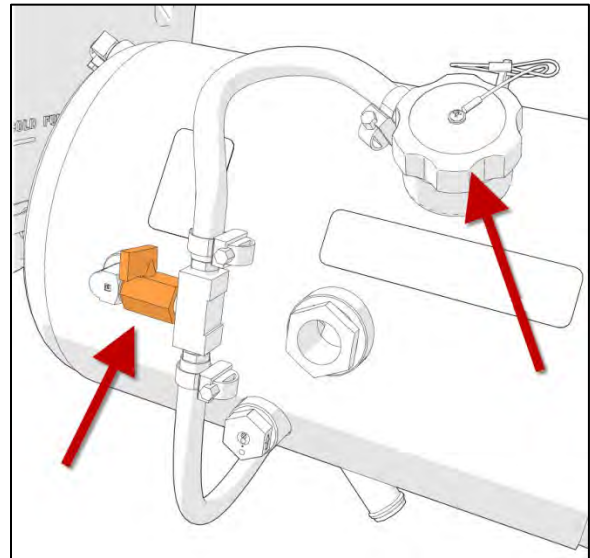


WINDSHIELD WASHER RESERVOIR

The windshield washer reservoir is located in the front service compartment door. The windshield washer reservoir has a capacity of 5.3 US gallons (20 liters). Check fluid level regularly.

The windshield spray jets are located on the windshield wipers and are angled to spray towards the center of the windshield.

You may use water or windshield washer fluid as well.

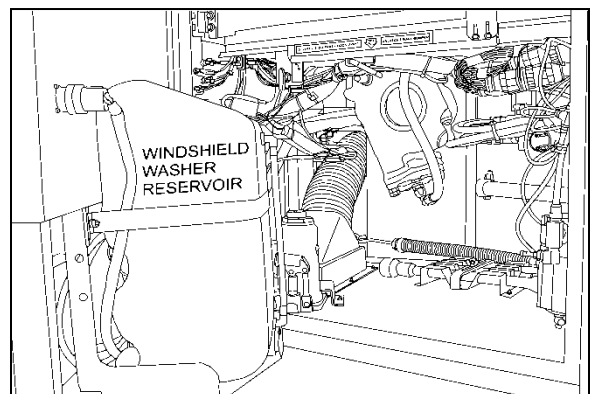

WINDSHIELD WASHER RESERVOIR

18619



CAUTION

During cold weather days, use windshield washer fluid suitable for freezing temperature only.

OTHER VERIFICATIONS


It is good practice to regularly inspect the vehicle for signs of component wear and to perform safety and maintenance routines.

AIR TANK PURGE

The vehicle is equipped with seven air tanks, including the ping tank.

The wet tank is equipped with an automatic drain valve and doesn't need to be purged manually.

The remaining tanks which are the primary, secondary, the accessory, kneeling, and parking brake overrule tanks are equipped with a drain cock underneath the tank and must be purged from moisture and contaminants every 12,000 miles. Drain tanks by turning drain cocks counterclockwise. The accessory air tank drain cock is accessible from the front service compartment. The parking brakes overrule air tank is located at the ceiling of the last baggage compartment. Refer to the "Lubrication and Service Check Point Chart" in this chapter for tank locations.

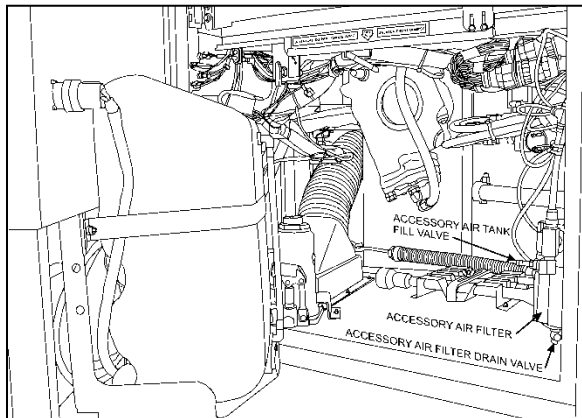

FRONT SERVICE COMPARTMENT

12210

FIRE EXTINGUISHER

Inspect fire extinguisher monthly to insure operation in emergency situations.

On extinguishers with a pressure gage, the needle should be in the green or NORMAL range. Refill or replace extinguisher if pressure is below normal;

Check that seal on handle is intact;


Check that hose nozzle is in good condition and the nozzle is free of obstructions;

Keep fire extinguishers clean.

PRIMARY FUEL FILTER

A primary fuel filter is installed on the engine. This filter may consist of a filter cartridge with a drain valve at the bottom, or a filter cartridge, a water separation bowl and may have a fuel heater built in. It is used to prevent water from entering the fuel system. The primary fuel filter should be drained periodically or when the telltale light on the dashboard illuminates if equipped with this system. To drain water, loosen the drain valve below the separator. Close the drain valve when finished.


The optional Fuel Pro 382 diesel fuel filter system consists of a permanently mounted fuel processor, a replaceable filter element, a filter element cover and collar and a fluid filter base assembly. This system is installed between the fuel tank and the fuel pump and replaces the primary fuel filter. The filter serves as a water separator as well as a fuel filter. To drain, turn ¼ turn the drain valve below the filter, close when water has been flushed out.

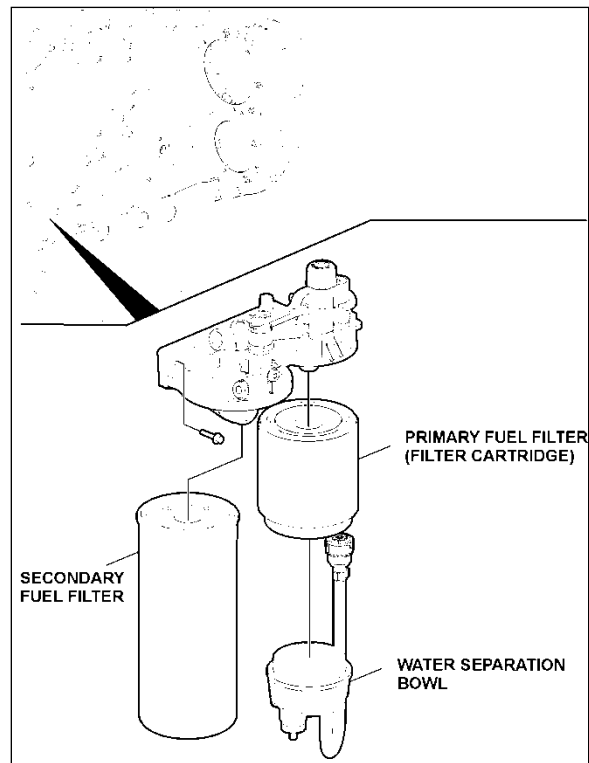

FUEL FILTERS WITH VOLVO D13 ENGINE

03085

8-10 CARE AND MAINTENANCE

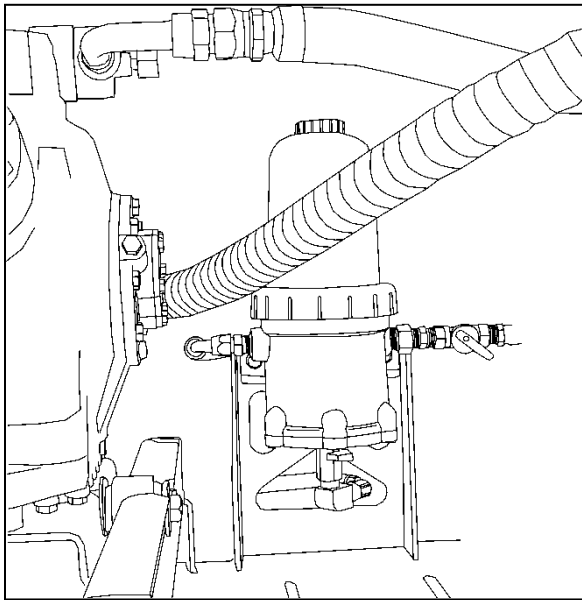


DAVCO FUEL PRO 382 INSTALLATION

03062

A/C COMPRESSOR BELTS

The air conditioning compressor is driven by two V-belts.

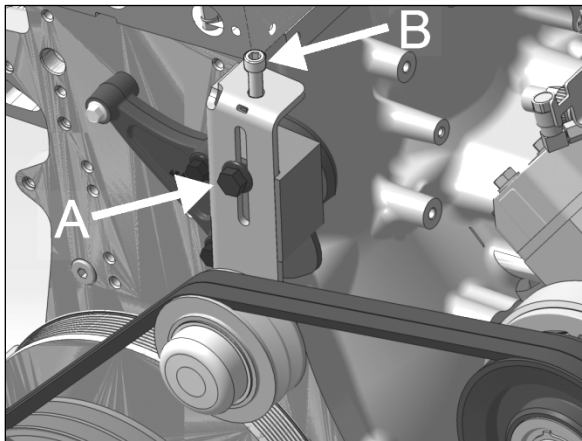

BELT TENSIONER

Belt tensioning is applied through the tensioner adjustment screw B. Loosen lock bolt A prior adjustment. Tighten lock bolt A to 43 lbf-ft once completed.

Belt tension should be within the following values:

New belts: 90-100 lbs.

Used belts: 75-85 lbs.

Check belt tension using a belt strand tension gage.

- Once adjustment is completed, allow the engine to run for about ten minutes. Check belt tension and adjust if needed.

- Do not treat belts with any compounds. Keep belts dry.
- Periodically inspect belt and pulleys for wear or damage;

FAN AND ALTERNATOR DRIVE BELTS


These belts have an automatic belt tensioner to keep the correct tension without the need for adjustment.

ENGINE AIR FILTER RESTRICTION INDICATOR


An engine air filter restriction sensor is located on the turbo air intake duct

It is used to monitor the vacuum level between the air filter and turbo. A red marker is displayed when the air filter is clogged.

Replace the air filter when a red marker is displayed on the indicator or upon illumination of the restriction indication light on the rear start panel. Reset by pressing on the restriction indicator's extremity.

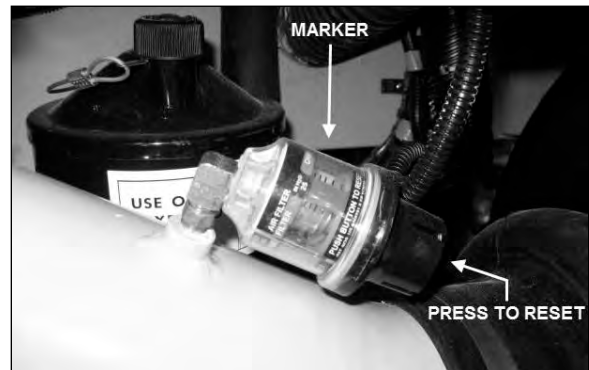

AIR FILTER RESTRICTION SENSOR

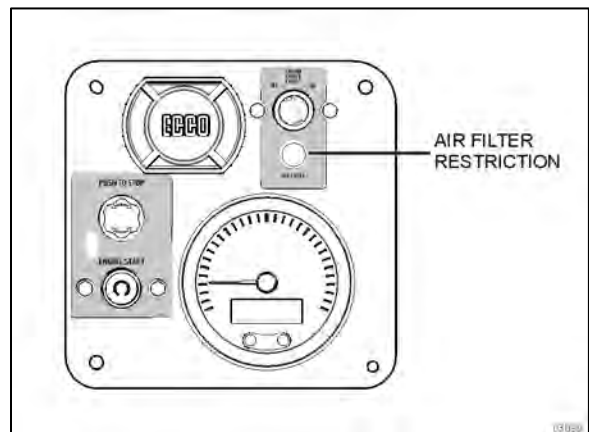

AIR FILTER RESTRICTION INDICATOR

A/C AND HEATING SYSTEM AIR FILTERS


For maximum air conditioning and heating system efficiency, air filters should be inspected, cleaned and replaced as required in maintenance schedule to ensure proper ventilation of the evaporator and heating radiator cores.

Driver's Area Air Filters

The driver HVAC system's air filter is located behind the dashboard R.H. side and it can be removed for cleaning or replacement. To gain access to the A/C filters, unscrew the grill located at the top step of the entrance door steps, remove the plastic cover holding the filter and slide out the air filter.

NOTE

If the windshield is continuously fogged, check that the driver's air filter is not clogged.

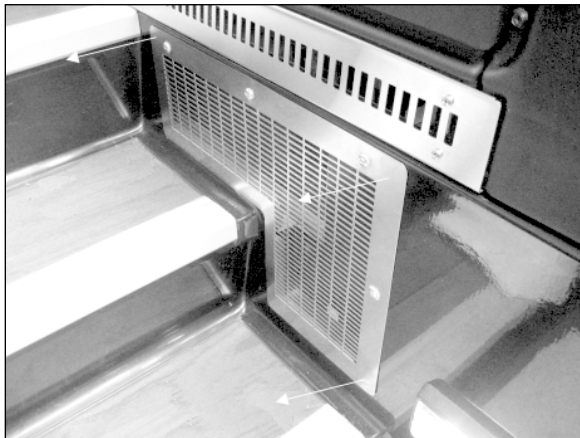


DRIVER'S AREA AIR FILTER GRILL REMOVAL



REMOVING DRIVER'S SECTION AIR FILTER

Passengers Area Air Filter

The central HVAC system's air filter is located in the evaporator compartment on driver's side of the vehicle. To access, open the evaporator compartment. An access panel marked "AIR FILTER" is located above the evaporator and heating coils. It is held shut by quarter-turn screws. Slide out the filters for maintenance purposes.

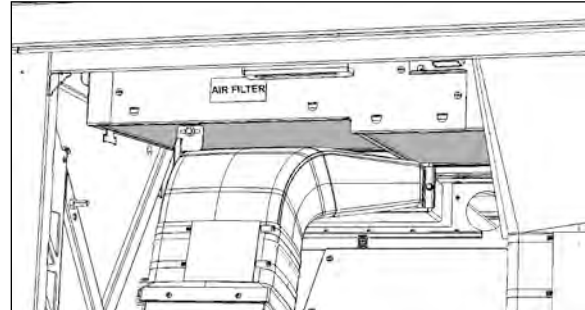

PASSENGERS AREA AIR FILTER REMOVAL 22306




CAUTION

Be sure not to install the filter in inverted position.

Air Filters in the Overhead Compartments

Remove, clean or replace the air filter located behind each overhead baggage compartment fan. Slide the filter in and out using the tab fixed on the side of the filter.

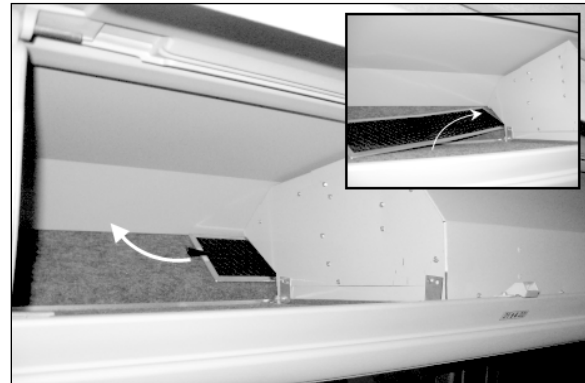

OVERHEAD COMPARTMENT FAN AIR FILTER

HOSE INSPECTION

Inspect hoses for leaks regularly to ensure efficient, economical and safe operation of the engine and related equipment. Carefully inspect all fittings, clamps and ties. To prevent chafing, make sure hoses are not touching shafts, couplings, heated surfaces, sharp edges or other parts. Since hose clamps and ties can

8-12 CARE AND MAINTENANCE

vibrate loose or fail over time, frequently inspect and tighten or replace as necessary.

Correct leaking hoses immediately. Failure to correct leaks can cause severe damage to the equipment, as well as increase operating costs due to lost fluids. Treat fuel and oil leaks as an immediate fire hazard.



WARNING

Personal injury and property damage may result from fire caused by leaking flammable fluids.

Hose Service Life

Hoses have a limited service life. Thoroughly inspect hoses annually. Look for surface damage or indications of twisted, worn, crimped, cracked or leaking lines. Replace damaged hoses immediately.

Hoses should be replaced during major overhaul or after a maximum of seven years' service. Be certain replacement hoses match the original equipment manufacturer's specifications.

LUBRICATION

Grease all lubrication points during scheduled maintenance. For heavy loads or extended use, lubricate more often. Refer to the Maintenance Manual, section 24 for information on lubrication.

WHEELS AND TIRES

Check for loose wheel nuts. Inspect all types of rims for cracks. Cracks can appear in many places but typically radiate out from where a load is applied. Steel wheel nuts should be tightened to 450 to 500 foot-pounds (610 to 680 Nm) torque.

Keep the tires inflated to the recommended inflation pressure to prolong tire life and for safety.

NOTE

Recommended tire inflation pressures are given in the "Coach Final Record", placed in the technical publications package supplied with the vehicle. The cold tire inflation pressures are on the Department of Transport certification plate located on the L.H. console besides the driver's seat. When special tires are installed by Prevost on a new vehicle, a special tire inflation chart is added next to the certification plate.



WARNING

Do not exceed maximum inflation pressure. Incorrect tire pressure increases tire wear and could lead to loss of driving control because of reduced road handling. Check tire pressure regularly.

WHEEL BEARINGS

Check wheel bearing cover for overheating (especially after using the service brakes) during fuel stops by touching the wheel bearing cover.



WARNING

If replacement tires are different from those described on the certification plate, pressure must be adjusted as requested in the Tire and Rim Association Manual.

SERVICE BRAKE TEST

Check for the correct pressure build-up. Stop the engine and check the pressure gage. Pressure loss should not exceed 3 psi/min (21 kPa/min) with the engine stopped and without brake pedal applied. Air loss should not exceed 7 psi/min (48 kPa/min) with the engine stopped and brake pedal fully applied.

A convenient way to proceed to the service brake test is with the use of the DID menu "Air Leakage Monitor". For more information, refer to "Driver Information Display (DID) Menus" in Section 5 *Other Features*.

PARKING BRAKE TEST

Release parking/emergency brake. Pump service brake pedal until air pressure drops to 65 psi (448 kPa). Make sure the warning buzzer operates and that the emergency brakes apply (the control valve knob lifts up). Allow air pressure to reach 95 psi (655 kPa) before releasing parking brake.

Driving the vehicle while the parking brake is applied should not be possible.

EXTERIOR LIGHTING VERIFICATION

Exterior Lighting Test Mode

This useful function allows quick verification of the vehicle exterior lights.

IMPORTANT NOTE

The test mode is useful to check the functioning of the multiplex outputs and the exterior lights. It doesn't test the functionality of the commands related to the exterior lighting. For a complete testing, the directional signal commands, the headlights commands and the brake pedal have to be checked before. Once these commands tested, activate the test mode to check the exterior lighting.

Prior using the test mode

First, test the functionality of the commands related to the exterior lighting:

- Press the right turn signal switch and check that the corresponding telltale light illuminates.
- Press the left turn signal switch and check that the corresponding telltale light illuminates.
- Activate the hazard warning flashers and check that the corresponding cluster telltale lights illuminate.
- Press the headlights rocker switch in first position and confirm that the instrument panel illuminates. Press the headlights rocker switch in second position and confirm that the headlights illuminate.
- Turn on the high beams and check that the corresponding cluster telltale light illuminates.

Once these commands tested, activate the test mode to check the exterior lighting:

- All marker lights, clearance lights and identification lights illuminate.
- High and low beam headlights illuminate.
- All directional signal lights and center stop lights flash.
- Stop lights and center high-mounted stop light (CHSL) illuminate every 4 seconds.

Activating the test mode

When the vehicle is stationary (parking brake applied), press the left and right turn signal foot switches simultaneously and release to activate the test mode.

This test can be done when the engine is running or when it is not running with the ignition switch to the ON position, provided that the battery charge is sufficient (above 24.0 volts).


Once initiated, the exterior lighting test mode will turn off automatically after a delay of **120 seconds**.

NOTE

*You can also **initiate and stop** the exterior lighting test mode with the use of the DID menu "Exterior Lamp Inspection". For more information, refer to "Driver Information Display (DID) Menus" in Section 5 Other Features.*

Stopping the test mode

- The test mode will turn off automatically after a delay of **120 seconds**. To stop the test mode before the end of delay:
 - press either left or right turn signal foot switch
- or
- turn the ignition switch to OFF
- or
- remove the parking brake.

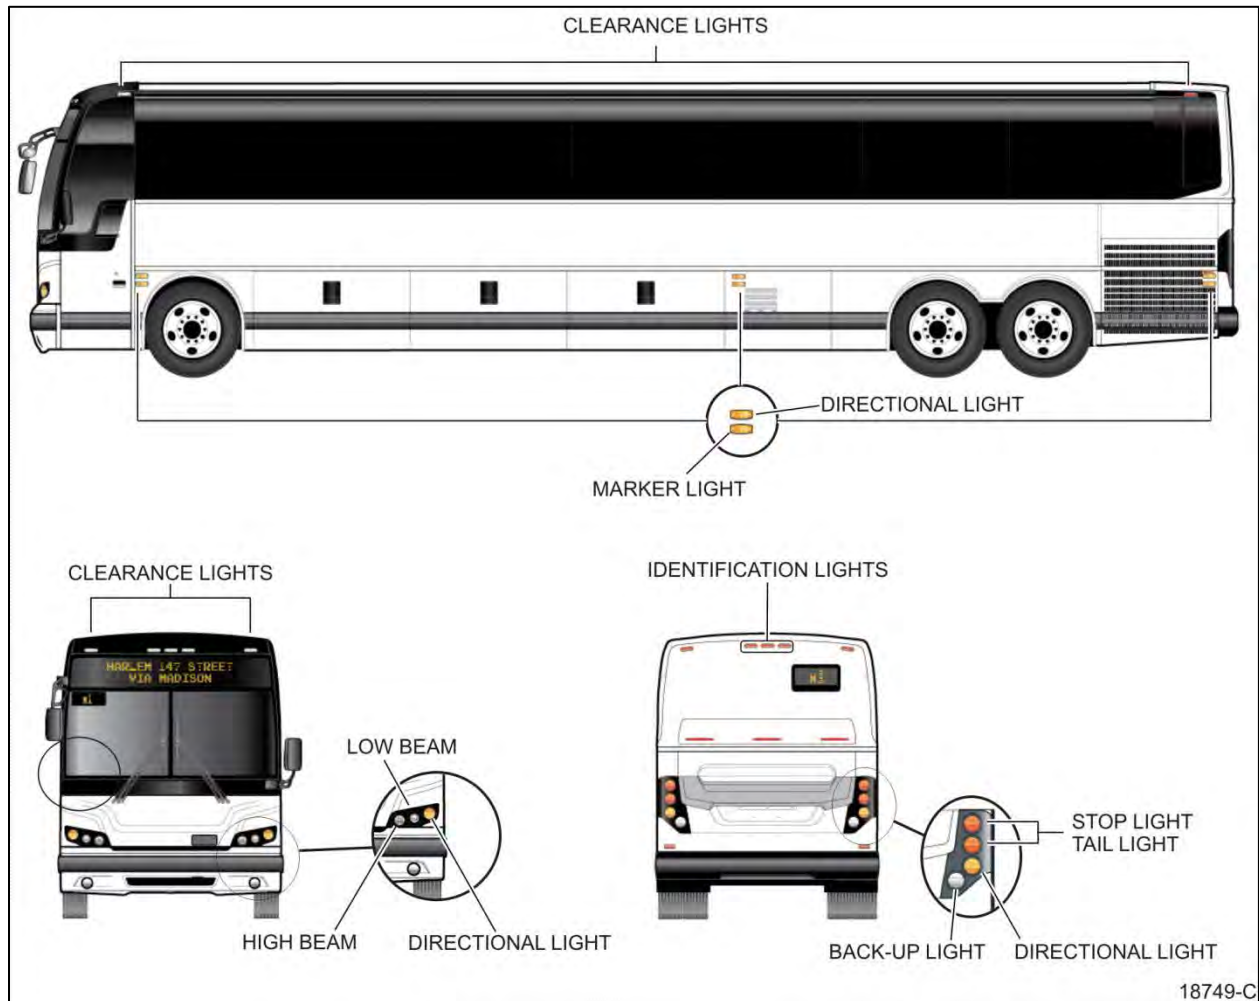

VARIOUS LIGHT LOCATIONS

FIRST SERVICE ON NEW VEHICLE

NOTE

Refer to Maintenance Manual for precise service schedule.

ENGINE OIL

Preliminary oil change is not required since the engine has been test-run at the factory. Change oil and filter as specified in Section 24 of the Maintenance Manual.

GENERAL RECOMMENDATIONS

- Understand basic principles of vehicle operation;
- Always maintain the vehicle in good running condition;
- Do not drive with low fuel. If the fuel tank runs dry, the engine will not start until the air is bled from the fuel system. Refer to "Maintenance Manual" for more information;
- Allow engine to run for at least two minutes at normal idle before shutting OFF;
- Engine should be at idle when shifting from neutral (N) to forward (D) or from neutral (N) to reverse (R);
- The automatic transmission does not have a park (P) position. Place transmission in neutral (N) position and apply parking brake when the vehicle is stopped. A warning buzzer will sound if the engine is stopped and the parking brake has not been applied when foot pressure is removed from the brake pedal;
- Always follow the procedures described in this manual;

- Unless stated otherwise, shut *OFF* the engine before performing all servicing, lubrication and maintenance tasks;
- Do not attempt to push or pull-start the coach;
- The vehicle may be damaged if towed with the axle shafts or driveshaft connected;
- The chemical fire extinguisher is located behind the driver's seat. In case of fire, immediately evacuate all occupants. Occupant safety is the first priority. Do not attempt to extinguish the fire if there is immediate danger or risk for personal injury;
- When driving on ice and snow, accelerate and decelerate gradually;



WARNING

Report all problems affecting passenger or driver safety to a Prevost service center or an authorized service center. Have problems corrected immediately.


8-16 CARE AND MAINTENANCE



COMPONENT IDENTIFICATION (REPRESENTATION MAY DIFFER SLIGHTLY FROM AN ACTUAL VEHICLE) 24039_4

| | | | |
|----|---------------------------------|----|---|
| 1 | Accessories air tank drain cock | 22 | Secondary fuel filter |
| 2 | Accessories air filter | 23 | Power steering fluid tank |
| 3 | Steering drag link | 24 | Engine oil filter |
| 4 | Height control valve (front) | 25 | Cooling fan gearbox |
| 5 | Steering tie rod | 26 | Allison transmission oil dipstick |
| 6 | Accessories air tank | 27 | Engine coolant surge tank |
| 7 | Steering column U-joints | 28 | Coolant filter & conditioner |
| 8 | Steering knuckle pins | 29 | Engine air filter restriction indicator |
| 9 | Steering damper cylinder | 30 | Engine air filter |
| 10 | Secondary air tank | 31 | Engine oil dipstick and filler tube |
| 11 | Kneeling air tank | 32 | DEF tank |
| 12 | Air dryer | 33 | Diesel particulate filter |
| 13 | Height control valve (rear) | 34 | SCR catalytic converter |
| 14 | Wet air tank | 35 | Diesel fuel tank |
| 15 | Primary air tank | 36 | Power steering pump |
| 16 | Differential | 37 | Air compressor |
| 17 | Propeller shaft | 38 | Alternators |
| 18 | Tag axle lever pivot | 39 | Emergency / parking Brakes Overrule Control Valve |
| 19 | Transmission | 40 | Air dryer purge tank |
| 20 | Starter | 41 | Haldex Consep® Condenser / Separator |
| 21 | Primary fuel filter | | |

WALK-AROUND INSPECTION (BEFORE EVERY TRIP)

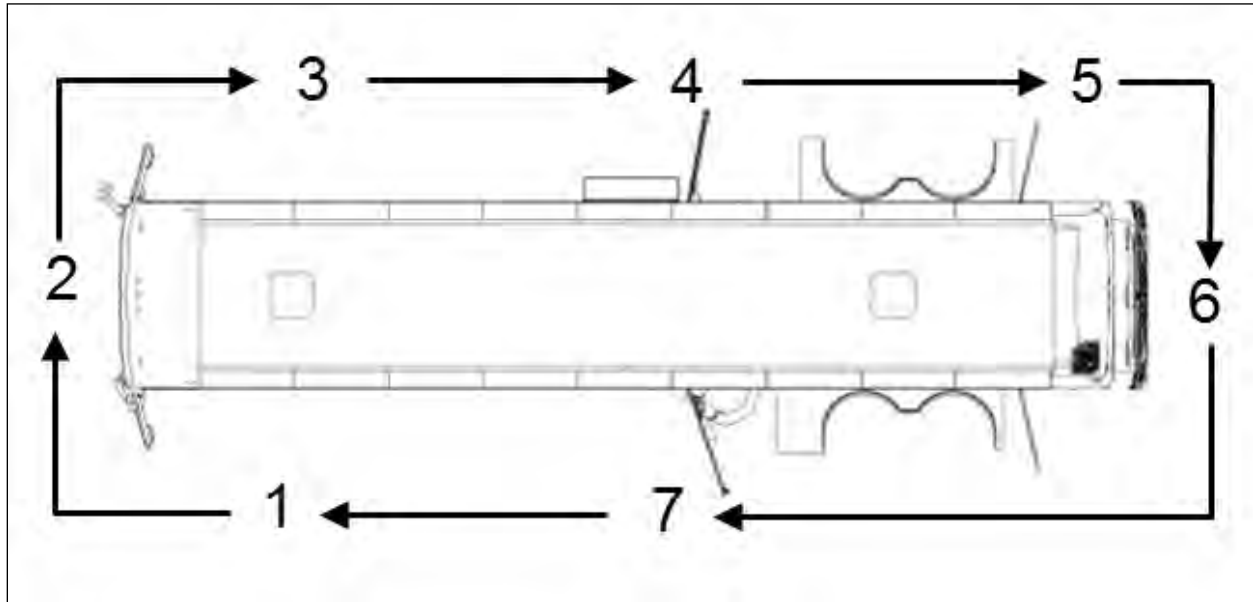

NOTE

Inspect the coach in a circular manner as shown in the illustration.

Approaching the Coach

- Check under the coach for oil, fuel, coolant leaks or other signs of damage.
- Check exterior body surfaces for signs of breaks or damage.

Preparation

- Drain accumulated water from accessories tank.
- Close air tank drain valves.
- Start the engine and let the air pressure build up to normal. Stop the engine.
- Switch on hazard warning flashers.
- Make sure parking brakes are applied.

Step 1: Front Left Side of the Coach

- Check condition of the wheel rim. Especially look for cracks, missing nuts, bent or broken studs.
- Check condition of tires: properly inflated, no serious cuts, bulges, tread wear or any signs of misalignment; valve stem not touching wheel or rim; valve cap in place.
- Check windshield washer reservoir fluid level and add if necessary.

Step 2: Front of the Coach

- Check for damage and clean if dirty.
- Check windshield wiper arms for proper spring tension.
- Check wiper blades for any damage, “dead” rubber and attachment to arm.
- Check clearance and identification lights, they should be clean, operating and of the proper color. Refer to “Exterior Lighting Verification” in this section.
- Turn on headlights. High and low beams should be operating and lenses clean. Refer to “Exterior Lighting Verification” in this section.
- Left and right front turn signal lights clean, operating and proper color. Refer to “Exterior Lighting Verification” this section.

Step 3: Front Right Side of the Coach

- Check condition of the wheel rim. Especially look for cracks, missing nuts, bent or broken studs.
- Check condition of tire: properly inflated, no serious cuts, bulges, tread wear or any signs of misalignment; valve stem not touching wheel or rim; valve cap in place.

Step 4: Rear Right Side of the Coach

- Check condition of wheels and rims. Especially look for cracks, missing nuts, bent or broken studs.
- Check that baggage and service compartment doors are properly closed and cable locks are in place.
- Check condition of tires: properly inflated, no serious cuts, bulges, tread wear or any signs of misalignment; valve stems not touching wheels or rims; valve caps in place and no objects stuck between the wheels.

Step 5: Engine Compartment Right Side Area

- Check engine and surrounding areas for coolant, oil and fuel leaks.
- Check fuel filter/water separator and drain if necessary. Check for leaks.
- Check wiring harness for signs of damage.

Step 6: Engine Compartment

- Check engine and surrounding areas for coolant, oil and fuel leaks.
- Check wiring harness for signs of damage.
- Check condition of drive belts.
- Check engine crankcase oil level, add if necessary.
- Check Allison transmission fluid level (can also be checked from push-button shift selector), add if necessary.
- Check power steering reservoir fluid level, add if necessary.
- Check coolant surge tank fluid level, add if necessary.
- Check air cleaner restriction indicator, replace air cleaner when red signal locks in full view.
- Check that exhaust aftertreatment system access door is properly closed.
- Check stop light, tail light, directional signal light and back-up light assembly; operating, clean and proper color. Refer to "Exterior Lighting Verification" in this section.

Step 7: Rear Left Side of the Coach

- Check condition of wheels and rims. Especially look for cracks, missing nuts, bent or broken studs.
- Check that baggage and service compartment doors are properly closed and cable locks are in place.
- Check that catalytic converter access door is properly closed.
- Check condition of tires: properly inflated, no serious cuts, bulges, tread wear or any signs of misalignment; valve stems not touching wheels or rims; valve caps in place and no objects stuck between the wheels.

Inside the Coach


- Check for proper operation of the entrance door.
- Check steps; clean them if there is any substance that makes them slippery, which makes coach entry/exit hazardous.
- Check that emergency exit windows and roof escape hatches can be open then close all windows and hatches securely.
- Verify the proper operation of the windshield wiper/ washer.
- Adjust and clean mirrors for adequate rear view vision.
- Start the engine and check for the proper operation of all gages and indicator lights.
- Check for the proper operation of electric horns and back-up alarm.

Perform a brake test. Check both primary and secondary pressure gages.


SECTION 9 TECHNICAL INFORMATION

| | |
|--|-----------|
| OVERALL DIMENSIONS | 2 |
| DIMENSIONS, WEIGHTS AND CAPACITIES | 4 |
| FUEL TYPE | 4 |
| BIODIESEL FUELS | 4 |
| WHEELS AND TIRES..... | 5 |
| RECOMMENDED TIRE INFLATION PRESSURE AT MAXIMUM COLD LOAD | 5 |
| BELTS | 5 |
| VOLVO D13 ENGINE | 5 |
| ALLISON TRANSMISSION | 5 |
| PROPELLER SHAFT..... | 5 |
| BRAKES | 5 |
| BRAKE CHAMBER EFFECTIVE AREA | 5 |
| AIR SYSTEM | 5 |
| ANTILOCK BRAKING SYSTEM (ABS) | 6 |
| STEERING | 6 |
| ELECTRICAL SYSTEM..... | 6 |
| SUSPENSION | 6 |
| I-BEAM AXLE FRONT SUSPENSION..... | 6 |
| DRIVE AXLE | 6 |
| TAG AXLE | 6 |
| ALIGNMENT SPECIFICATIONS..... | 6 |
| COOLING SYSTEM | 7 |
| FUEL SYSTEM | 7 |
| EXHAUST SYSTEM | 7 |
| HEATING AND AIR CONDITIONING | 7 |
| OIL SPECIFICATIONS..... | 8 |
| ENGINE..... | 8 |
| ALLISON TRANSMISSION..... | 8 |
| DIFFERENTIAL..... | 8 |
| POWER STEERING..... | 8 |
| PLATES AND CERTIFICATION..... | 8 |
| SAFETY CERTIFICATION | 9 |
| DOT CERTIFICATION PLATE | 9 |
| VEHICLE IDENTIFICATION NUMBER (VIN)..... | 9 |
| COACH FINAL RECORD | 9 |
| TURNING RADIUS | 11 |

OVERALL DIMENSIONS

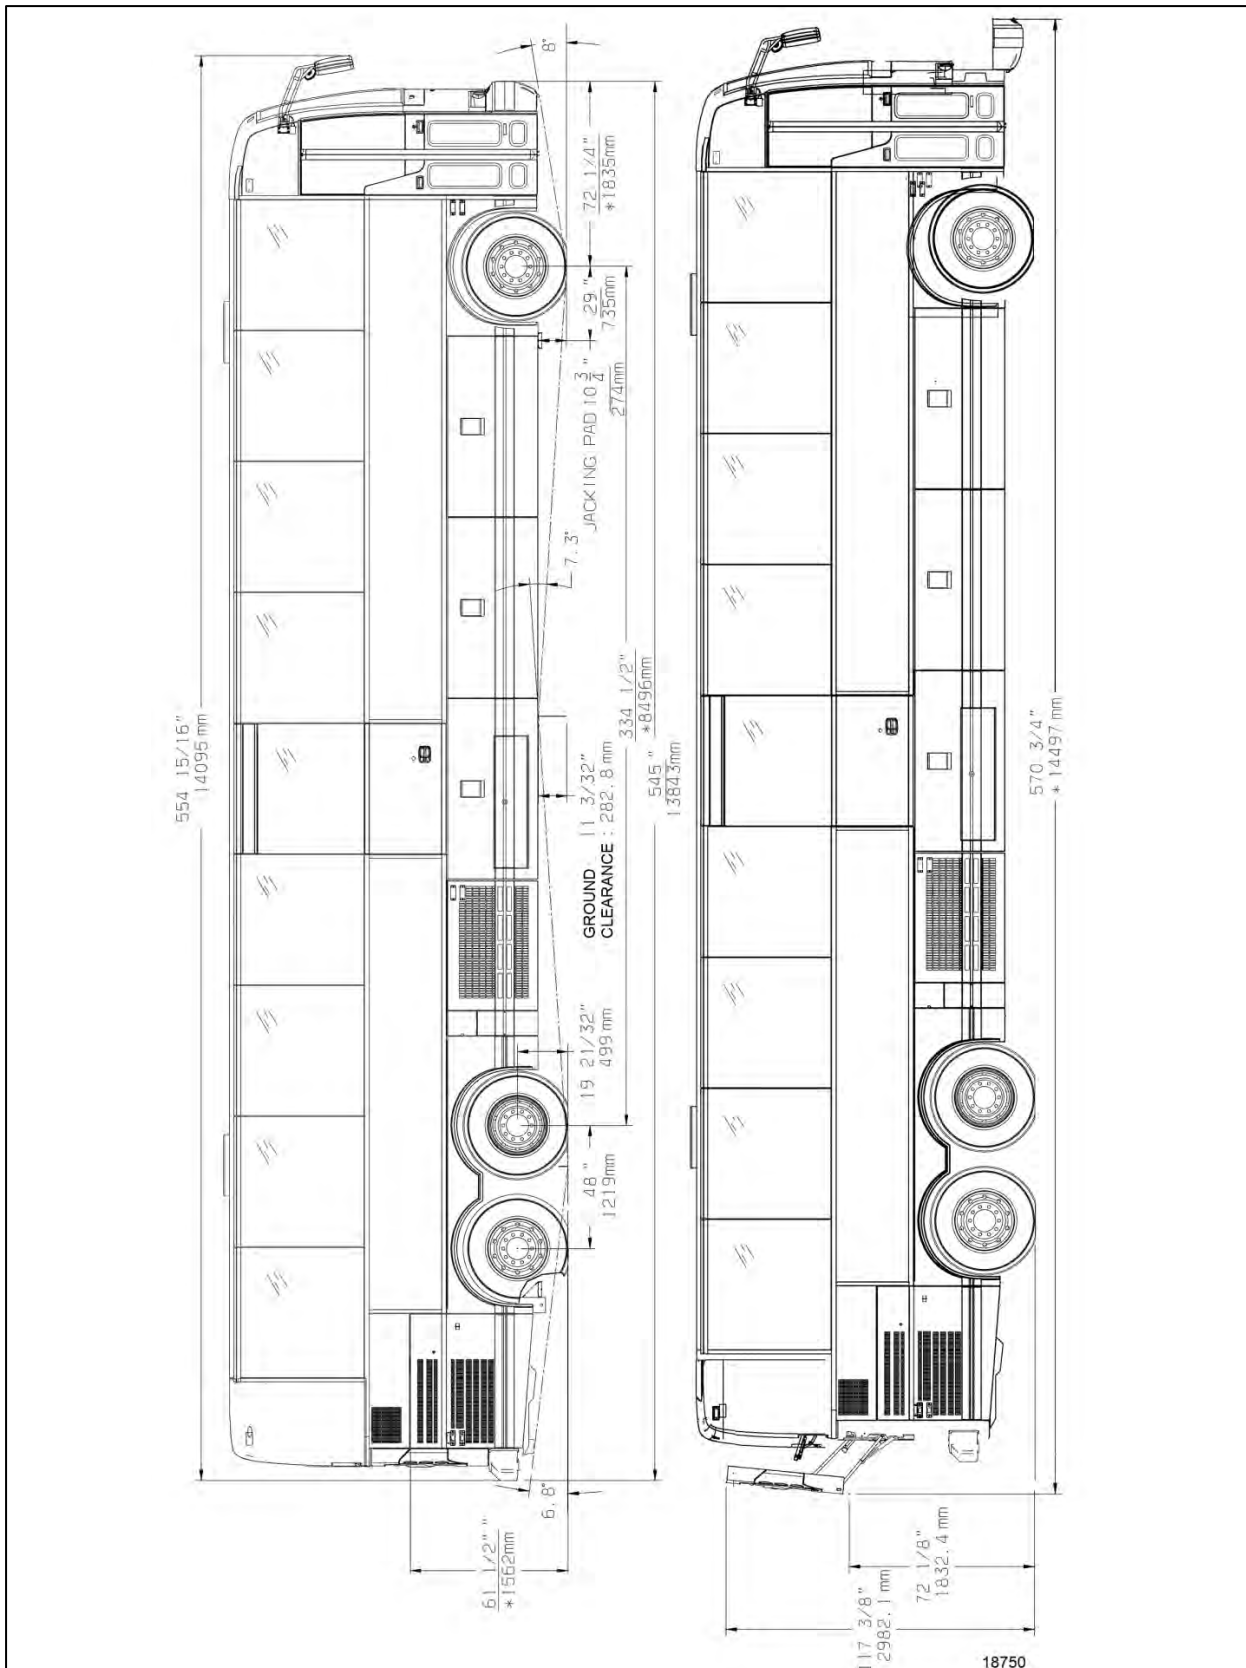

X3-45 COMMUTER OVERALL DIMENSIONS

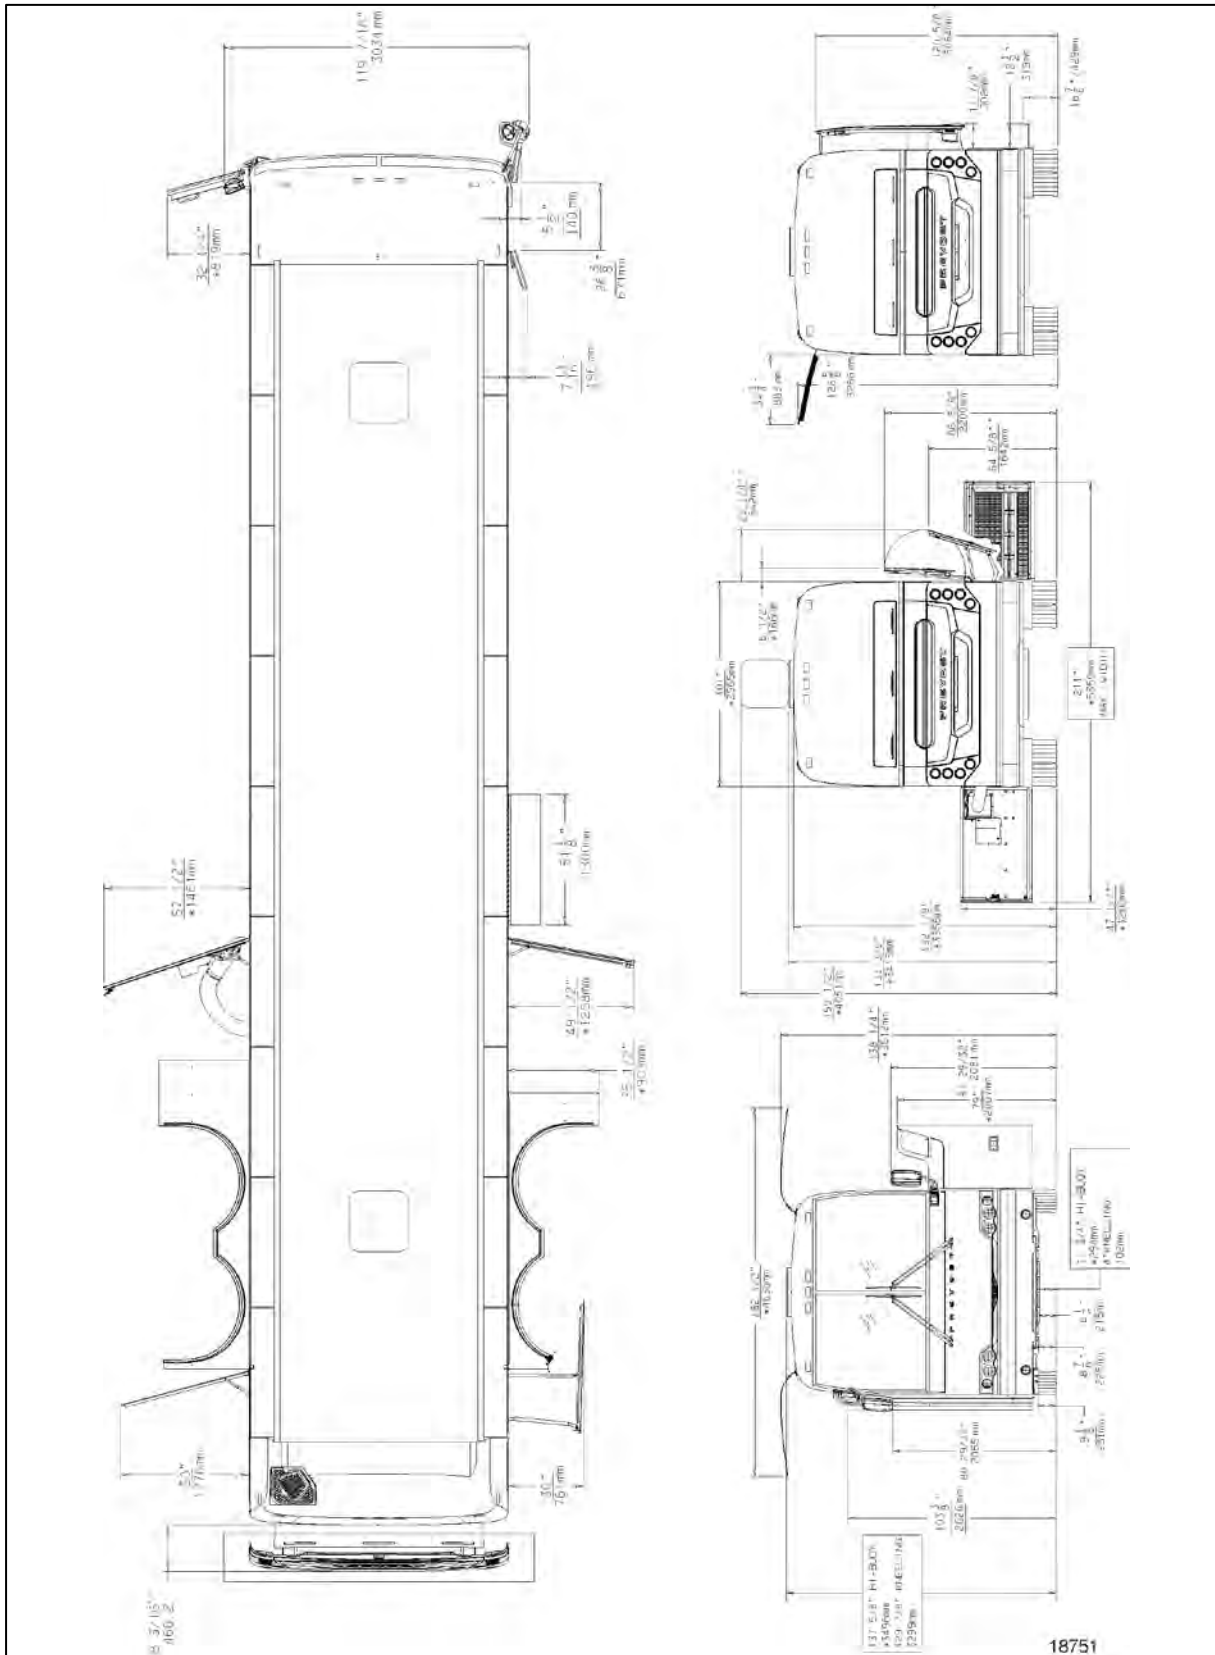

X3-45 COMMUTER OVERALL DIMENSIONS

9-4 TECHNICAL INFORMATION

DIMENSIONS, WEIGHTS AND CAPACITY

| DIMENSIONS AND WEIGHTS | |
|--|------------|
| Overall length (incl. bumpers-mirror) | 46 ft |
| Overall width | 101 in |
| Overall height (hatches up) | 138 in |
| Wheelbase (center of the front axle to center of drive axle) | 334 ½ in |
| Floor height from ground | 48 ½ in |
| Ground clearance | 11 in |
| First step height from ground | 13 ½ in |
| Step height (other steps) | 7 in |
| Headroom | 80 in |
| Entrance door opening width | 26 in |
| Front overhang | 72 ¼ in |
| Rear overhang (tag axle down) | 90 in |
| Front track | 85.9 in |
| Drive track | 76.7 in |
| Rear track (Tag axle) | 83.6 in |
| Turning circle radius (I-Beam Axle) | 47 ft 3 in |
| Curb weight | 36,000 lbs |
| Gross Vehicle Weight Rating (G.V.W.R.) | 48,000 lbs |
| Front axle Gross Axle Weight Rating (G.A.W.R.) | 16,500 lbs |
| Drive axle (G.A.W.R.) | 22,500 lbs |
| Tag axle (G.A.W.R.) | 14,000 lbs |

The Gross Vehicle Weight Rating (G.V.W.R.) and the Gross Axle Weight Rating (G.A.W.R.) for front drive and tag axles are listed on a certification plate located on the L.H. control panel in the driver's section.

| CAPACITIES | |
|--|----------------|
| Volvo D13 Engine oil (Total with filters) | 40 U.S. qrts |
| Fuel tank (corresponding to 95% of gross capacity) | 180 U.S. gal. |
| Cooling system | 17.4 U.S. gal. |
| Diesel exhaust fluid (DEF) | 16 U.S. gal. |

| CAPACITIES | |
|--|--|
| Allison Automatic Transmission (does not include external circuit) | 6 U.S. gallons 6.9 U.S. gallons with retarder |
| Differential oil (approx) | 19 qts |
| Power steering reservoir | 4.0 qts |
| A/C compressor oil | 2.8 qts (2.6L) |
| Windshield washer reservoir | 5.3 U.S. gal. |
| Refrigerant | 30 lb |

FUEL TYPE

Diesel engines for 2007 and later model year vehicles are designed to operate only with **Ultra Low Sulfur Diesel** (ULSD) fuel, which can contain no more than 15 ppm sulfur.



CAUTION

ULSD fuel is necessary to avoid fouling the engine's Exhaust Aftertreatment System. Use of fuel other than ULSD will reduce the efficiency and durability of the engine.

BIODIESEL FUELS

Biodiesel up to a maximum of 20% blend (B20) may be used and will not affect the manufacturer's mechanical warranty as to engine and emissions system related components, provided the biofuel used in the blend conforms to ASTM D6751, B1 to B5 blends conform to ASTM D975, and B6 to B20 blends conform to ASTM D7467. Also, any engine performance problem related to the use of biodiesel fuel would not be recognized nor considered as Volvo or Prevost's responsibility.

However, Volvo engines are certified to comply with U.S. EPA and California emissions standards based upon the use of test fuels with specifications established by these regulatory agencies. Alternative fuels, including biodiesel, that are not substantially similar to the required test fuels may adversely affect engine emissions compliance. As a result, Volvo does not warrant the engine will conform to applicable Federal or California emissions limits when operated on biodiesel or other alternative fuels that are not substantially similar to specified test fuels used for certification.


WHEELS AND TIRES


Aluminum Durabright wheels9" X 22½"

Tires 315/80 R22.5 load range "L"

RECOMMENDED TIRE INFLATION PRESSURE AT MAXIMUM COLD LOAD

The recommended tire inflation pressures are given in the applicable documents supplied with the vehicle. In addition, minimum cold tire inflation pressures are listed on the Department of Transport (DOT) certification plate, affixed on the left wall near the driver's seat.

| | |
|--|----------------|
|  | CAUTION |
| <p>These tire pressures are established in accordance with the maximum allowable load on each axle. A lower pressure is recommended if the axle load is less than the above specifications. Weigh vehicle fully loaded and pressurize according to tire manufacturer's recommendations. For non-standard tire and wheel specifications see Prevost tire pressure tabulation in "Coach Final Record".</p> | |

| | |
|---|----------------|
|  | WARNING |
| <p>Special tire selection may lower maximum allowable speed limit, even below posted speed limit. For maximum safety, check with tire manufacturer.</p> | |

BELTS

| Use | Model | Qty |
|------------------------------------|-------------------------|-----|
| A/C system Bitzer 4NFCY compressor | V Belt BX71 | 2 |
| Alternator (twin Bosch, curb side) | Multi-V-8 Rib 8PK1575 | 1 |
| Alternator (emergency) | Multi-V-8 Rib 8PK1512 | 1 |
| Alternator (single, driver side) | Multi-V-10 Rib 10PK1695 | 1 |
| Coolant pump | Multi-V-10 Rib 10PK1512 | 1 |

| |
|--|
| <p>NOTE</p> <p><i>Belts specifications may vary. For proper belt selection, always consult your vehicle Coach Final Record.</i></p> |
|--|

VOLVO D13 ENGINE

Volvo D13 engine displacing 12.8 liters. The engine is an inline six cylinders, four-stroke cycle, turbocharged, air-to-air charge cooled, diesel engine with SOHC with 4 valves per cylinder.

Power435 HP
 Torque.....1,700 lbf•ft (2304 Nm)
 Operating range 1400-1800 rpm
 Full dress, dry weight 2519 lb

ALLISON TRANSMISSION

Allison B500 (B500R with the optional output retarder) electronically controlled six-speed automatic transmission.

Gear Ratios

1st3.510
 2nd1.906
 3rd1.429
 4th1.000
 5th0.737
 6th0.639
 Reverse.....4.801
 Converter1.9
 Differential ratio.....3.54

PROPELLER SHAFT

Dana Spicer Life SPL250 type tubular shafts. It is provided with heavy-duty universal joints.

BRAKES

The features of the braking system include a dual system where the front and rear circuits are completely independent from each other. The brakes are air operated disc type brakes with automatic slack adjusters on front, drive and tag axles. The emergency/parking brakes are located on the drive axle.

BRAKE CHAMBER EFFECTIVE AREA

Front axle24 in²
 Drive axle24/24 in² (service / emergency)
 Tag axle16 in²

AIR SYSTEM

Compressed air is provided by a twin cylinder, 31.8 cfm Wabco, gear-driven, water-cooled and engine oil lubricated air compressor.

ANTILOCK BRAKING SYSTEM (ABS)

The antilock braking system has one Electronic Control Unit (ECU) controlling a four-channel system. A wheel slip sensor is mounted at each front axle and drive axle wheel. The Tag axle wheels are slaves to the drive axle wheels.

The Electronic Control Unit (ECU) is maintenance free. Its operating voltage is 24 ± 6 volts DC. The thermal operating range for the ECU is from -40 to 167°F (-40 to 75°C).

The solenoid control valves are maintenance free. Their operating voltage is 24 (+4.8, -2.4) volts DC. The rated current draw is 1.65 amps. The thermal operating range of the solenoid control valves is from -40 to 176°F (-40 to 80°C).

STEERING

- ZF 8098 integral hydraulic assisted steering gear;
- Volvo hydraulic pump gear driven from engine drive.
- Hydraulic reservoir and dipstick accessible from the engine compartment.
- System pressure: 2320 psi (160 bars).
- Steering wheel diameter 18". Tilt steering wheel and telescopic steering column; pneumatically locked with foot-operated switch for adjustment.
- Number of turns: 5¾.
- Outside turning radius: See Dimensions and Weight.

ELECTRICAL SYSTEM

- 24 volts, negative ground;
- 12-volt exterior lighting;
- Three 28 volts, 150 amp, self-regulated, belt-driven, air-cooled HD 10 Bosch alternators;
- Four 12 volts, Group 31 AGM batteries connected in series/parallel. Cold cranking capacity is 800 amps @ 0°F (-18°C) (each battery) with a reserve capacity of 200 minutes;
- 100 amp battery equalizer.

SUSPENSION

Goodyear rolling lobe type air springs (bellows) are used throughout.

I-BEAM AXLE FRONT SUSPENSION

- 2 Bellows (12"); for a G.A.W.R. of 16,500 lb;
- 2 Shock absorbers;
- 4 Radius rods;
- 1 Transverse radius rod;
- 1 Height control valve.
- 1 sway bar (1¾" diameter).

DRIVE AXLE

- 4 Bellows (11");
- 4 Shock absorbers;
- 3 Radius rods;
- 1 Panhard rod;
- 2 Height control valves.

TAG AXLE

- 2 Bellows (11");
- 2 Shock absorbers;
- 3 Radius rods;
- 1 Panhard rod.

ALIGNMENT SPECIFICATIONS

Use static wheel alignment systems which work with angle measurements only, such as Josam or Hunter systems. Static alignment specifications are listed in the following tables:

| I-BEAM AXLE FRONT SUSPENSION | | | |
|-------------------------------------|---------------|---------------|---------------|
| | Minimum value | Nominal value | Maximum value |
| Right camber | -0.250° | 0.125° | 0.375° |
| Left camber | -0.250° | 0.125° | 0.375° |
| Right caster | 2.0° | 2.75° | 3.5° |
| Left caster | 2.0° | 2.75° | 3.5° |
| Total toe | 0.04° | 0.06° | 0.08° |

| DRIVE AXLE ZF A-132 | | | |
|----------------------------|---------------|---------------|---------------|
| | Minimum value | Nominal value | Maximum value |
| Thrust angle | ±0.11° | | |
| Total toe | 0.15° toe-in | 0° | 0.15° toe-out |

| TAG AXLE | | | |
|-------------------------|---------------|---------------|---------------|
| | Minimum value | Nominal value | Maximum value |
| Thrust angle* (degrees) | -0.02 | 0 | 0.02 |
| Total toe | 0.08° toe-in | 0° | 0.02° toe-out |

(* Use the drive axle as reference)

COOLING SYSTEM

- Extra capacity, copper fin radiator and aluminum charge air cooler arranged one behind the other.
- 3 speed fan clutch engine ECM controlled.
- Rubber insulated from the body.
- Expansion tank above radiator and remote mounted.
- System pressure 13 psi.
- 185° F thermostat.
- System capacity 24 us gal.
- Coolant filter.
- Radiator fan: 38 inches fan belt and drive shaft driven.

FUEL SYSTEM

Steel fuel tank

Fuel legal capacity (corresponding to 95% of gross capacity): 180 US gallons (681 liters).

Unusable fuel: 6.3 US gallons (24 liters).

Equipped with:

- Emco Wheaton fuel filling system.
- Provided with filling access on the right side of the coach with safety filler cap.
- Pressure relief valve.
- Electric fuel gage.

- Low level signal at 26 US gallons/98.4 liters.
- Primary filter 25 microns (standard).
- Fuel pro 382 filter as primary filter.
- Secondary filter 3 to 5 microns.
- Shut-off valve on fuel supply line.

EXHAUST SYSTEM

One all stainless steel exhaust aftertreatment system including:

- Catalytic converter to reduce NOx.
- FleetGuard assembly made of a DOC (Diesel Oxidation Catalyst and a DPF (Diesel Particulate Filter). Noise, vibration and heat insulated. This assembly is mounted to the bus structure and is accessible through an exterior access door.
- Tail pipe diffuser and rain deviation device.
- Exhaust pipe with insulation and a flexible section.
- Exhaust to rear left-hand top of the rear cap.
- Diesel exhaust fluid (DEF) tank (15.9 gal.) and injection system.

HEATING AND AIR CONDITIONING

The large capacity A/C provides adequate capacity of conditioned and filtered air for all climatic conditions. Fresh air is drawn into the system from the left (driver's) side of the vehicle. Return air is taken from the middle of the vehicle. The driver's heater and defogger are controlled separately from the central unit. An air mixture selector enables air to be drawn into the system from outside the vehicle or recirculated.

| CENTRAL A/C | |
|--------------------------------------|--------------------------------------|
| Air conditioning capacity | 9 tons |
| Refrigerant type | 134A |
| Heating capacity | 152 000 Btu/h |
| Air flow, overhead parcel rack evap. | 450 cfm (12,7 m ³ /min) |
| Air flow, main A/C | 2 600 cfm (73,6 m ³ /min) |

9-8 TECHNICAL INFORMATION

| COMPRESSOR (for central A/C) | |
|-------------------------------------|---|
| Make and model | Bitzer 4NFCY |
| Number of cylinders | 4 |
| Operating speed | 500-3500 rpm |
| Oil capacity | 2.6 quarts (2.5L) |
| Approved oil | Polyolester (ISO68) Bitzer BSE55 (POE) |

OIL SPECIFICATIONS

ENGINE

VDS-4 or VDS-4.5 diesel engine oil is mandatory for use in all 2010 and later emission compliant Volvo engines. VDS-4.5 oils exceed the new API service category CK-4.

ALLISON TRANSMISSION

Allison Transmission recommends the following fluids:

- Castrol TranSynd™ or TES-295 specification equivalent fluid;
- TES-389 specification equivalent fluid.

DIFFERENTIAL

Mobil Delvac synthetic gear oil 80W140.


POWER STEERING

Use Automatic Transmission Fluid Mobil DEXRON-VI ATF.

PLATES AND CERTIFICATION


The main components of the vehicle such as the engine, transmission, axles and chassis are identified by different serial numbers. It may be necessary to locate these numbers for warranty purposes.

The engine data plate is located on the rocker cover. The engine serial and model number and a list of the optional engine equipment are written on this plate. Refer to this information when ordering replacement parts. Also the engine data plate certifies that the engine conforms to the federal and any state exhaust emissions regulations.

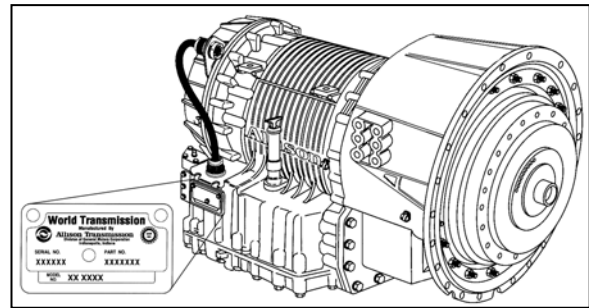


ALLISON TRANSMISSION

07076

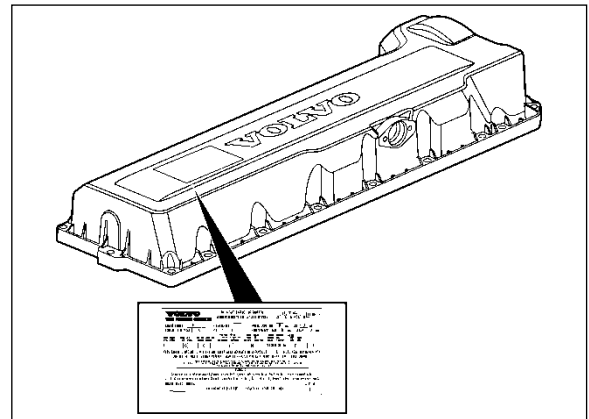


VOLVO D13 ENGINE DATA PLATE

00052

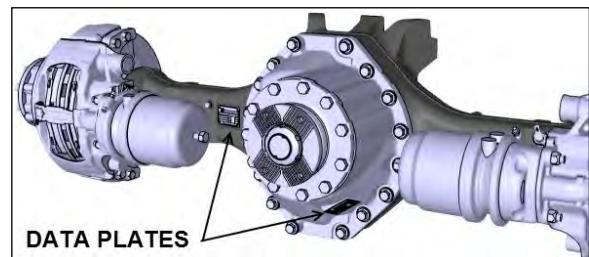

DRIVE AXLE

00007

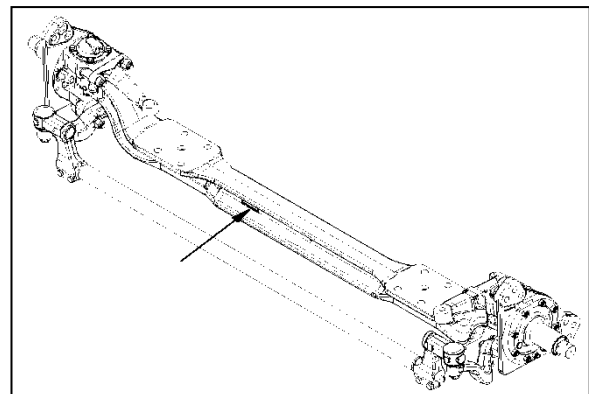

I-BEAM FRONT AXLE



00008

SAFETY CERTIFICATION

- Vehicle components meet specifications and standards as follows:
- Material and parts conform to ASTM and/or SAE standards in effect at the time of manufacture.
- All factory-installed interior materials meet FMVSS 302 for fire resistance.
- Certified according to Provincial, State and Federal Safety standards (Canadian and US) BMCSS, FMVSS and CMVSS.
- Other applicable certification labels are affixed to the component.


DOT CERTIFICATION PLATE

This certifies that vehicles manufactured by Prevost Car Inc. comply with all Federal Motor Vehicle Safety Standards at the time of manufacture. Information such as the date of manufacture, model year, gross vehicle weight rating, tire types and inflation pressure is also etched on this plate. The DOT Certification plate is affixed to L.H. control panel.

| | | | | | |
|---|------------------------------|------------------------------|------------------|---|---|
|  | | PREVOST | |  | |
| MANUFACTURED BY : PREVOST FABRIQUE PAR : STE-CLAIRE, QUE. | | DATE OF MFG. DATE DE FAB. | | | |
| G. V. W. R. : 21772 KG. (48000 LBS). P. N. B. V. : | | | | | |
| AXLES/ ESSIEUX | G. A. W. R. / P. N. B. E. | TIRES / PNEUS | RIMS / JANTES | COLD INFLATION PRESS. / A FROID | SINGLE OR DOUBLE SIMPLE OU DOUBLE |
| | KG (LBS) | | | KPA (PSI) | |
| FRONT: | 7484 (16500) | 315/80R22.5 (J) | 22.5X9 | 827 (120) | S |
| INT. DIFF.: | 10206 (22500) | 315/80R22.5 (J) | 22.5X9 | 586 (85) | D |
| REAR TAND.: | 6350 (14000) | 315/80R22.5 (J) | 22.5X9 | 689 (100) | S |
| THIS VEHICLE CONFORMS TO ALL APPLICABLE U.S. FEDERAL MOTOR VEHICLE SAFETY STANDARDS IN EFFECT ON THE DATE OF MANUFACTURE SHOWN ABOVE. | | | | | |
| VEHICLE IDENTIFICATION NO. NO. IDENTIFICATION VEHICULE | | 407644 | | | |
| | | TYPE: BUS B/A | | | |

DOT CERTIFICATION PLATE

00016

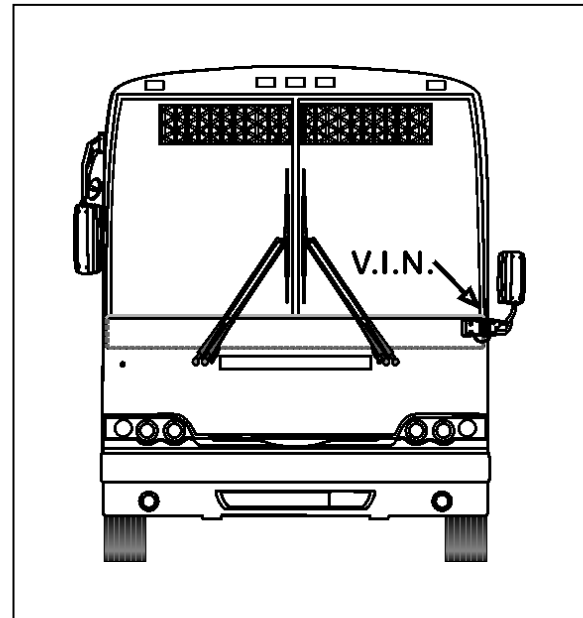

VEHICLE IDENTIFICATION NUMBER

00044

NOTE

Record the VIN in the vehicle documentation and keep with company records. The VIN will normally be used for vehicle registration, service reference needs and for obtaining vehicle insurance coverage.


COACH FINAL RECORD

The Coach Final Record is a record of all data pertaining to the assembly of the vehicle. This record is shipped to the new customer via a courier company. Retain this record in the company records office for reference and safe-keeping.


VEHICLE IDENTIFICATION NUMBER (VIN)

The Vehicle Identification Number is stamped on a plate located on the windshield frame pillar (driver's side). The VIN is visible from the outside of the vehicle. Make sure the correct vehicle identification number is given when ordering replacement parts. Using the VIN when ordering parts will facilitate processing.

9-10 TECHNICAL INFORMATION

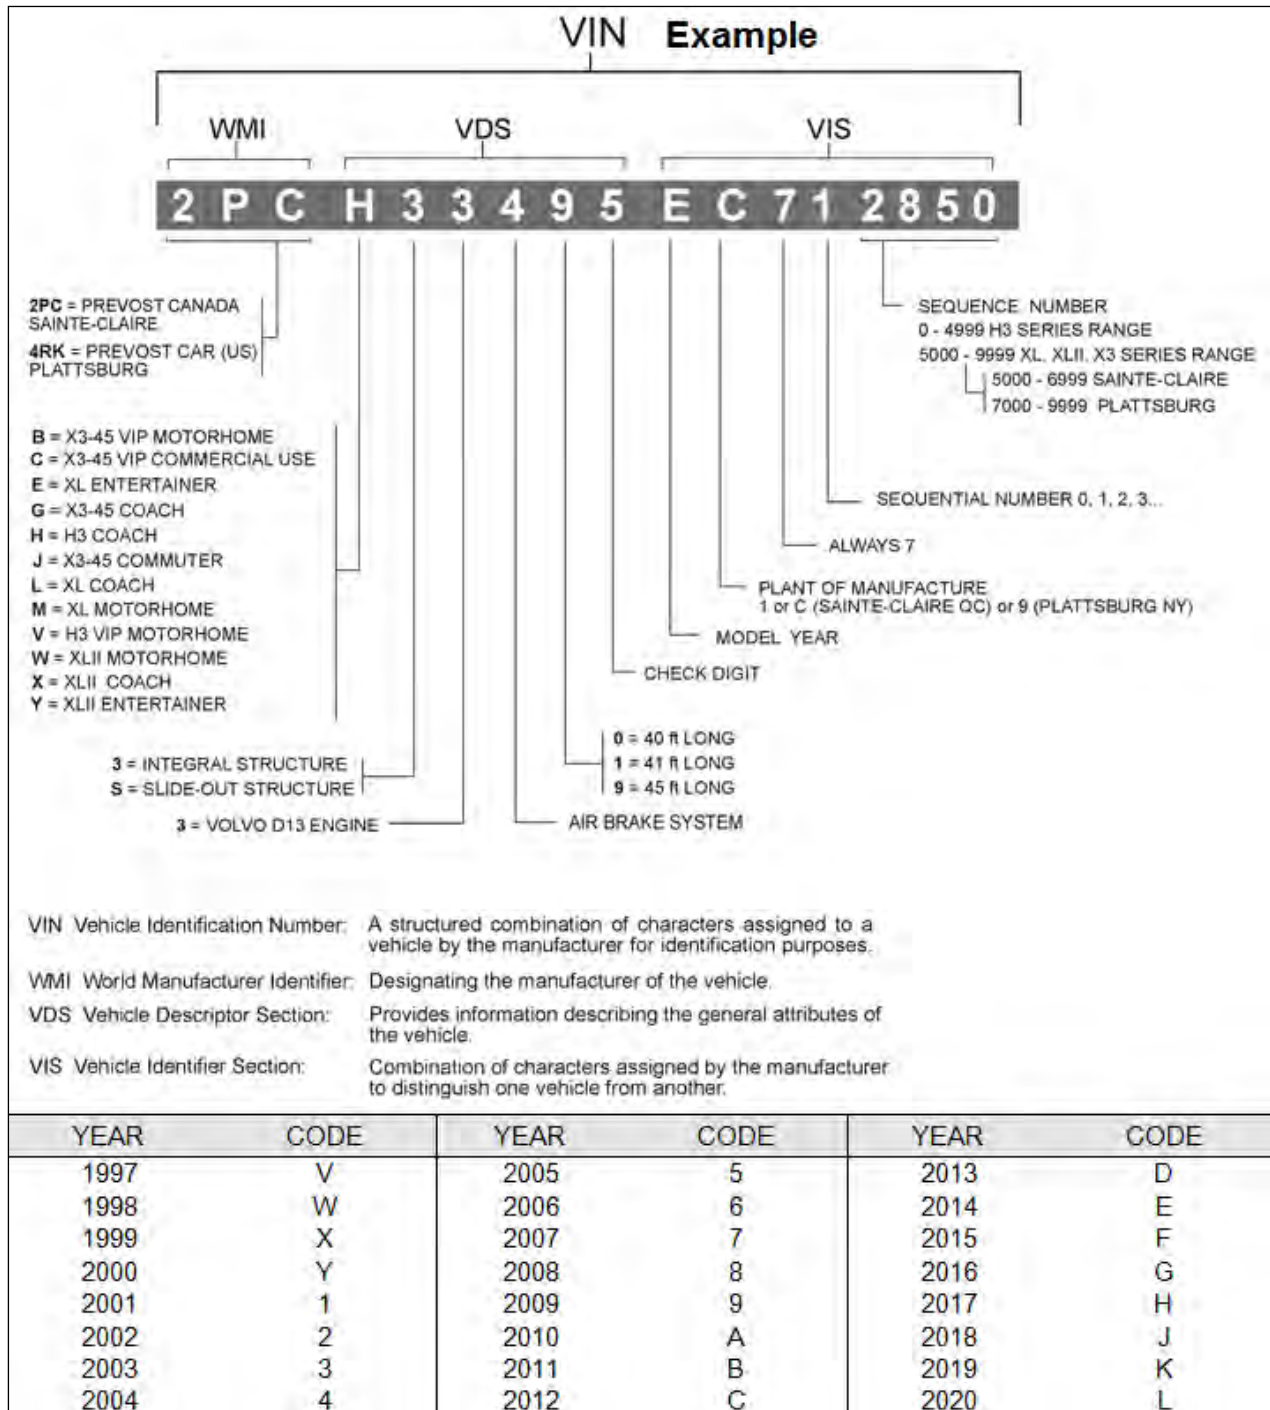

TURNING RADIUS

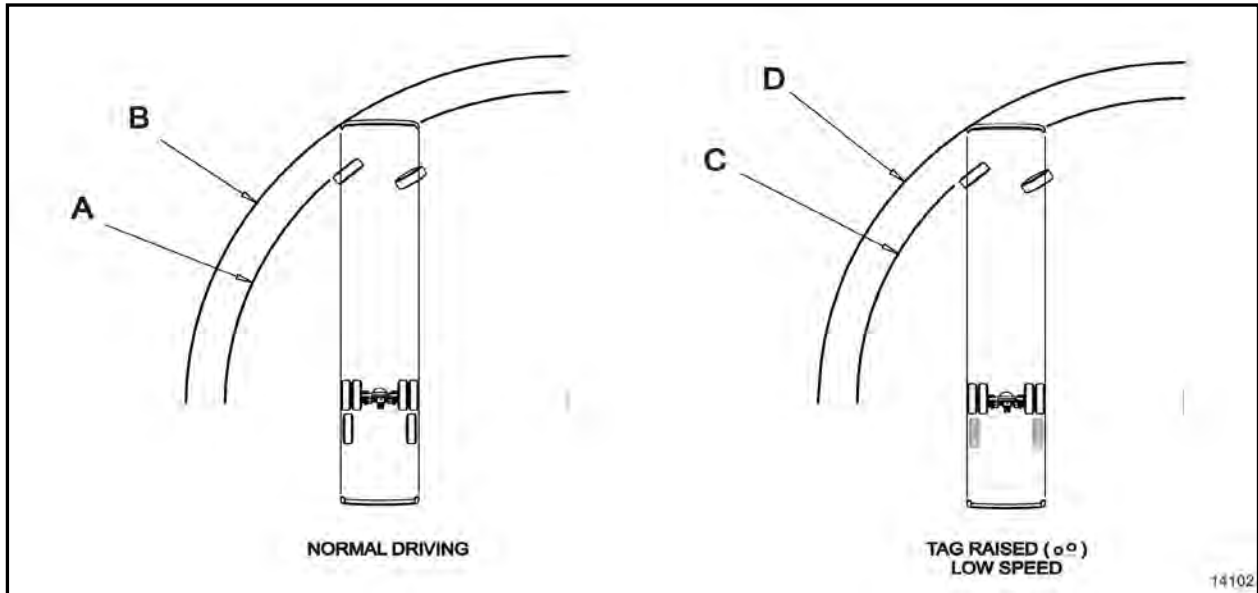

TURNING RADIUS DIAGRAM

The table below shows the turning radius values. The values are presented in by model and front axle type. Values A and B are for normal driving. Values C and D show values for low speed maneuvering where the tag axle is raised øø.

! **CAUTION**

Do not drive a vehicle with the tag axle raised at speeds exceeding 12 mph (20 km/h).

NOTE

Supplied values are theoretical. Factors such as the ground surface, vehicle speed and road conditions may significantly affect the turning radius.

| TURNING SELECTION^{1, 2} | RADIUS |
|---|-----------------|
| A (Curb to Curb) | 13.37m (43'11") |
| B (Wall to Wall) | 14.50m (47'7") |
| C (Curb to Curb) øø | 12.80m (42'0") |
| D (Wall to Wall) øø | 13.94m (45'9") |

¹Curb to Curb value corresponds to the outer tire's track on the ground.
²Wall to Wall value includes the vehicle's body overhang.

SECTION 10 ABBREVIATIONS

| | |
|-------|--|
| ABS | Antilock Brake System |
| A/C | Air Conditioning |
| ACM | Aftertreatment Control Module |
| AFSS | Automatic Fire Suppression System |
| DEF | Diesel Exhaust Fluid |
| DID | Driver Information Display |
| DPF | Diesel Particulate Filter |
| DTC | Diagnostic Troubleshooting Code |
| ECM | Engine Control Module |
| ECU | Electronic Control Unit |
| EECU | Engine Electronic Control Unit |
| EGR | Exhaust Gas Recirculation |
| ESC | Escape |
| GECU | Gear selector Electronic Control Unit |
| HVAC | Heating, Ventilation and Air Conditioning |
| LED | Light Emitting Diode |
| MCM | Master Chassis Module |
| MPH | Miles Per Hour |
| PTT | Premium Tech Tool |
| PRIME | Power Recovery by Intelligent Management of Energy |
| SCR | Selective Catalytic Reduction |
| TCM | Transmission Control Module |
| TCS | Traction Control System |
| TECU | Transmission Electronic Control Unit |
| TWS | Threshold Warning System |
| ULSD | Ultra Low Sulfur Diesel |
| VCADS | Diagnostic Tool |
| VECF | Vehicle Electrical Center Front |
| VECR | Vehicle Electrical Center Rear |
| VECU | Vehicle Electronic Control Unit |
| WCL | Wheelchair Lift |

SECTION 11 APPENDIX A - SERVICE LITERATURE

SERVICE LITERATURE..... 2

NOTICE..... 3

DECLARATION OF THE MANUFACTURING DEFECTS TO THE GOVERNMENT OF THE UNITED STATES 3

DECLARATION OF THE MANUFACTURING DEFECTS TO THE CANADIAN GOVERNMENT..... 3

DECLARATION OF THE MANUFACTURING DEFECTS TO PREVOST 3

SERVICE LITERATURE

Visit our web site at www.prevostcar.com for part and service information including online parts ordering and technical publications.

Paper copies of the following service literature are available on request and at low cost.

- * **Maintenance Manual**
- * **Operator's Manual**
- * **Parts Manual**
- * **Service Center Directory**

Vehicle serial number is required to order literature.

Phone:

United States: 1 800 621-5519

Canada: 1 800 463-8876

Email:

United States: *function.prevostparts.orders@volvo.com*

Canada: *prevostparts.commandes@volvo.com*

Mail :

United States:

PREVOST PARTS
2250 Point Blvd, Suite 410
Elgin, Illinois
60123

Canada:

PREVOST PARTS
2955-A Watt Street
Sainte-Foy, (Quebec)
Canada G1X 3W1

NOTICE

DECLARATION OF THE MANUFACTURING DEFECTS TO THE GOVERNMENT OF THE UNITED STATES

If you believe that your vehicle has defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Prevest.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign.

However, NHTSA cannot become involved in individual problems between you, your dealer, or Prevest Car Inc.

To contact NHTSA you may either call the Auto Safety Hotline toll-free at **1-800-424-9393** (or **366-0123** in Washington, D.C. area) or write to:

**NHTSA
U.S. Department of transportation
Washington, D.C. 20590.**

You can also obtain other information about motor vehicle safety from the Hotline.

DECLARATION OF THE MANUFACTURING DEFECTS TO THE CANADIAN GOVERNMENT

If you live in Canada, and if you believe that your vehicle has a safety defect, you should immediately inform Transport Canada and Prevest. You may write to:

**Transport Canada
Box 8880
Ottawa, Ontario, K1G 3J2**

DECLARATION OF THE MANUFACTURING DEFECTS TO PREVOST.

In addition to notify the NHTSA (or Transport Canada), please contact Prevest at **1-418-831-2046**. Or you may write to:

**Prevest
After-sales service department
850 Olivier Road,
Saint-Nicolas (Quebec)
Canada, G7A 2N1**

**SECTION 12 APPENDIX B – ALLISON TRANSMISSION’S
OTHER FEATURES**

**ALLISON TRANSMISSION 5TH GENERATION OIL LEVEL CHECK USING THE PUSHBUTTON SHIFT
SELECTOR..... 2**

DIAGNOSTIC TROUBLESHOOTING CODES (DTC) — ALLISON 5TH GENERATION..... 3

 DIAGNOSTIC TROUBLESHOOTING CODES (DTC) OVERVIEW 3

 USING SHIFT SELECTOR FOR ACCESSING DIAGNOSICS INFORMATION 3

 DIAGNOSTIC TROUBLE CODE RESPONSE 4

 DIAGNOSTIC TROUBLESHOOTING CODES (DTC) LIST - ALLISON 5TH GENERATION CONTROLS 5

ALLISON TRANSMISSION 5th GENERATION OIL LEVEL CHECK USING THE PUSHBUTTON SHIFT SELECTOR

The oil level sensor (OLS) is standard in your transmission. With the OLS and Allison 5th generation shift selector, you can get a more accurate electronic fluid level check than with a dipstick.

Oil level codes are obtained as follows:

1. Park vehicle on a level surface, select «N» (neutral) on the pushbutton shift selector and apply parking brake.
2. Wait for at least 2 minutes to allow the oil to settle;
3. Press simultaneously the ▲ (Upshift) and ▼ (Downshift) arrow buttons once.
4. Oil level codes are displayed once the following parameters are met :
 - **The vehicle has been stationary for approximately 2 minutes to allow the oil to settle;**
 - **Engine at idle;**
 - **Oil at normal operating temperature, between 104°F (40°C) and 220°F (104°C);**
 - **Transmission in «N» (Neutral);**
 - **Transmission output shaft stopped;**
 - **Oil level sensor present and working.**

5. Correct fluid level is displayed as shown.



6. Low fluid level is displayed as shown. The number indicates the number of quarts of fluid



the transmission requires.

7. High fluid level condition with the number of quarts in excess is displayed as shown.



NOTE

Confirm a low fluid level condition by making a manual fluid level check.

8. To exit the Oil Level Display Mode, press any range button «R», «N» or «D» at any time.

NOTE

Note that the quantities LO 4 and HI 3 are the largest values displayed and that the actual variation in oil level may exceed these numbers.

If the fluid level check cannot be completed, an Invalid for Display fault is reported. Refer to table below to review the codes and conditions.

| CODE | CAUSE OF FAULT CODE |
|-------------------|---------------------------------|
| SETTLING OX | Settling time too short |
| ENG RPM TOO LOW | Engine speed (rpm) too low |
| ENG RPM TOO HIGH | Engine speed (rpm) too high |
| MUST BE IN NEU | N (Neutral) must be selected |
| OIL TEMP TOO LOW | Sump fluid temperature too low |
| OIL TEMP TOO HIGH | Sump fluid temperature too high |
| VEH SPD TOO HI | Output shaft speed |
| SENSOR FAILED | Sensor failure |

DIAGNOSTIC TROUBLESHOOTING CODES (DTC) — ALLISON 5TH GENERATION

DIAGNOSTIC TROUBLESHOOTING CODES (DTC) OVERVIEW

Diagnostic features are provided with the transmission control system to assist in troubleshooting of malfunctions and/or the monitoring of specific operating parameters. When a control system malfunction is detected, a series of Diagnostic Trouble Codes (DTCs) are used to identify and clarify the nature of the malfunction. These DTCs are each named by a 5 character alphanumeric string that refers to a diagnostic algorithm running pass/fail tests to help identify a malfunction in the transmission or vehicle operation. Most DTCs have some kind of diagnostic response that the operator notices, such as an illuminated CHECK light, selector display change, lock in range, or inhibit shifts condition.

DTCs are logged in the Transmission Control Module (TCM) memory by severity and by their active/inactive status with the most severe and active codes listed first. A maximum of five DTCs (numbered d1- d5) from most recent to oldest may be read from the shift selector. As DTCs are added, the oldest inactive DTC (historic) is dropped from the list. If all DTCs are active, the DTC with the lowest priority is dropped from the list.

An active code is any code that is current in the TCM decision-making process and has failed the DTC test(s) associated with that specific diagnostic algorithm. Historical codes, which are by definition inactive, are codes that are no longer failing their algorithm but are retained in the TCM in order to help the technician analyze possible causes and provide them direction if the vehicle is brought in before they are cleared from the queue.

DTCs can be cleared manually by the operator or they clear automatically from last (d5) to first (d1) in the queue after a number of engine starts, without becoming active again.

USING SHIFT SELECTOR FOR ACCESSING DIAGNOSICS INFORMATION

DTCs can be displayed on the display portion of the shift selector. A DTC is either active or historic. An active DTC is a DTC that is current in the TCM decision-making process. Historic DTCs are retained in the TCM memory and do not necessarily affect the TCM decision-making process.

Display Sequence

Up to five DTCs may be displayed one at a time from the selector once the diagnostic display mode has been initiated by the operator. Each DTC is 5 characters in length. The DTC status active or inactive is shown below the DTC.



Shows active DTC P0730

The operator presses the MODE button to read the next DTC in the queue (if any) or requests to exit diagnostics mode. The diagnostics mode times out and returns the selector to normal operating mode after approximately 10 minutes of operator inactivity.

Diagnostic Code Display and Clearing Procedure

Diagnostic codes can be read and cleared by two methods:

- Using an Allison DOC™ diagnostic tool. For specific instructions on how to use an Allison DOC™ diagnostic tool, refer to the User Guide.
- Using the pushbutton shift selector.

To begin the diagnostic process:

1. Bring the vehicle to a stop at a safe location.
2. Apply the parking brake.

12-4 APPENDIX B – Allison Transmission’s Other Features

To display stored codes:

1. Simultaneously press the ▲ (Upshift) and ▼ (Downshift) arrow buttons five times (Prognostics enabled) to access the Diagnostic Display Mode. With Prognostics disabled, press the ▲ (Upshift) and ▼ (Downshift) arrow buttons twice.
2. Press the MODE button to read the next code in the queue, if any.

To clear all active stored codes:

While in Diagnostic Mode, clear all active codes by pressing and holding the MODE button for approximately three seconds until the MODE message flashes. Release the MODE button. The MODE message should not remain illuminated if the active DTC shown in the display has cleared.

While in Diagnostic Mode, press and hold the MODE button for 10 seconds to clear both active codes and inactive codes. The MODE message flashes a second time indicating all codes are cleared from the queue.

Exiting Diagnostic Mode

Exit the diagnostic mode by one of the following methods:

1. Press simultaneously the ▲ (Upshift) and ▼ (Downshift) arrow buttons at the same time on the pushbutton shift selector.
2. Press any range button «D», «N» or «R» on the pushbutton shift selector.
3. After approximately 10 minutes of inactivity at the pushbutton shift selector, the diagnostic mode automatically exits and returns to normal operating mode.
4. Turn off power to the TCM (shut off the engine using the ignition key).

| |
|-------------|
| NOTE |
|-------------|

| |
|--|
| <i>Be sure to record all codes displayed before they are cleared. This is essential for troubleshooting.</i> |
|--|

| |
|-------------|
| NOTE |
|-------------|

| |
|--|
| <i>If clearing a code while locked in a «D» (Drive) or «R» (Reverse) position (fail-to-range), the transmission will still be in «D» (Drive) or «R» (Reverse) when the clearing procedure is completed. «N» (Neutral) must be manually selected.</i> |
|--|

DIAGNOSTIC TROUBLE CODE RESPONSE

The electronic control system is programed to inform the operator of a problem with the transmission system via the CHECK light and shift selector display while it automatically takes action to protect the operator, vehicle, and transmission. When the Transmission Control Module (TCM) flags a Diagnostic Trouble Code (DTC) as active, the TCM may take a combination of diagnostic responses as listed in the table below.

| CATEGORY OF RESPONSE | ACTIONS TAKEN |
|--------------------------------|--|
| DNS - <u>Do Not Shift</u> | Release lock up (LU) clutch and inhibit lock up operation. Inhibit shifts from the current attained range. Turn on the CHECK light. Display the current attained range in the MONITOR window of the shift selector. Blank the SELECT window of the shift selector. Ignore any range selection inputs from the shift selector. |
| SOL OFF - <u>SOLenoid OFF</u> | All solenoids are commanded off, resulting in hydraulic default operation of the transmission – PCS1 & PCS2 are on hydraulically when off electrically. |
| RPR - Return to Previous Range | When the speed sensor ratio or PS1 tests do not pass, the TCM commands the same range as commanded before the shift. |
| NNC - Neutral No Clutches | When certain speed sensor ratio or PS1 tests do not pass, the TCM commands a neutral condition with no clutches applied. |
| DNA - <u>Do Not Adapt</u> | The TCM stops adaptive shift control while the code is active. |

DIAGNOSTIC TROUBLESHOOTING CODES (DTC) LIST - ALLISON 5TH GENERATION CONTROLS

| DTC | Description | CHECK Light | Inhibited Operation Description |
|-------|--|-------------|---|
| C1312 | Retarder Request Sensor Failed Low | No | May inhibit retarder operation if not using J1939 datalink |
| C1313 | Retarder Request Sensor Failed High | No | May inhibit retarder operation if not using J1939 datalink |
| P0122 | Pedal Position Sensor Circuit Low Voltage | No | Use default throttle values. Freezes shift adapts. |
| P0123 | Pedal Position Sensor Circuit High Voltage | No | Use default throttle values. Freezes shift adapts. |
| P0218 | Transmission Fluid Over Temperature | Yes | Use default sump temp |
| P0562 | System Voltage Low | No | Inhibit TCC Operation, DNA |
| P0602 | TCM Not Programed | Yes | Lock in Neutral |
| P0604 | Control module random access memory (RAM) | Yes | Lock in Neutral |
| P0614 | Torque Control Data Mismatch - ECM/TCM | Yes | Allows operation only in reverse and second range. |
| P0634 | TCM Internal Temperature Too High | Yes | SOL OFF (hydraulic default) |
| P0642 | Sensor Reference Voltage "A" Circuit Low | Yes | Default sensor data used |
| P0643 | Sensor Reference Voltage "A" Circuit High | Yes | Default sensor data used |
| P0657 | Actuator Supply Circuit Voltage 1 Open (HSD 1) | Yes | SOL OFF, DNA, Inhibit TCC operation, Inhibit main modulation |
| P0658 | Actuator Supply Voltage 1 (HSD1) Low | Yes | DNS, SOL OFF (hydraulic default) |
| P0659 | Actuator Supply Voltage 1 (HSD1) High | Yes | DNS, SOL OFF (hydraulic default) |
| P0703 | Brake Switch Circuit Malfunction | No | No Neutral to Drive shifts for refuse packer. TCM inhibits retarder operation if a TPS code is also active. |
| P0708 | Transmission Range Sensor Circuit High Input | Yes | Ignore defective strip selector inputs |
| P070C | Transmission Fluid Level Sensor Circuit – Low Input | No | None |
| P070D | Transmission Fluid Level Sensor Circuit – High Input | No | None |

12-6 APPENDIX B – Allison Transmission’s Other Features

| DTC | Description | CHECK Light | Inhibited Operation Description |
|-------|--|-------------|--|
| P0712 | Transmission Fluid Temperature Sensor Circuit Low Input | Yes | Use default sump temp |
| P0713 | Transmission Fluid Temperature Sensor Circuit High Input | Yes | Use default sump temp |
| P0715 | Turbine Shaft Speed Sensor Circuit | Yes | DNS, Lock in current range |
| P0716 | Turbine Shaft Speed Sensor Circuit Performance | Yes | DNS, Lock in current range |
| P0717 | Turbine Shaft Speed Sensor Circuit No Signal | Yes | DNS, Lock in current range |
| P071A | RELS Input Failed On | Yes | Inhibit RELS operation |
| P071D | General Purpose Input Fault | Yes | None |
| P0720 | Output Shaft Speed Sensor Circuit | Yes | DNS, Lock in current range |
| P0721 | Output Shaft Speed Sensor Circuit Performance | Yes | DNS, Lock in current range |
| P0722 | Output Speed Sensor Circuit No Signal | Yes | DNS, Lock in current range |
| P0725 | Engine Speed Sensor Circuit | No | Default to turbine speed |
| P0726 | Engine Speed Sensor Circuit Performance | No | Default to turbine speed |
| P0727 | Engine Speed Sensor Circuit No Signal | No | Default to turbine speed |
| P0729 | Incorrect 6 th Gear Ratio | Yes | DNS, Attempt 5 th , then 3 rd |
| P0731 | Incorrect 1 st Gear ratio | Yes | DNS, Attempt 2 nd , then 5 th |
| P0732 | Incorrect 2 nd Gear ratio | Yes | DNS, Attempt 3 rd , then 5 th |
| P0733 | Incorrect 3 rd Gear ratio | Yes | DNS, Attempt 4 th , then 6 th |
| P0734 | Incorrect 4 th Gear ratio | Yes | DNS, Attempt 5 th , then 3 rd |
| P0735 | Incorrect 5 th Gear ratio | Yes | DNS, Attempt 6 th , then 3 rd , then 2 nd |
| P0736 | Incorrect Reverse Gear ratio | Yes | DNS, Lock in Neutral |
| P0741 | Torque Converter Clutch System Stuck Off | Yes | None |
| P0752 | Shift Solenoid 1 Valve Performance-Stuck On | Yes | DNS |
| P0776 | Pressure Control Solenoid (PCS) 2 Stuck Off | Yes | DNS, RPR |
| P0777 | Pressure Control Solenoid 2 Stuck On | Yes | DNS, RPR |
| P0796 | Pressure Control Solenoid 3 Stuck Off | Yes | DNS, RPR |
| P0797 | Pressure Control Solenoid 3 Stuck On | Yes | DNS, RPR |
| P0842 | Transmission Fluid Pressure Switch 1 Circuit Low | Yes | DNS, Lock in current range |
| P0843 | Transmission Fluid Pressure Switch 1 Circuit High | Yes | DNS, Lock in current range |
| P0847 | Transmission Fluid Pressure Switch 2 Circuit Low | Yes | None |
| P0848 | Transmission Fluid Pressure Switch 2 Circuit High | Yes | None |
| P088A | Transmission Fluid Filter Maintenance Alert | No | None |
| P088B | Transmission Fluid Filter Maintenance Required | No | None |
| P0880 | TCM Power Input Signal | No | None |
| P0881 | TCM Power Input Signal Performance | No | None |
| P0882 | TCM Power Input Signal Low | Yes | DNS, SOL OFF (hydraulic default) |
| P0883 | TCM Power Input Signal High | No | None |
| P0894 | Unexpected Mechanical Gear Disengagement | Yes | DNS, Lock in first |
| P0897 | Transmission Fluid Deteriorated | No | None |
| P0960 | Main Pressure Modulator Solenoid Control Circuit Open | Yes | None |
| P0962 | Main Pressure Modulator Solenoid Control Circuit Low | Yes | DNS, SOL OFF (hydraulic default) |
| P0963 | Main Pressure Modulator Solenoid Control Circuit High | Yes | None |
| P0964 | Pressure Control Solenoid 2 (PCS2) Control Circuit Open | Yes | DNS, SOL OFF (hydraulic default) |
| P0966 | Pressure Control Solenoid 2 (PCS2) Control Circuit Low | Yes | DNS, SOL OFF (hydraulic default) |
| P0967 | Pressure Control Solenoid 2 (PCS2) Control Circuit High | Yes | DNS, SOL OFF (hydraulic default) |

| DTC | Description | CHECK Light | Inhibited Operation Description |
|------------|---|--------------------|---|
| P0968 | Pressure Control Solenoid 3 (PCS3) Control Circuit Open | Yes | DNS, SOL OFF (hydraulic default) |
| P0970 | Pressure Control Solenoid 3 (PCS3) Control Circuit Low | Yes | DNS, SOL OFF (hydraulic default) |
| P0971 | Pressure Control Solenoid 3 (PCS3) Control Circuit High | Yes | DNS, SOL OFF (hydraulic default) |
| P0973 | Shift Solenoid 1 (SS1) Control Circuit Low | Yes | DNS, SOL OFF (hydraulic default) |
| P0974 | Shift Solenoid 1 (SS1) Control Circuit High | Yes | DNS, SOL OFF (hydraulic default) |
| P0976 | Shift Solenoid 2 (SS2) Control Circuit Low | Yes | 7-speed: Allow 2 through 6, N, R Inhibit TCC operation |
| P0977 | Shift Solenoid 2 (SS2) Control Circuit High | Yes | 7-speed: Allow 2 through 6, N, R |
| P097A | Shift Solenoid 1 (SS1) Control Circuit Open | Yes | Lock in range |
| P097B | Shift Solenoid 2 (SS2) Control Circuit Open | Yes | 7-speed: Allow 2 through 6, N, R |
| P0989 | Retarder Pressure Sensor Circuit Low | No | None |
| P0990 | Retarder Pressure Sensor Circuit High | No | None |
| P1739 | Incorrect Low Gear Ratio | Yes | Command 2 nd and allow shifts 2 through 6, N, R |
| P1790 | Gear Shift Module 1 Calibrated Invalid | Yes | Shift selector language or units incorrect |
| P1791 | Gear Shift Module 2 Calibrated Invalid | Yes | Shift selector language or units incorrect |
| P1891 | Throttle Position Sensor PWM Signal Low | No | Use default throttle values |
| P1892 | Throttle Position Sensor PWM Signal High | No | Use default throttle values |
| P2184 | Engine Coolant Temperature Sensor 2 Circuit Low Input | No | Use default engine coolant values |
| P2185 | Engine Coolant Temperature Sensor 2 Circuit High Input | No | Use default engine coolant values |
| P2637 | Torque Management Feedback Signal (A) | Yes | Inhibit SEM |
| P2641 | Torque Management Feedback Signal (B) | Yes | Inhibit L RTP |
| P2669 | Actuator Supply Circuit Voltage 2 Open (HSD2) | Yes | SOL OFF, Inhibit TCC operation, Inhibit Main modulation, ONA |
| P2670 | Actuator Supply Voltage 2 (HSD2) Low | Yes | DNS, SOL OFF (hydraulic default) |
| P2671 | Actuator Supply Voltage 2 (HSD2) High | Yes | DNS, SOL OFF (hydraulic default) |
| P2684 | Actuator Supply Circuit Voltage 3 Open (HSD3) | Yes | SOL OFF, Inhibit TCC operation, Inhibit Main modulation, ONA |
| P2685 | Actuator Supply Voltage 3 (HSD3) Low | Yes | DNS, SOL OFF (hydraulic default) |
| P2686 | Actuator Supply Voltage 3 (HSD3) High | Yes | DNS, SOL OFF (hydraulic default) |
| P2714 | Pressure Control Solenoid 4 (PCS4) Stuck Off | Yes | DNS, RPR |
| P2715 | Pressure Control Solenoid 4 (PCS4) Stuck On | Yes | DNS, SOL OFF (hydraulic default) |
| P2718 | Pressure Control Solenoid 4 (PCS4) Control Circuit Open | Yes | DNS, SOL OFF (hydraulic default) |
| P2720 | Pressure Control Solenoid 4 (PCS4) Control Circuit Low | Yes | DNS, SOL OFF (hydraulic default) |
| P2721 | Pressure Control Solenoid 4 (PCS4) Control Circuit High | Yes | DNS, SOL OFF (hydraulic default) |
| P2723 | Pressure Control Solenoid 1 (PCS1) Stuck Off | Yes | DNS, RPR |
| P2724 | Pressure Control Solenoid 1 (PCS1) Stuck On | Yes | DNS, RPR |
| P2727 | Pressure Control Solenoid 1 (PCS1) Control Circuit Open | Yes | DNS, SOL OFF (hydraulic default) |
| P2729 | Pressure Control Solenoid 1 (PCS1) Control Circuit Low | Yes | DNS, SOL OFF (hydraulic default) |
| P2730 | Pressure Control Solenoid 1 (PCS1) Control Circuit High | Yes | DNS, SOL OFF (hydraulic default) |
| P2736 | Pressure Control Solenoid 5 (PCS5) Control Circuit Open | Yes | Inhibit retarder operation |
| P2738 | Pressure Control Solenoid 5 (PCS5) Control Circuit Low | Yes | Allow 2 through 6, N, R. Inhibit retarder and TCC operation |
| P2739 | Pressure Control Solenoid 5 (PCS5) Control Circuit High | Yes | Inhibit retarder operation |

12-8 APPENDIX B – Allison Transmission’s Other Features

| DTC | Description | CHECK Light | Inhibited Operation Description |
|-------|--|-------------|--|
| P273F | Retarder Oil Temperature Sensor Over Temperature Condition | No | None |
| P2742 | Retarder Oil Temperature Sensor Circuit – Low | No | Use default retarder temp values |
| P2743 | Retarder Oil Temperature Sensor Circuit – High | No | Use default retarder temp values |
| P2761 | TCC PCS Control Circuit Open | Yes | Inhibit TCC operation |
| P2763 | TCC PCS Control Circuit High | Yes | Inhibit TCC operation |
| P2764 | TCC PCS Control Circuit Low | Yes | 7-speed: Allow 2 through 6, N, R. Inhibit TCC operation |
| P2789 | Transmission Clutch Life Expired (Clutch Adaptive Learning at Limit) | No | None |
| P2793 | Gear Shift Direction Circuit | Yes | Ignores PWM input from shift selector |
| P2808 | Pressure Control Solenoid 6 (PCS6) Stuck Off | Yes | DNS, RPR |
| P2809 | Pressure Control Solenoid 6 (PCS6) Stuck On | Yes | DNS, RPR |
| P2812 | Pressure Control Solenoid 6 (PCS6) Control Circuit Open | Yes | DNS, SOL OFF (hydraulic default) |
| P2814 | Pressure Control Solenoid 6 (PCS6) Control Circuit Low | Yes | DNS, SOL OFF (hydraulic default) |
| P2815 | Pressure Control Solenoid 6 (PCS6) Control Circuit High | Yes | DNS, SOL OFF (hydraulic default) |
| U0073 | CAN Communication Bus 1 Off | No | Use default values |
| U0074 | CAN Communication Bus 2 Off | No | Use default values |
| U0100 | Lost Communications with ECM A | Yes | Use default values |
| U0103 | Lost Communication with Gear Shift Module (Shift Selector) 1 | Yes | Maintain range selected, observe gear shift direction circuit |
| U0291 | Lost Communication with Gear Shift Module (Shift Selector) 2 | Yes | Maintain range selected, observe gear shift direction circuit |
| U0304 | Incompatible Gear Shift Module 1 (Shift Selector) | Yes | Ignore shift selector inputs |
| U0333 | Incompatible Gear Shift Module 2 (Shift Selector) | Yes | Ignore shift selector inputs |
| U0404 | Invalid Data Received From Gear Shift Module (Shift Selector) 1 | Yes | Maintain range selected, observe gear shift direction circuit |
| U0592 | Invalid Data Received From Gear Shift Module (Shift Selector) 2 | Yes | Maintain range selected, observe the gear shift direction circuit. |